




30 Mins

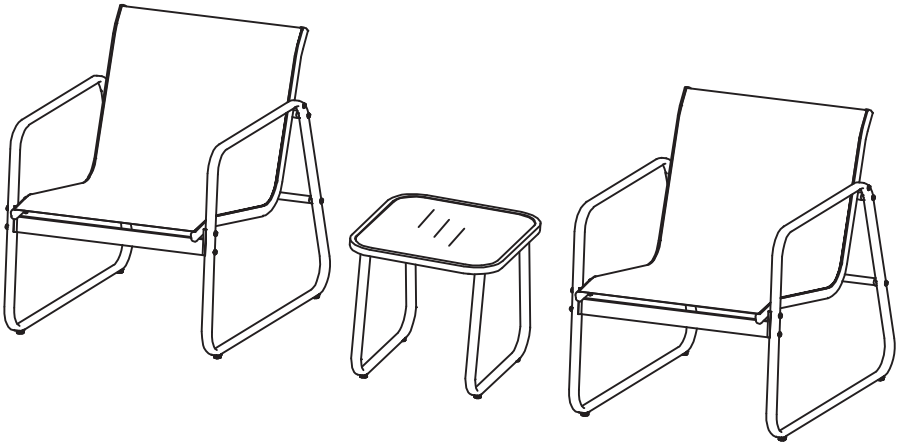

x2

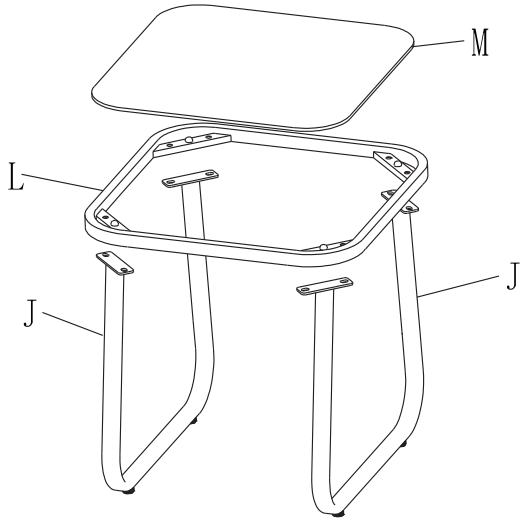


M
L
J
J

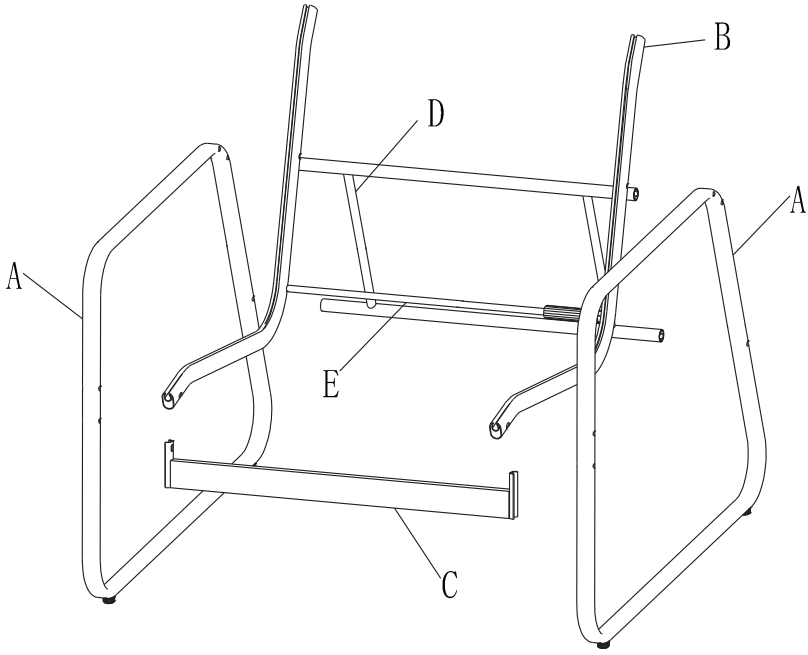
B
D
A
A
E
C



N x 8
M6*20mm



P x 12+1
M6*50mm



Q x 8
M6*65mm



S x 36+1
M6



R x 16+1







T x 12




V x 1




W x 1

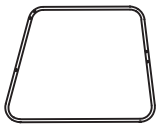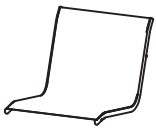A		X 4	E		X 2
B		X 2	L		X 1
C		X 2	J		**X 2**
D		X 2	M		X 1

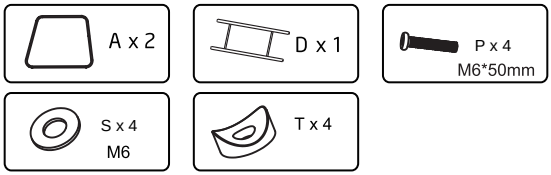


1

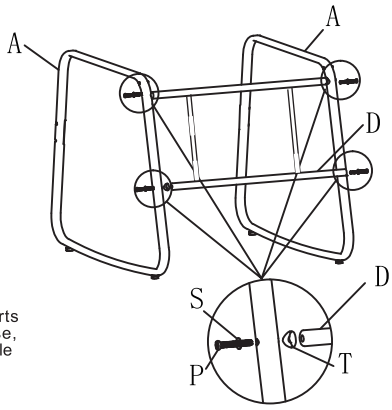


x2




Please screw the parts together at 50% loose, it will help you assemble the sets easily.




2

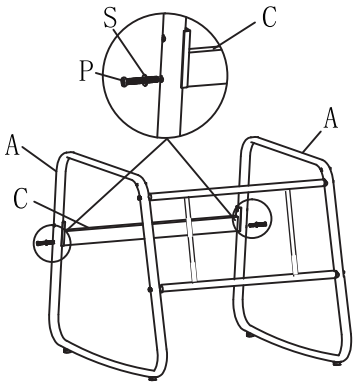


x2

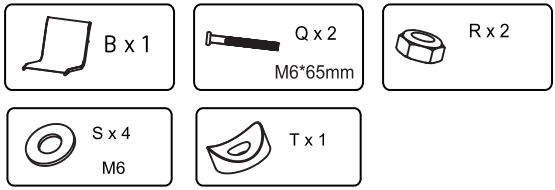
B x 1
Q x 2
M6*65mm
R x 2
S x 4
M6
T x 1


3

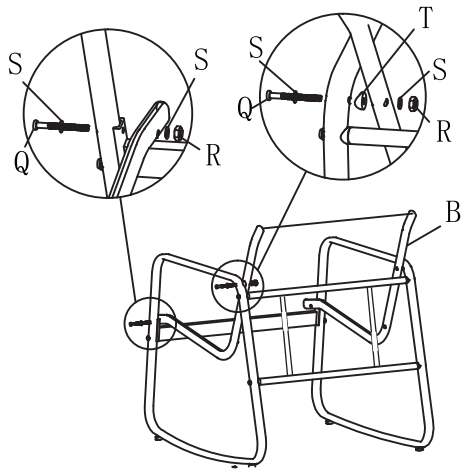
S
S
Q
R
S
T
S
Q
S
R
B

x2



Q x 2
M6*65mm
R x 2
S x 4
M6
T x 1

4

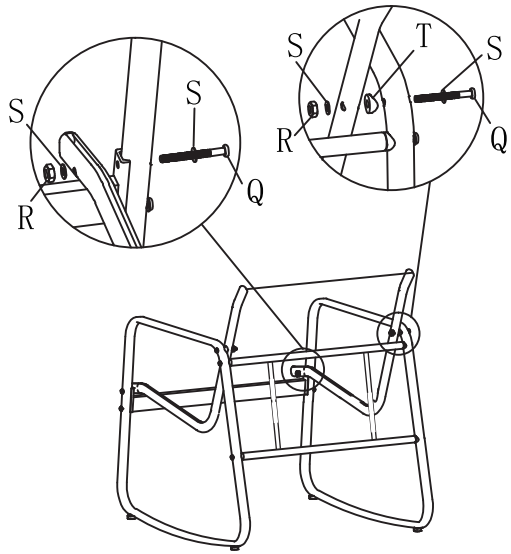
S
S
R
Q
S
T
S
R
Q


x2

5

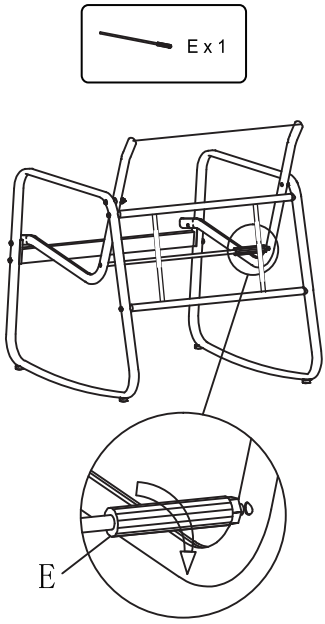


x2


6

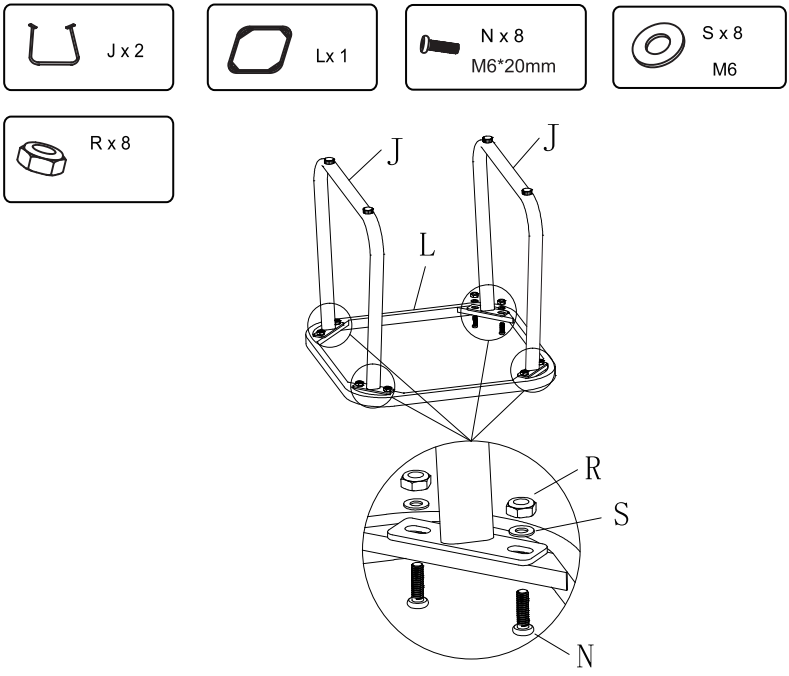



7

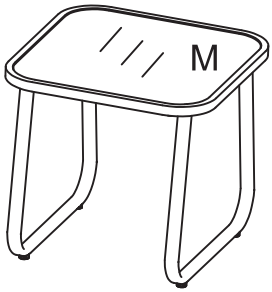



Put on the glass and finish the assemble, tight the all screws up 100% at end to make product stable.

