



Delta Shower Door Measurement Guide

Before you customize your dream door, you need to make sure you have the correct measurements:

Identify Vertical and Horizontal Openings

Height (A) and Widths (B). Widths (B) measurements are often not the same so doors can be adjusted up to 3/8".

Vertical Opening

Measure from the top of the tub apron or the top of the threshold up to the top of the acrylic (or tile) surround wall.


Horizontal Opening

Measure width of opening at the top and the bottom of the enclosure.

Available Sizes:

- 48" Shower**
 - Opening Requirement for Installation: fits doors with opening between 45-13/16" minimum – 48" maximum
 - Finished Door Height: 76"
 - Minimum Required Clearance Height for Installation: 78"
 - Sill/Threshold Depth Requirement for Installation: 2-5/16"
 - Studs required 1-1/2" from front surface of sill
- 60" Shower**
 - Opening Requirement for Installation: fits doors with opening between 54-3/8" minimum – 60" maximum
 - Finished Door Height: 76"
 - Minimum Required Clearance Height for Installation: 78"
 - Sill/Threshold Depth Requirement for Installation: 2-5/16"
 - Studs required 1-1/2" from front surface of sill

Sliding Shower Doors

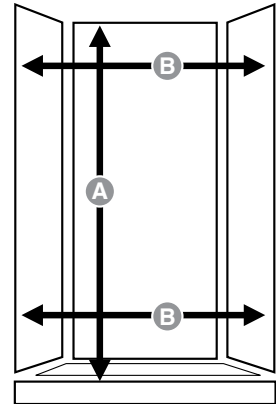

RECORD DIMENSIONS BELOW

| | Opening |
|-------------------------------|---------|
| Height (A): | |
| Width of widest point (B): | |
| Width at narrowest point (B): | |

**Disclaimers

- For ceramic tile application, use the top of the tile for the maximum door height.
- In older homes the opening at the top is often wider than the bottom due to an out-of-plumb condition.
- NOTE: All Delta Shower Doors are designed to accommodate out-of-plumb conditions totaling 3/8".

Need Additional Assistance with Delta Shower Doors?

Call us at 1.800.964.4850
 Visit us at www.deltashowerdoors.com
 Email us at customersolutions@deltashowerdoors.com