
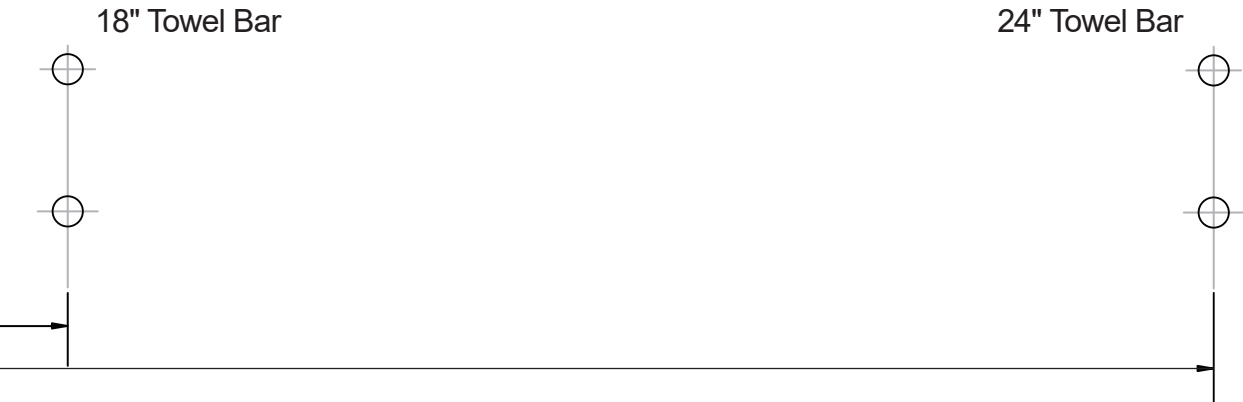


Bath Hardware Installation Manual

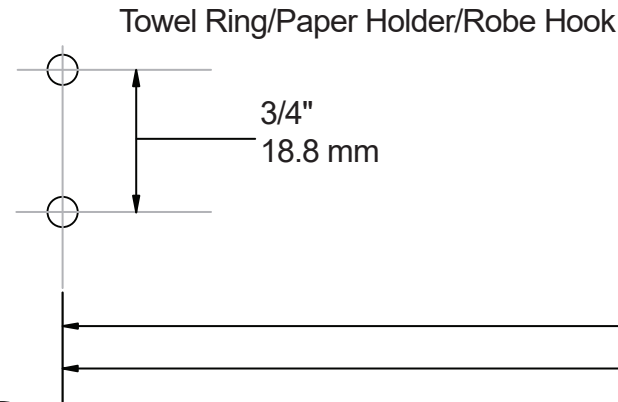

Thanks for Choosing HomLux.

Business Name: FDC Development LLC

Business Address:
6550 Jimmy Carter Blvd Suite B
Peachtree Corners, GA 30071
US

WEB: www.homluxproducts.com
TEL: (800) 209-3199

Any query please feel free to EMAIL our service team:
help@homluxproducts.com


CARE INTRUCTIONS

Care should be given to the cleaning of this product. Although its finish is extremely durable, it can be damaged by harsh abrasives or polish. To clean, simply wipe gently with a damp cloth and blot dry with a soft towel.

HARDWARE INCLUDED



a: Fasten Anchor



b: Mounting Screw



c: Mounting Bracket




d: Set Screw



e: Hex Wrench


INSTALLATION GUIDE

For ease of installation, read through all instructions before you begin.

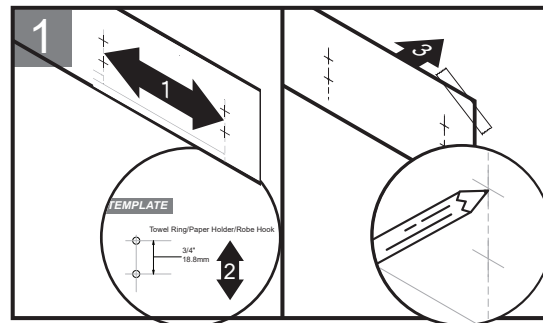


STEP 1:

- (1) Identify the four hole locations on template for your item.
- (2) Place tape on all four corners of the template.
- (3) Position template on wall in desired location making sure that it is level, then tape to the wall.
- (4) Mark hole locations and check to make sure marks are on wall. Remove template from wall.

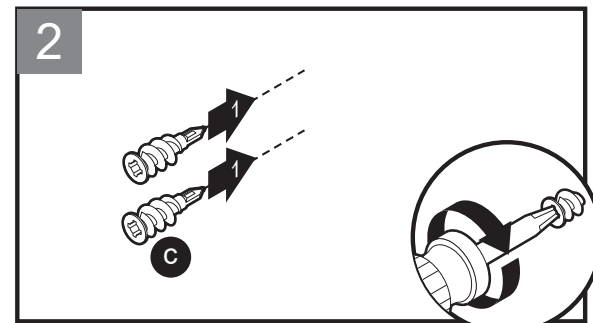


STEP 2:

- (1) Use Phillips head screw driver to fasten anchor(a) into drywall.
- NOTE: Some force may be needed to push anchor tip into drywall.
- (2) Turn/rotate anchor clockwise into wall until the top of the anchor is flat against wall.

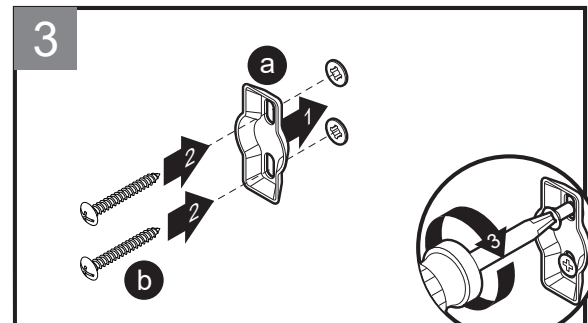


STEP 3:

- (1) Place the mounting bracket(c) (facing outward) on the wall.
 - (2) Insert screws into bracket slots and anchors.
 - (3) Turn and rotate screws(b) through bracket into anchors clockwise. Repeat for remaining bracket and screws.
- NOTE: Slots in bracket allow for adjustment.

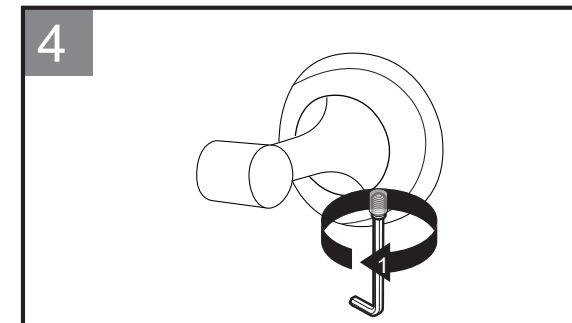


STEP 4:

- Use hex wrench(e) to loosen set screw(d) in both posts.

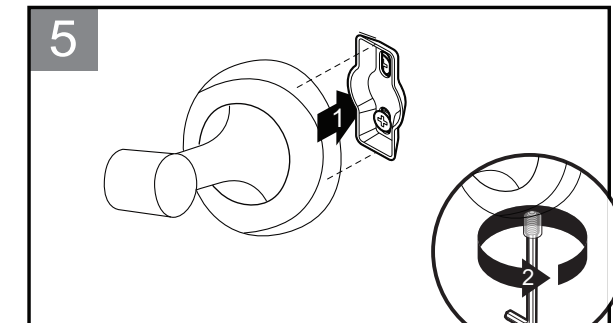

STEP 5:

- (1) Place one post over the mounting bracket with the set screw facing downward. The post must hook over the mounting bracket.
- (2) Use hex wrench to hand tighten set screw.

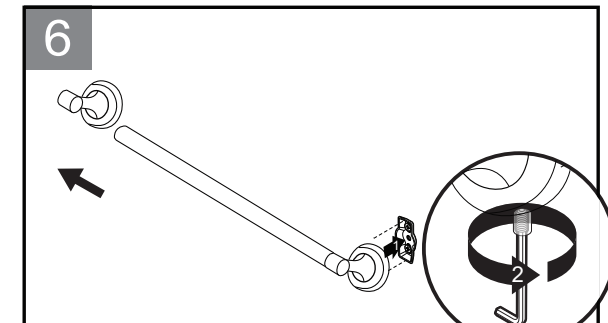


STEP 6:


- (1) Assemble product(as shown).The post must hook over the mounting bracket.
- NOTE: It is not necessary to assemble a spring loaded toilet paper holder before mounting posts on wall. Place remaining post over the mounting bracket with the set screw facing downward.
- (2) Use Allen wrench to hand tighten set screw.

SPECIFICATIONS


A. 18 INCH TOWEL BAR

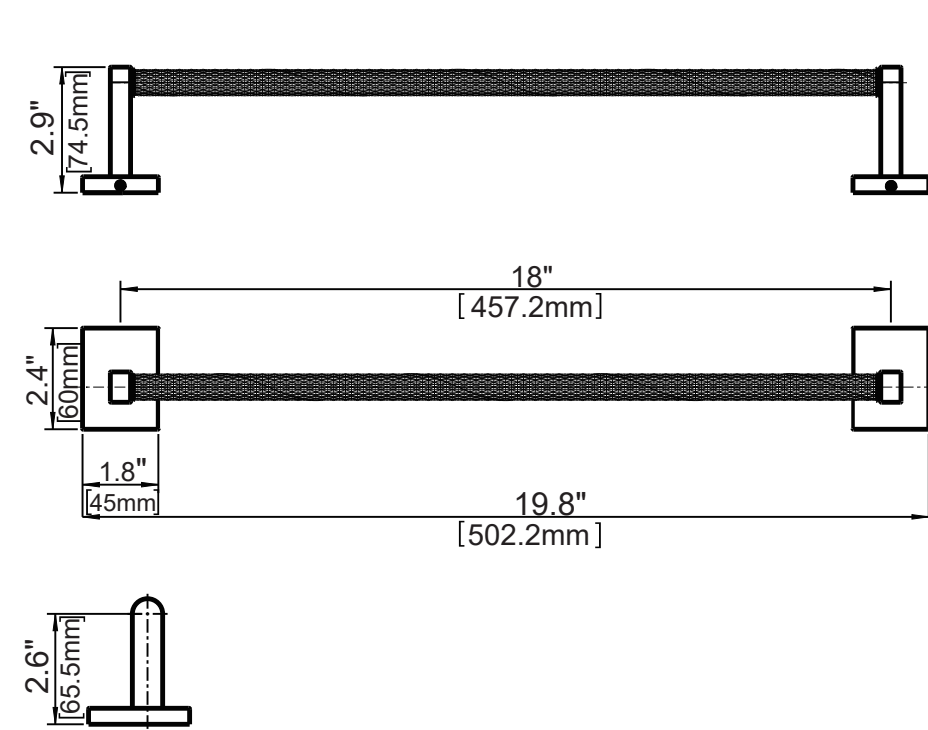


B. 24 INCH TOWEL BAR

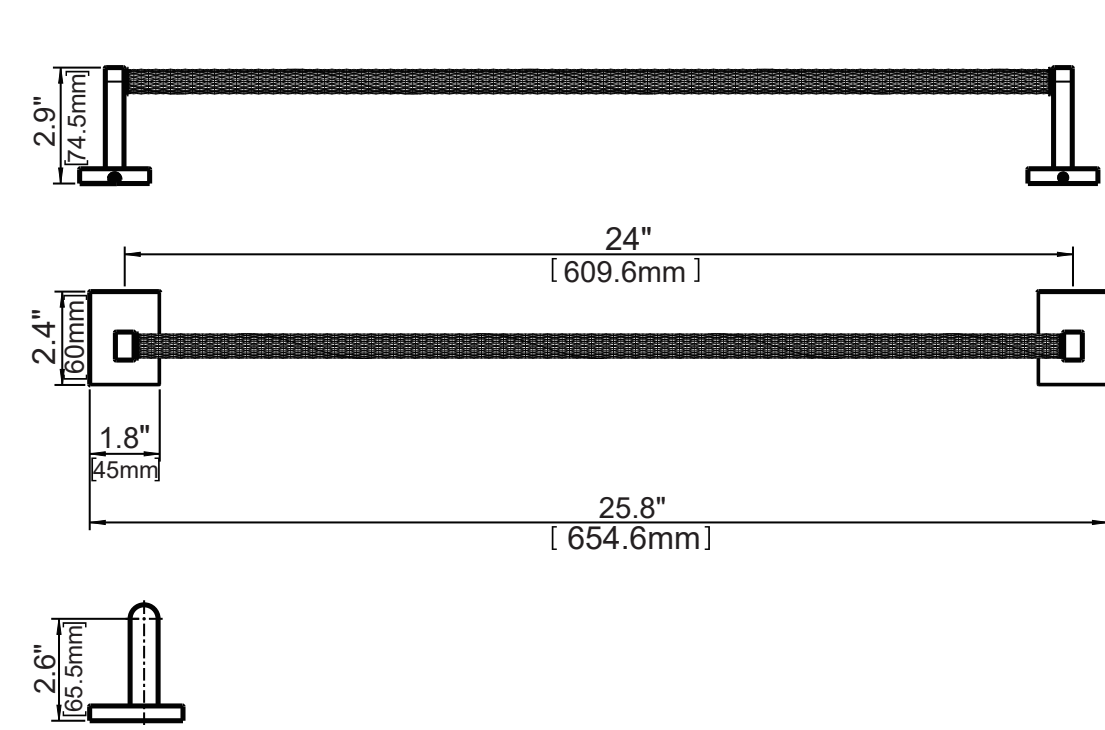

C. PAPER HOLDER

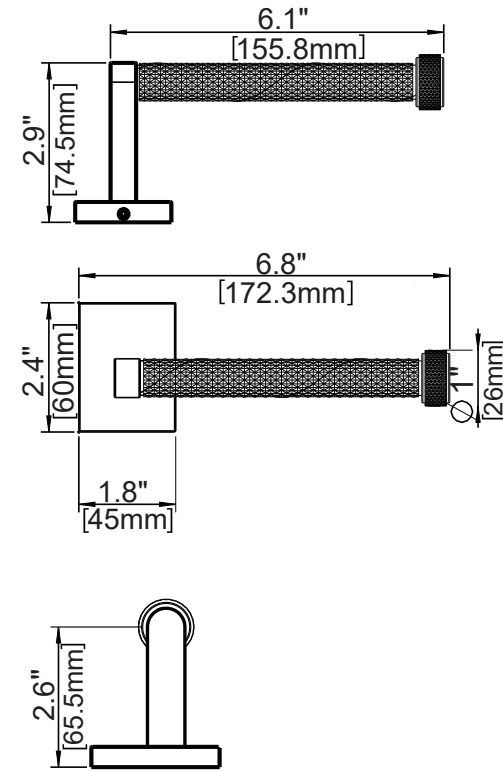

D. TOWER RING

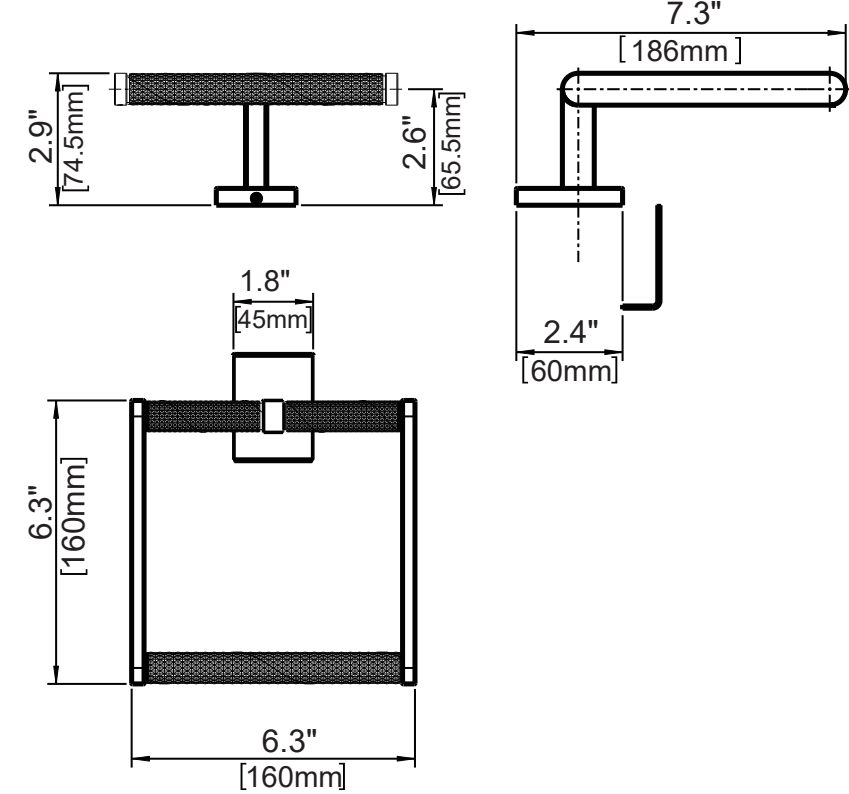

E. ROBE HOOK

