

# ASSEMBLY INSTRUCTION


---

## PLEASE READ BEFORE ASSEMBLING!


Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.

Tip #3: Read manual before assembling, it helps!






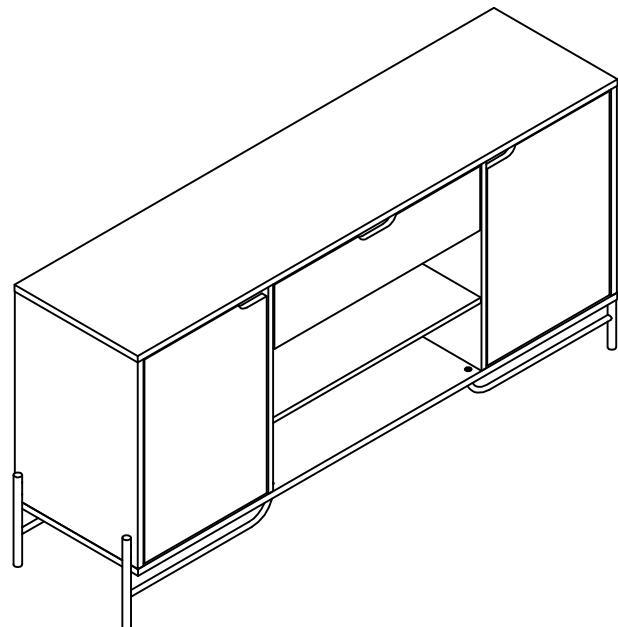


# PARTS IDENTIFICATION


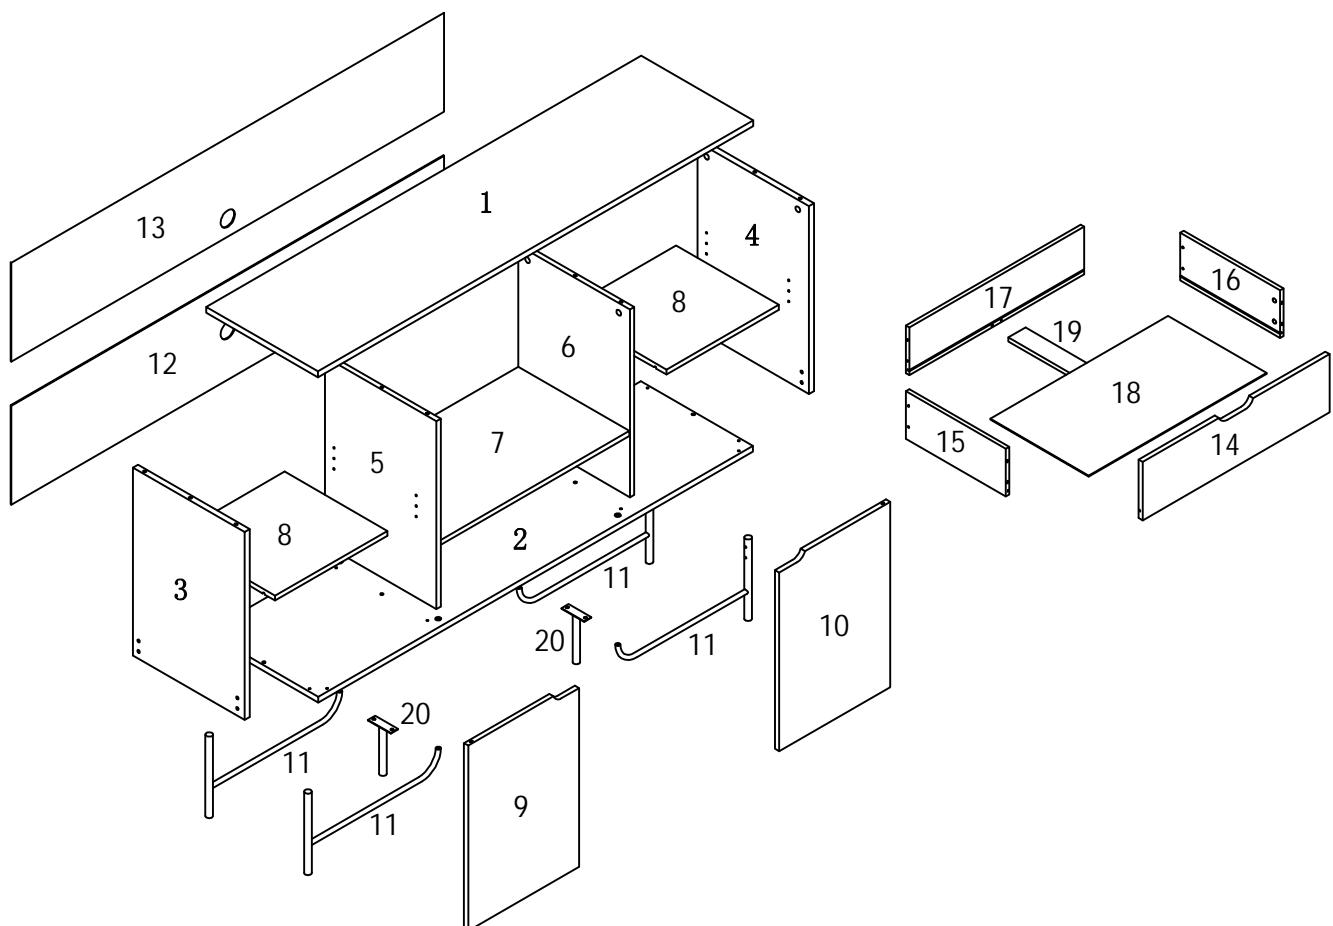


(1)	1pc	(7)	1pc	(13)	1pc	(19)	1pc
(2)	1pc	(8)	2pc	(14)	1pc	(20)	2pcs
(3)	1pc	(9)	1pc	(15)	1pc		
(4)	1pc	(10)	1pc	(16)	1pc		
(5)	1pc	(11)	4pcs	(17)	1pc		
(6)	1pc	(12)	1pc	(18)	1pc		

# HARDWARE IDENTIFICATION


A		L29	12pcs
B		Ø15	12pcs
C		Ø8x25	10pcs
D		Ø22	8pcs
E		Ø4x40	8pcs
F		M6x25	12pcs
G		M6x12	4pcs
H		Ø5x15	8pcs
I			50pcs
J		Ø4x30	6pcs
K		Ø6x30	2pcs
L		L20	4pcs
M		Ø12	4pcs
N			2pcs
O			2pcs
P		Ø3x14	4pcs
Q			2pcs
R		Ø3x12	4pcs
S		197x5x1	1pc
T		Φ 8x40	1pc
U		12x12x1	2pcs
X		Φ 5x40	1pc
Y		Φ 4x25	1pc

# ASSEMBLY INSTRUCTION

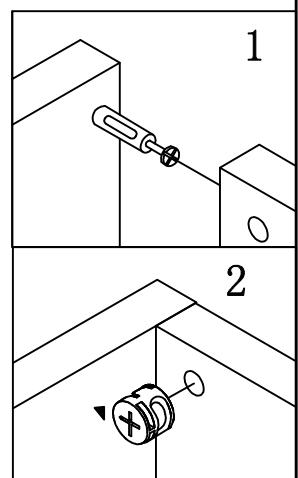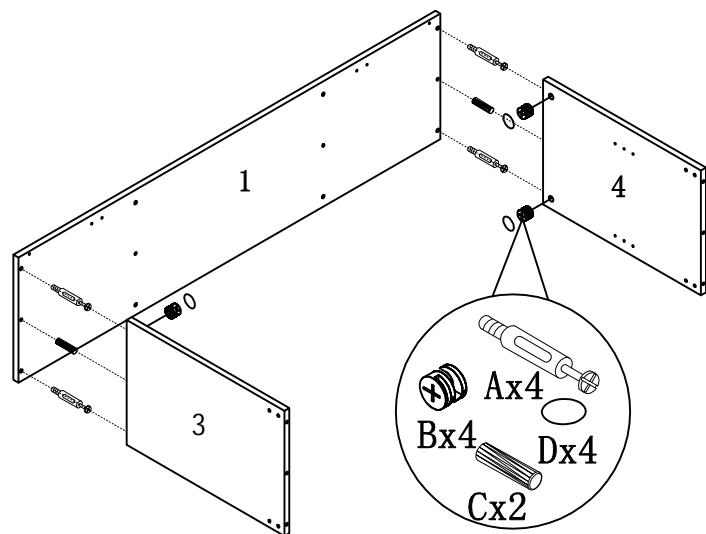


STEP1

STEP2

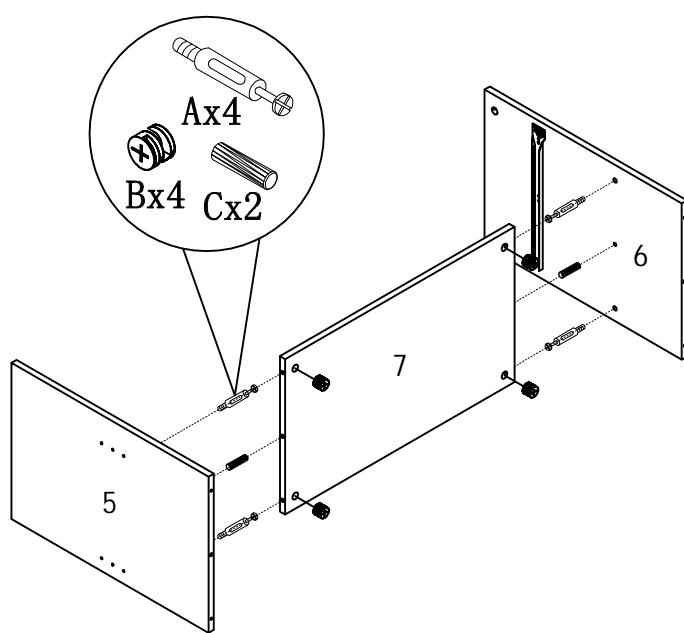

# ASSEMBLY INSTRUCTION


---

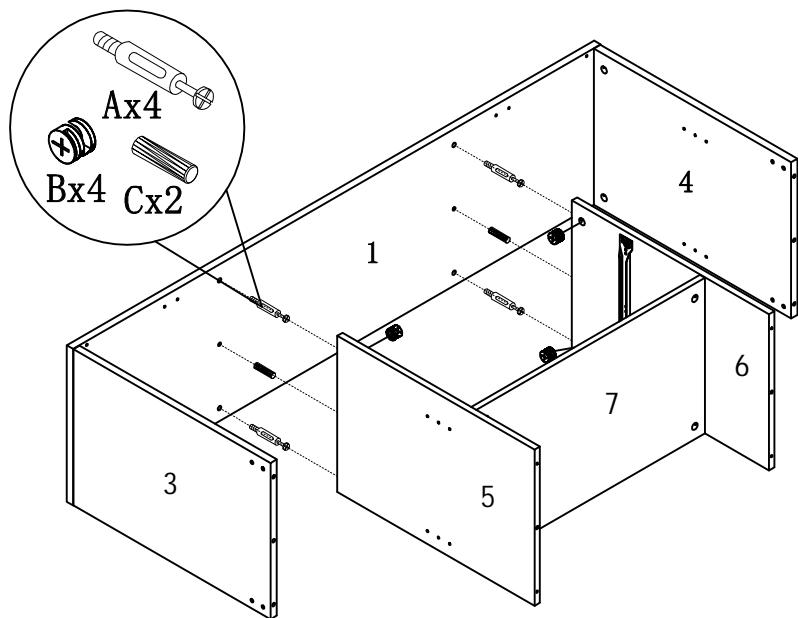

STEP3


---

STEP4

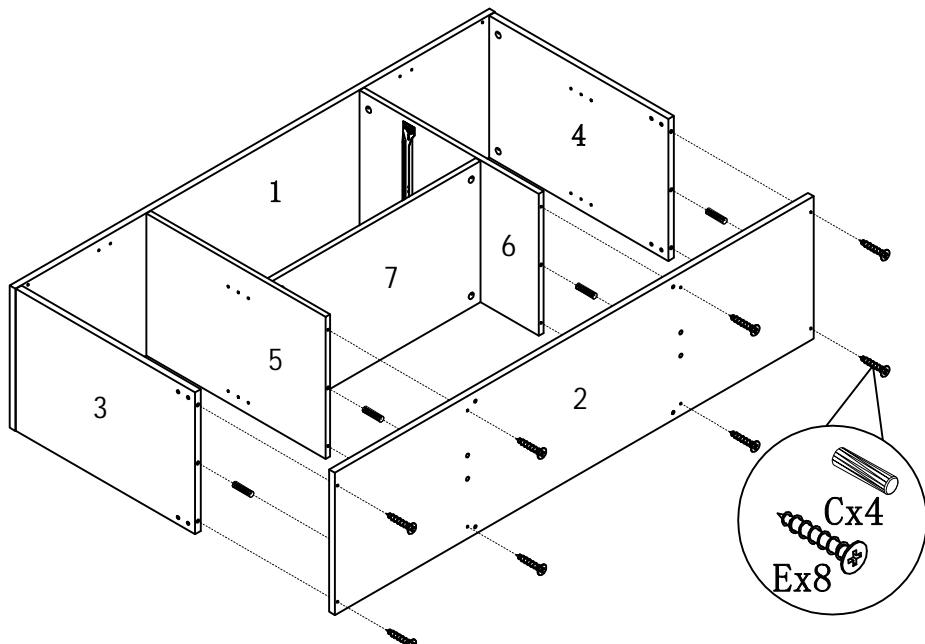

# ASSEMBLY INSTRUCTION


---

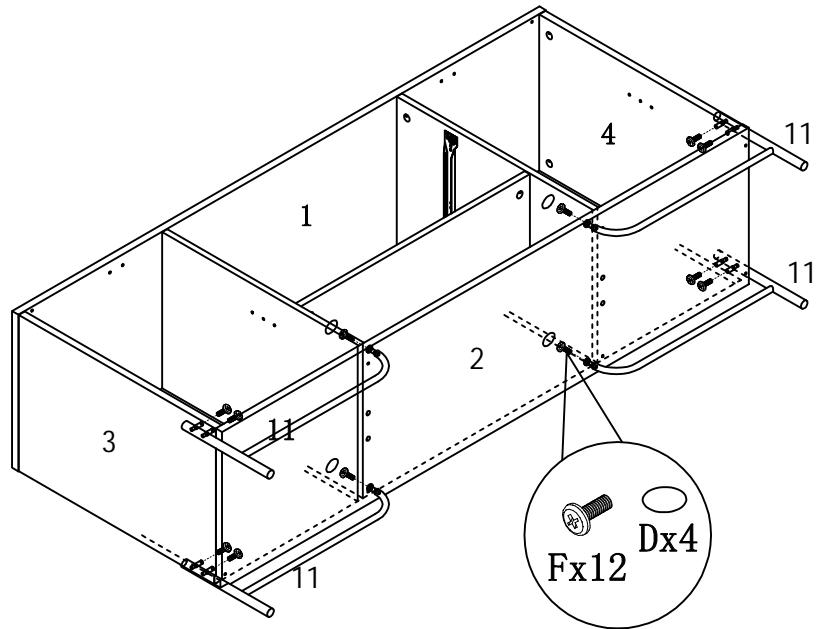

STEP5


---

STEP6

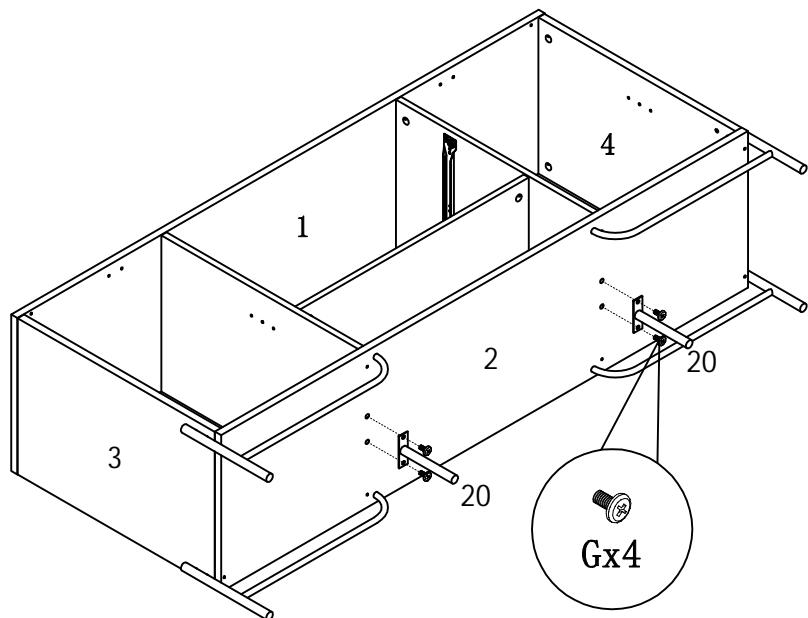

# ASSEMBLY INSTRUCTION


---

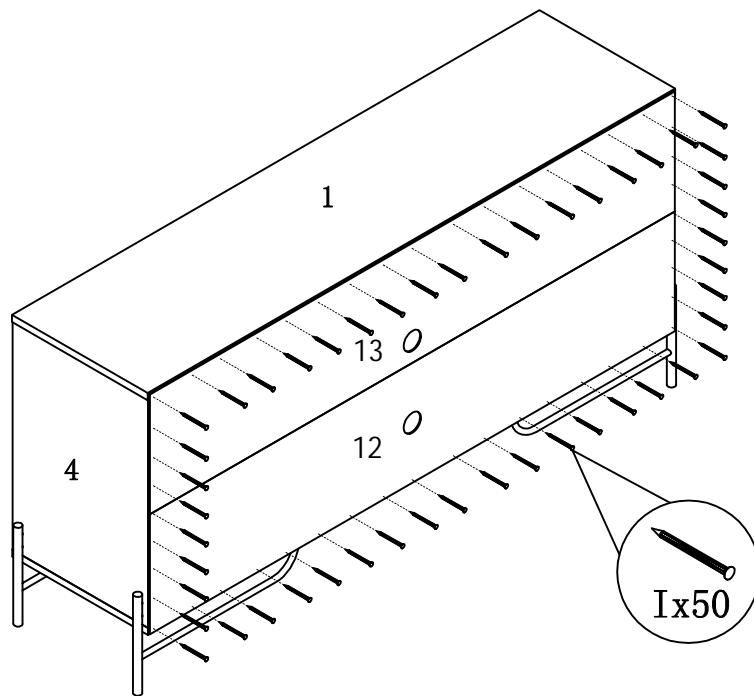

STEP7


---

STEP8

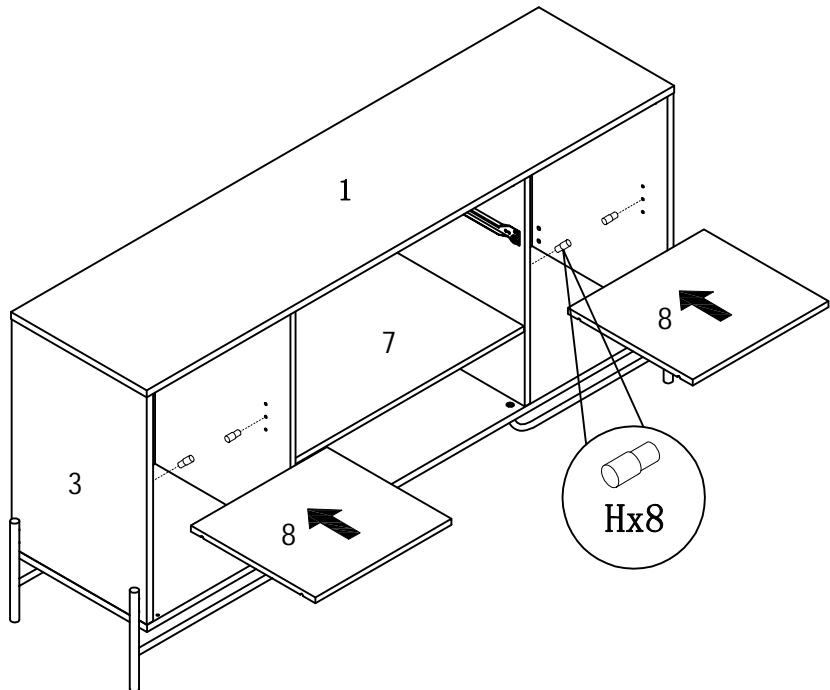

# ASSEMBLY INSTRUCTION


---

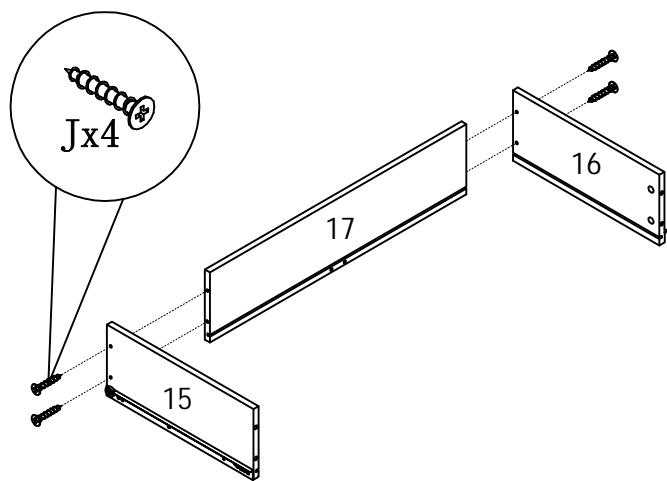

STEP9


---

STEP10

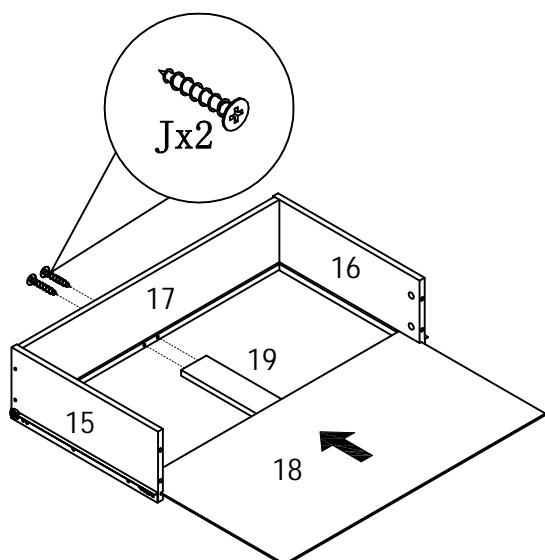

# ASSEMBLY INSTRUCTION


---

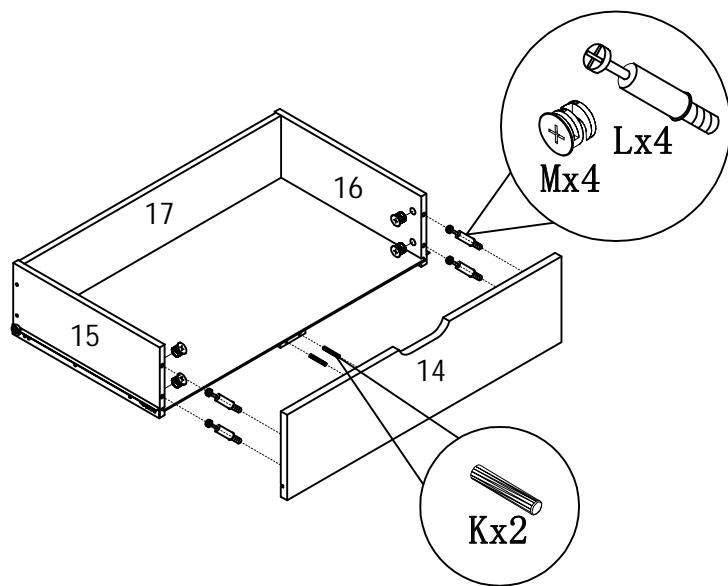

STEP11


---

STEP12

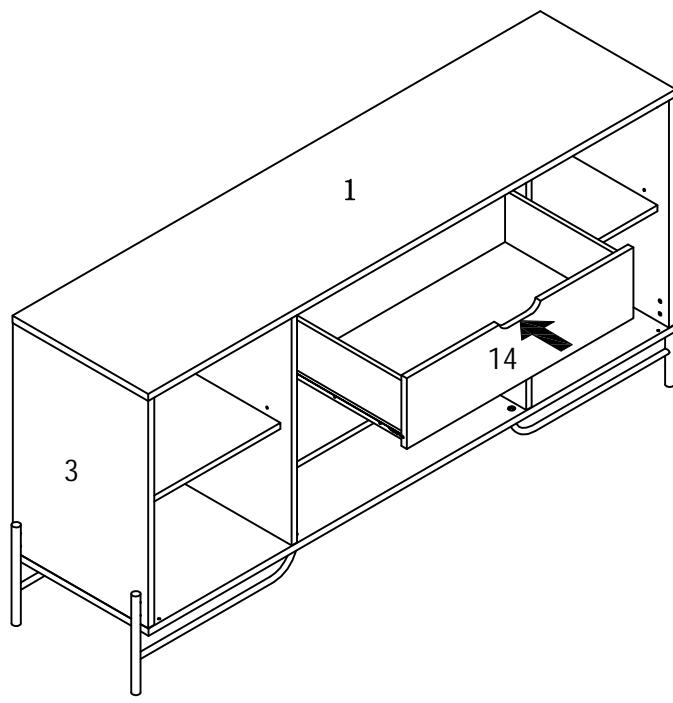


# ASSEMBLY INSTRUCTION

---

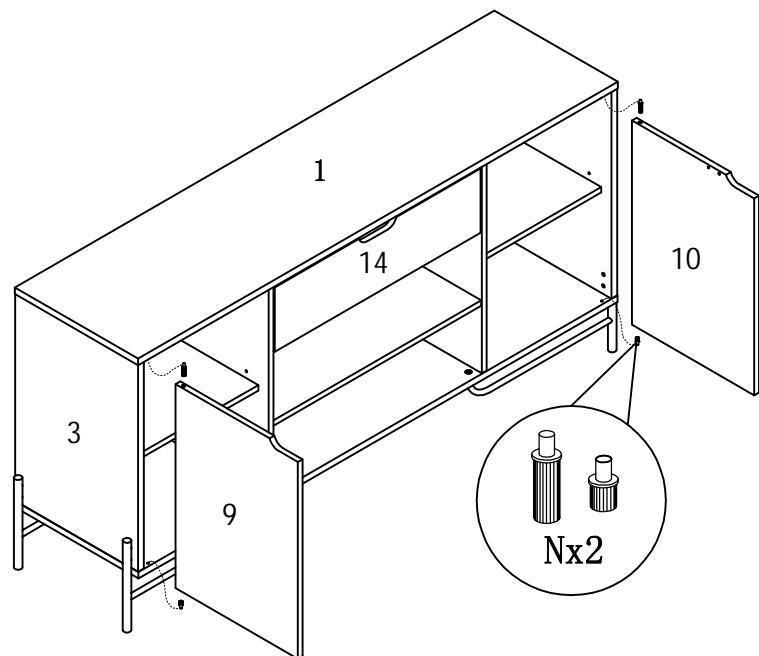

STEP13


STEP14

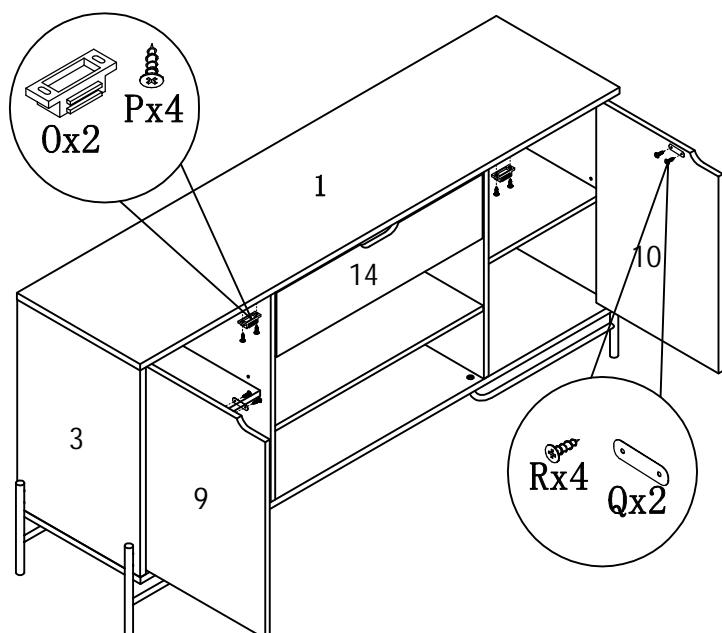

## HARDWARE (INCLUDED) :



DRYWALL ANCHOR  $\phi 8 \times 40$  X 1PC



METAL BRACKETS  $12 \times 12 \times 1$  X 2PCS



DRYWALL SCREW  $\phi 5 \times 40$  X 1PC




STRAP  $197 \times 5 \times 1$  X 1PC



FLATHEAD SCREW  $\phi 4 \times 25$  X 1PC

## TOOLS NEEDED ( NOT INCLUDED) :




DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

### STEP 1

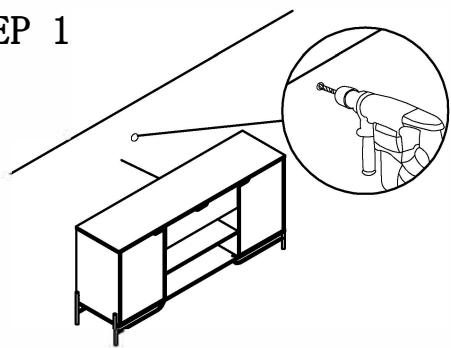


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor ,drill hole into drywall.

### STEP 2

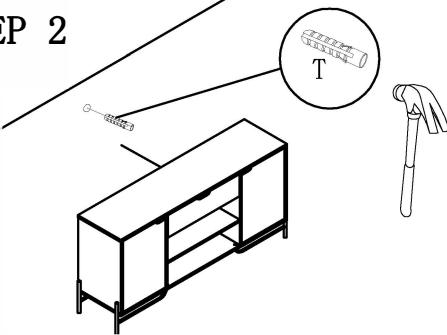


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly.If hole is too small, drill again to increase hole size .Do not force anchor into wall.

### STEP 3

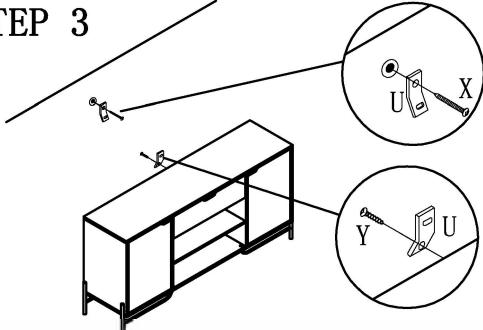

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item.along top edge.

### STEP 4

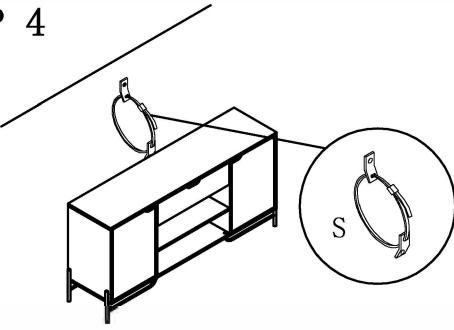

1. Insert strap thru bracket attached to wall. then thru bracket on item , and into head of strap.
2. pull lightly til strap stops.

Assembly is complete.