


TIPS OF SHADE SAIL INSTALLATION

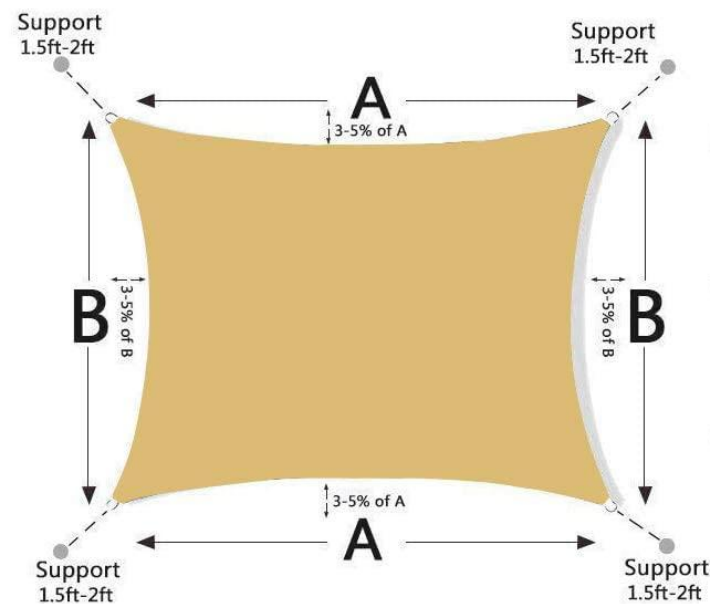

- Measure and clean the area where the shade sail is to be installed
- Leave an allowance of 1.5-2ft between the fixing point and the shade sail
- The tension at each corner should be 300-500N

- Choose hyperbolic style with 2 sides higher than others
- Allow heavy rain to run off and also makes your shade sail looks more attractive

