


# Installation Step



After following these steps, You are now ready to use your toilet bidet sprayer. The whole installation should take no longer than 10 minutes and should require no tools. It has never been easier to install a toilet bidet sprayer in your own bathroom .

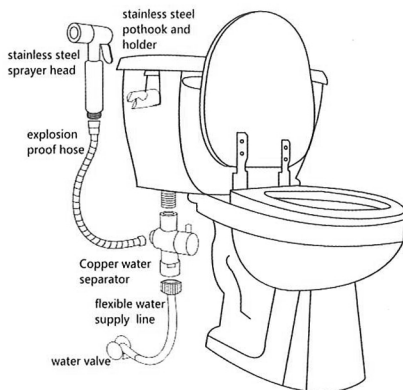

## HOW TO USE:

- Step 1** Step 1: Open the T-adapter to allow water follow.
- Step 2** Step 2: Press the lever to release the water from the sprayer head.
- Step 3** Step 3: Adjust to your desired water pressure by gently turning the handle of the T-adapter whilst holding down the lever on the sprayer.
- Step 4** water models by rotating the end of the sprayer head within the range of 360 degrees.



**WARNING:** When the sprayer is not in use, please switch the T-adapter off. Failure to do so may weaken the hose or sprayer head, LanHao is not responsible for damages that may be caused by failure to follow this warning.

# INSTALLATION INSTRUCTIONS



---

**Important! Your toilet must have a flexible supply line to install toilet bidet Sprayer (Flexible hose not included)**

---

**Step 1** Shut off water supply to the toilet by turning the water valve all the way to the right(should be a tap on the wall ),flush the toilet and hold down the handle to drain the tank.

**Step 2** Disconnect the flexible water supply line from under the toilet tank.

**Step 3** Ensure the rubber washer is placed properly inside the top of the 3-way T-adapter before connecting it to the toilet tank.Afterwards, reconnect the flexible water supply line to the bottom end of the 3-way T-adapter (do not overtighten)

**Step 4** Ensure that the rubber washers are placed properly on both ends of the metal hose;attach one end of the hose to the open end of the 3-way T-adapter and the other end to the sprayer head.

**Step 5** Lift the toilet water tank lid and hang the sprayer holder over the edge of the tank.Close the toilet tank lid.

**Step 6** Turn the water supply line valve back on(the one that was turned off in Step 1). Inspect for leaks upon completing installation and again after 10 minutes. Use plumbers tape on any leaking joints.