
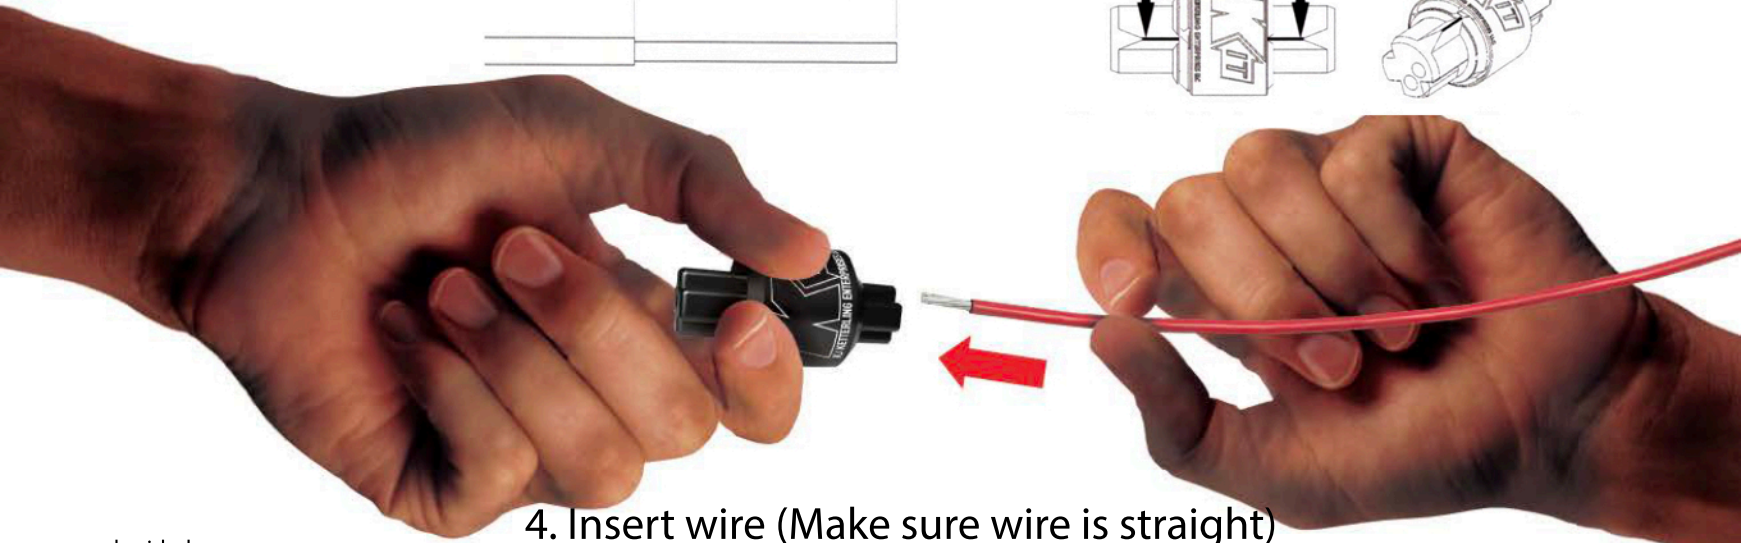
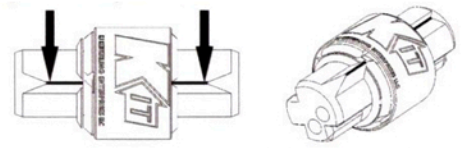



1. Disconnect Power

2. Strip Wire 1"




3. Align Tabs



4. Insert wire (Make sure wire is straight)

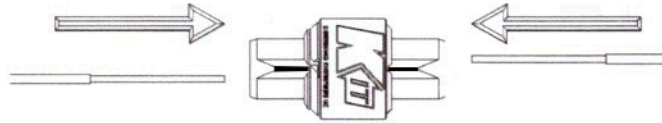

copper or braided
18-22 AWG

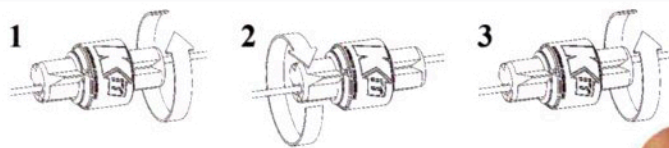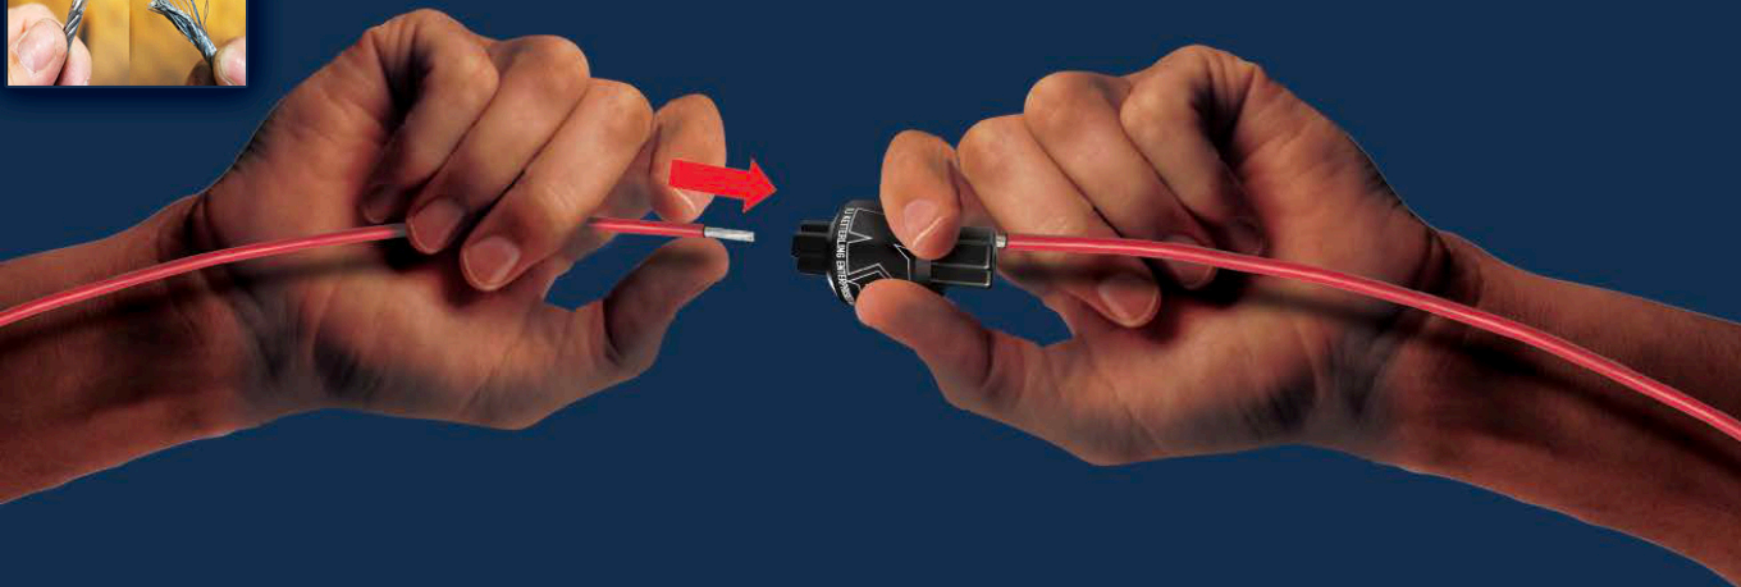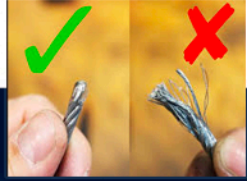

5. Twist up to 1.5 times



WIRE KONNECTOR

