



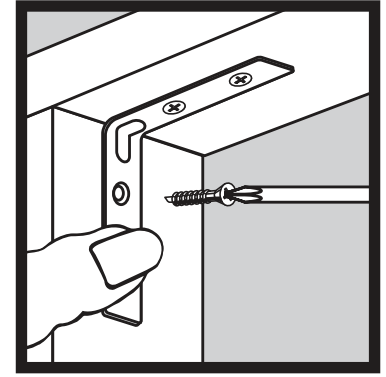

Wear Safety Goggles
Utilice Gafas Protectoras

EVERBILT™

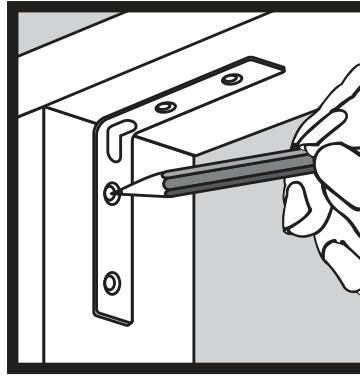

English

Ideal reinforcement for inside of right angle corner joints. Perfect for use with wood. Screws are not included.

Recommended screws are #6 x 3/4" flat head wood screws.

Instructions:

1. Mark screw locations at desired positions and drill 5/64" pilot holes angled away from joint.
2. Secure corner brace with screws.

Español

Ideal para reforzar el interior de las uniones para esquinas en ángulo recto. Perfecto para madera. No se incluyen los tornillos. Se recomienda su utilización con tornillos para madera de cabeza plana N.º 6 x 3/4" (19.0mm).

Instrucciones:

1. Marque las ubicaciones deseadas de los tornillos y perforo orificios guía de 5/64" (2.0mm) con ángulo fuera de las uniones.
2. Asegure las abrazaderas para esquina con tornillos.

MADE IN CHINA
HECHO EN CHINA

Distributed by
Home Depot U.S.A., Inc.
2455 Paces Ferry Rd. NW
Atlanta, GA 30339