


INSTALLATION GUIDE


1 Install compacted aggregate base according to the paver manufacturer's instructions. Based on the project, the paver supplier will suggest the proper width and depth for the specific application.

2 Position ProFlex Paver Edging along the perimeter of the installation. The edging should be installed directly on top of compacted aggregate base prior to screeding sand and setting pavers. Paver edging can be set in two ways; both are universally accepted:

Anchoring tabs facing toward the pavers, with the inside edging wall against pavers and sand, and tabs underneath

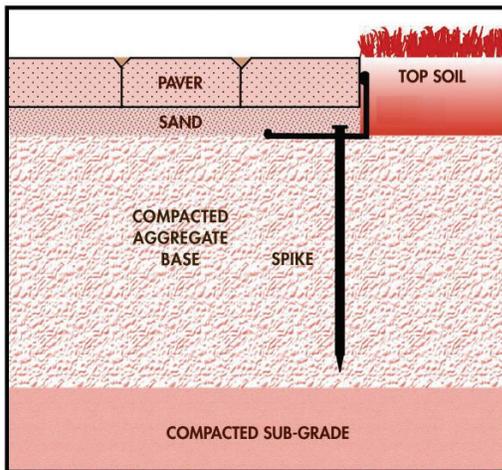

Anchoring tabs facing away from the pavers, with outer edging wall against pavers and sand, and tab under topsoil

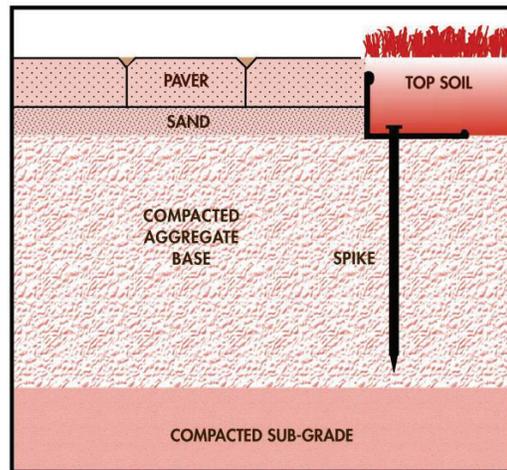

- ProFlex Coiled Paver Edging is sold ready to use as-is for curved sections.
- ProFlex Straight Paver Edging is sold ready to use as-is for straight sections. Clip spines to make the edging flexible where curves are needed.

3 Anchor the edging with ProFlex Anchoring Spikes, or any spike with a $\frac{3}{8}$ " maximum diameter. Secure edging by driving the spikes through tabs into compacted base. Position spikes at each end of the edging and throughout the edging piece to secure as needed.

4 Backfill perimeter with topsoil. Seed, sod, or install ground cover, as the project requires. ProFlex Edging should not be visible after installation.

Protective eyewear is recommended when cutting and installing paver edging.