

### INSTALLATION GUIDELINES

- 1** Install compacted aggregate base. Consult your paver supplier for proper width and depth for the specific paver application. Wearing protective eye-wear is recommended when installing ProFlex™ Aluminum Paver Edging.
- 2** Determine the proper positioning for the edging. ProFlex™ Aluminum Paver Edging is ready to use right out of the box. Cut with a hacksaw or metal snips. ProFlex™ Aluminum Paver Edging is made from contractor grade materials but is lightweight and flexible to make curves, and angles. For angles bend edging around a solid form, or cut two pieces and butt together. The edging should be installed directly on top of the compacted aggregate base prior to screeding sand and settling pavers.
- 3** Diagram 1 illustrates an installation with the anchoring tabs underneath the pavers. Diagram 2 illustrates an installation with the anchoring tabs adjacent to the edge of the pavers. Either is acceptable.
- 4** A minimum of 3 anchoring spikes per 6' piece of edging are recommended. Secure edging by driving anchoring spikes (included) at a slight angle through tabs into compacted base. Position spikes at each end of the edging and a maximum of 36" apart. For holding large patio stones or rocks, additional spikes are recommended and sold separately.
- 5** Backfill perimeter with topsoil. Seed, sod or install groundcover, as specified.

DIAGRAM 1

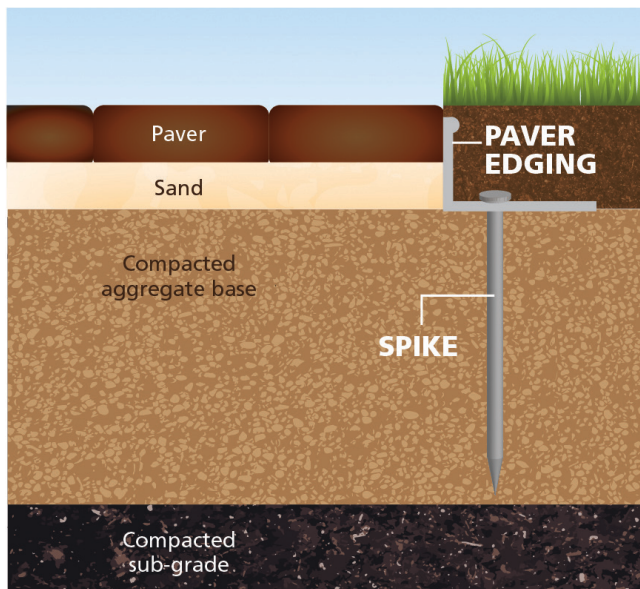


DIAGRAM 2

