

TrimFreeTM Lawn Borders

3 EASY STEPS

Create gentle curves, corners and straight runs by simply stepping on border pieces or tapping with rubber mallet to secure.

- 1 Lay out border pieces** in the area where you want to install. Perfect for grass-to-garden, stepping stones or patio pads. Digging or preparing a flat area is not necessary. Simply wet ground to soften and position pieces. **For best results, mow lawn before installation.**
- 2 Customize your installation.** Rectangular pieces are perfect for straight runs or right angles. Use the structural grid on the underside of the TrimFreeTM Lawn Borders to create gentle curves (Fig. A & Fig. B) or a perfect 45° angle (Fig. C). A band saw is suggested to make these cuts, but other saws will work. *Be sure to cut on the OUTSIDE WALL of the guide, leaving structural support with the finished piece (Fig. D).*



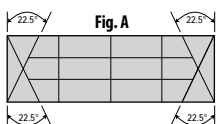



Fig. B

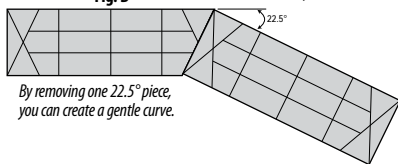

By removing one 22.5° piece, you can create a gentle curve.

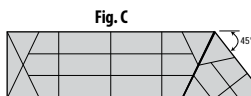

By removing two 22.5° pieces, you can create a 45° angle.

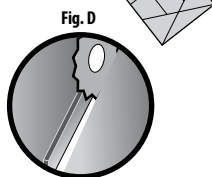

- 3 Press border pieces into ground.** For most lawns, all you have to do is walk over individual border pieces to dig unique, patented tooth construction into soil or turf. If you are having difficulty, try soaking your lawn again. For extremely hard or dense turf, you may need to use a rubber mallet to tap borders into place.

Installation Guide



Innovation, Function, Quality and Service

EMSCO GROUP

Girard, PA 16417

www.emscogroup.com