



Compartment Sink Assembly Instructions

Step 1. Carefully remove contents of carton. position sink upside down on a protected surface so you can access the underside of the sink. Install leg assembly into gussets at each end.

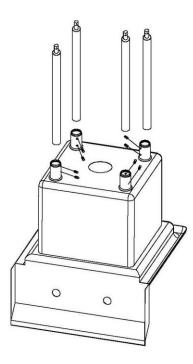

Step 2. Tighten each Set Screw using 5/32" Allen Wrench included with your sink

Step 3. Carefully turn sink over onto its legs. Check for stability and adjust Bullet Feet as necessary

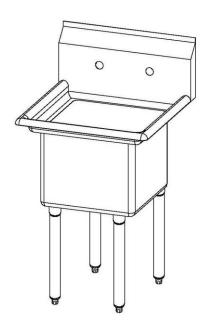

If you require additional assistance please contact customer service by email support@koolmore.com or by phone For Additional Assistance, Please call Customer Service at: 718-576-6342



Koolmore 1411 President street STE 3A Brooklyn NY 11213 718-576-6342 support@koolmore.com