# **USER CARE & INSTALLATION GUIDE**

### Package Contents:

- 3 Extendable Double Rod Brackets
- 6 Philips Pan Head Screw
- 6 Wall Anchors

#### Tools needed:

Tape Measure, Pencil, Drill & Bit Set, Philips head Screwdriver, Level














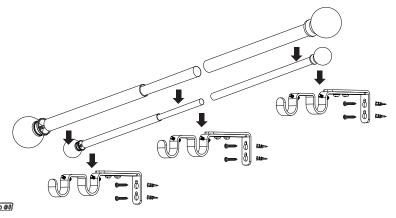

# **BRACKET INSTALLATION**

#### STEP 1.

Place brackets against wall at desired locations and mark screw holes. Use tape measure and level to make sure marked screw holes are horizontal to each other.

#### STEP 2A. (FOR MOUNTING TO DRYWALL OR PANELING)

Pre-drill two pilot holes for each bracket (1/4" drill bit) and insert anchors into wall and insert screws into wall anchors.

## STEP 2B. (FOR MOUNTING TO WOOD OR STUDS)

If mounting directly into wood or studs, pre-drill two pilot holes for each bracket (1/4" drill bit) and install bracket on the wall with screws provided.

#### STEP 3.

Determine projection of brackets. Loosen projection screw, slide bracket to desired position and tighten projection screw. Repeat for each bracket.

# **ROD INSTALLATION**

#### STEP 4.

Place sheer panels on sheer rod and curtain panels on curtain rod. Note that panels, rods, and finials are rold separetely.

#### STEP 5.

Slide rods onto the brackets and add finials to the ends of the rod.

#### STEP 6.

Secure each rod by tightening screws provided.

#### **Care Instruction:**

Wipe gently with cloth to clean any sand, dirt, or dust on product. Do not use abrasive cleaners as they may damage the surface finish.

