


WRAP BRACKET

HANGING INSTRUCTIONS



Step 1

At desired spot on your wall, using a level align the wrap bracket and mark top & bottom holes, measure to 16" or 32" (depending of shelf size) on center using a level align the second wrap bracket and mark top & bottom holes.

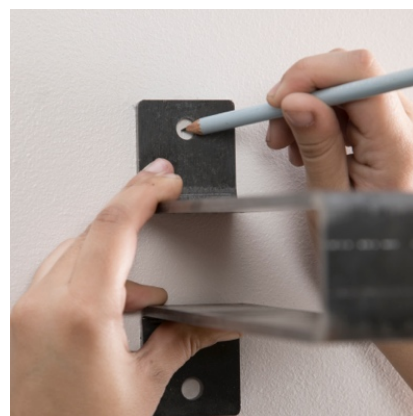

STEP 2

Pre-drill a pilot hole using a 11/64 drill bit. *(We recommend using a stud finder to make sure the metal wrap bracket is secured into a wall stud) Mount wrap bracket to the wall using a supplied #14, 3" phillips head screw.



STEP 3

Slide one end of the 2x10 shelf through the opening. Slip the other wrap bracket around the shelf and secure to the wall.

