


How To Measure Windows

Measure the windows you wish to tint. All dimensions are in inches.

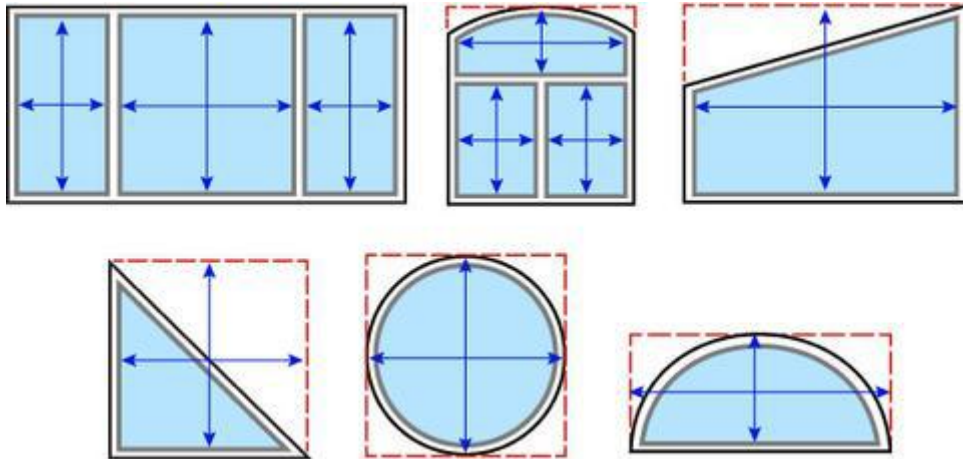

INSTRUCTIONS:

1. Always measure your windows as if they were a rectangle or square even if they are rounded.
2. Add one inch to each dimension which will allow for trimming during installation.
3. Film rolls come in widths of 17.5" and 36.5" and pieces can be ordered in lengths from 78" to 394".
4. When selecting a film width and length be certain to allow approximately 1" of additional film to each dimension to allow for trimming during installation.