



TUB PLATE
PLACA



ADAPTER
ADAPTADOR

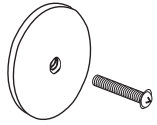

INSTRUCTIONS:

1. Remove old overflow plate.
2. Install new faceplate using screw provided.
3. Remove old drain body using plier handles or similar tool.
4. Use 792BB brass adapter for 1-7/8"-11.5 drains, or remove for 1-5/8"-16 bath shoes.
5. Making sure threads are clear of debris, apply a thin bead of silicone and screw in new drain body.

INSTRUCCIONES:

1. Quitar la placa usada del rebosadero.
2. Instale la placa nueva usando el tornillo provisto.
3. Desaloje el cuerpo del desagüe usando pinzas para manijas o una herramienta semejante.
4. Utilice un adaptador de latón 792BB para desagües de 1-7 / 8"-11.5, o quítese las zapatillas de baño de 1-5 / 8"-16.
5. Asegurándose de que las roscas estén libres de escombros, aplique una fina capa de silicona y atornille el nuevo cuerpo de drenaje.

WESTBRASS

2429 E. Olympic Blvd.
Los Angeles, CA 90021
(213) 627-8441
orders@westbrass.com
www.westbrass.com

UPC Sticker

WESTBRASS
Fine Decorative Plumbing Since 1935

R931K

Tub Drain Kit

1-1/2" Tip-Toe Mechanism w/
1-Hole Faceplate & Screw

Juego de Desagüe

Para Bañera

Mechanismo 'Tip-Toe'
de 1-1/2" y
Placa de
Oroificio
con Tornillo

