

INSTALLATION INSTRUCTIONS


Undercounter Sink

Rectangle




WILLOW BATH AND VANITY


MATERIALS INCLUDED

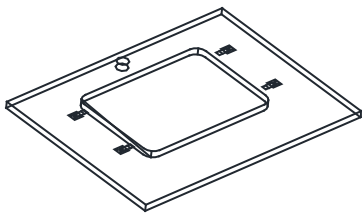

COUNTERTOP*1

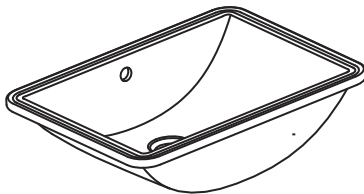


SINK*1

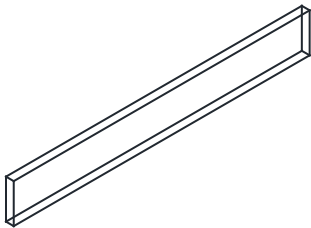


SPLASH*1/2

INSTALLATION TOOLS




Tape Measure




Pencil



Screwdriver

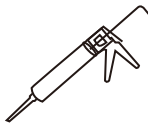

Silicone Sealant

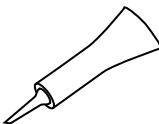


Epoxy



Adjust wrench


PRE-INSTALLATION

Step 1

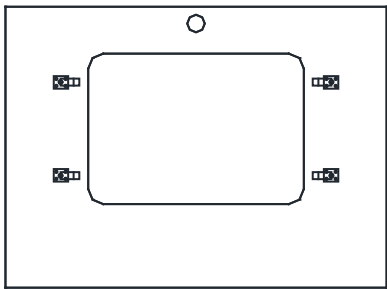


Set countertop face down on clean, flat surface

Step 2

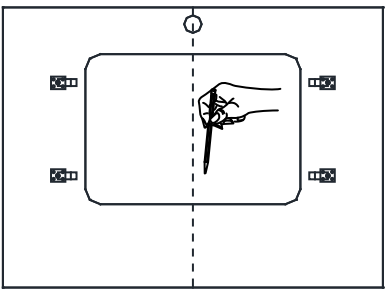


Find and mark with pencil the center of the top

Step 3

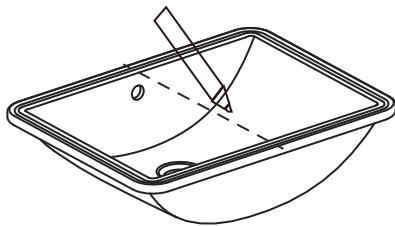

Find and mark with pencil the center of the sink

Step 4

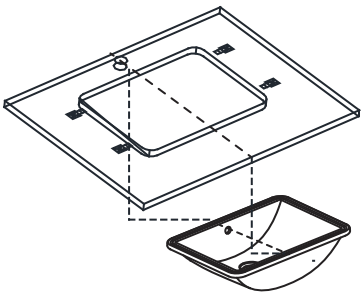


Place sink on countertop and adjust to match mark

**** Remove sink and clean both the surface of the countertop and edges of sink before starting installation**


INSTALLATION

Step 1

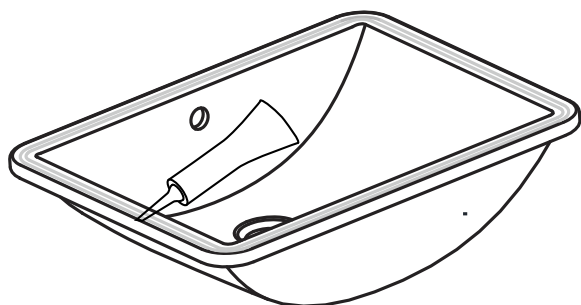

Apply epoxy to the rim of the sink using the applicator

Step 2

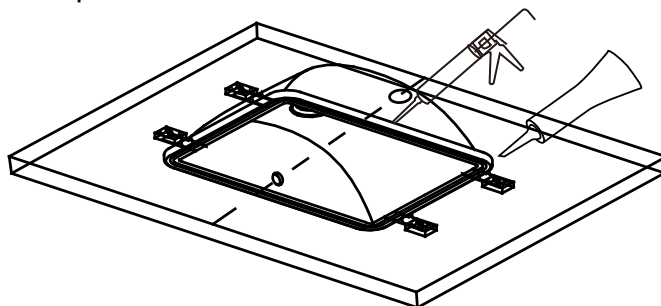


Place sink on countertop and adjust to the center of opening previously marked

Step 3




Allow the epoxy to dry for 10-15 minutes before proceeding

Step 4

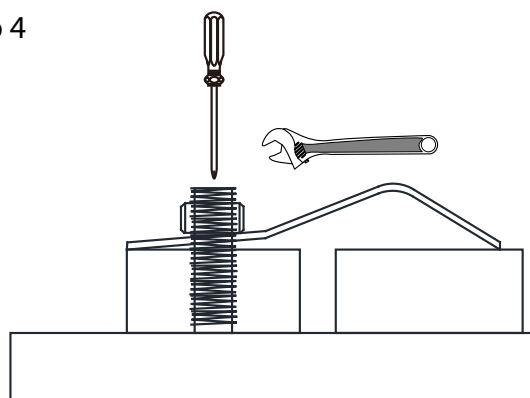

For secondary support, attach the sink mounting hardware using the screwdriver

Step 5

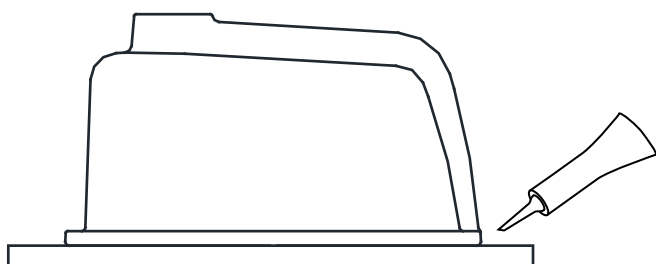

Apply silicone sealant to outside right of the sink

Step 6



Allow the silicone to dry up to 24-48 hours before attaching countertop with attached sink to cabinet