

General Installation Instructions



The instructions given are for our general installation guide for all showerheads and/or hand shower combos. To begin installation, pliers and a soft cloth are required.



Apply the included Teflon tape by wrapping it around the shower arm threads a few times.




Insert a rubber washer into the showerhead.




Position the showerhead over the shower arm outlet.



Next, hand tighten the showerhead to the shower arm.

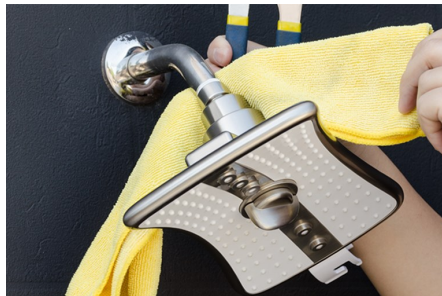

After, wrap a soft cloth over the connection.

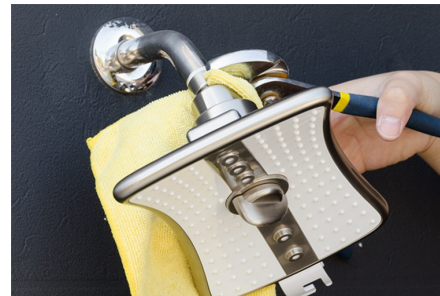

With the cloth fully covering the connection, use pliers to further tighten. Be careful not to mar the surface of the shower head with the pliers.

If you purchased a showerhead your installation is complete. For hand showers and combos, please see the next step.



To attach the hose, begin by inserting a rubber washer into one end.

General Installation Instructions



Insert another rubber washer into the other end of the hose.



Tighten one end to the showerhead using pliers and a soft cloth.



Lastly, attach the shower wand to the hose and tighten until snug.



Your installation is now complete.

NOTE: If your showerhead droops, disassemble the showerhead portion and flip the orientation of the rubber washer.