















CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.  
The use of steam or water-based cleaners may cause excessive shrinking or staining.

NOTICE

- \* Please make sure all parts are included before you begin assembly of this item.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening

Parts List and Hardware List


ID	PICTURE & DESCRIPTION	Q.tys	ID	PICTURE & DESCRIPTION	Q.tys
A	 Left leg frame	1X	H	 cushion seat	1X
B	 Right leg frame	1X	M1	 Screw Ø7x60mm	8X
C	 Seat	1X	M2	 Screw Ø6x30mm	4X
D	 Slided tray	1X	M3	 Screw Ø4x35mm	4X
E	 Backrest	1X	M4	 Bolts Ø6x30mm	4X
F	 Armrest supporting	1X	M5	 wooden dowel Ø10x30mm	4X
G	 Pillow	2X	M6	 Allen key 4	2X

SAFAVIEH  
OUTDOOR

Item# PAT6748

Product dimensions: 74,80”W x 27,95/48,82”D x 29,53”H

ASSEMBLY INSTRUCTIONS FOR SAFAVIEH  
HAMMET DOUBLE LOUNGER  
THE DESIGN OF HAMMET DOUBLE LOUNGER IN THE DRAWINGS  
MAY VARY FROM ACTUAL, BUT ASSEMBLY CAN  
BE APPLIED FOR THIS ITEM

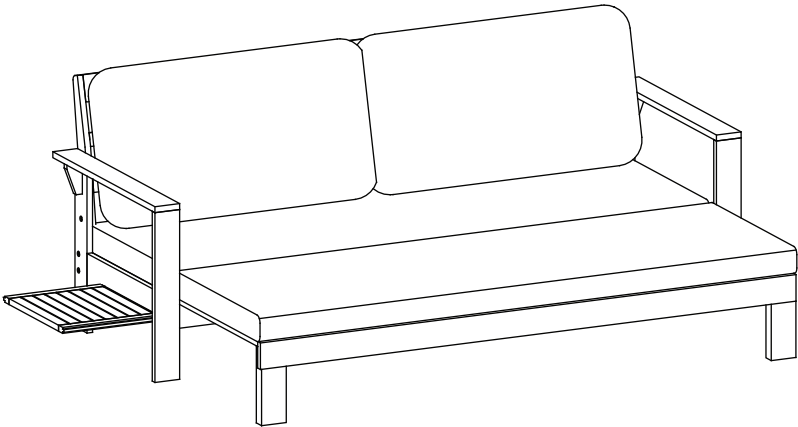

 **WARNING** 



Weight Capacity: 550 lbs

WARNING: DO NOT STAND ON CHAIR


WARNING: DO NOT OVER TORQUE BOLTS/SCREWS

## PREPARATION


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.


Tools Required for Assembly: Allen Key (included), screw Driver (not included)

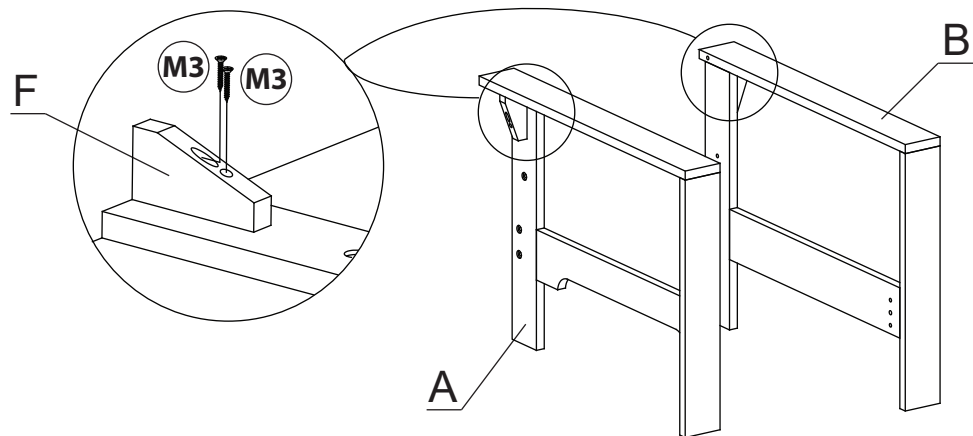


Step 1: Fix armrest supporting to the corner of leg frame as shown then secure using screw (M3). Fully tighten using screw driver

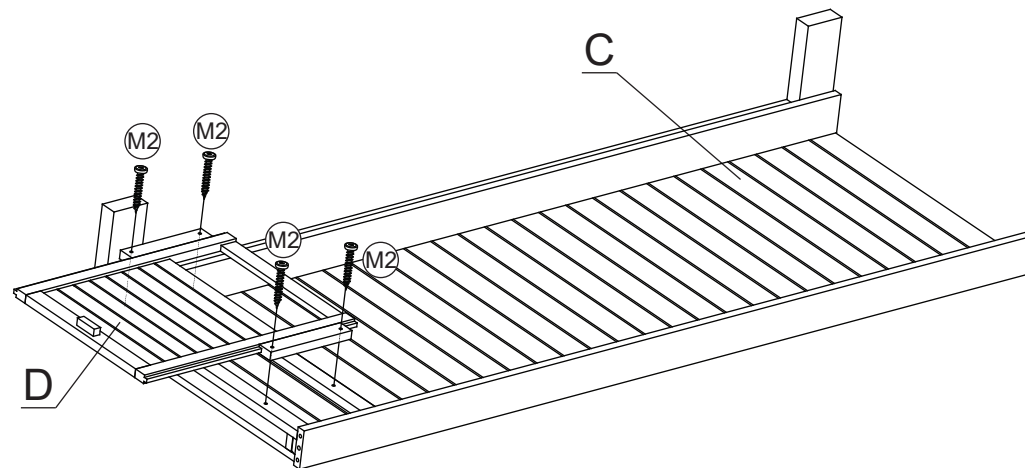


Step 2: Fix sliding tray to wooden bracket of seat as shown then Tighten using screw (M2) & Allen key (M6)

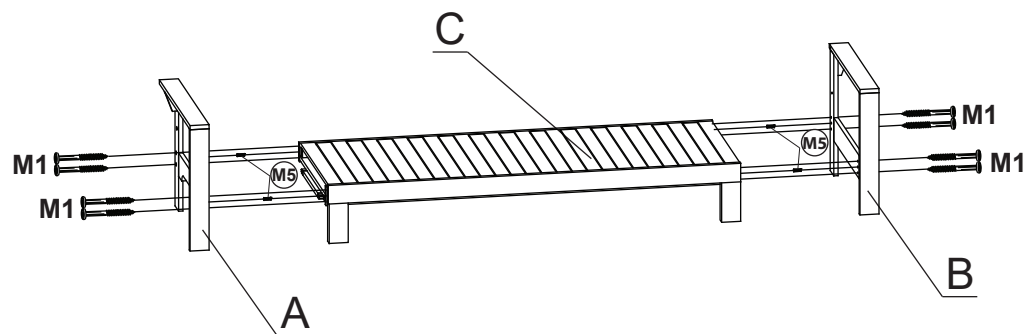


Step 3: insert Wooden dowel (M5) into the hole in seat (C) then attach the left leg frame (A) to Seat use screw (M1). Tighten using Allen Key (M6). Repeat for the right leg frame (B). Do not fully tighten Screw until all are installed.

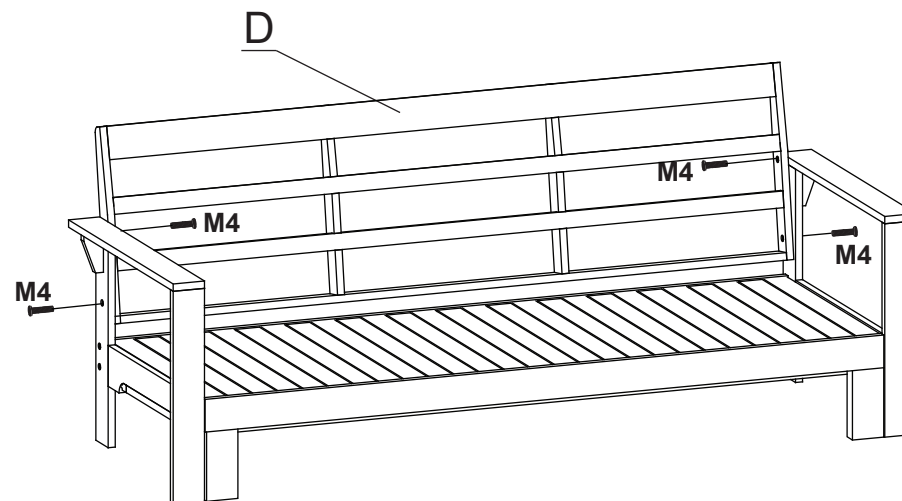


Step 4: Fix the backrest (D) to assembled frame then secure using Bolts (M4) & tighten with Allen key (M6)

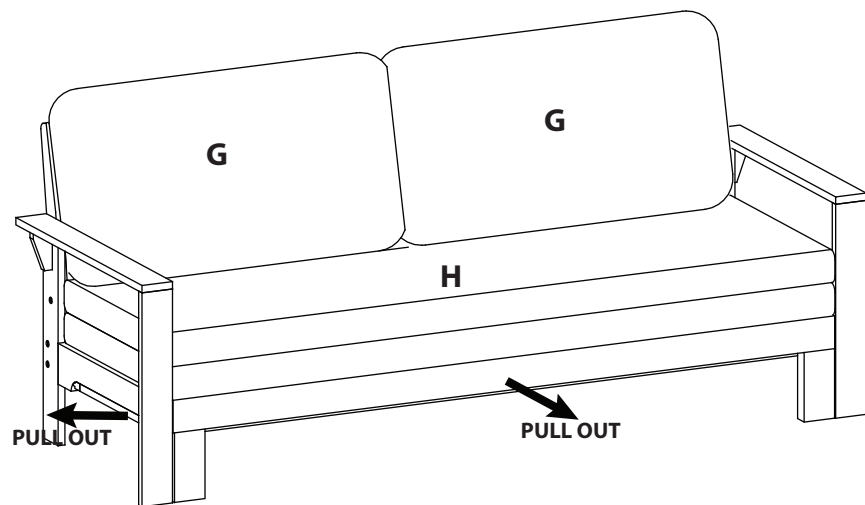


Step 5: Place all cushions as shown.

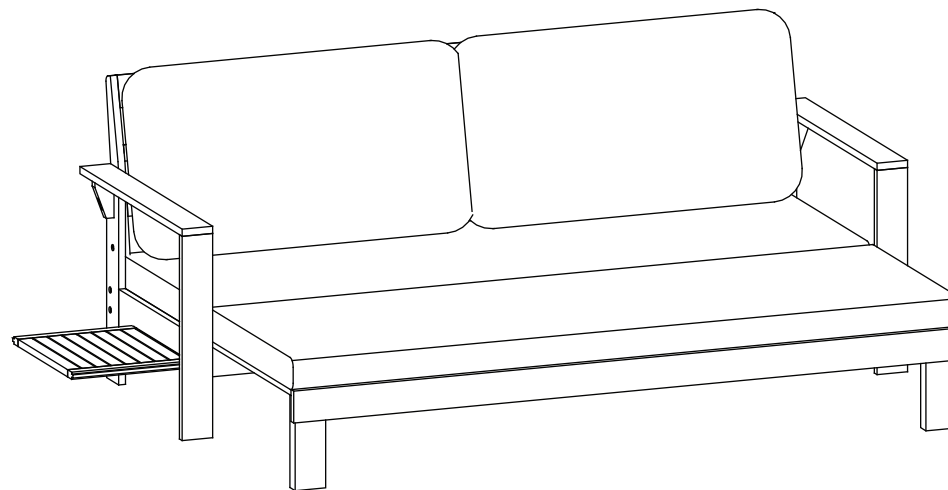

The assembly is now completed.

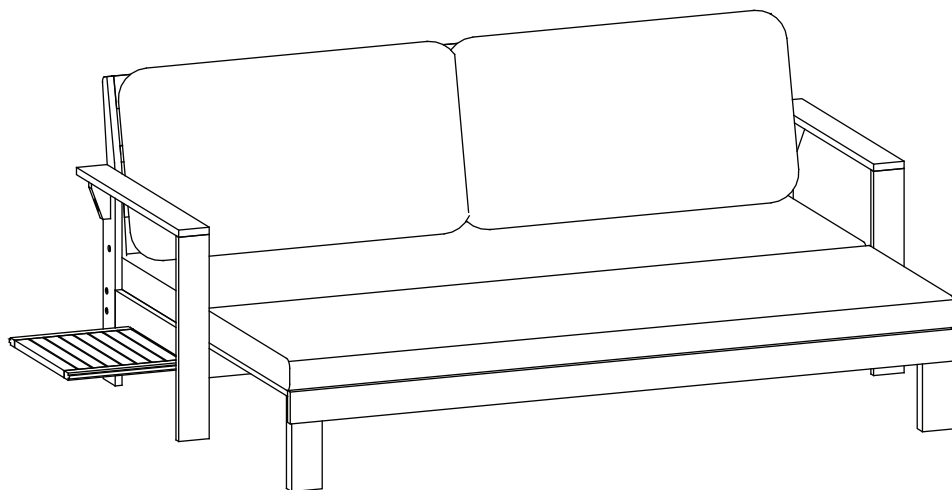

Option 1 in shown

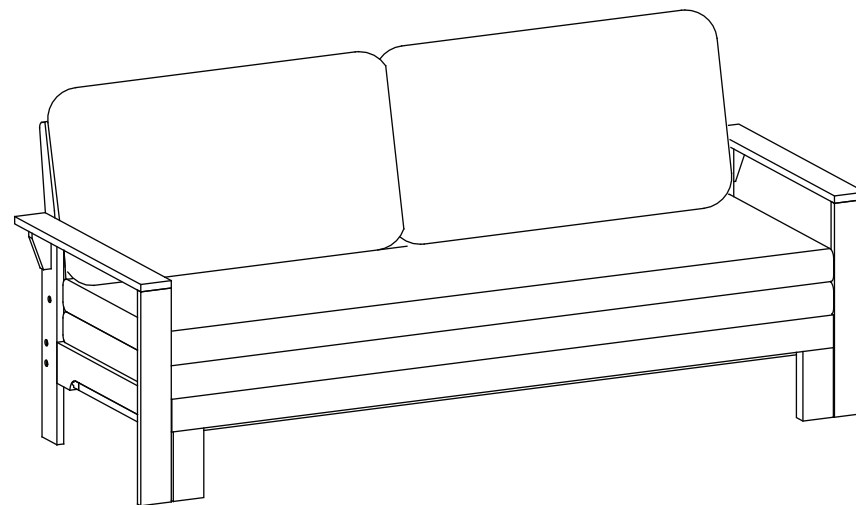

Option 2 in shown