

SPIGOT (EWC-11)

INSTALLATION INSTRUCTIONS


Please read the instruction before installation and retain them for future reference.

INCLUDED

- 1 spout
- 1 rubber gasket
- 1 nut

REQUIRED

Wrench (optional)

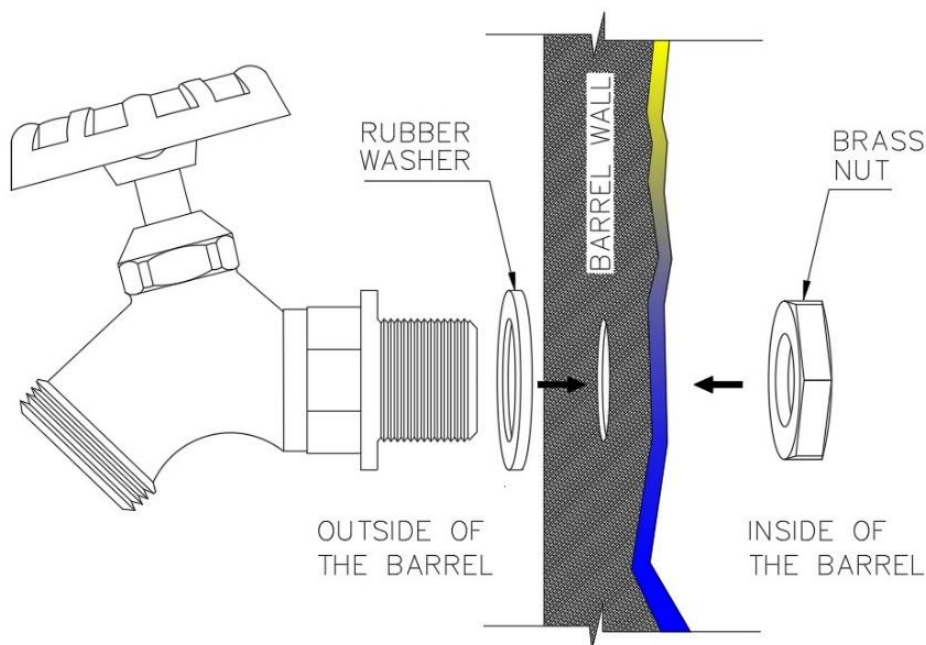

Step 1

Insert the rubber washer onto the spout.

Step 2

Insert the spout into the hole at the front of the rain barrel from outside.

Step 3

Hold the spout in place from outside and tighten the nut from inside by using Wrench/hand (**soft rubber gasket and only needs hand tightening.**)