


INSTALLATION INSTRUCTIONS FOR

PULL OUT TRAY 24"

1. Identify assembly components to be used. (Spacers (2), Screws (8)).
2. In the interior side cabinets, draw a straight line from the front to the back of the cabinet 2" above the bottom of the cabinet.
3. For the right side rail installation, place a mark from front of cabinet $1\frac{1}{2}$ ", and a second mark at $13\frac{3}{8}$ " from front of cabinet and using a 3/16" bit, drill the holes on the marks $\frac{1}{2}$ " deep.
4. For the left side rail installation, place 4 marks all from front of cabinet:
 - a. First mark at $7/8$ "
 - b. Second mark at $2\frac{1}{8}$ "
 - c. Third mark at $12\frac{3}{4}$ "
 - d. Fourth mark at 14 "
5. Using a 3/16" bit, drill the holes on the marks and drill $\frac{1}{2}$ " deep.
6. Place the spacers on the right side and attach them by using 2 screws per spacer, place the rail on top of them and attach the rail to the spacer.
7. Insert the drawer box into the rails.

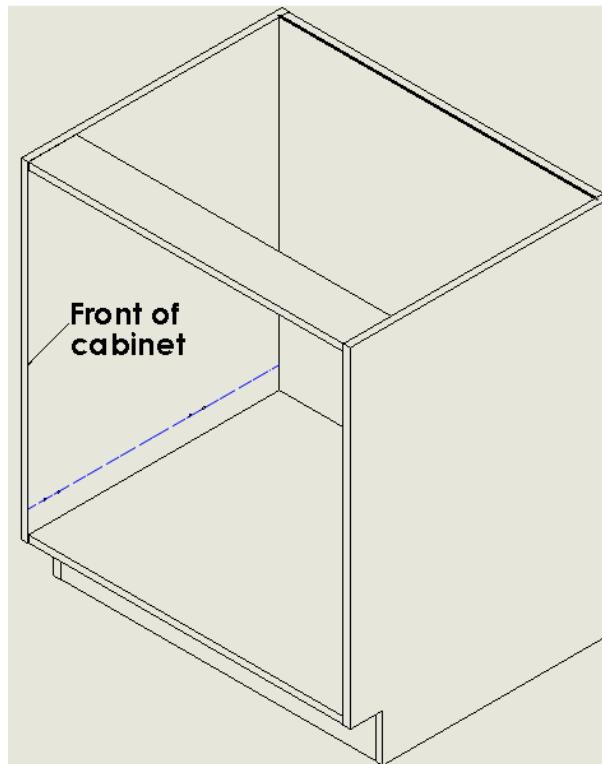

INSTRUCCIONES DE INSTALACION

PARA LA CHAROLA DE 24"

1. Identificar componentes. (Espaciadores (2), Tornillos (8)).
2. En la parte interior del lateral del gabinete, dibuje una línea recta iniciando en la parte frontal del gabinete hasta la parte trasera, 2" por encima de la base del gabinete.
3. Para la instalación del riel derecho, marque $1\frac{1}{2}$ " de la parte frontal del gabinete hacia atrás y una segunda marca a $13\frac{3}{8}$ ". Usando una punta broca de $\frac{3}{16}$ " bit, perfore en las marcas a $\frac{1}{2}$ " de profundidad.
4. Para la instalación del riel izquierdo, dibuje 4 marcas, tomando como referencia el frente del gabinete:
 - a. Primera marca a $\frac{7}{8}$ "
 - b. Segunda marca a $2\frac{1}{8}$ "
 - c. Tercer marca a $12\frac{3}{4}$ "
 - d. Cuarta marca a 14"
5. Utilizando una broca de $\frac{3}{16}$ " perfore en las marcas a $\frac{1}{2}$ " de profundidad.
6. Coloque los espaciadores en el lateral derecho y únalos usando 2 tornillos por espaciador, coloque el riel encima de los espaciadores, y una el riel a los espaciadores.
7. Inserte el cajón dentro de los rieles.

