

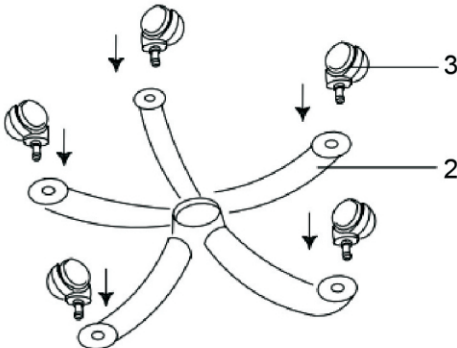
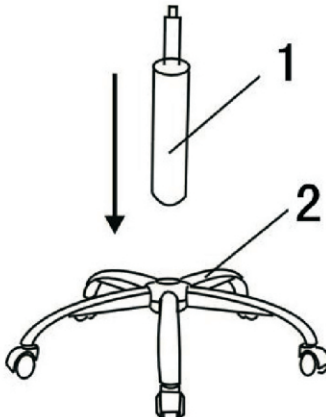

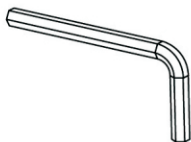
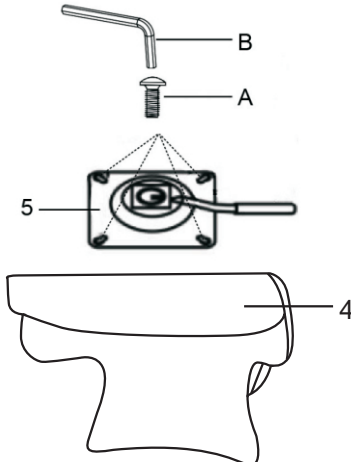


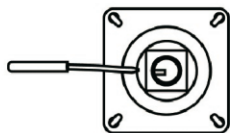


ASSEMBLY INSTRUCTIONS

<div>1</div> <div></div> <div>1PC</div>	<div>A</div> <div></div> <div>M6x25mm 4PCS</div>	<div>STEP 1</div> <div></div>	<div>STEP 2</div> <div></div>
<div>2</div> <div></div> <div>1PC</div>	<div>B</div> <div></div> <div>1PC</div>		<div>STEP 3</div> <div></div> <div>⚠ Do not fully tighten the bolts until all the bolt align with the hole. Pls be sure you align the hole first.</div>
<div>3</div> <div></div> <div>5PCS</div>			
<div>4</div> <div></div> <div>1PC</div>			
<div>5</div> <div></div> <div>1PC</div>			