

Quick Start Guide

45-04921 Lawn Sweeper

Read the manual that came with your Lawn Sweeper for:

- Important safety warnings
- Further explanation of features
- Operating instructions

Problem?
Call 1-800-448-9282



Quick Start Guide

45-04921 Lawn Sweeper



Read the manual that came with your Lawn Sweeper for:

- Important safety warnings
- Further explanation of features
- Operating instructions


Problem?
Call 1-800-448-9282




HARDWARE PACKAGE

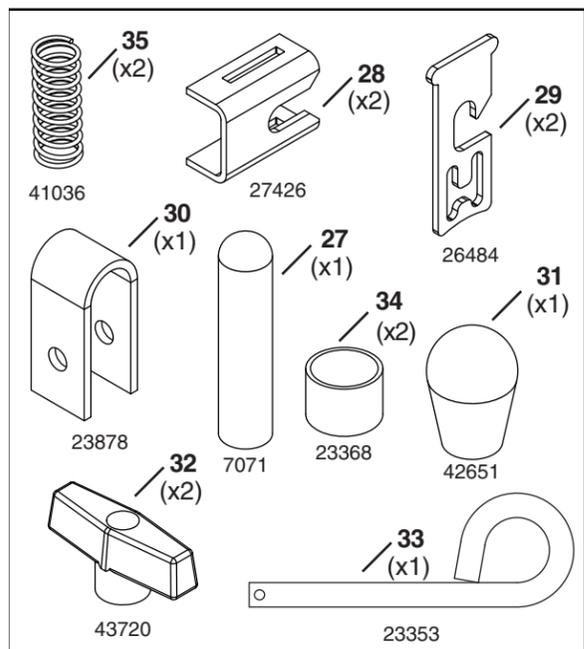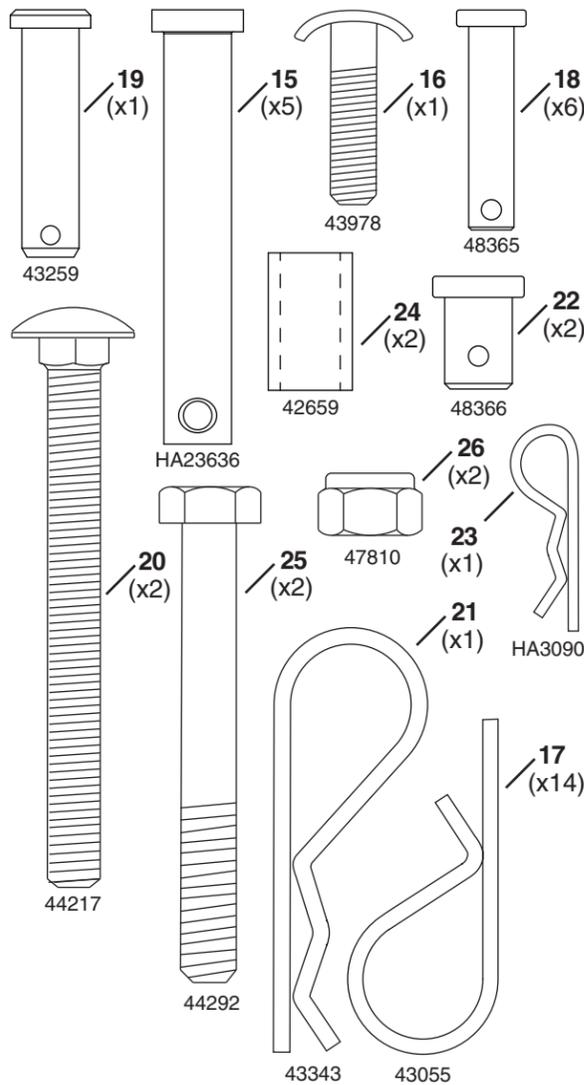


STEP 1 (SEE FIGURE 1): Attach the drawbar (8) and both drawbar brackets (1) to the sweeper using a 3/8 x 2-1/4" clevis pin (15) and 3/32" hair pin (17).

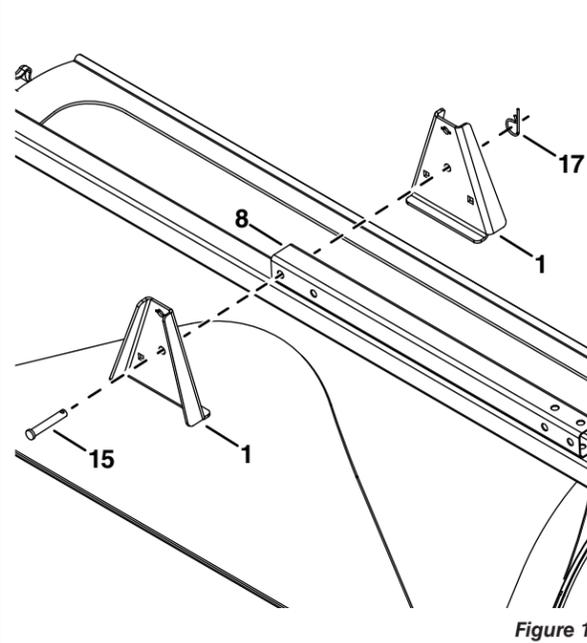


STEP 2 (SEE FIGURE 2): Secure the drawbar and drawbar brackets to the sweeper using two 5/16 x 3" carriage bolts (20), 3/4" spacers (24), and wing knobs (32).

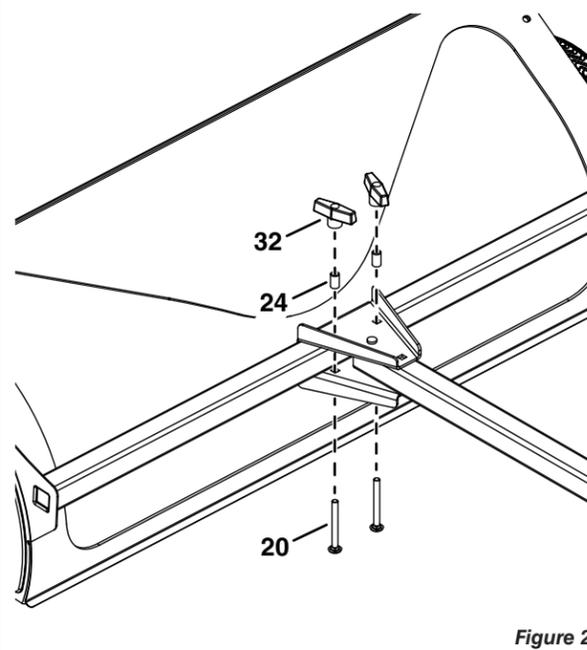


STEP 3 (SEE FIGURE 3): Attach the handle holder (2) to the drawbar and drawbar brackets using a 3/32" hair pin (17).

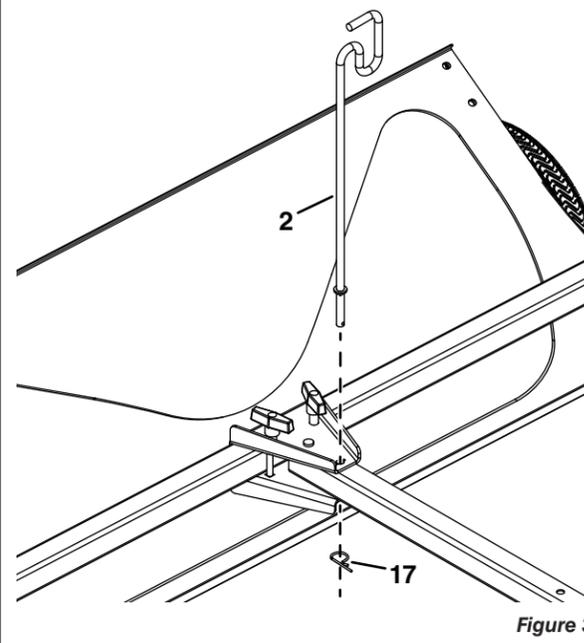


STEP 4 (SEE FIGURE 4): Attach the bag arms (12) to the sweeper housing using four 3/8" x 2-1/4" clevis pins (15) and 3/32" hair pins (17).

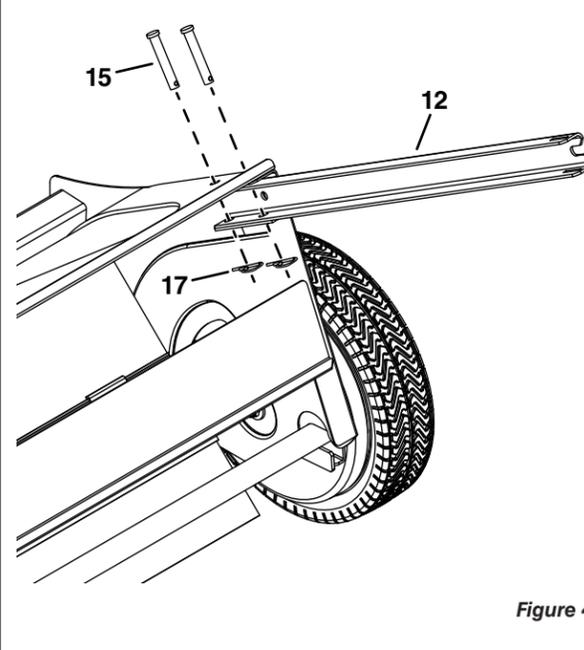


STEP 5 (SEE FIGURE 5): Assemble a pivot rod support bracket (28) and pivot rod retainer (29) to each bag arm.

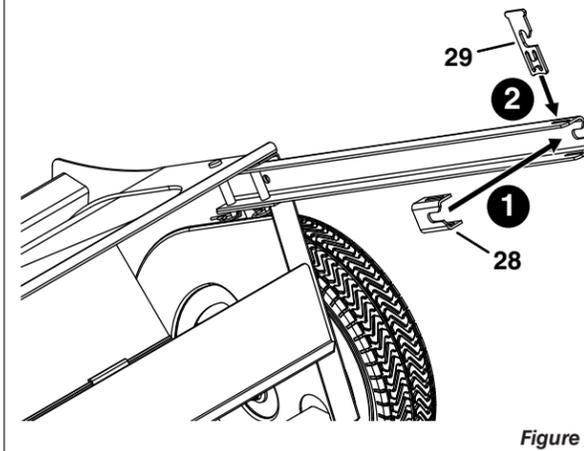


STEP 6 (SEE FIGURE 6): Press a compression spring (35) into the end of each pivot rod retainer.

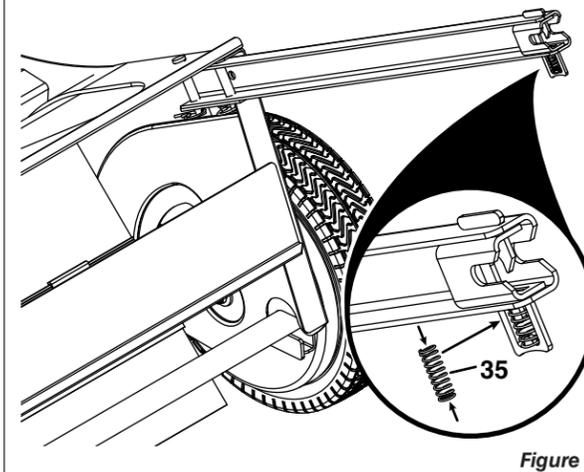


STEP 7 (SEE FIGURE 7): Install a rear hopper tube (5) onto the ends of the two lower hopper tubes (13). Secure them with two 1/4 x 1.11" clevis pins (18) and 3/32" hair pins (17).

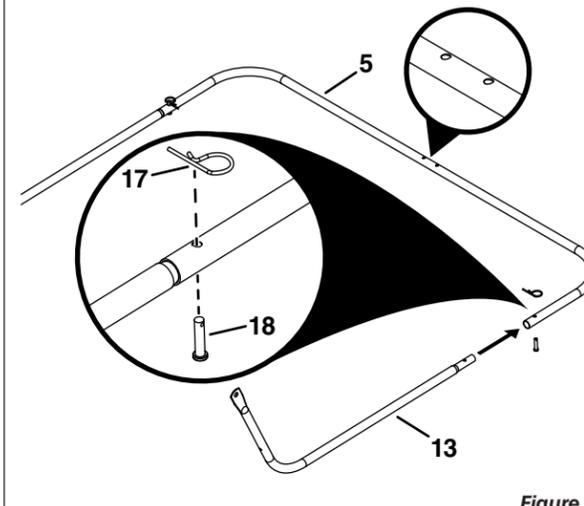

STEP 8 (SEE FIGURE 8): Install a rear hopper tube (5) onto the ends of the two upper hopper tubes (14). Secure them with two 1/4 x 1.11" clevis pins (18) and 3/32" hair pins (17).

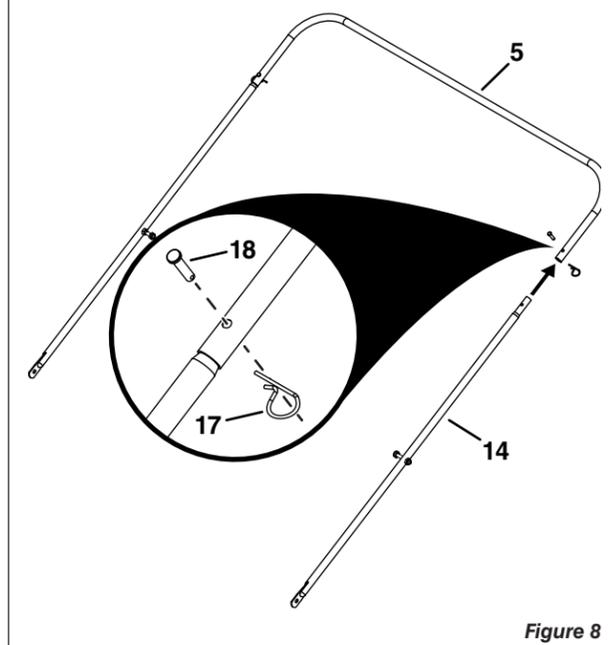

STEP 9 (SEE FIGURE 9): Attach the upper and lower bag frame together using two 3/8 x 1/2" clevis pins (22) and 3/32" hair pins (17).

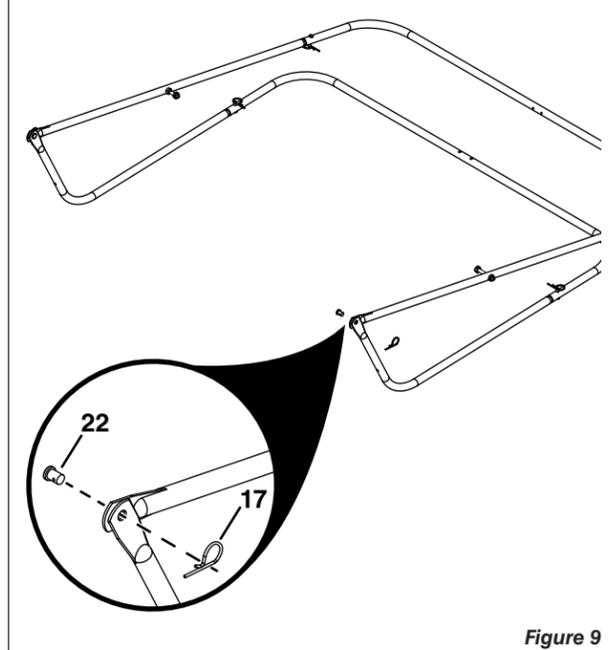

STEP 10 (SEE FIGURE 10): Slide the bag frame into the hopper bag.

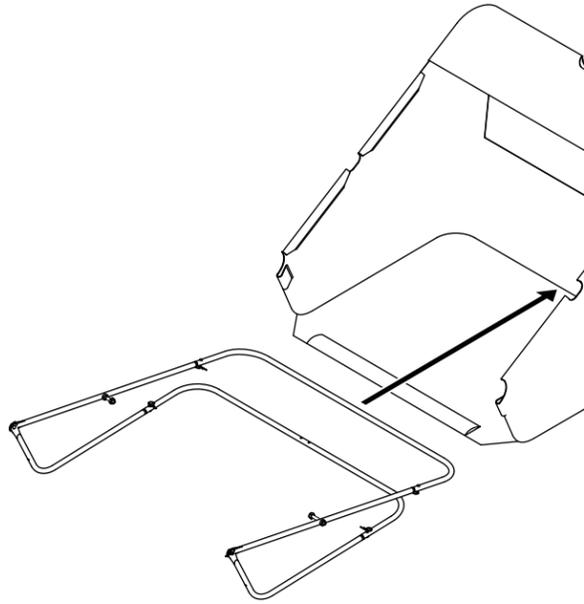


Figure 10

STEP 11 (SEE FIGURE 11): Slide the bag frame tube (4) through the front flap of the hopper bag.

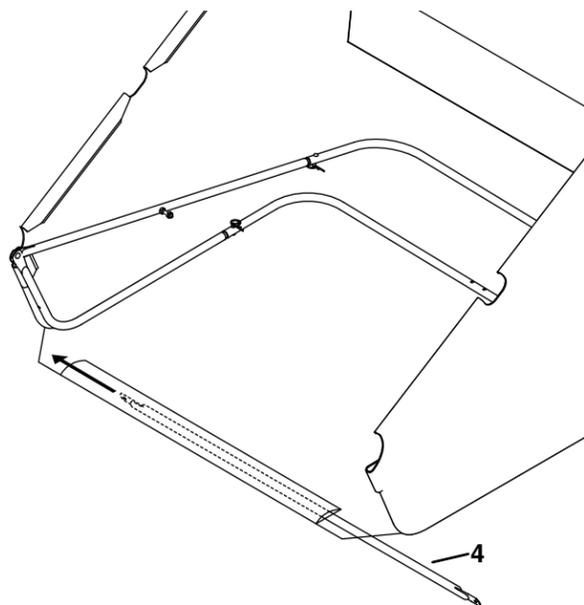


Figure 11

STEP 12 (SEE FIGURE 12): Insert the hopper support rods (3) into the holes of the upper hopper tube. Then, flex and insert the rods into the holes in the bottom rear hopper tubes.

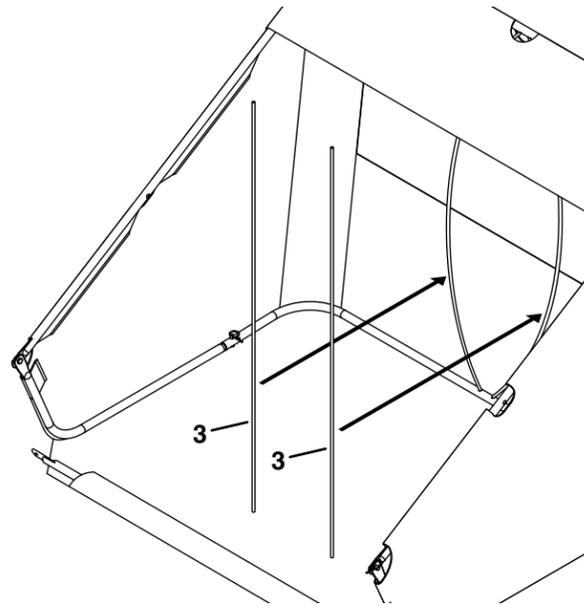


Figure 12

STEP 13 (SEE FIGURE 13): Secure the bag frame tube to the lower hopper tubes using two 1/4 x 1.11" clevis pins (18) and 3/32" hair pins (17).

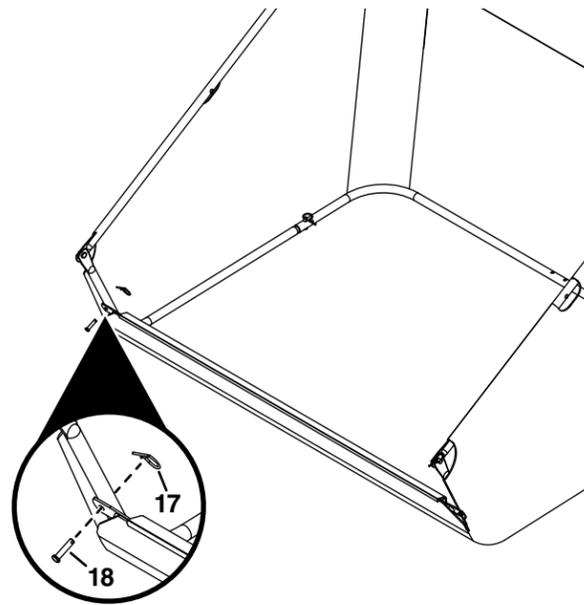


Figure 13

STEP 14 (SEE FIGURE 14): Snap the sides of the hopper bag to the bottom of the hopper bag at the front corners.

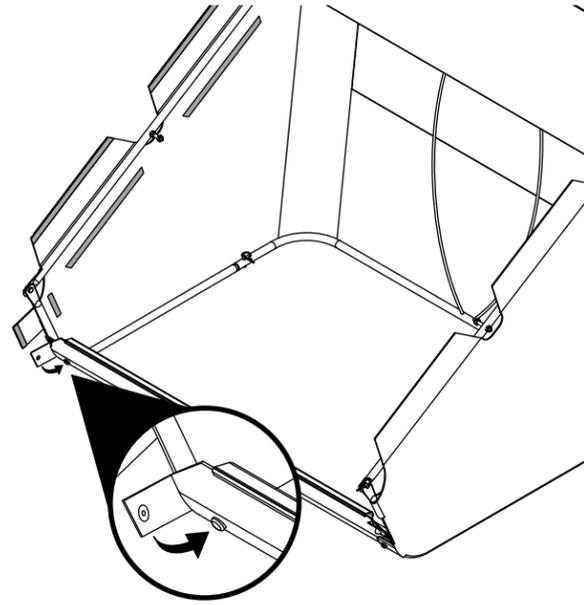


Figure 14

STEP 15 (SEE FIGURE 15): Starting from the bottom of the bag, secure the hopper bag to the bag frame using the velcro straps.

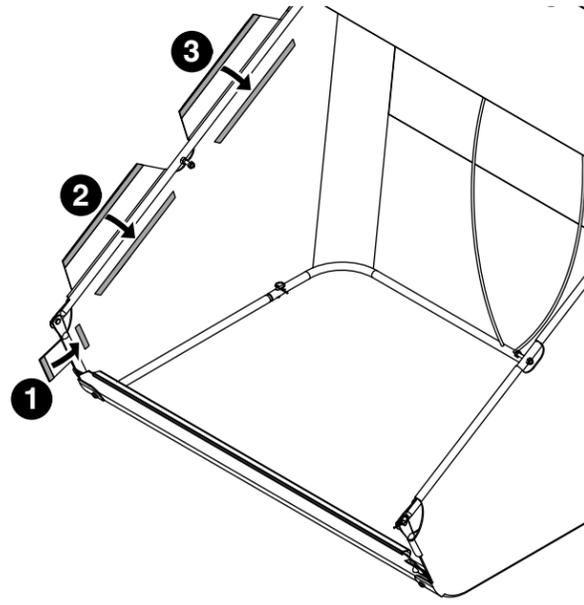


Figure 15

STEP 16 (SEE FIGURE 16): Tie the four tie straps tightly around the upper rear hopper tube.

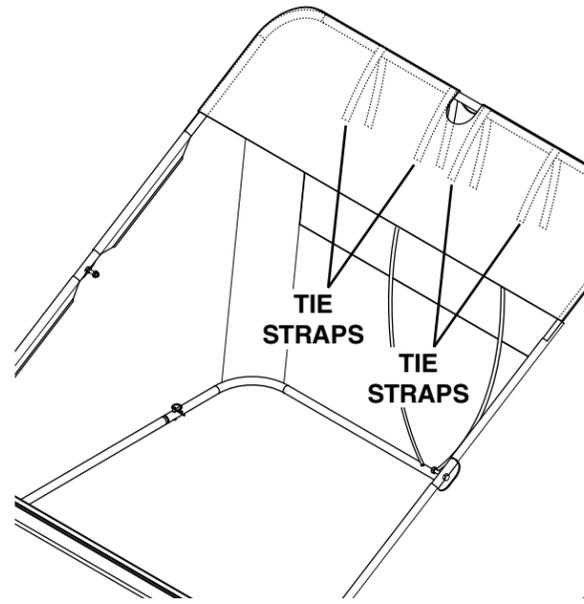


Figure 16

STEP 17 (SEE FIGURE 17): Assemble the upper handle tube (11) to the lower handle tube (9) using a 1/4 x 1" bolt (16) and knob (31). Then, assemble the handle grip (27) to the lower handle tube (9).

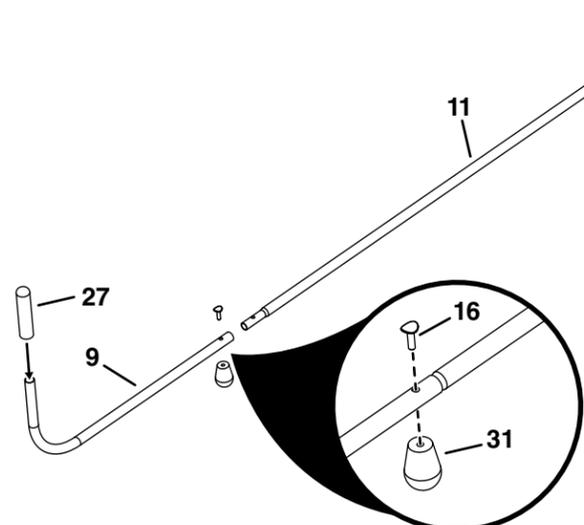


Figure 17

STEP 18 (SEE FIGURE 18): Attach the upper handle tube to the rear hopper tube using a U-clamp (30), 5/16 x 1-1/4" clevis pin (19), and .08 x 1-1/8" hair cotter pin (23).

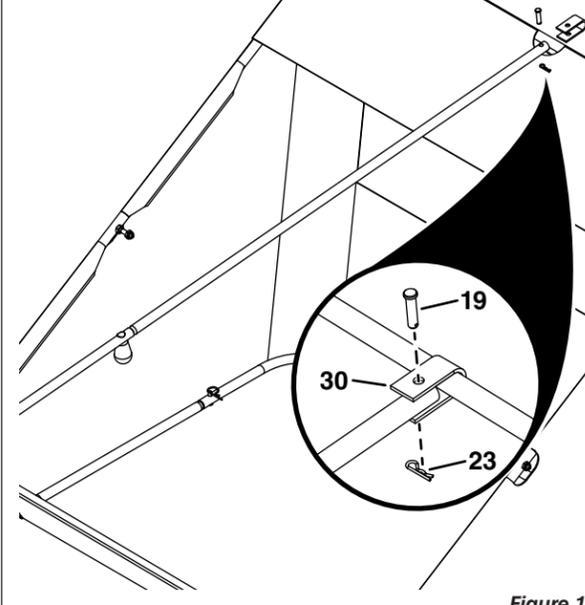


Figure 18

STEP 19 (SEE FIGURE 19): Insert the bolts on the sweeper bag into the pivot rod retainers on the bag arms.

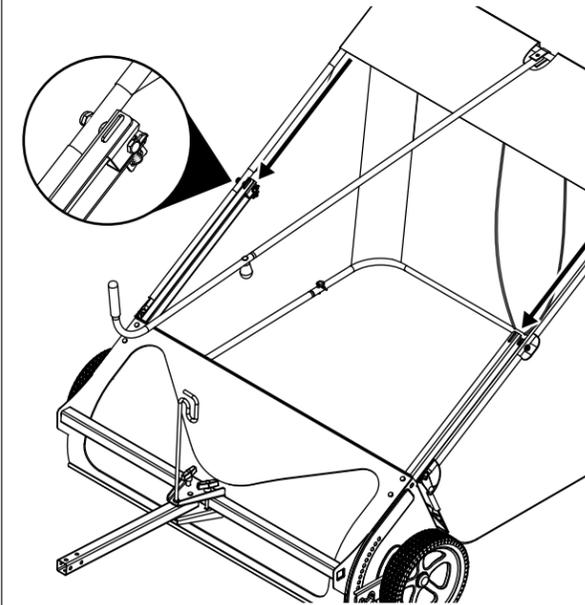


Figure 19

STEP 20 (SEE YOUR OWNER'S MANUAL): Refer to your lawn sweeper owner's manual for arranging and assembling the hitch brackets to attach to your particular tractor.