


INSTRUCTION GUIDE

HEAVY DUTY TRAP ADAPTER

Oatey

- 1 Measure and cut 1-1/2 in. PVC wall drain **(D)** to desired length. (This drain **(D)** should be cut a minimum of 3/4 in. out from finished surface **(E)** to insure proper fit.)

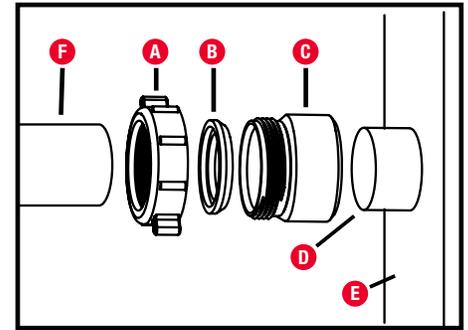

- 2 Prep, prime and cement the trap adaptor **(C)** onto the PVC wall drain **(D)**.


- 3 After wall tube **(F)** is cut to desired length, position nuts and washer onto the wall **(F)**.

- 4 Use reduced washer if wall tube **(F)** is 1-1/4 in.

- 5 Attach wall tube **(F)** into trap adaptor **(C)**.

- 6 Attach any remaining drain parts.

- 7 Tighten all nuts **(A)**. **CHECK FOR LEAKS.**

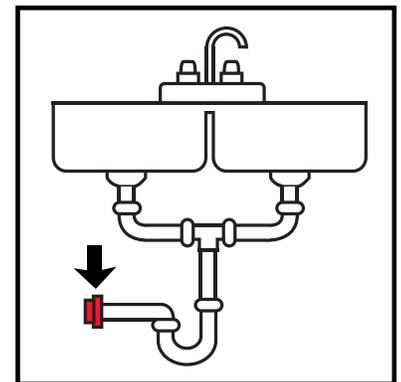

©2023 Oatey SCS. All Rights Reserved. This information is based on data believed to be reliable but Oatey makes no warranties, express or implied, as to its accuracy and assumes no liability arising out of its use. The data listed falls within the normal range of product properties but should not be used to establish specification limits or used alone as the basis of design. Oatey's liability to purchasers is expressly limited to the terms and conditions of sale. Oatey is trademark of Oatey Co. All other trademarks can be found www.Oatey.com.

Oatey.com