

Surface Prep is Key

All surfaces should be clean and smooth.....



- Use isopropyl alcohol to remove any old adhesive remaining on surfaces.




- Use sandpaper to smooth rough or dirty surfaces.



- Remove sawdust or other debris and allow surface to dry completely before applying felt pads.



- Peel and stick.

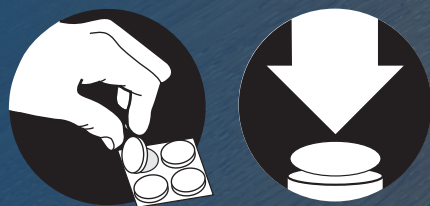

- Repeat until all legs are prepped and pads placed in position.

HEAVY-DUTY

Heavy Duty felt pads are designed to provide unmatched protection to furniture and hard floor surfaces.




TIPS for a stronger bond



- Applying pressure to felt pad will help form a stronger bond.



- Sitting on a chair is an easy way to apply pressure.

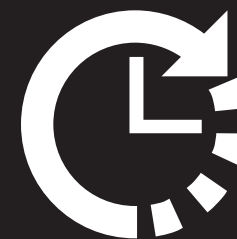

- Allowing extra set-up time under pressure will further enhance the bond.