
MIRRORS BY DW

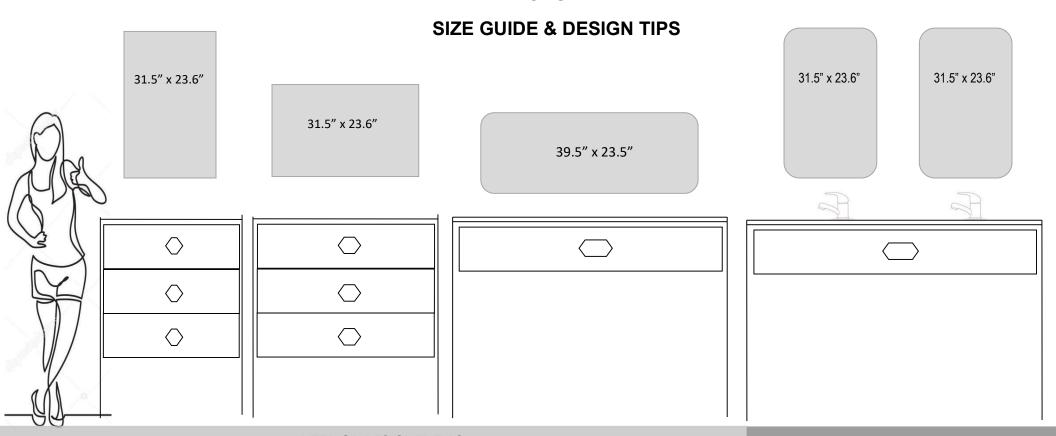

INTERIOR DESIGNER TIPS

- When hanging your mirror above a vanity, console table, arm chair or fire place place it 6'' 8'' above the visual line. In bathrooms this will protect your mirror from water splashes
- 4 Choose a mirror that is 1"-2" smaller than the width of the countertop of your bathroom vanity
- 4 Make sure the mirror is tall enough so your head doesn't get cut off when looking into it
- 4 When hanging above a nightstand, center the mirror above the night stand
- 4 When hanging on a blank wall, place it so the vertical center is at eye level- usually 60" from the floor
- Hang your mirror with a friend so you can 'eyeball' your placement standing a few feet back
- 4 ADA COMPLIANT MIRRORS Hang the mirror with the bottom edge no higher than 40" off the ground
- 4 Most rectangular mirrors featured can be hung horizontally and vertically unless otherwise noted

For more information reach out at info@Decorwonderland.com

FEATURED RECTANGLES MIRRORS:

Scallop Edge

4 Measures 31.5" X 23.6" DWSM1058 Sc

DWSM1102	Double Bevel
DWSM1125	V-Groove
DWSM114	Shelf
DWSM1140	U Groove
DWSM222	0.5" Bevel & wave design
DWSM3001	Scallop Edge

DWSM414-1H Double layer mirror

4 Measures 39.5" X 23.5"

DWSM2436 1" Bevel
DWSM10060B Black mirror

4 Measures 39.5" x 13.75"

DWSM1067 Polished Edge