


1 Parts Identification

RPB 18-48

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: It is recommended to place a protective layer between the ground and the pieces during assembly. This will help prevent damage to the pieces.

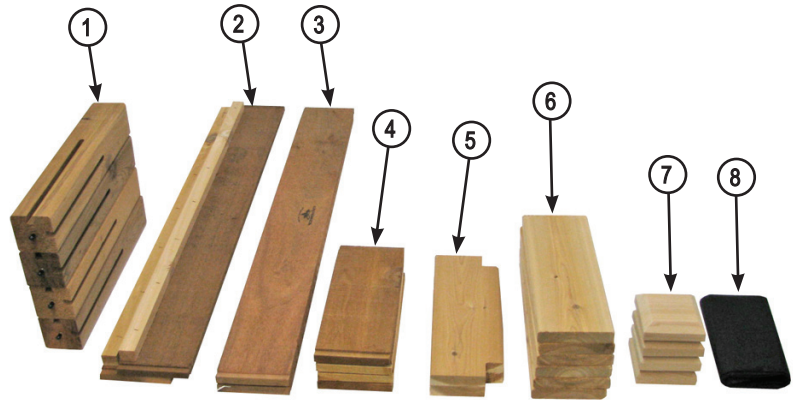

Parts List

ITEM	QTY.	PART #	DESCRIPTION
1	4	R1900	Corner Post, 4" x 4" x 19"
2	2	R7011	Side Rail w/Cleat, 45" x 5-1/2" x 1"
3	2	R4501, R4501L	Side Rail, (One w/Logo), 45" x 5-1/2" x 1"
4	4	R1450	Side Rail, 14-1/2" x 5-1/2" x 1"
5	2	R1552	Corner Notched Bottom Board, 15" x 5-1/2" x 1"
6	6	R1550	Bottom Board, 15" x 5-1/2" x 1"
7	4	R3100	Post Cap, 4" x 4" x 1-1/2"
8	1	2003	Fabric Liner, 36" x 52"


2 Side Rail Assembly

Stand two 4" x 4" x 19" corner posts (Item 1) upright with slots facing you and slots facing each post.

Locate a 45" x 5-1/2" side rail w/cleat (Item 2), (with cleat located at the bottom and facing you). Install side rail w/cleat into the upper part of the slots and slide down to the bottom of the slots.

Repeat procedure for the two remaining 4" x 4" x 19" corner posts and the 45" x 5-1/2" side rail w/cleat.

(Soil depth option: Cleats located as shown will provide a soil depth of approximately 9". Reverse side rail w/cleat installation, cleats located at top, if a soil depth of approximately 6" is desired).

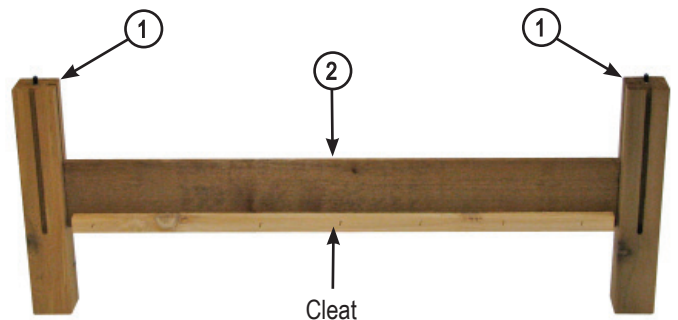


Packaged & Inspected by:

Date:

Continued

3 End Side Rail Assembly


Install two 14" x 5-1/2" side rails (Item 4) into the slots at each end of the planter box and slide to the bottom of the slots.

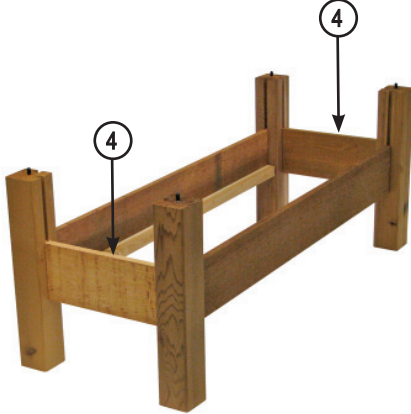

4 Final Side Rail Assembly

Install the two 45" x 5-1/2" side rails (Item 3) (one w/Logo) into the slots and slide the side rails down. (Side rail with Logo located to outside).

Install the two remaining 14" x 5-1/2" side rails (Item 4) into the slots at each end of the planter box and slide down.

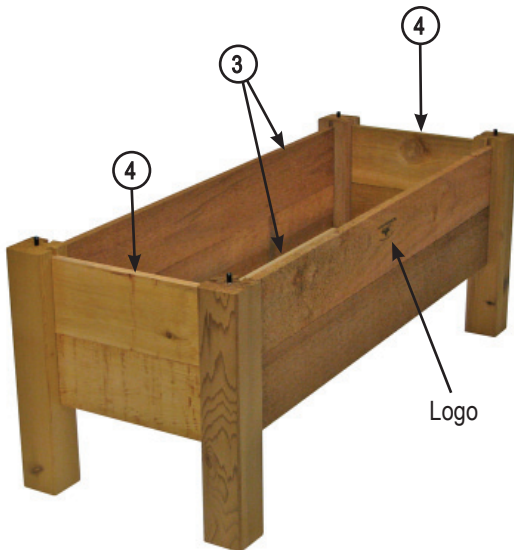


5 Bottom Board and Fabric Installation

Place one 15" x 5-1/2" corner notched bottom board (Item 5) on each end of the planter box.

Place six 15" x 5-1/2" bottom boards (Item 6) into the planter box. (Gap boards evenly to allow for water drainage).

Place fabric liner into the planter box.

Soil Capacity: 3.9 Cubic Feet

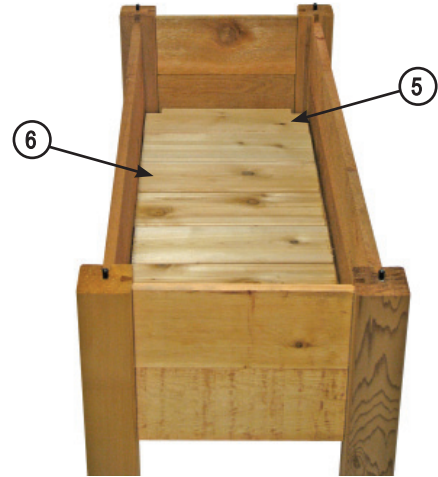

6 Post Cap Assembly

Remove the rubber cap from the corner posts studs.

Align the hole of the 4" x 4" post cap (Item 7) with stud and tighten until the cap makes contact with the post.

NOTE: Do not overtighten.

Repeat procedure on all posts.

