


HOW TO INSTALL




STEP 1:
INSERT LOCKING CHANNEL
HORIZONTALLY INTO THE TOP
HALF OF THE FIRST FULL DIAMOND
AT THE BOTTOM OF THE FENCE
WITH OPEN SIDE FACING UP




NOTE: THE SIDE OF
THE LOCKING
CHANNEL WITH
THE LOCKING-STRIP
SHOULD FACE
FORWARD

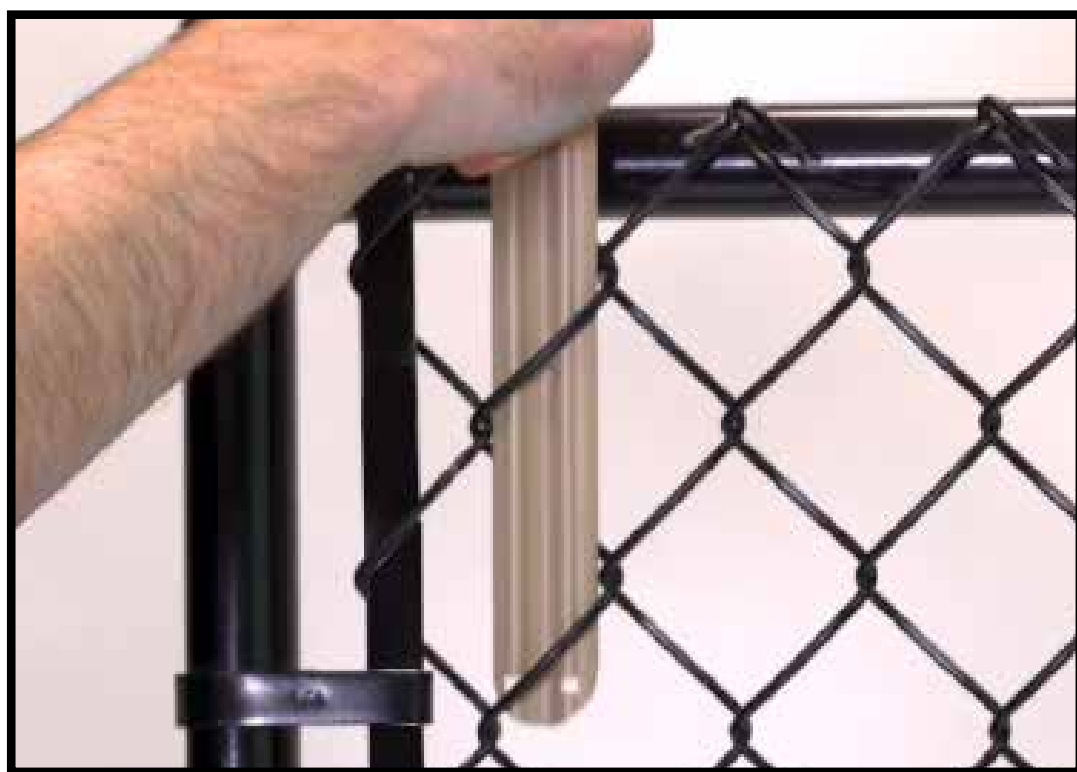


STEP 2:
INSERT FENCE SLATS WITH NOTCHED
END POINTED DOWN AND SLIDE
VERTICALLY THROUGH THE SPACE
WOVEN INTO THE CHAIN LINK MESH.
DO NOT WEAVE IN AND OUT
OF DIAMONDS.

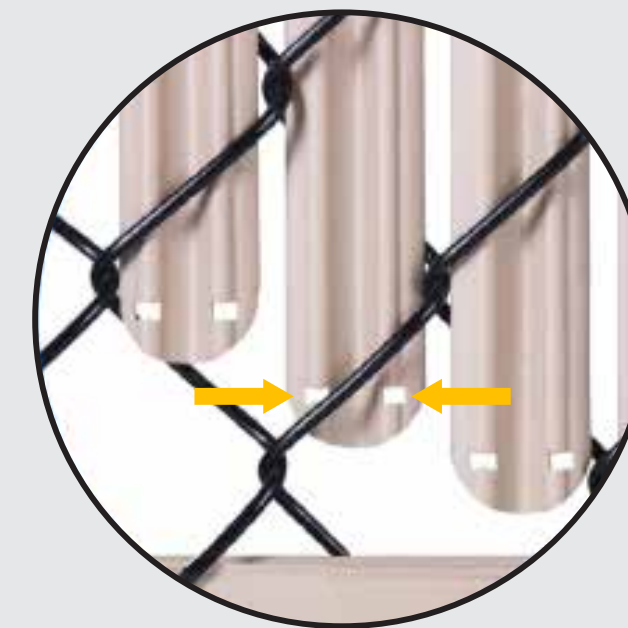


NOTE: THE SIDE OF
THE FENCE SLAT
WITH THE
LOCKING-SLOT
SHOULD FACE
FORWARD

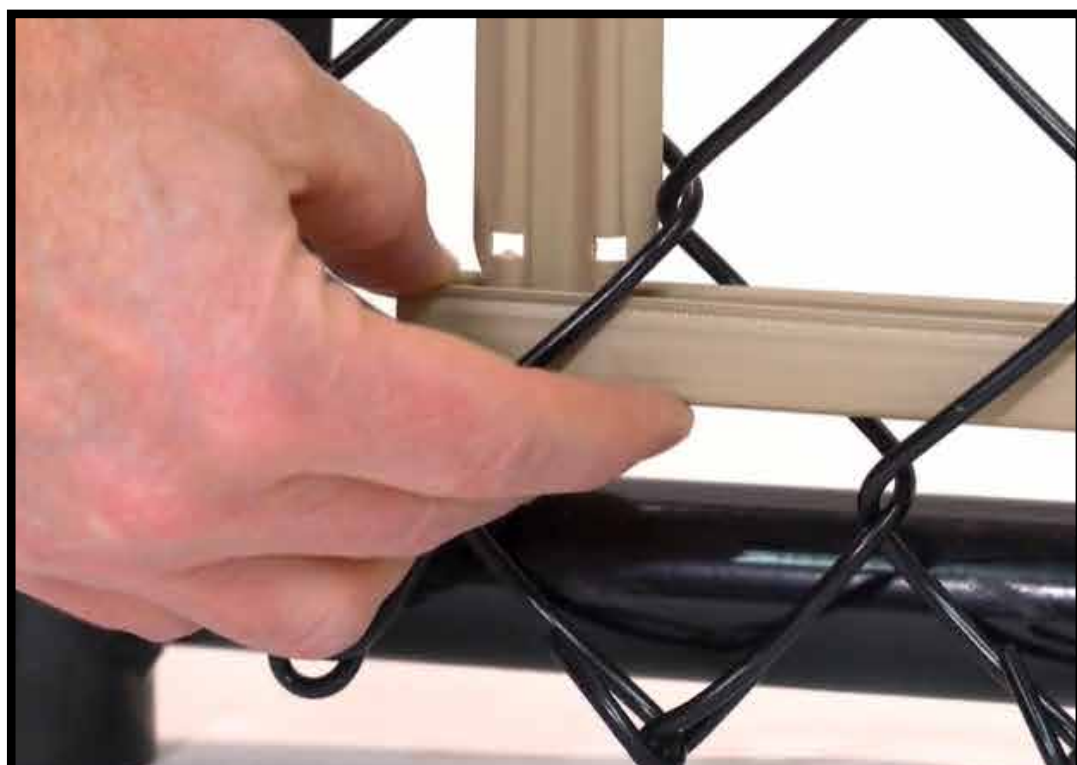


STEP 3:
PUSH FENCE SLATS INTO THE
LOCKING CHANNEL TO LOCK INTO
PLACE.

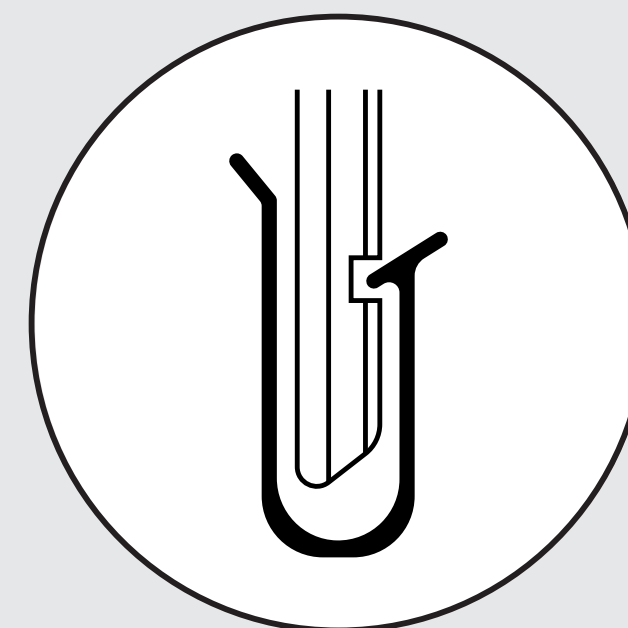

NOTE: PROFILE
VIEW OF FENCE
SLAT FULLY
INSERTED INTO
LOCKING CHANNEL

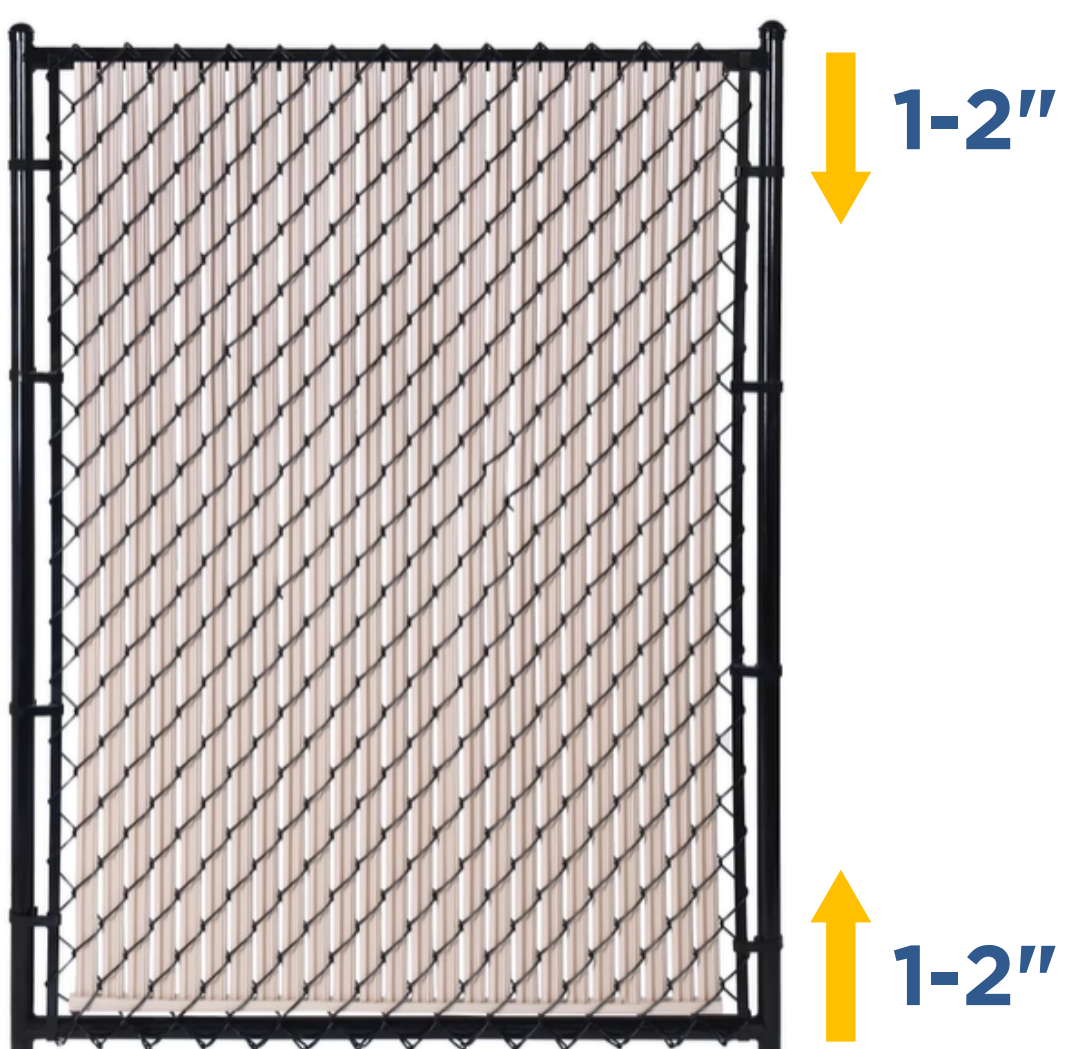

STEP 4:
FENCE SLATS SHOULD SIT 1-2" ABOVE
AND BELOW THE TOP AND BOTTOM
DIAMONDS OF THE CHAIN LINK.

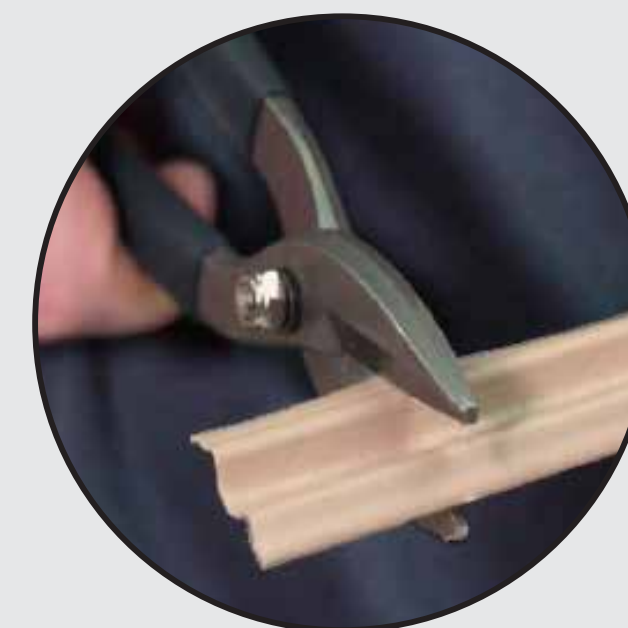

NOTE: SLATS CAN
EASILY BE TRIMMED
TO SIZE WITH
HEAVY-DUTY
SCISSORS OR
TIN SNIPS