



Installation Instructions for Rural Mailboxes

1. Position hole template on the flat, right hand side on mailbox so that when the mounted flag is raised it will be seen above the top of the mailbox. Drill two holes using the template below.

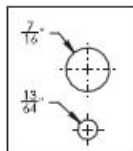

TEMPLATE

2. Insert the hub (A), flag (B) and washer (C) into the flag mounting holes as shown in drawing. Secure flag by inserting the alligator clip (D) into the hub until snug against the inside of the mailbox.

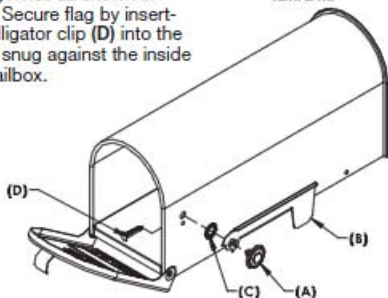

instrucciones de instalación para buzones rurales

1. Coloque la plantilla del orificio en al lado plano del lado derecho del buzón de tal manera que cuando la banderilla instalada esté an alto, sea visible por encima del lado superior del buzón. Taladre dos orificios utilizando la plantilla inferior.

2. Inserte el eje (A), la banderilla (B) y la arandela (C) en los orificios de montaje como se enseña en el gráfico. Asegure la anderrilla insertando el clip caimán (D) en el eje hasta ajustario contra el interior del buzón.