


DIY Barn Door Assembly Instructions

Elegant Design Meets High Function

CAREFULLY READ ALL INSTRUCTIONS BEFORE STARTING

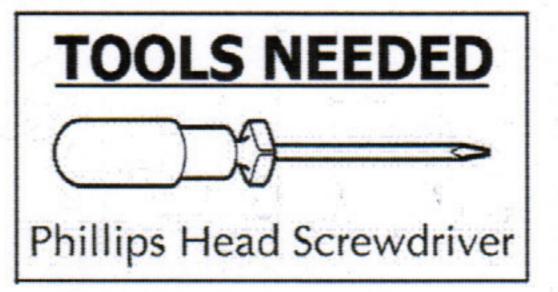

CAUTION: Assembled door is heavy and should be lifted by 2 people at all times. Mishandling of heavy objects (i.e., doors) may cause injury. Safety shoes should be worn at all times to prevent injury.

- Lay all pieces out according to parts diagram on right. The Left and Right outside planks should have holes for hardware installation positioned at top of door (Figure 1).
- 2. Align hardware installation holes on top plank and left/middle/right planks, then install all screws in top plank in predrilled screw holes (Figure 2).
- 3. Repeat for bottom plank (Figure 3). Ensure notch is positioned as shown.
- 4. Install all screws in diagonal Cross plank in predrilled screw holes (Figure 4).
- You are ready for your barn door installation. Follow hardware installation instructions included.

