


How to Miter Nomastyl Crown Moulding Flat

When your crown profile is too large to cut in position, it is recommended to cut your molding lying flat with a compound miter saw. Your saw only needs to bevel one direction.


To miter your corners flat, you must use two angled cuts - a bevel, and a miter.

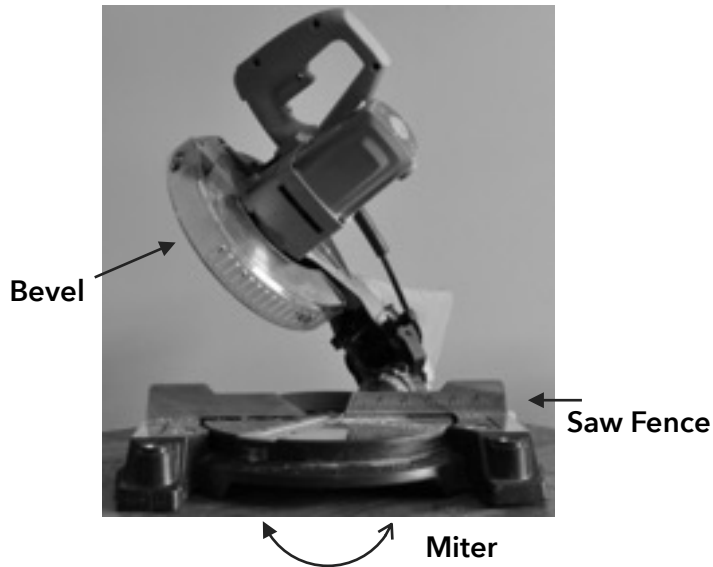

For 90° Inside and Outside Corners

-Bevel at 30°

-Miter at 35.26°

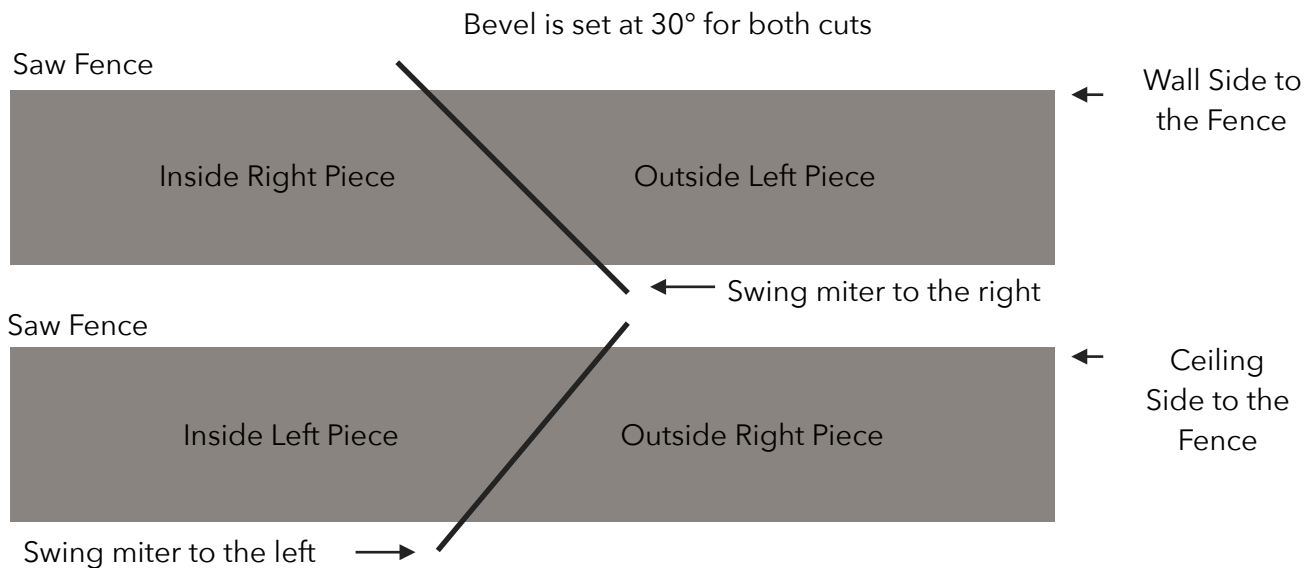

Tips:

- Note that the bevel angle will not change. You will rotate the miter and flip the molding to make the two different cuts.
- If your corners are not 90°, then you will have to adjust your angles.