


Tribesigns

LITTLE TREE

Assembly Instructions

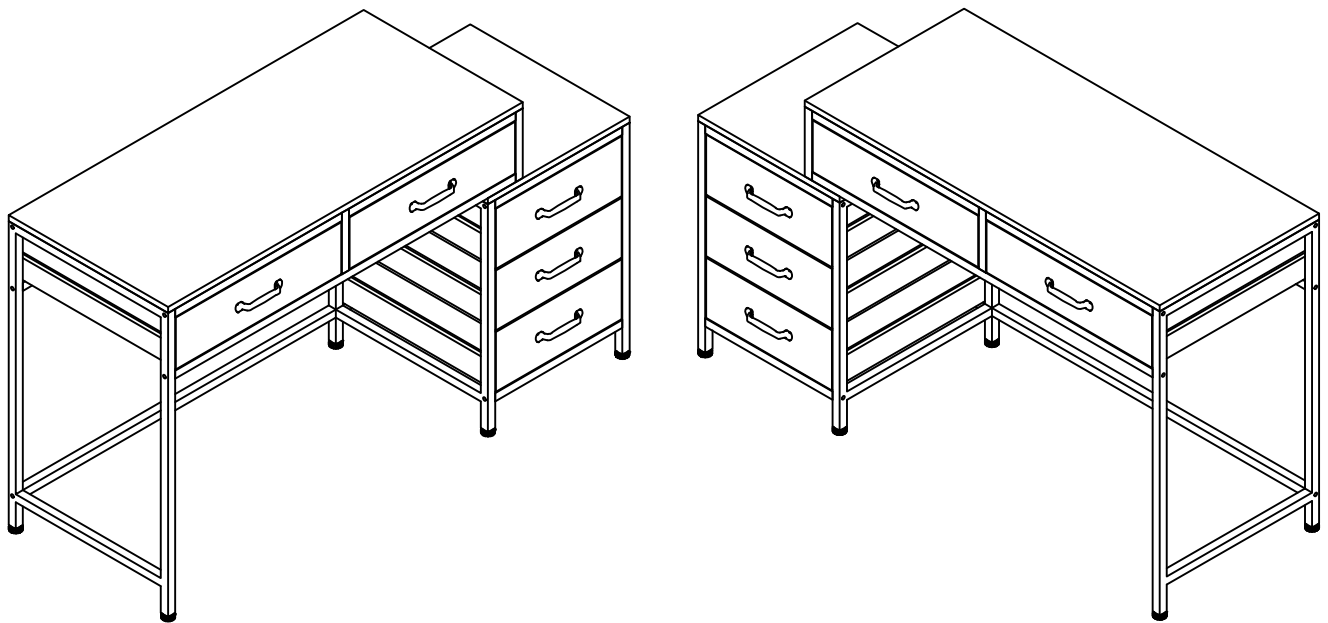

Model No. JW0390X/JW0449/JW0530/JW0588

Computer table

Call us!

We're here to help!

If you have any issues with this product, please contact our customer service team **before returning** it.



We want you to be completely satisfied with your purchase! If anything is missing, damaged, incorrect, or not what you expected, don't worry. Please keep the outer packaging and take photos of both the packaging and products, and then reach out to us at **support@tribesigns.com** or call us at **1-424-220-6888**. We'll take care of everything and send you a free replacement, so you can enjoy your purchase as soon as possible without any hassle.

Assembly Instructions:

1. Carefully read these instructions and keep them for future reference.
2. Refer to the parts list for guidance and ensure that you have all the pieces before starting the assembly process, if anything is missing, damaged, incorrect, contact us **FIRSTLY BEFORE** assembling.
3. When assembling, place all parts on a soft, clean, and flat surface, such as a carpet, to prevent any scratches.
4. To avoid misalignment of the holes, Please don't full tighten the screws until you ensure all parts in place.

Follow Tribesign:



Facebook



Twitter






Pinterest




YouTube





Instagram

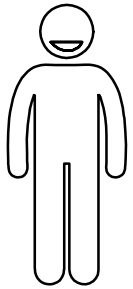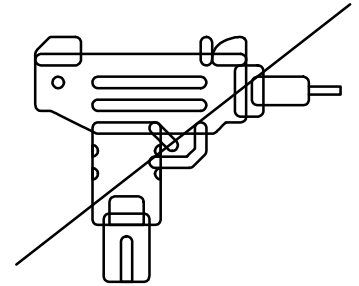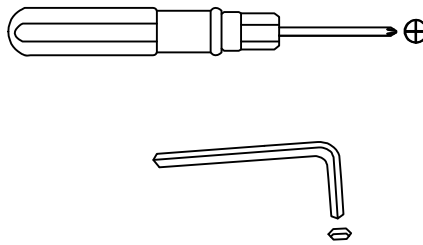**X2**


When using the electric screwdriver ,
Reduce the power and torque to avoid damaging the furniture

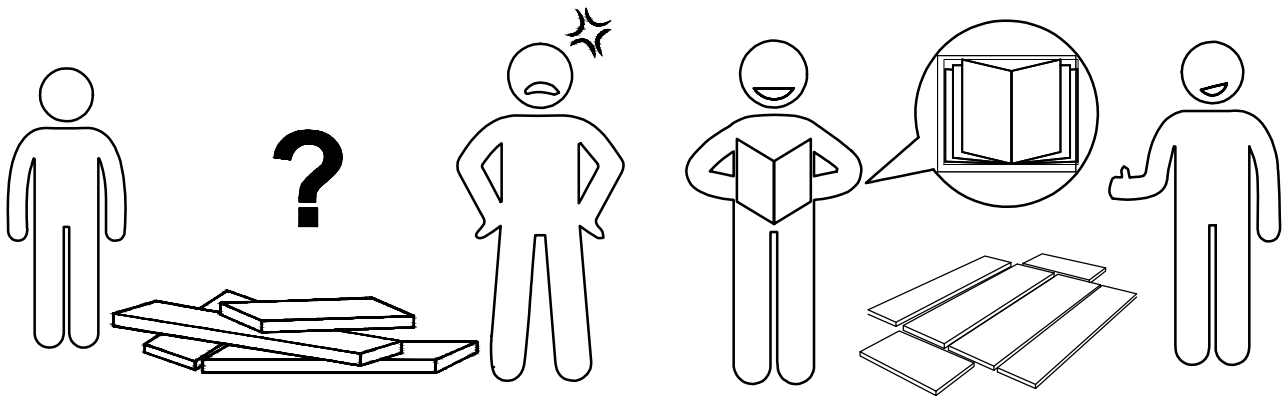

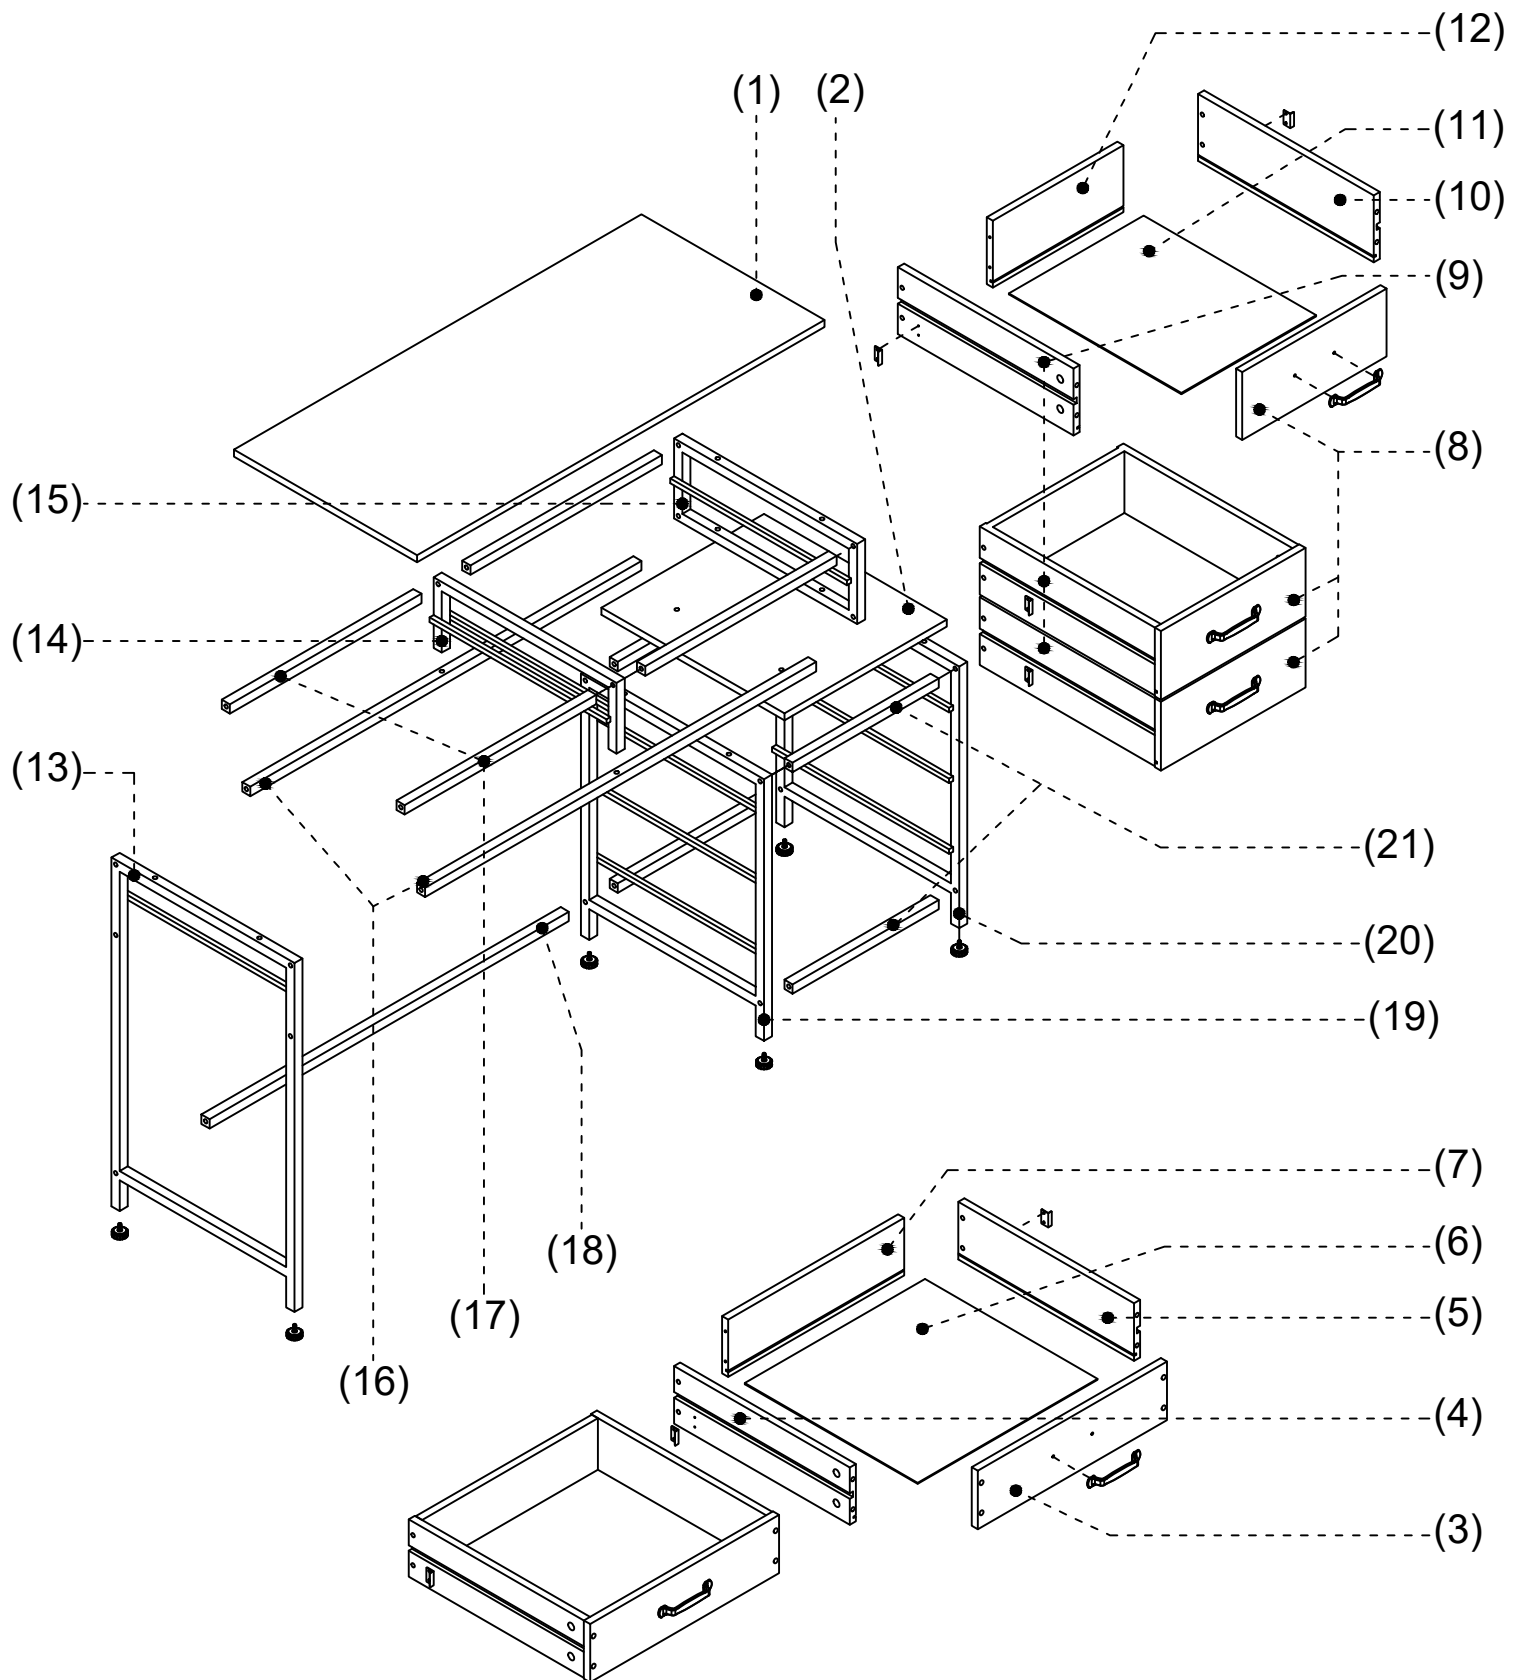


Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for free replacement if having damaged or missing parts.

Parts & Hardware List




(1)1PC




(2) 1PC



(12)3PCS




(13)1PC




(3)2PCS




(4)2PCS




(14)1PC




(15)1PC



(5)2PCS



(6)2PCS

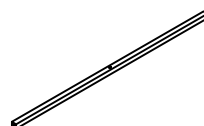


(16)2PCS




(17)4PCS




(7)2PCS




(8)3PCS

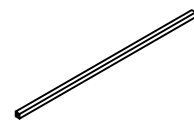


(18)1PC

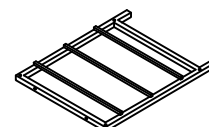


(19)1PC



(9)3PCS




(10)3PCS



(20)1PC



(21)4PCS



(11)3PCS

Hardware List



(A)
18pcs



(B)
3pcs



(C)
10pcs



(D)
2pcs



(E)
2pcs



(F)
20pcs



(G)
20pcs



(H)
10pcs



(I)
5pcs




(J)
6pcs



(K)
20pcs




(L)
10pcs



1pc

Installation of Cams and Pins

Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

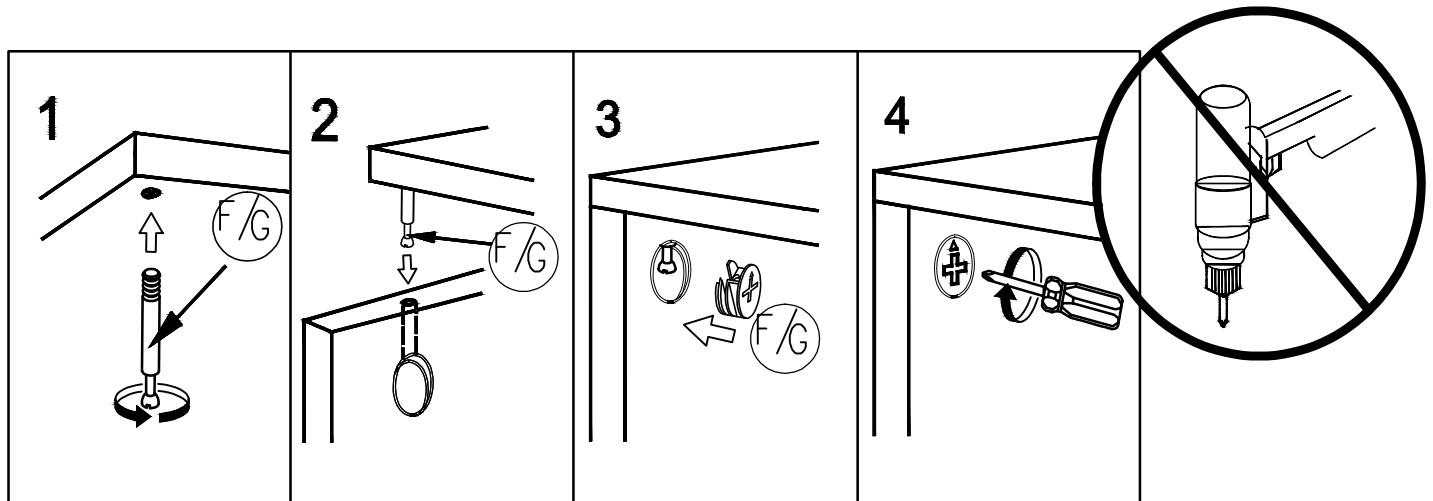

Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

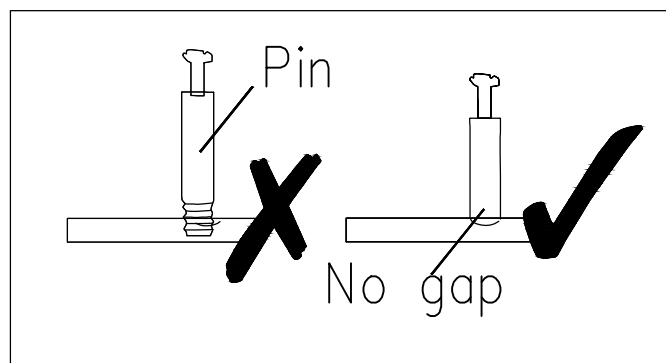


Table on the left






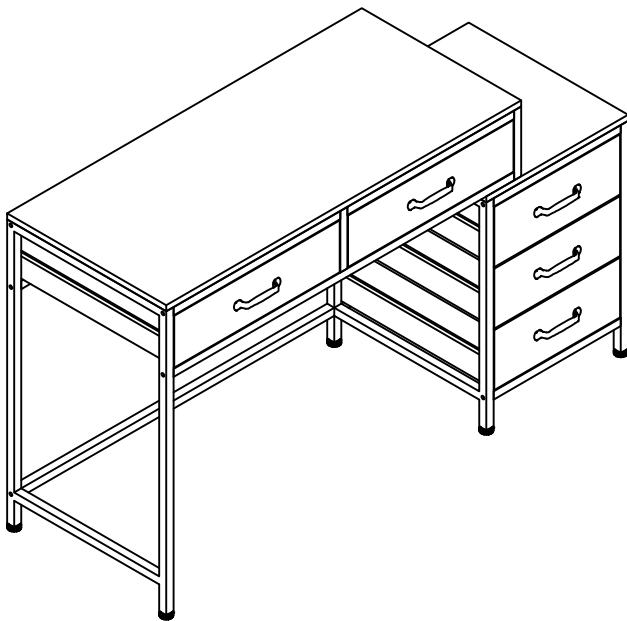



Table on the right

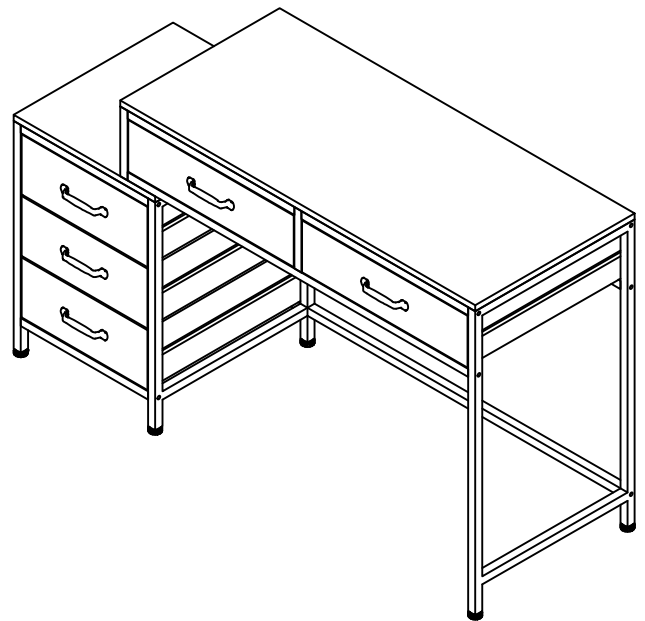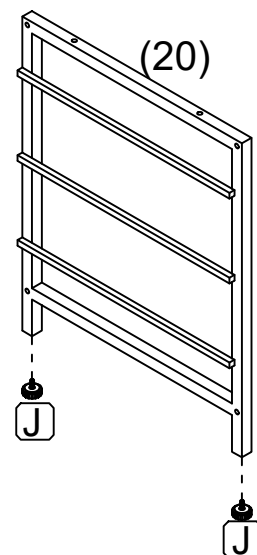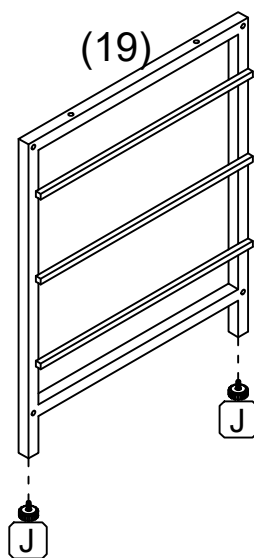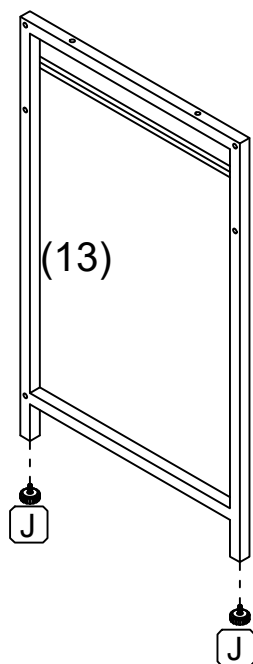


1

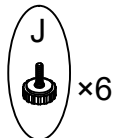


②





Mount type B screw firstly before installing the NO.21 tube (do not mount screw type B all in, leave half it outside); and then mount screw type A.

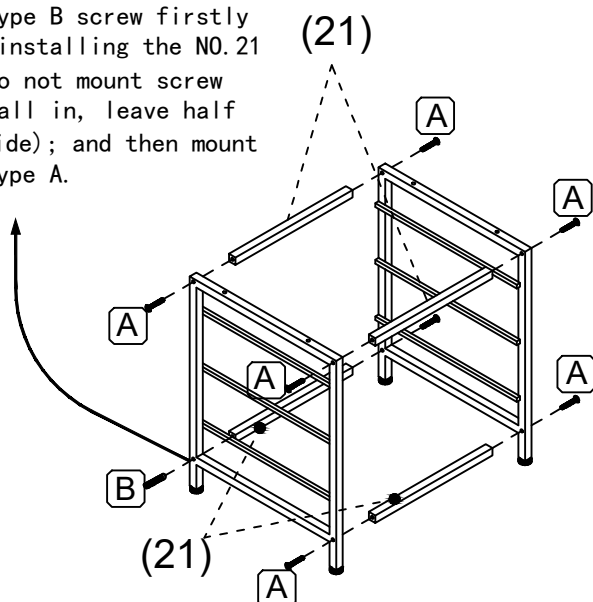


Mount type B screw firstly before installing the NO.21 tube (do not mount screw type B all in, leave half it outside); and then mount screw type A.

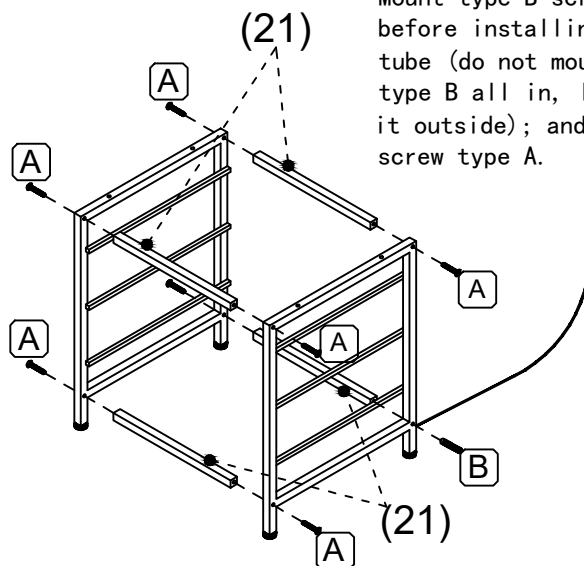

③

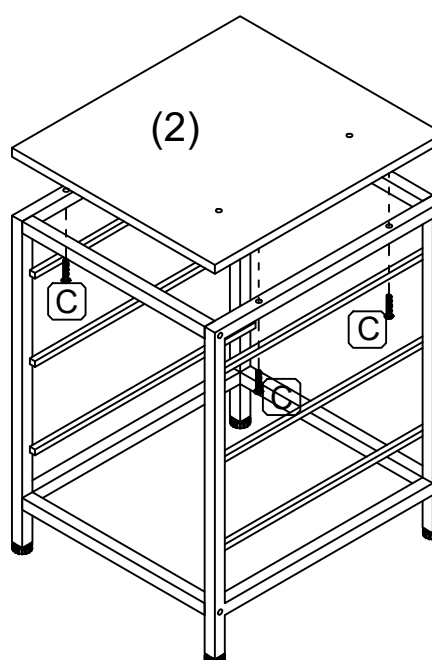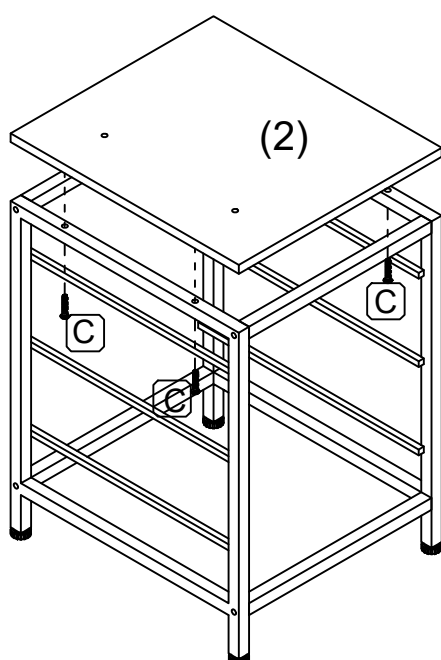


4

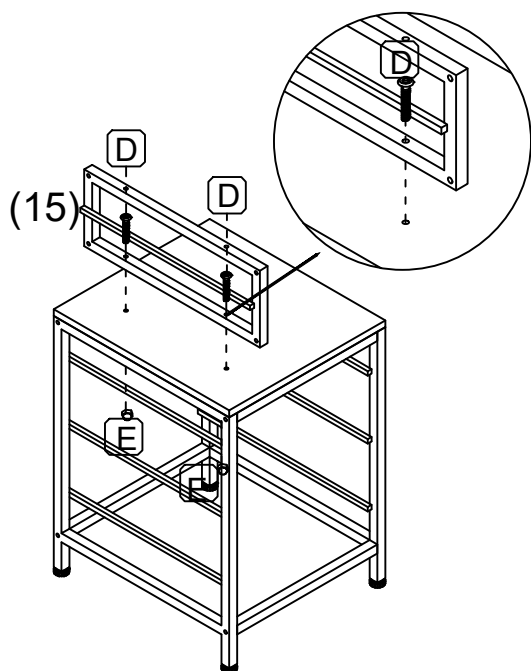


Notes: Install NO.15 tube frame following the arrow direction as the instruction picture shows.

E ×2 D ×2

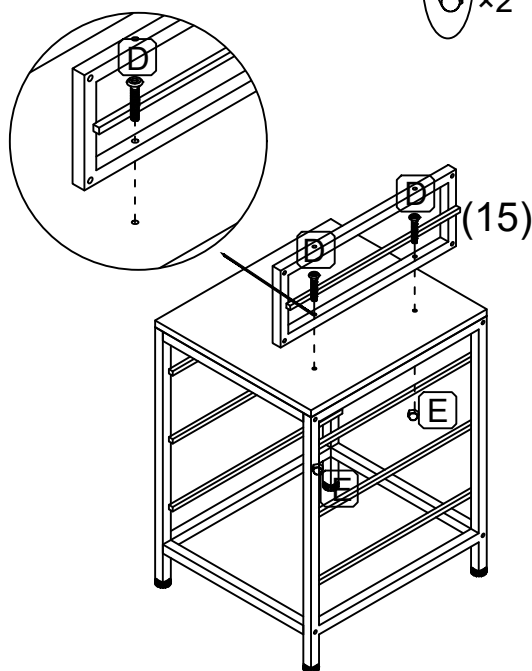


Notes: Install NO.15 tube frame following the arrow direction as the instruction picture shows.

5

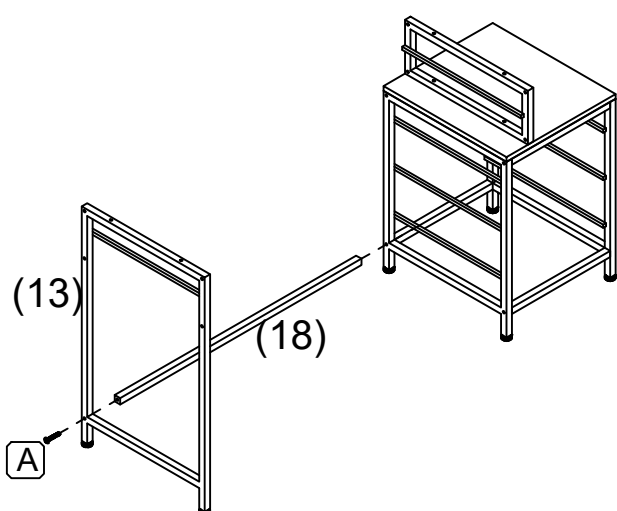

When installing NO.18 tube, align the screw on the right firstly, and then rotate the NO.18 tube in slowly, and align and lock the type A screw on the left at last.



A ×1

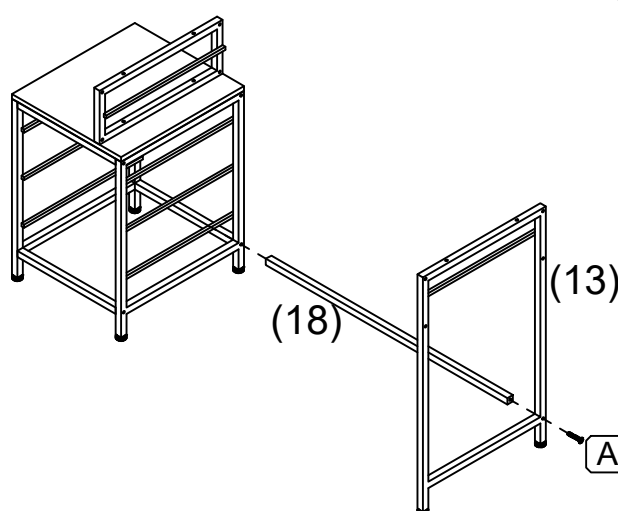

When installing NO.18 tube, align the screw on the left firstly, and then rotate the NO.18 tube in slowly, and align and lock the type A screw on the right at last.



6

A
×4

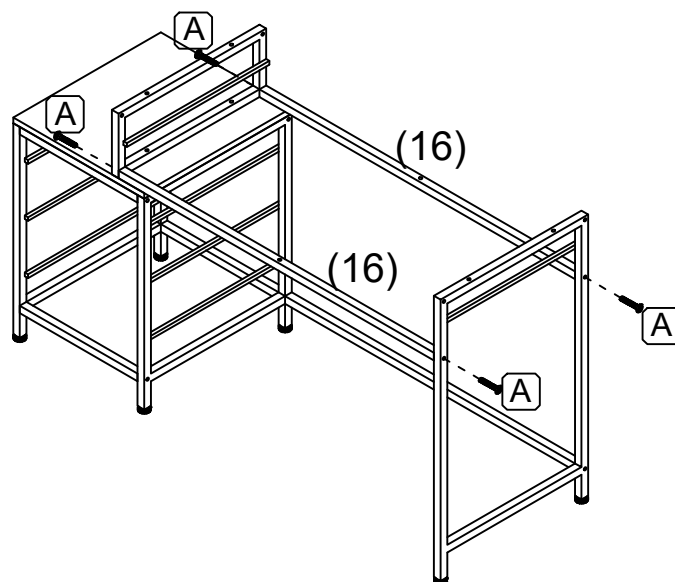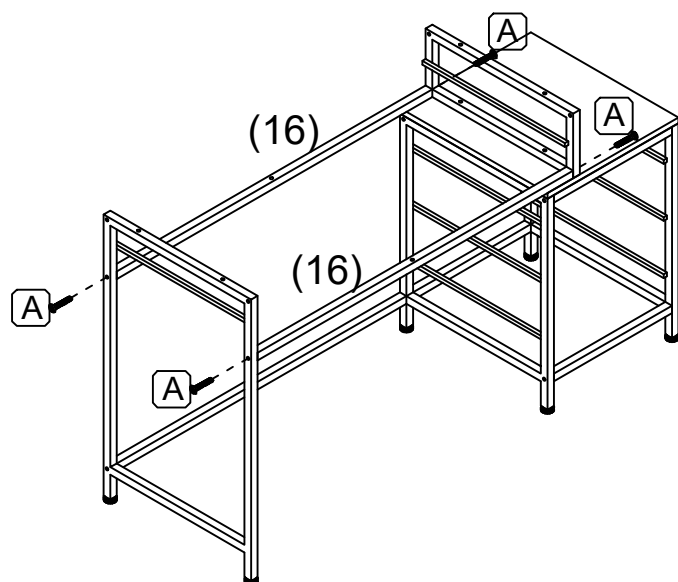


7

B
×2

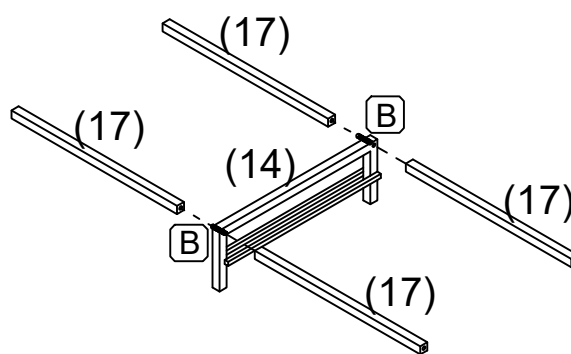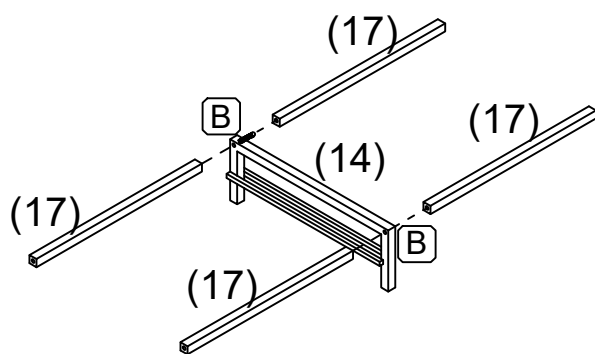


8

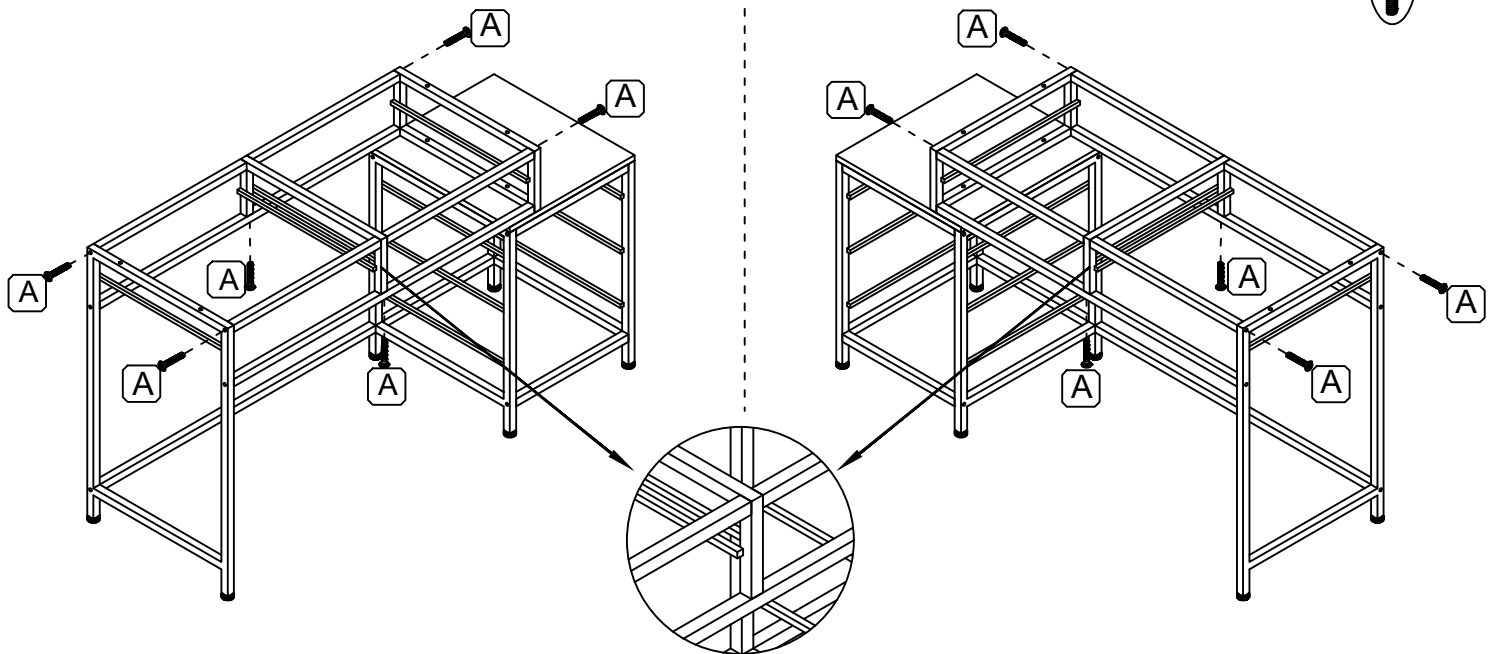


Pay attention to the direction of the circled tube end. Keep the circled tube end forward, otherwise the drawers can't be pushed in, as the picture shows.



9

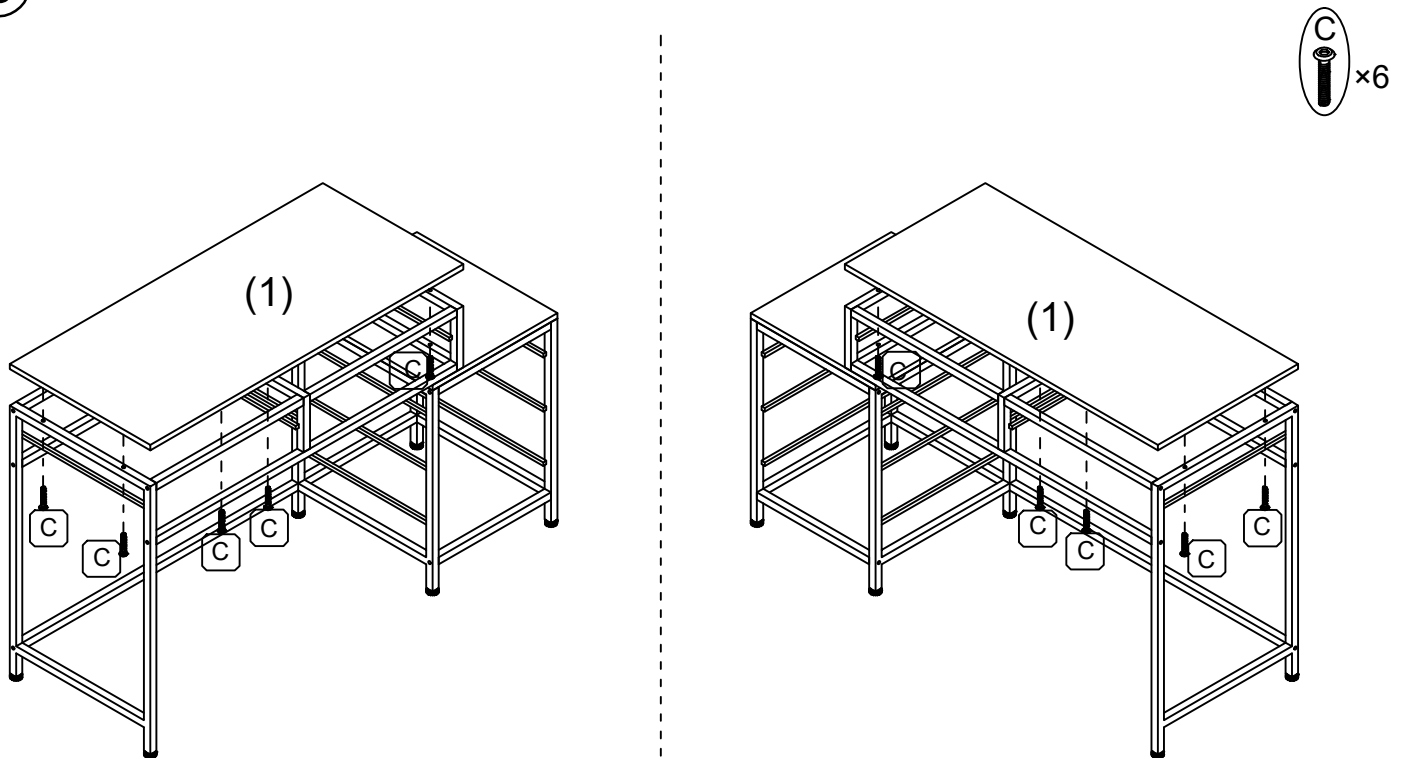

10


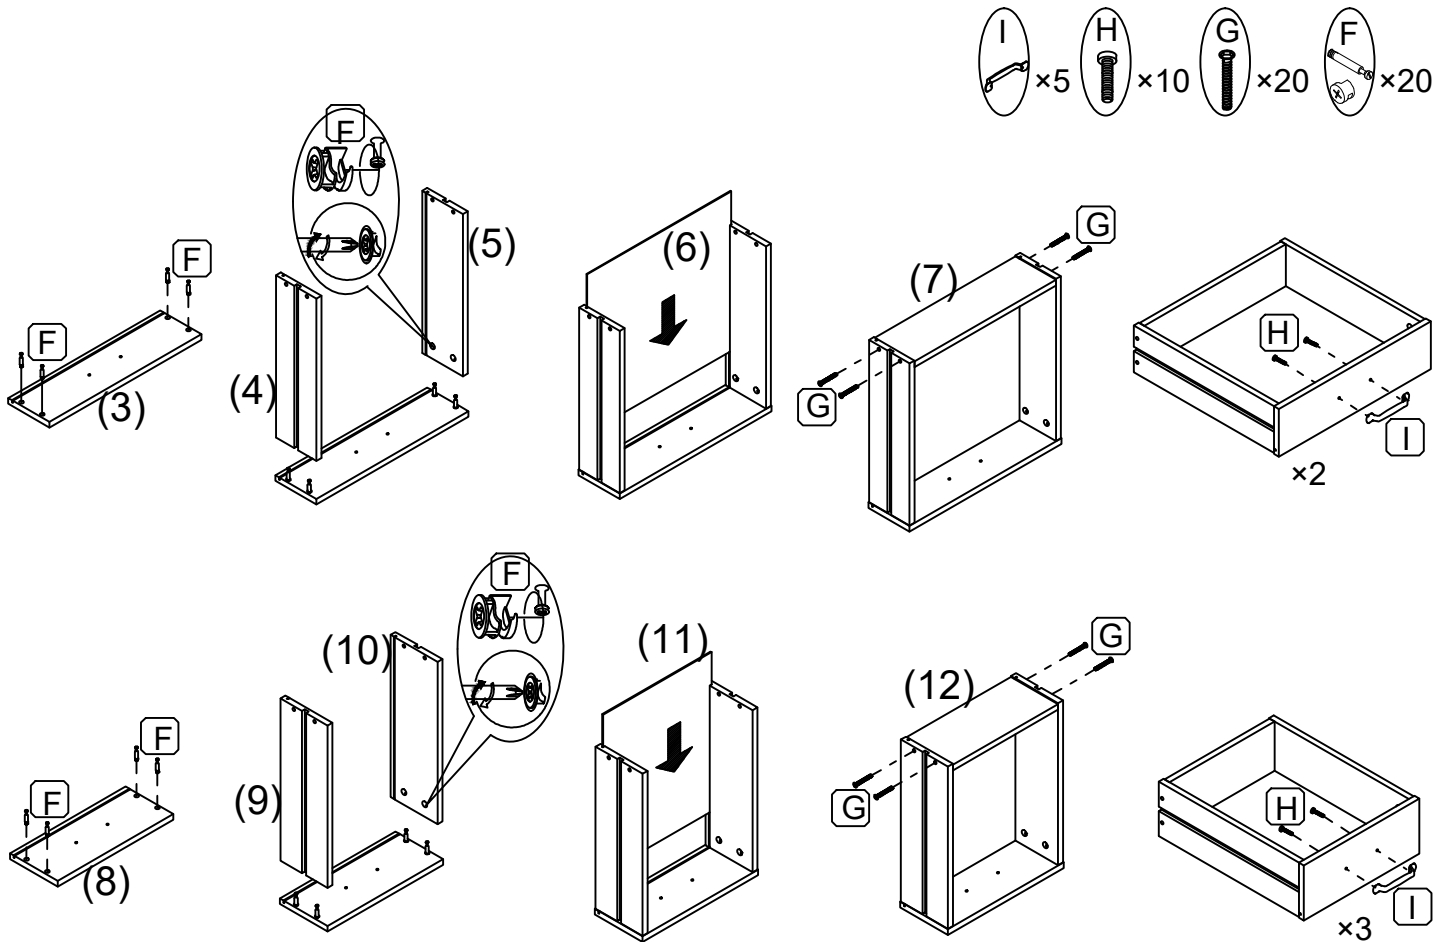


11

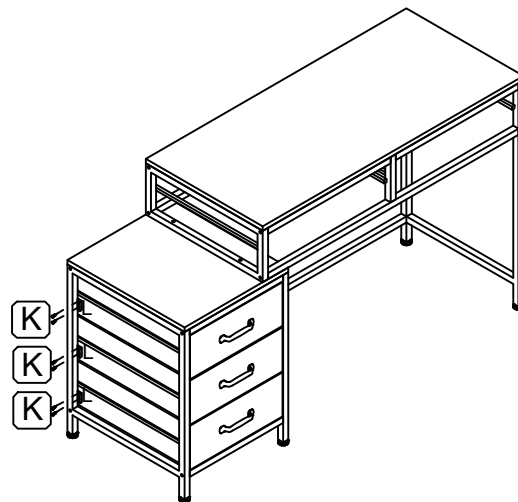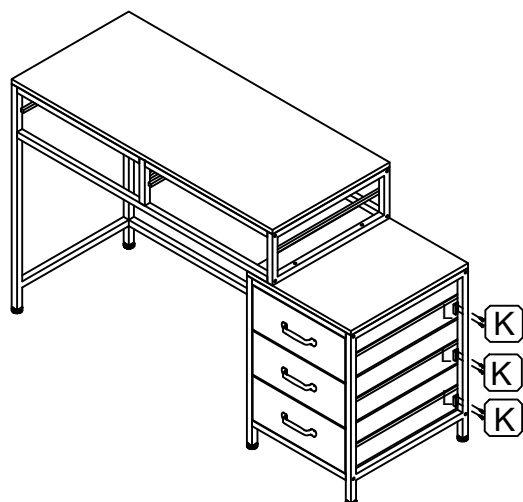



12


(K) × 4 (L) × 2

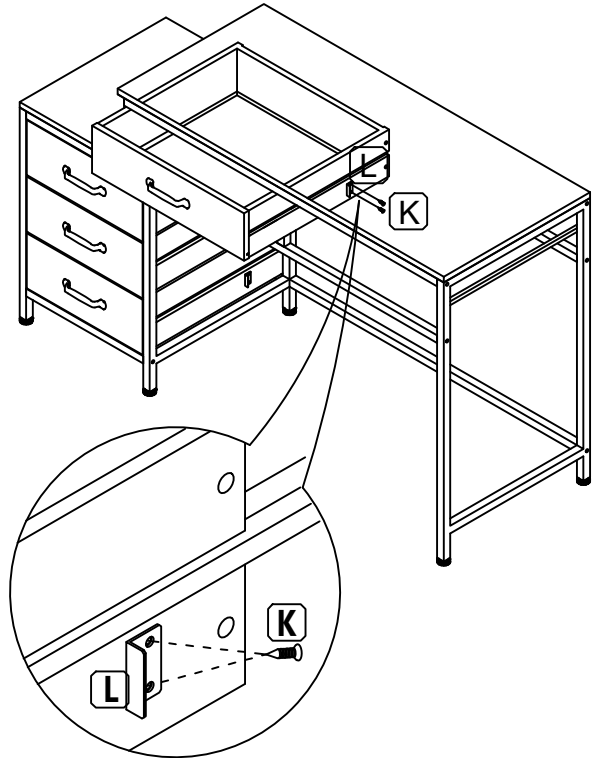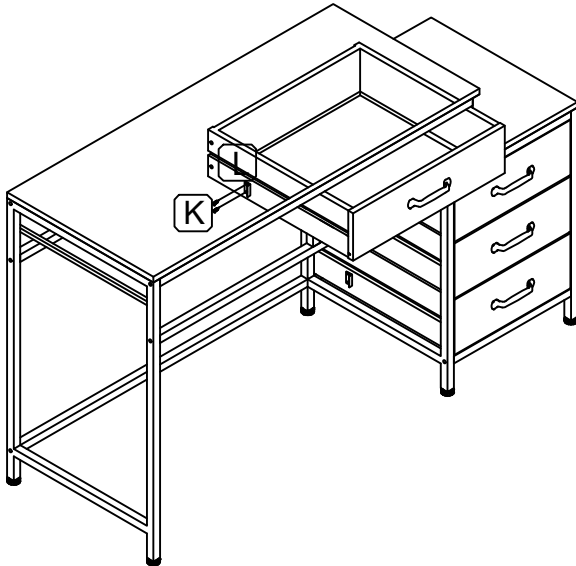


13

(K) × 4 (L) × 2

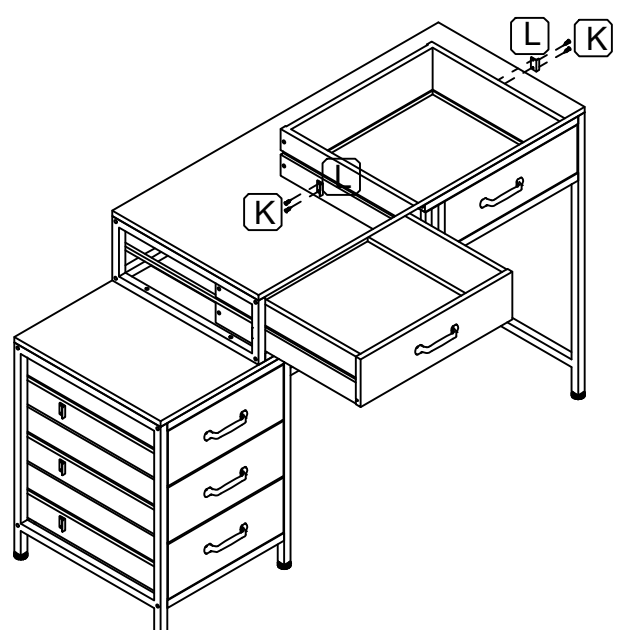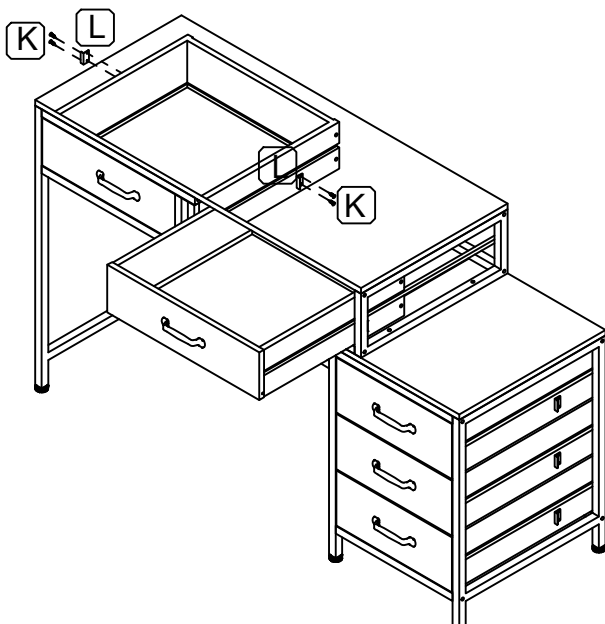

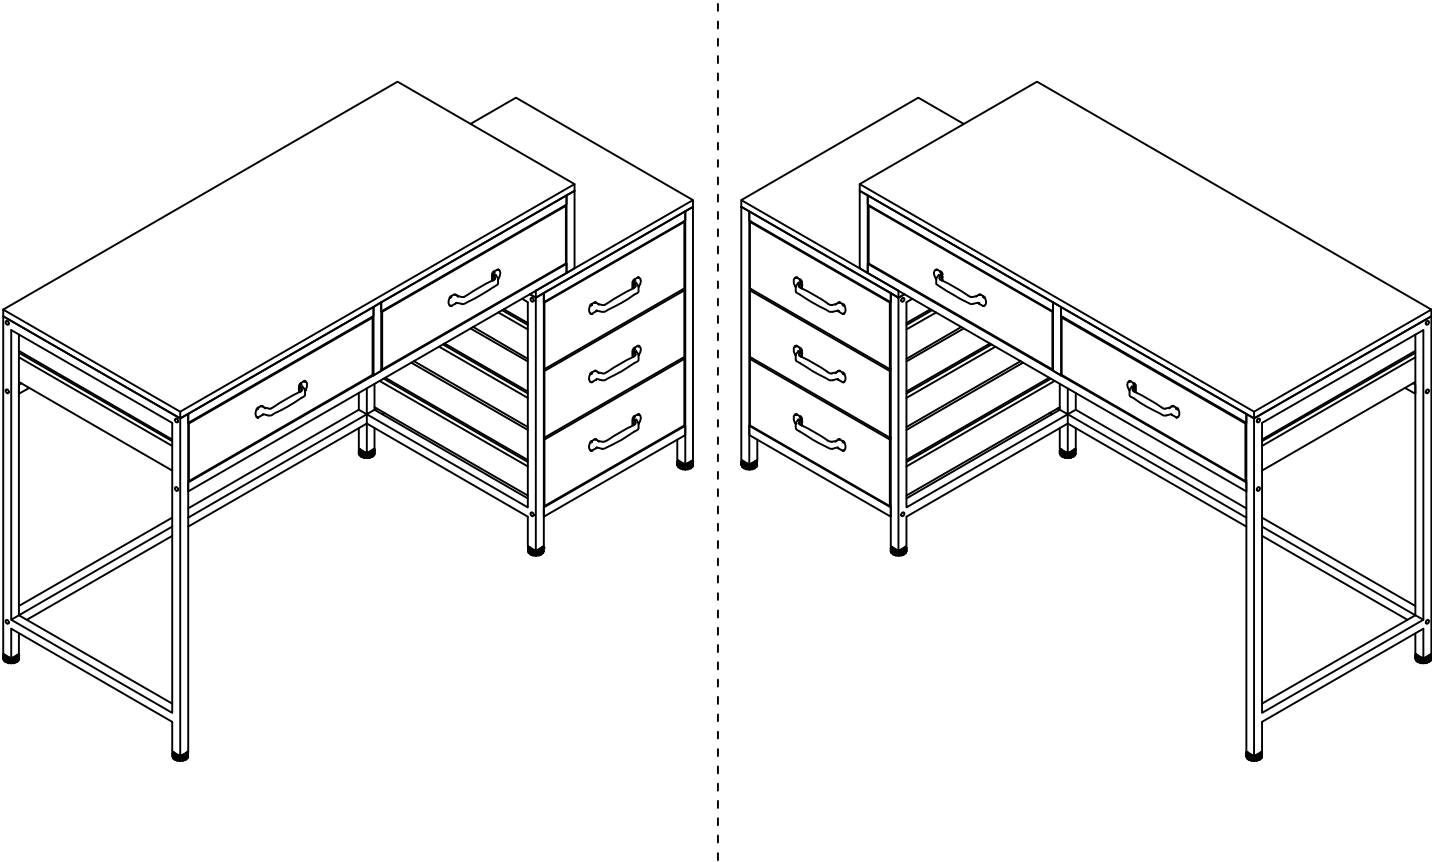

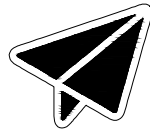

No heartburn,
when we handle
the return

Our way



support@tribesigns.com



Replacement/Refund



You

Their way



Re-package item



Schedule pick-up



Track package



Replacement



You

Contact our customer service team



support@tribesigns.com
www.tribesigns.com



1-424-220-6888