


Installing the Drinking Water Faucet

1. If your kitchen sink does not have an existing 1/2" hole, you will have to drill one. (Refer to How to drill a Hole in Your Sink or Counter-top in our RO User Manual). Wipe clean and dry the area.


SAMPLE CONNECTION

Quick Fitting

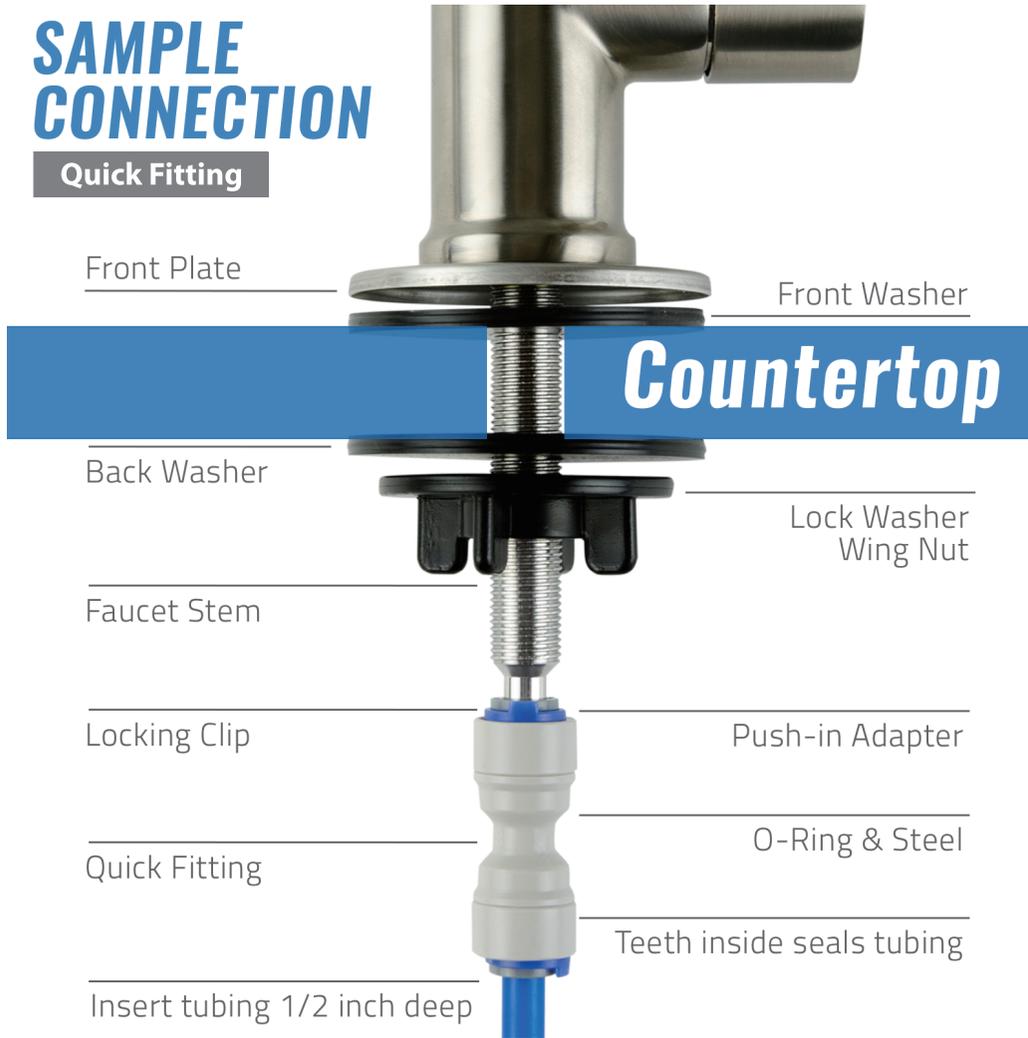

2. Slide the front plate and front washer onto the faucet stem. Insert the faucet stem into the hole on the countertop. Under the sink, insert back washer and tighten the wing nut (you may apply a few rounds of Teflon tape to the threads to get a better grip).

3. Slide the quick connect fitting up the push-in adapter on the base so that it seats securely into the faucet stem, then lock it in place by sliding the blue clip under the collet. Insert the **BLUE** tubing about 1/2 inch into the push-in fitting, and again, secure it with the blue clip.

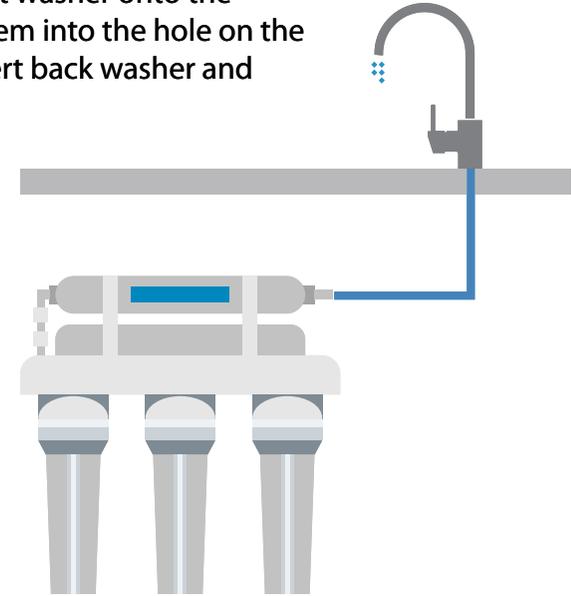

* 1/4" and 3/8" adapters are included. Pick one that fits your plumbing.

*To connect, insert the tubing 1/2 inch deep until it's sealed by o-ring and locked by spider teeth.

*To disconnect, remove blue clip, pull the tubing while pushing down the collet to release the spider teeth.

