




## SETTING UP YOUR ACID SPRAYER 190449




### **1. Assemble Hose To Tank**

**IMPORTANT: Do not attempt to heat or alter hose, hose nut, or barb prior to assembly.**

1. Align hose barb tabs, push hose barb into tank until it stops (**See Figure A**).
2. Slide hose nut into place and turn clockwise to tighten. (**See Figure B**).

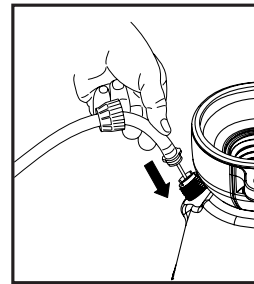

**Figure A**

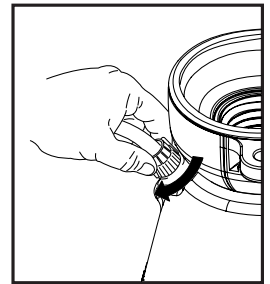

**Figure B**

**NOTE: Do not use tools to tighten hose nut.**

### **2. Assemble Wand & Nozzle**

Place nozzle onto the end of the wand assembly and tighten securely. (**See Figure C**)




**Figure C**

Configuration for  
nozzle tip sprayers

### **3. Assemble Shut-off to Wand**

Screw on Wand Assembly to end of Shut-off and tighten securely. (**See Figure D**)

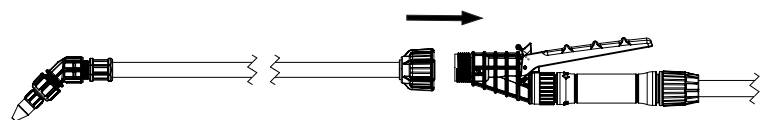

**Figure D**


PARTS INCLUDED WITH YOUR  
ACID SPRAYER  
190449



182491  
SHUT-OFF ASSEMBLY



181824  
21" SS WAND ASSEMBLY



181822  
ADJUSTABLE  
NOZZLE POLY



180097  
NOZZLE TIP  
HIGH VOLUME  
(RED)



180168  
NOZZLE TIP  
LOW VOLUME  
(YELLOW)



181812  
NOZZLE FLAT  
SEAL




181804  
NOZZLE CAP NUT



182618  
WARRANTY CARD



181080  
CARRYING STRAP

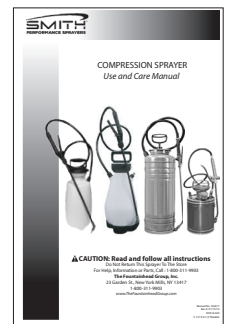

182617  
MANUAL