

installation instructions:

PVC FRETWORK MOULDING

SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.

Wear safety goggles.

Follow fixture, power tools, and paint manufacturers' instructions and users manuals.

Use common sense and follow good construction practices.

TOOL & MATERIAL CHECKLIST

- ☐ Loctite power grab adhesive
- ☐ Circular Saw, or Table Saw
- ☐ 100% acrylic paint
- ☐ Brad nailer or hammer
- ☐ Fine sandpaper
- ☐ Small brad nails
- ☐ Chalk line and measuring tape

IMPORTANT INFO

- It is highly recommended that you paint or finish the panels before installation.
- Recommended use of 100% acrylic latex paint for PVC products.
- Clean the installation surface and back of panel of any debris with a clean cloth.
- Make sure the surface and the back of the panel are completely dry before installation.
- Before installing, acclimate your PVC panels in the room where you will be installing them.
- In most applications you will have to trim some panels. Cut them with a power tool, such as a table saw or miter saw. Sand cut edge to remove debris.
- Depending on your installation method, use Loctite Power Grab adhesive and small brad nails.


INSTALL INSTRUCTIONS:

GENERAL INSTALLATION

1. It is highly recommended that you paint or finish the panels before installation.
2. Smooth installation surface with sandpaper by removing excessive bumps or texture. Wipe wall clean to clear debris.
3. Locate studs and mark for nail placement.
4. Apply a continuous 1/2" bead of construction adhesive along the back of moulding lengths.
5. Press moulding against wall at the desired location.
6. Use brad nails to secure moulding into place.
7. Apply caulk/filler in remaining gaps and smooth with finger.
8. Touch-up moulding as needed with 100% acrylic paint.



EXAMPLE DIAGRAM:

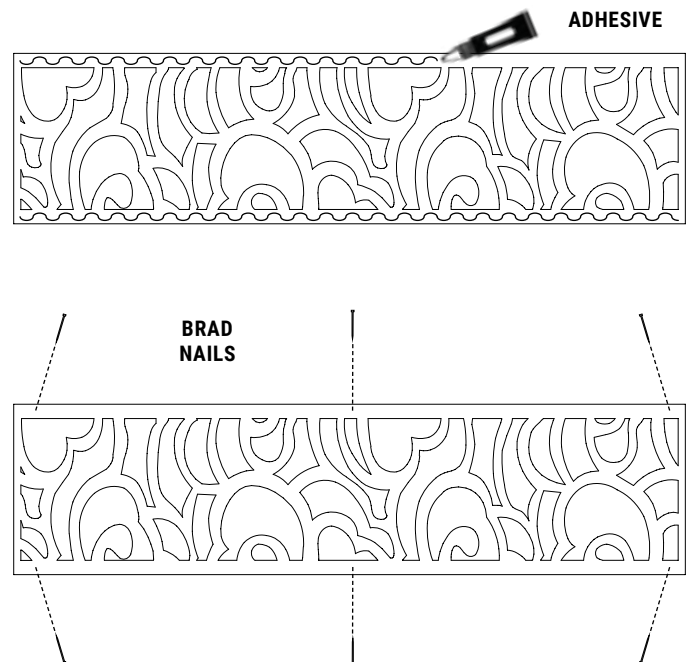

EKENA
MILLWORK

Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork

We Can Help. Call (866) 607-0453

www.ekenamillwork.com