



Installation Instructions

Notes: Don't tighten screws completely at first, just in case parts were assembled wrong and need disassemble. Tighten screws at last when all parts are put together.

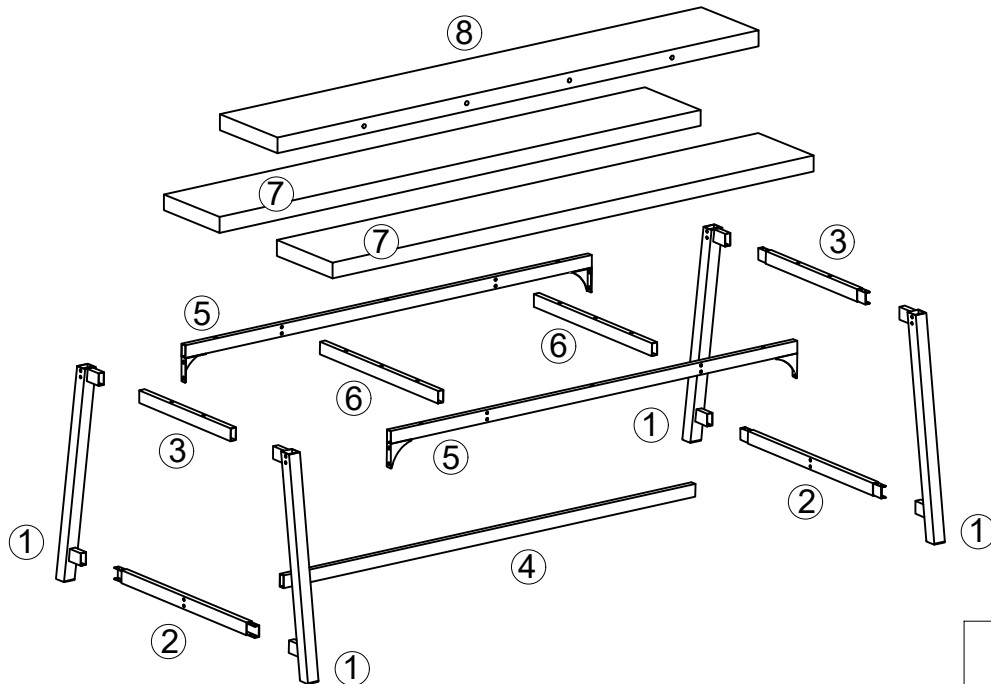

(H) × 4 pcs + 1 pc

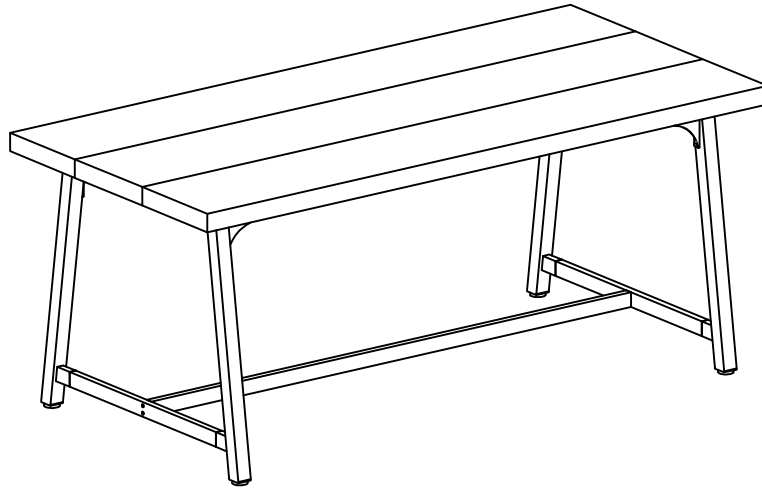


M6 × 12 mm

(A) × 16 pcs + 1 pc



M6 × 40 mm

(B) × 12 pcs + 1 pc



M6 × 60 mm

(C) × 24 pcs + 1 pc



(D) × 4 pcs



(E) × 2 pcs




(F) × 8 pcs



M6 × 35 mm


(G) × 4 pcs + 1 pc

STEP 1

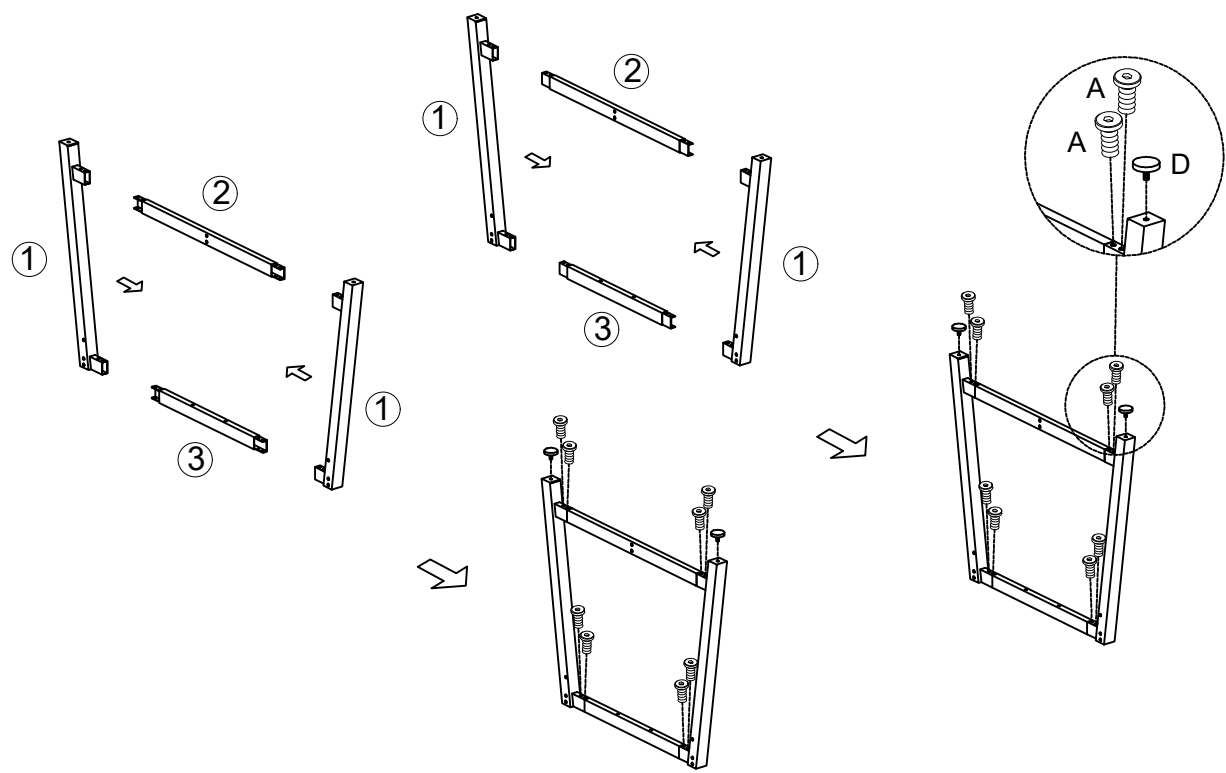




 M6×12mm Ⓐ ×16pcs	 Ⓓ ×4pcs
--	--

STEP 2

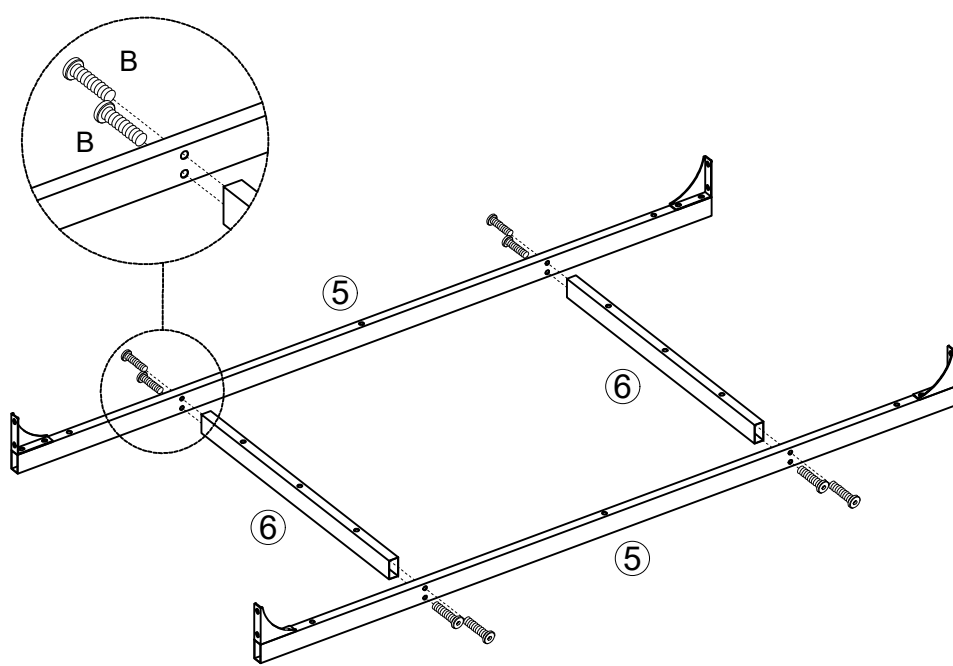




 M6×40mm Ⓑ ×8pcs

STEP 3

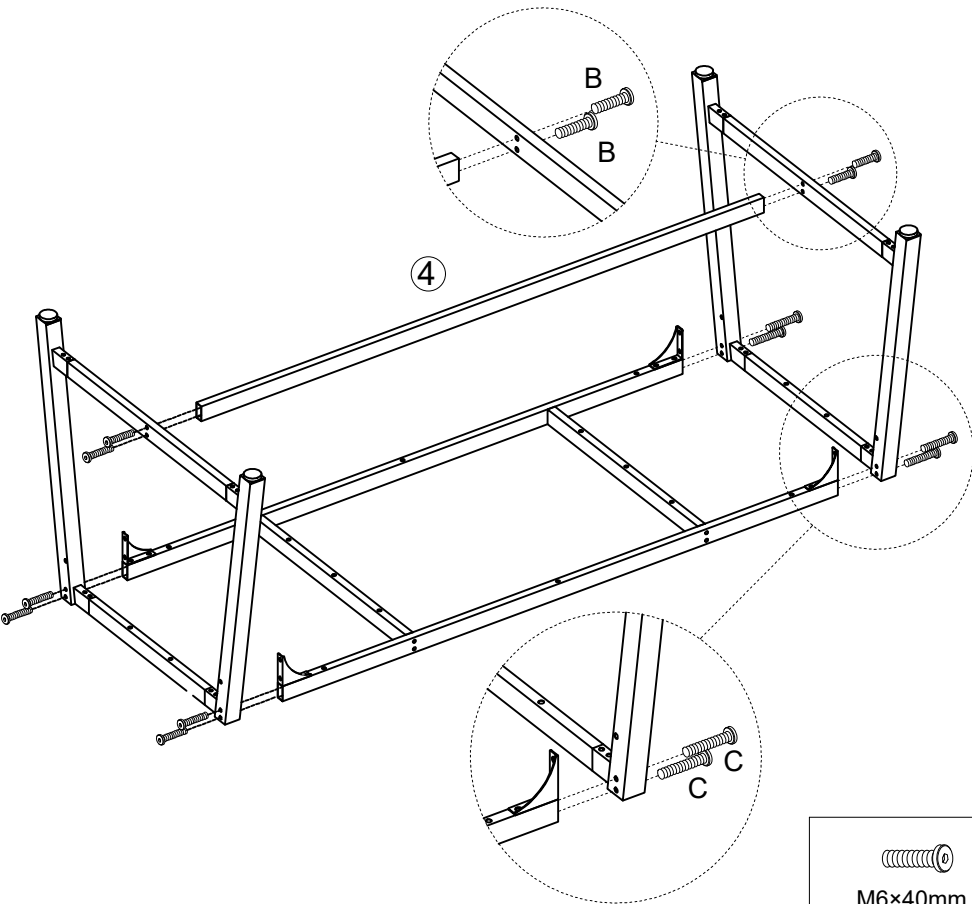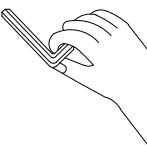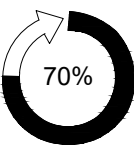


	
M6×40mm	M6×60mm
Ⓑ×4pcs	Ⓒ×8pcs

STEP 4

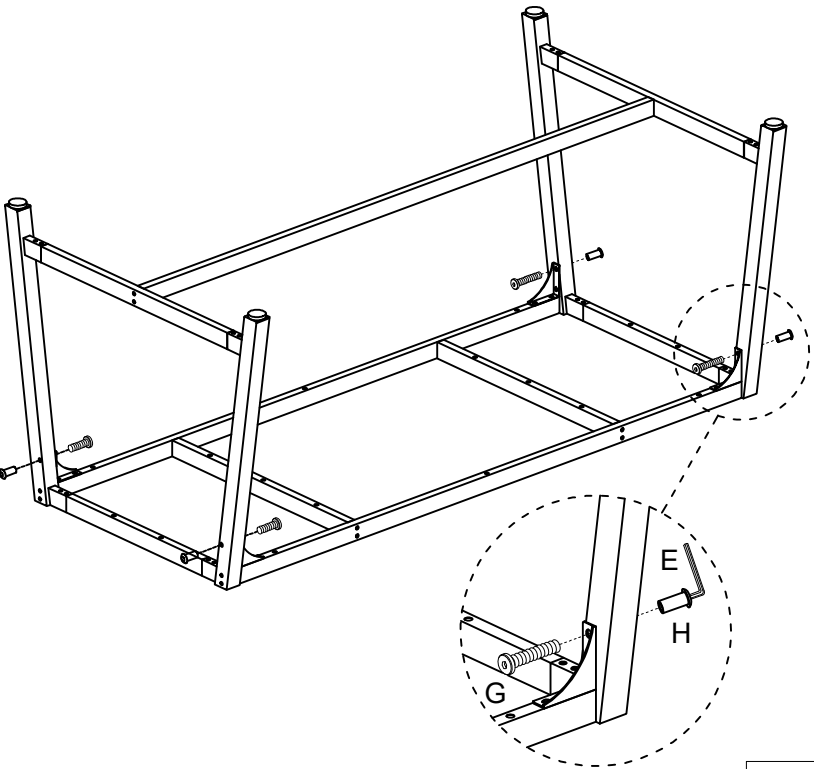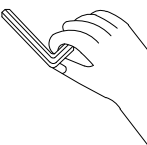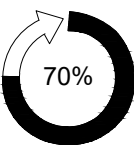




	
M6×35mm	
Ⓔ×4pcs	Ⓕ×4pcs

STEP 5

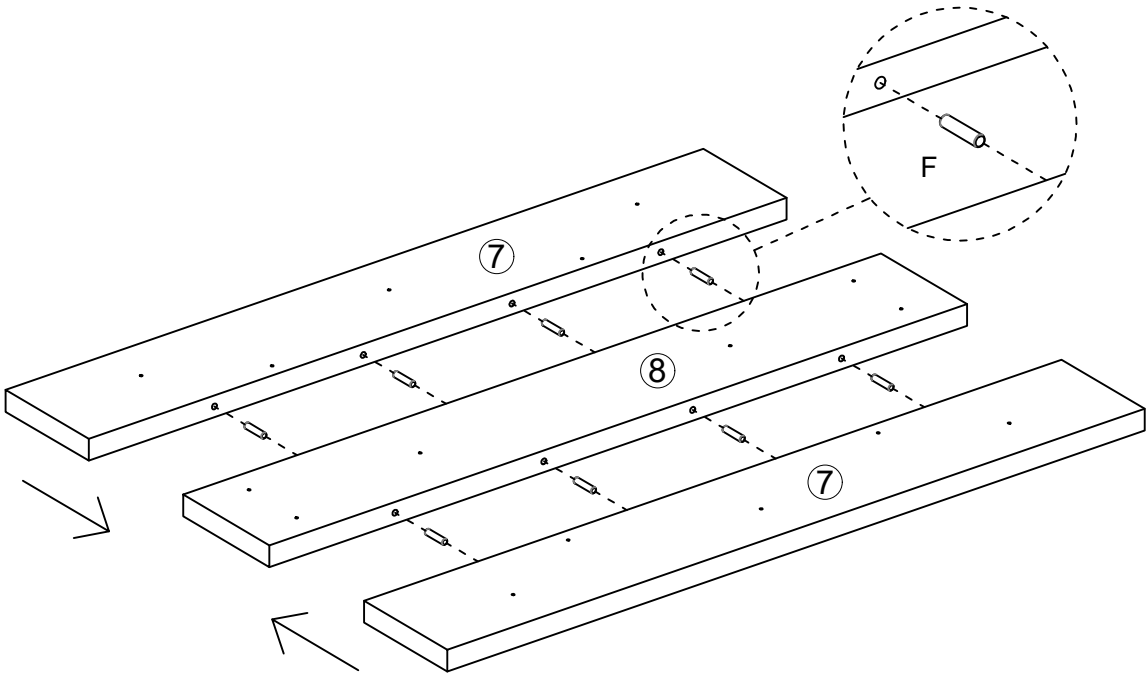

F×8pcs


STEP 6

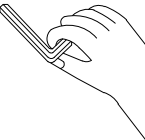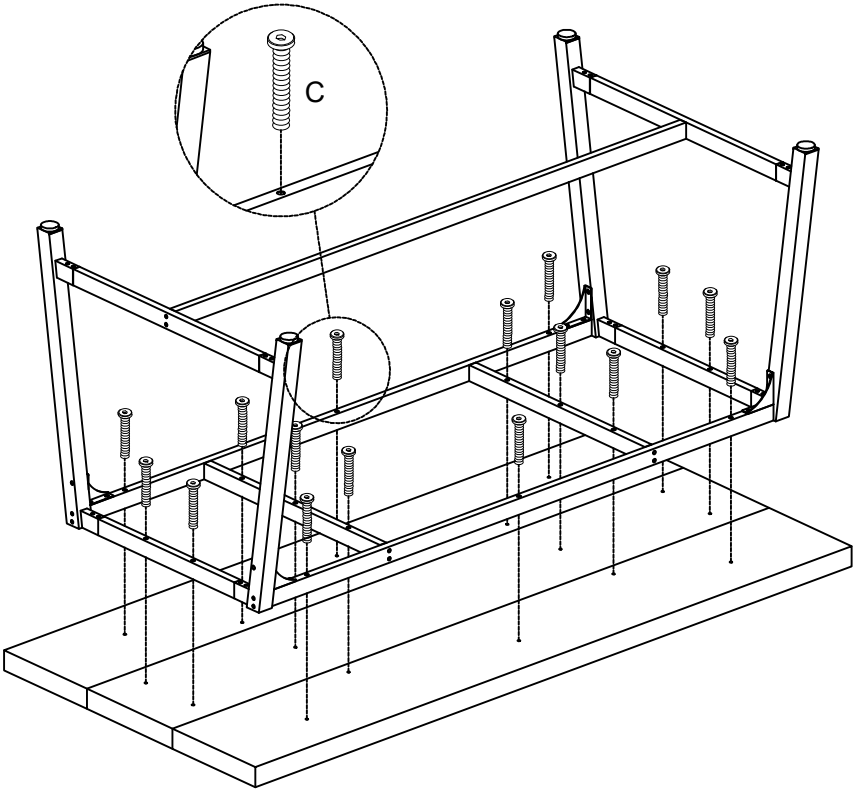

M6×60mm

C×16pcs

STEP 7

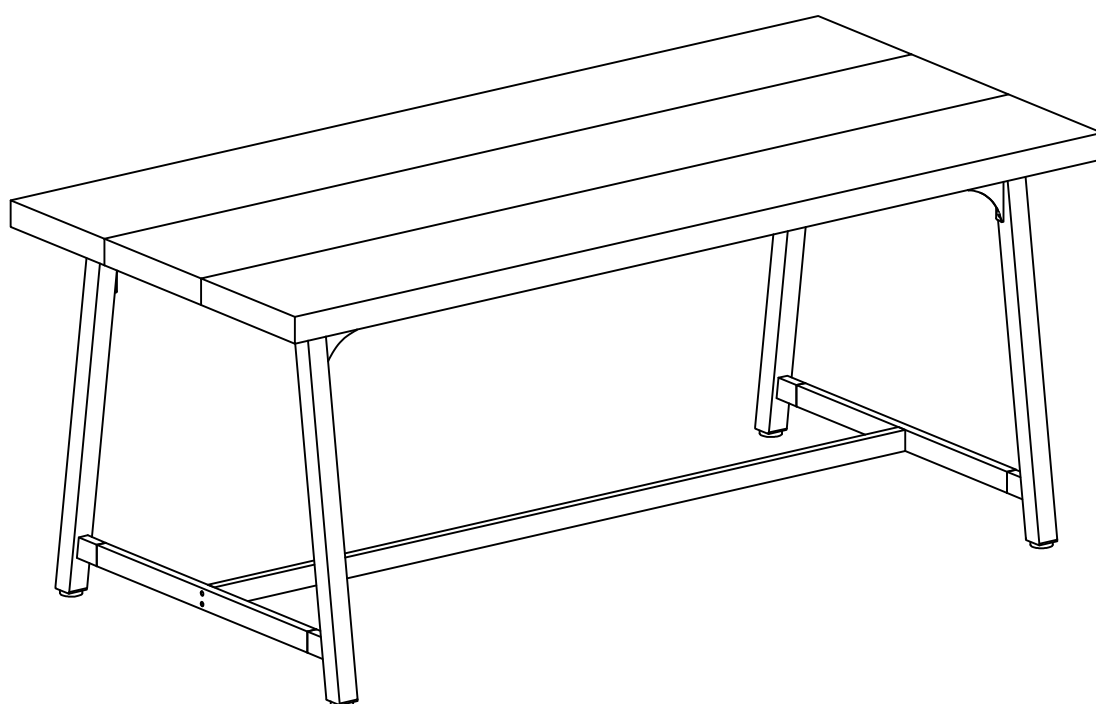

We genuinely appreciate your purchase of our product.

Any problem (installation or damage caused by shipping), please feel free to contact us.

Our customer service will help to solve the problem for your ASAP

Email: support@tribesigns.com customer service hotline: +14242206888