

OPERATING CONDITION

- The air conditioner must be operated within the ambient temperature range indicated below:

MODE	ROOM TEMPERATURE
COOL	17°C~32°C / 62°F~92°F
DRY	13°C~32°C / 54°F~92°F

INSTALLATION INSTRUCTIONS

INSTALLATION INSTRUCTIONS




Location

- The air conditioner should be placed on a firm foundation to minimize noise and vibration. For safe and secure positioning, place the unit on a smooth, level floor strong enough to support the unit.
- The unit has casters to aid placement, but it should only be rolled on smooth, flat surfaces. Use caution when rolling on carpet surfaces. Do not attempt to roll the unit over objects.
- The unit must be placed within reach of a properly rated grounded socket.
- Never place any obstacles around the air inlet or outlet of the unit.
- Allow at least 30cm(0.98ft) of space from the wall for efficient air-conditioning.
- Do not use an extension cord.

Window kit Installation

Your window kit has been designed to fit most standard "Vertical" and "horizontal" window applications. However, it may be necessary for you to improvise/modify some aspects of the installation procedures for certain types of window. Please refer to Fig. 8& Fig.9 for minimum and maximum window openings.

Note: If the window opening is less than the mentioned minimum length of the window slider kit, cut that one with holes in it short to fit for the window opening. Never cut out the hole in window slider kit.

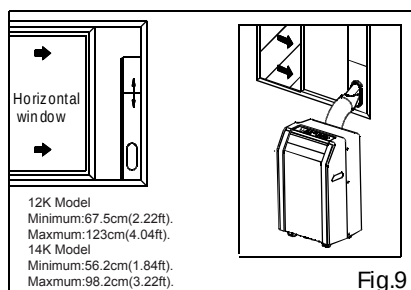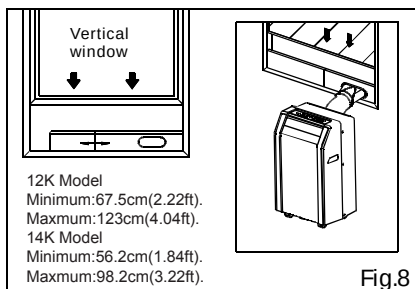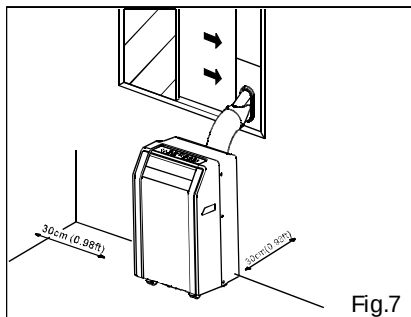

Installation in double-hung sash windows

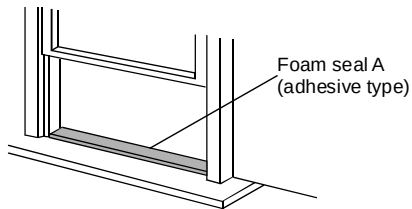


Fig.10

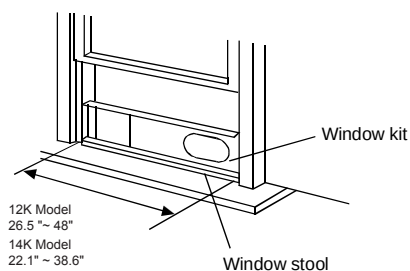


Fig.11

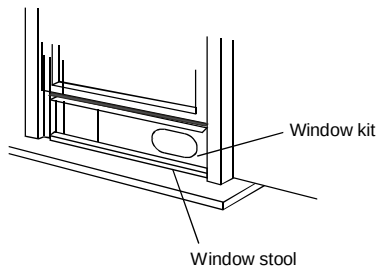


Fig.12

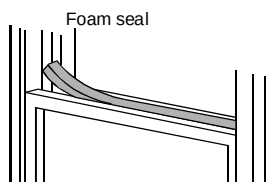


Fig.13

1. Cut the foam seal(adhesive type) to the proper length and attach it to the window stool. Fig.10

2. Attach the window slider kit to the window stool. Adjust the length of the window slider kit according to the width of window, shorten the adjustable window kit if the width of window is less than 27 inches.

Open the window sash and place the window slider kit on the window stool. Fig.11

3. Cut the foam seal(adhesive type) to the proper length and attach it on the top of the window. Shown as in Fig.12

4. Close the window sash securely against the window.

5. Cut the foam seal to an appropriate length and sealing the open gap between the top window sash and outer window sash. Show as in Fig.13.

Installation in a sliding sash windows

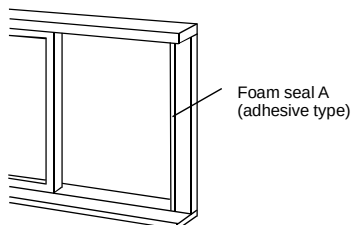


Fig.14

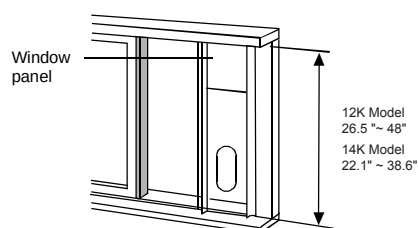


Fig.15

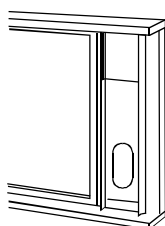


Fig.16

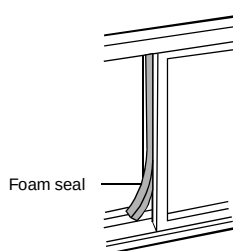


Fig.17

1. Cut the foam seal(adhesive type) to the proper length and attach it to the window frame. See Fig.14.

2. Attach the window slider kit to the window stool. Adjust the length of the window slider kit according to the width of window, shorten the adjustable window kit if the width of window is less than 27 inches.
Open the window sash and place the window slider kit on the window stool. See Fig.15.

3. Cut the foam seal(adhesive type) to the proper length and attach it on the top of the window. Shown as in Fig.16.

4. Close the sliding sash securely against the window.

5. Cut the foam seal to an appropriate length and sealing the open gap between the top window sash and outer window sash. Shown as in Fig.17.




Fig.18

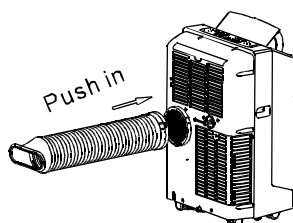


Fig.19

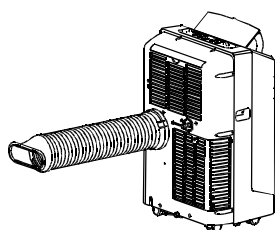


Fig.20

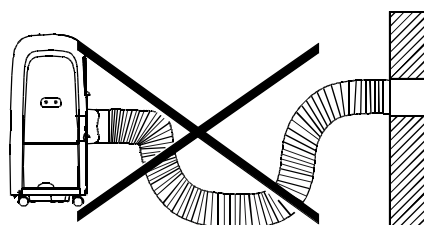


Fig.21

Exhaust hose installation:

The exhaust hose and adaptor must be installed or removed in accordance with the usage mode.

COOL mode	Install
FAN or DEHUMIDIFY mode	Remove

1. Install the window Exhaust adaptor (flat mouth) onto the exhaust hose as shown in Fig.18. Refer to the previous pages for window kit installation.
2. Install the flexible Exhaust hose as depicted in Fig.19 & 20.

NOTE:

- The duct can be compressed or extended moderately according to the installation requirement, but it is desirable to keep the duct length to a minimum.

IMPORTANT:

DO NOT OVER BEND THE DUCT (SEE Fig.21)