

TWPIV

Size: 15 in. x 6.5 in.


N.F.V.: 40 Sq. In.

Opening: 13.75 in. x 5.25 in.




Lorem ipsum


The opening should be *at least* 1 inch smaller than the vent size.

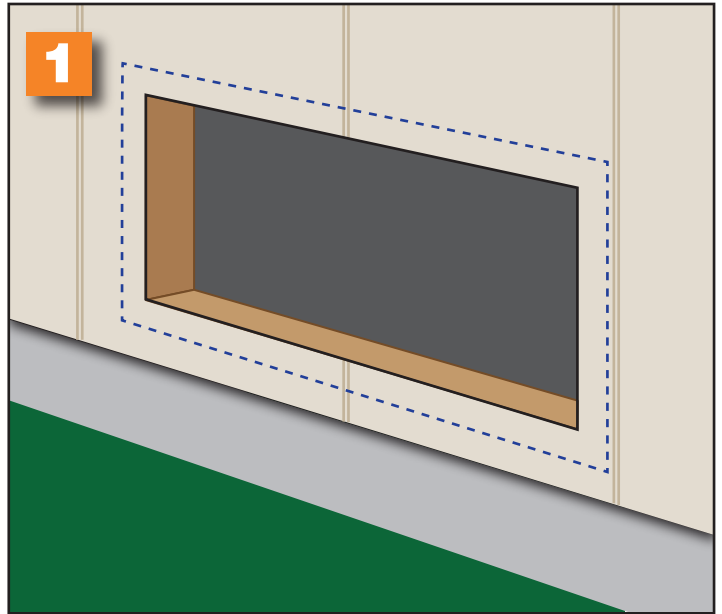

1. Remove old vent and any loose debris from opening.

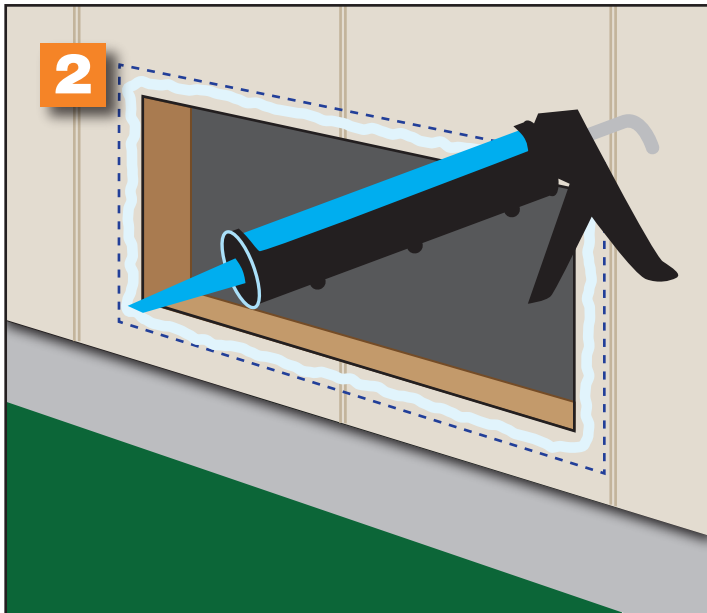

2. Apply a bead of sealant to the vent flange or wall.

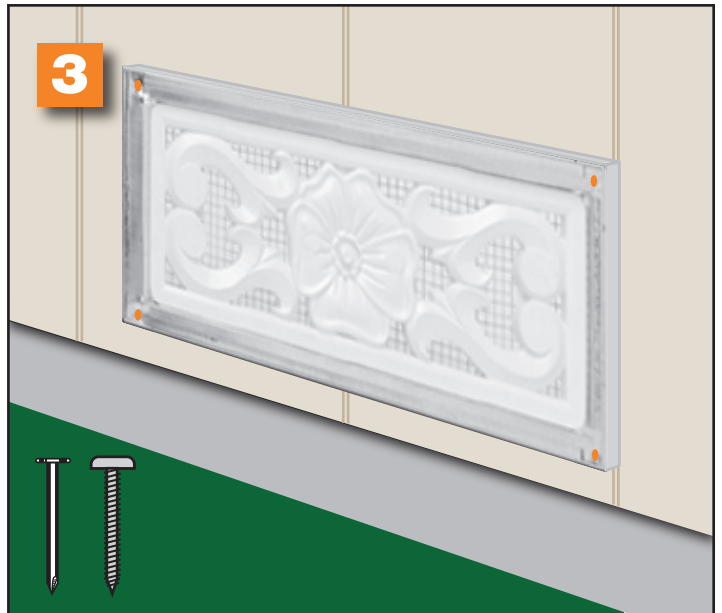

3. Using the partial punched corner fastener guides (4 per vent), fasten vent with nails or screws.



CAUTION! Working above grade is inherently dangerous, be sure that proper fall protection measures are in place. When working with power tools, gloves and eye protection are absolutely required.