


DESIGN


PURCHASE

CONSTRUCT


ENJOY

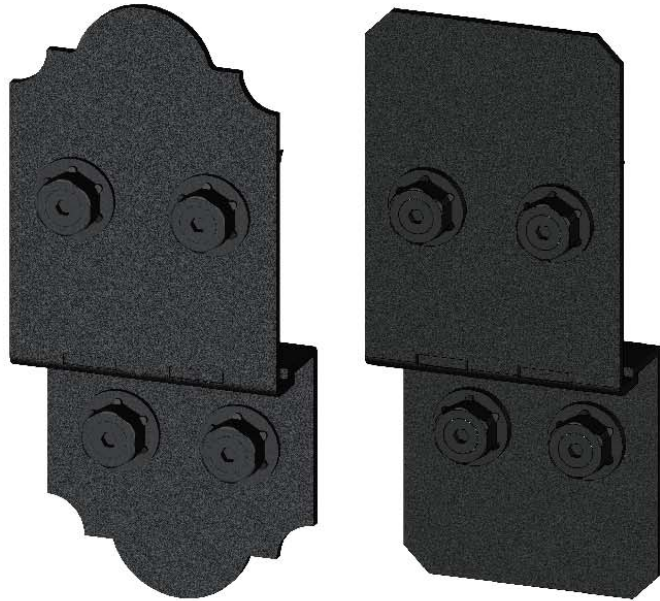

56610


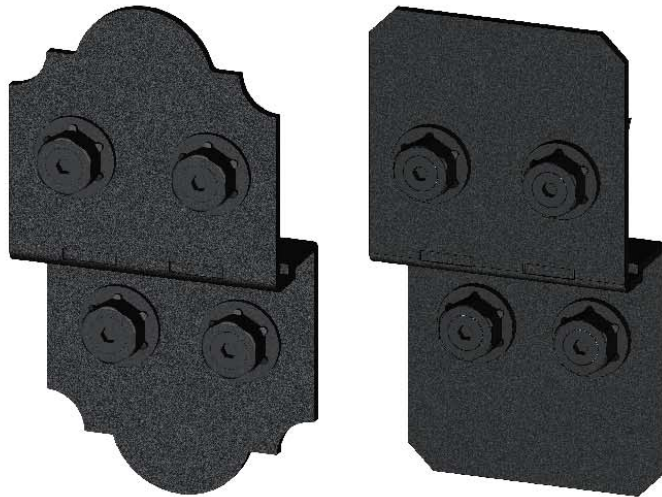


56635

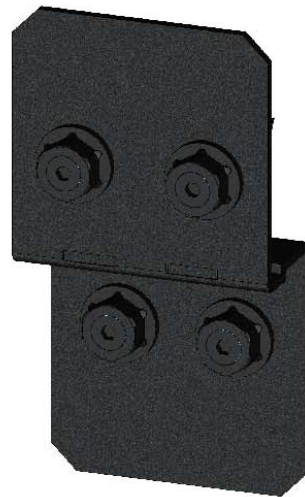

51735

Installation Instructions,
56610 8" Post to Beam (P2B-LS-8)
51710 8" Post to Beam (P2B-IW-8)
56635 6" Post to Beam (P2B-LS-6)
51735 6" Post to Beam (P2B-IW-6)

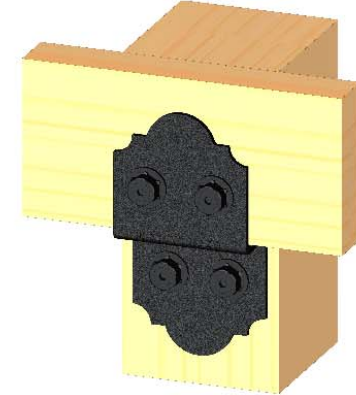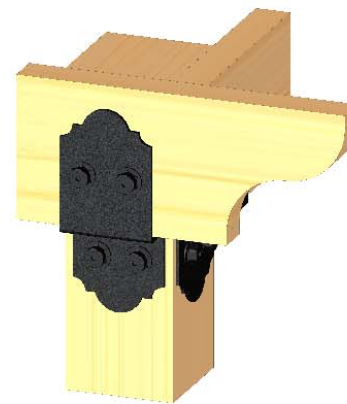

Typical Installation
Laredo Sunset shown




Installation Instructions, 56610 & 56635

V1.00 - Installation Instructions effective May 1, 2015 and reflects information that available as of April 10, 2014. This information is updated periodically and should not be relied upon after May 1, 2015. Please visit www.OZCOBP.com to get current information




Printing Documents from ISSUU


Unfortunately, there is currently no way to print content directly through issuu. To print a publication, you will need to download it and print it from your computer.

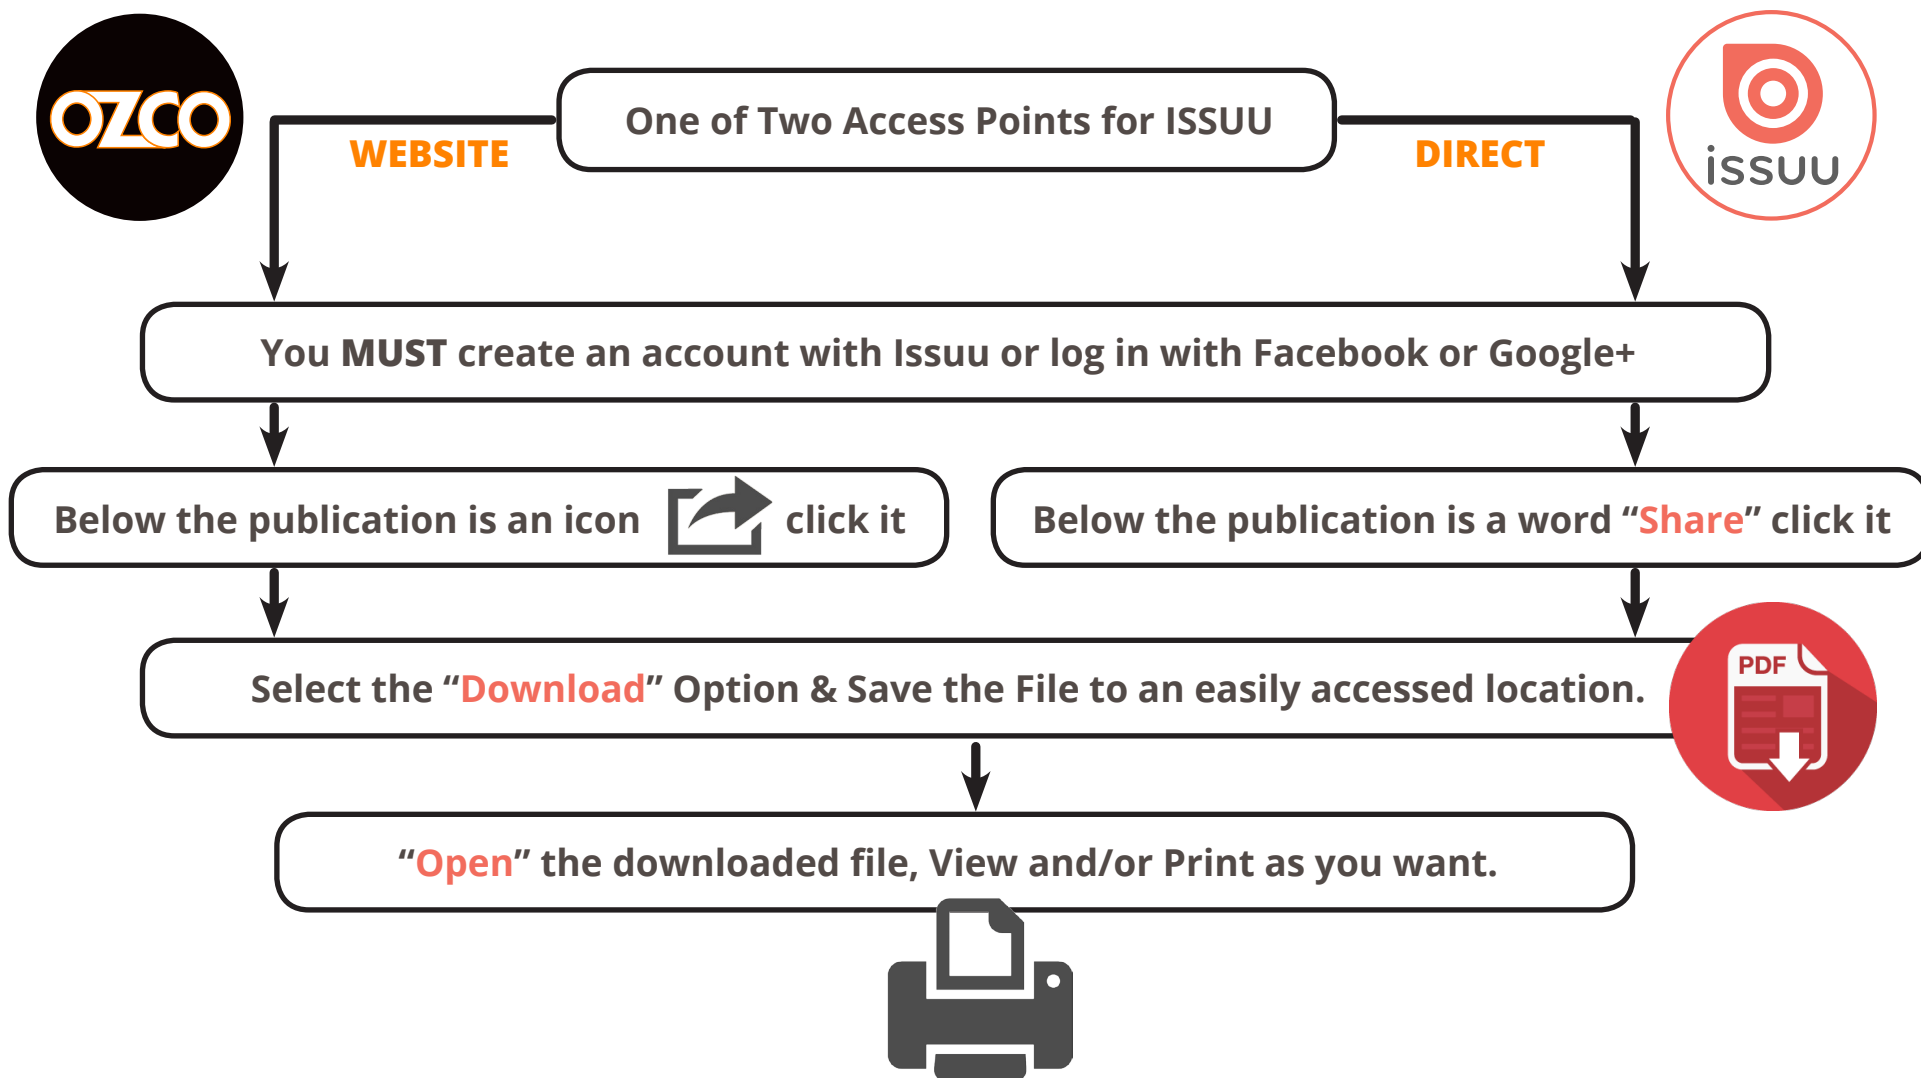

kit contains 2 assemblies

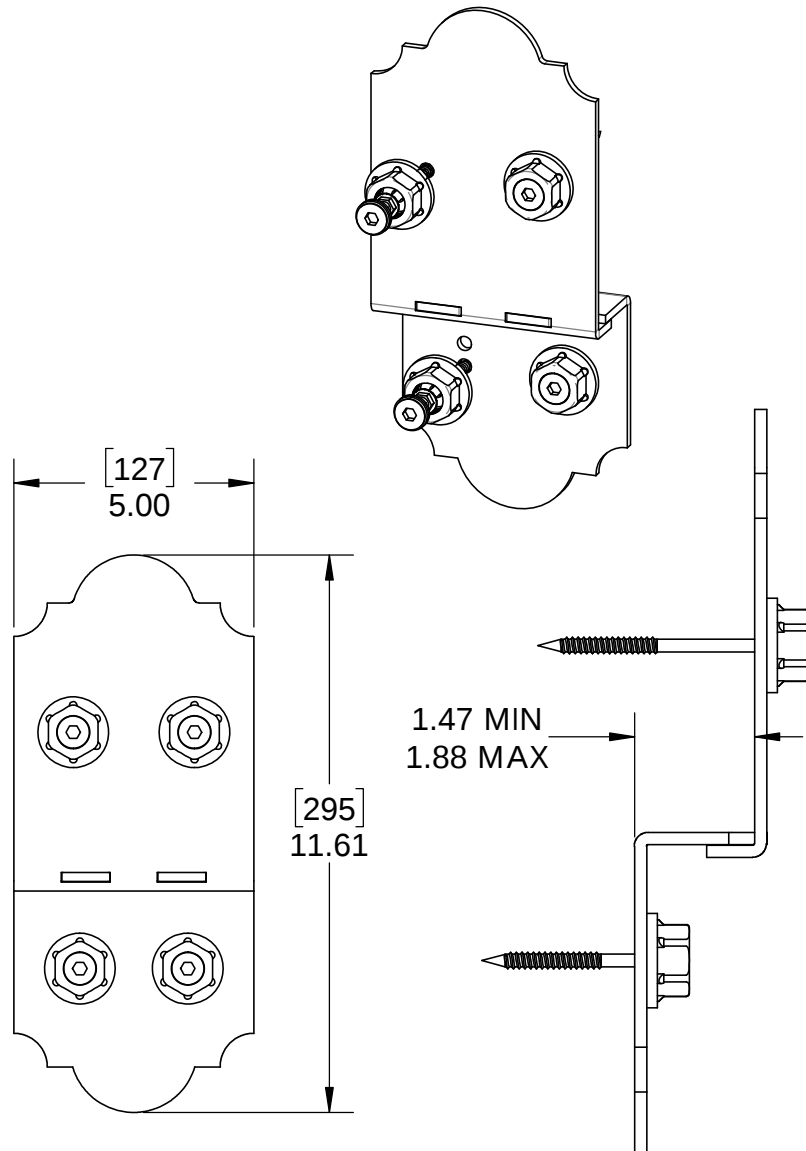


kit contains 2 assemblies

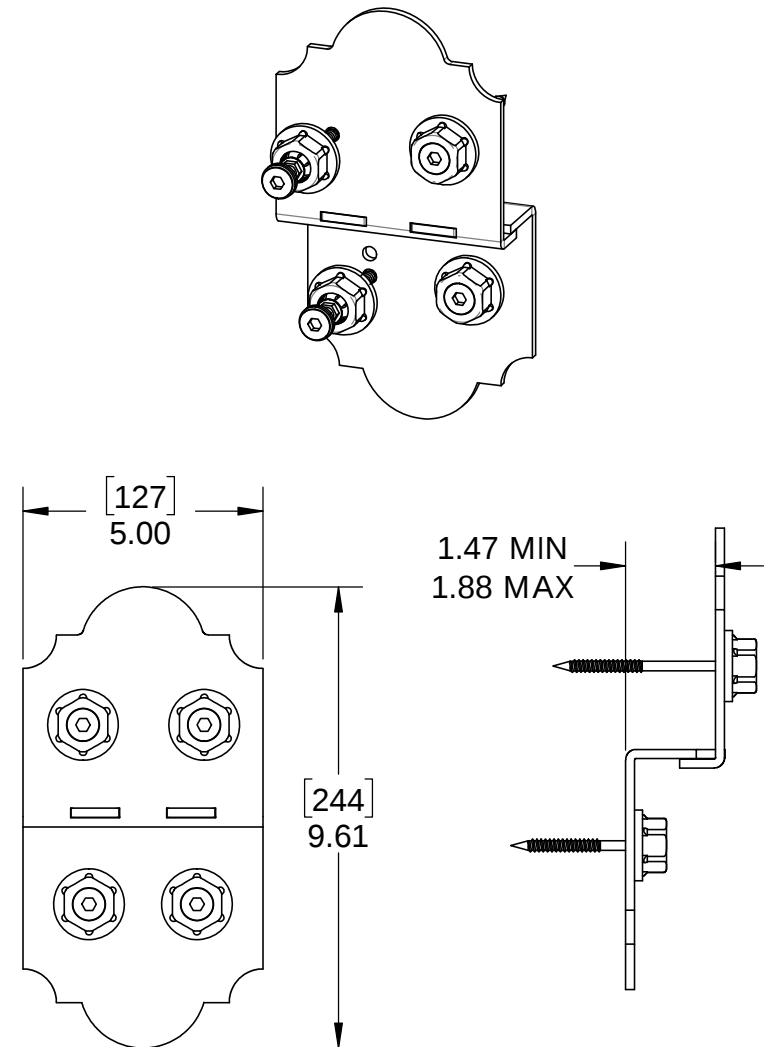


Laredo Sunset



Installation Instructions, 56610 & 56635

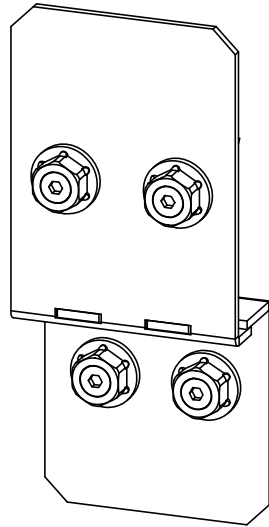


kit contains 2 assemblies

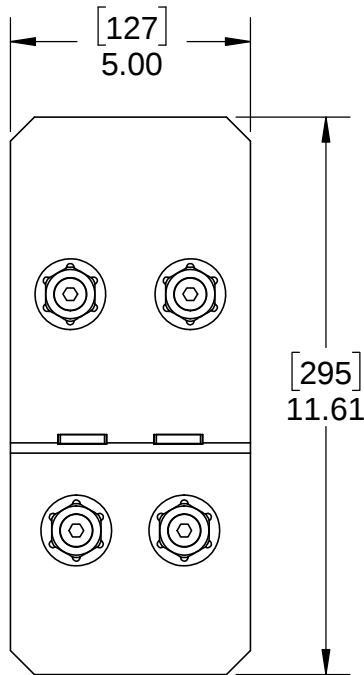


1.5 MIN
2.00 MAX

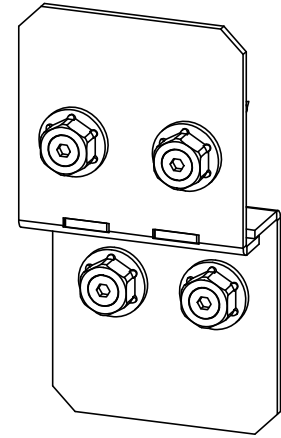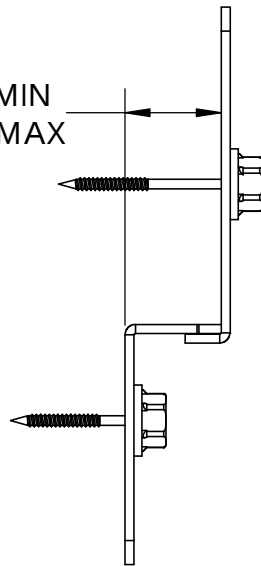

kit contains 2 assemblies

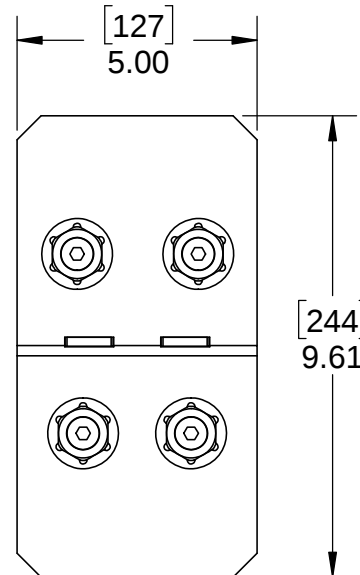


1.5 MIN
2.00 MAX

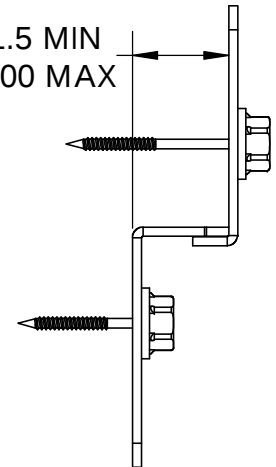

Ironwood


Installation Instructions, 56610 & 56635

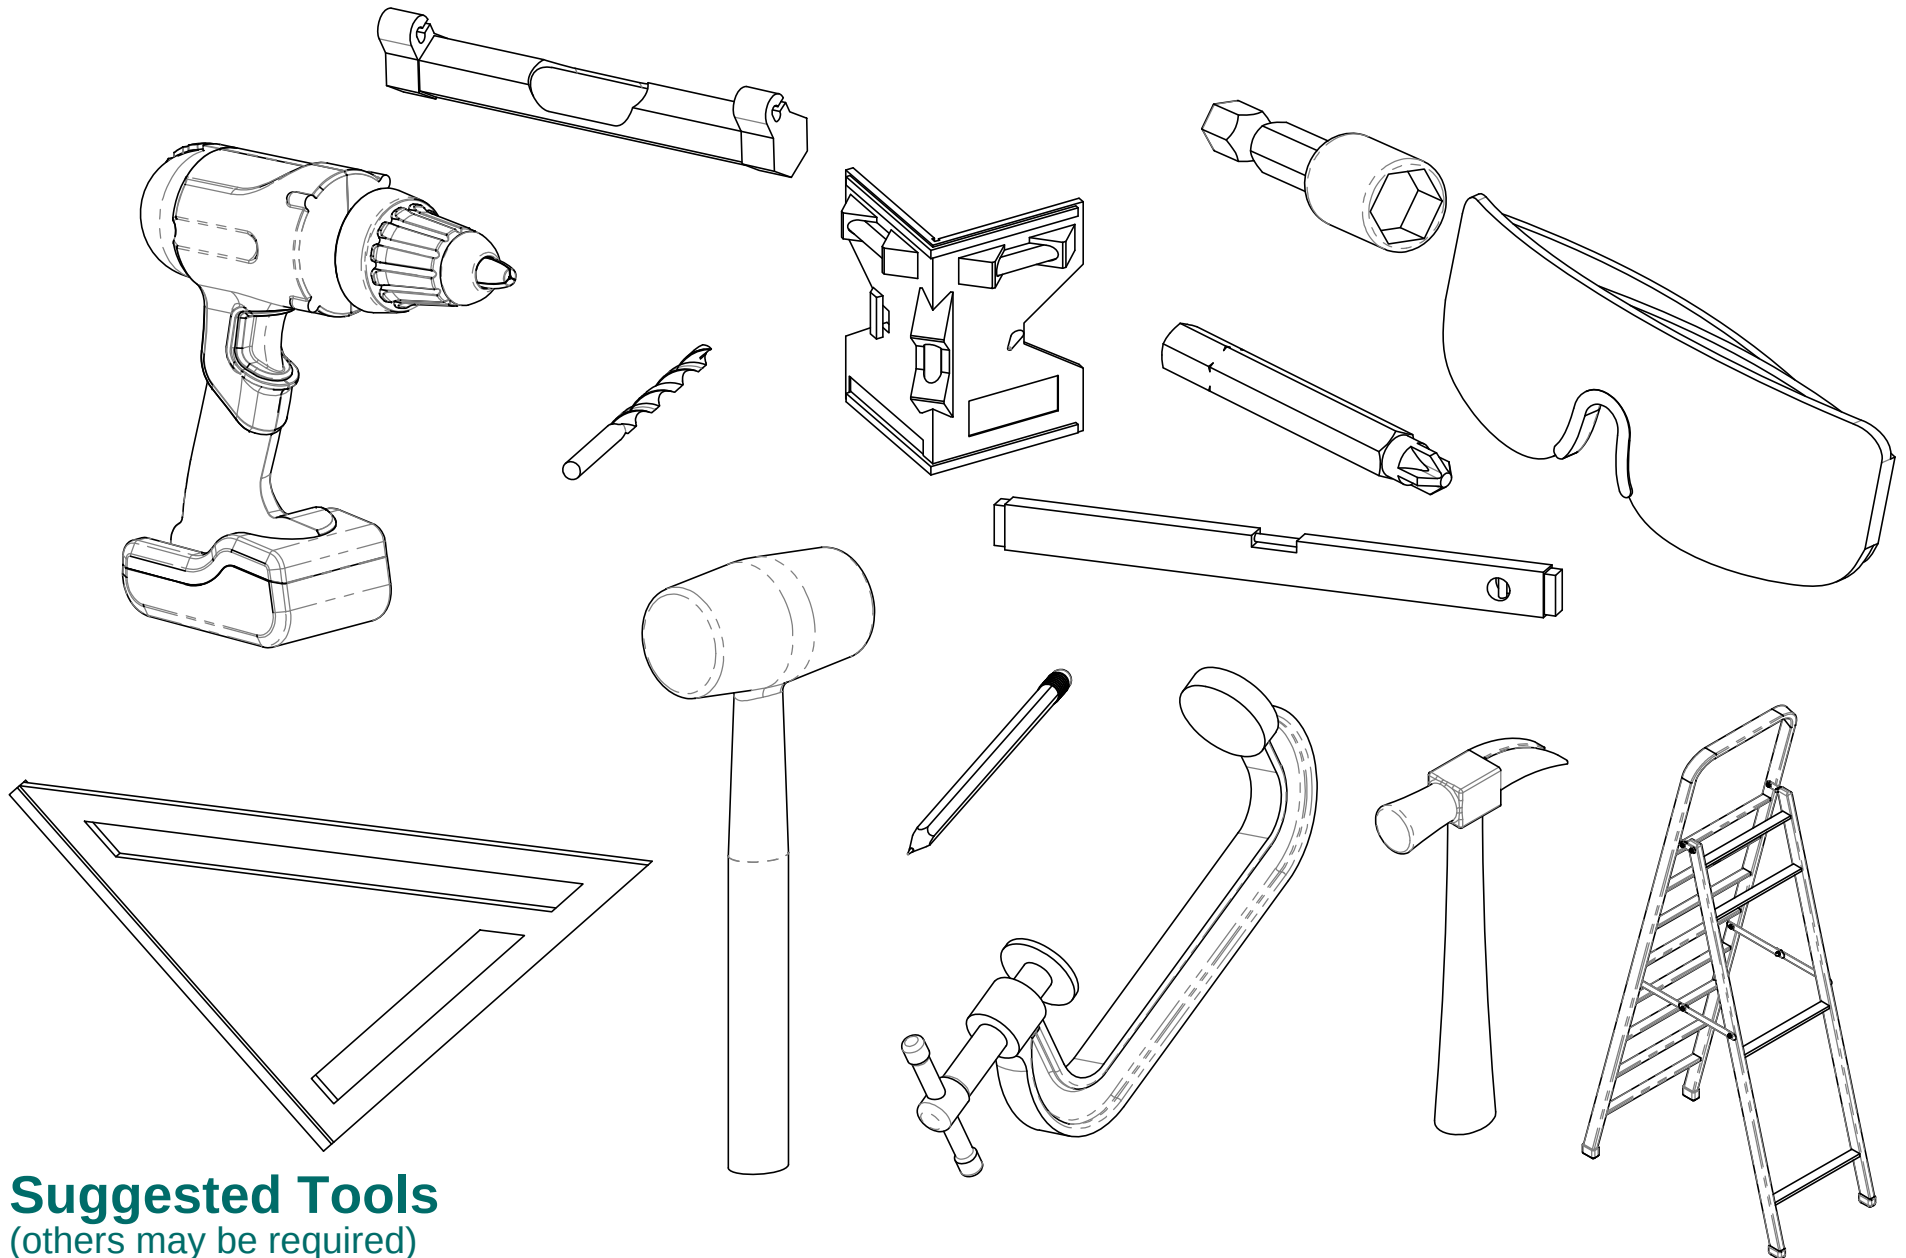

Suggested Tools

(others may be required)


Installation Instructions, 56610 & 56635

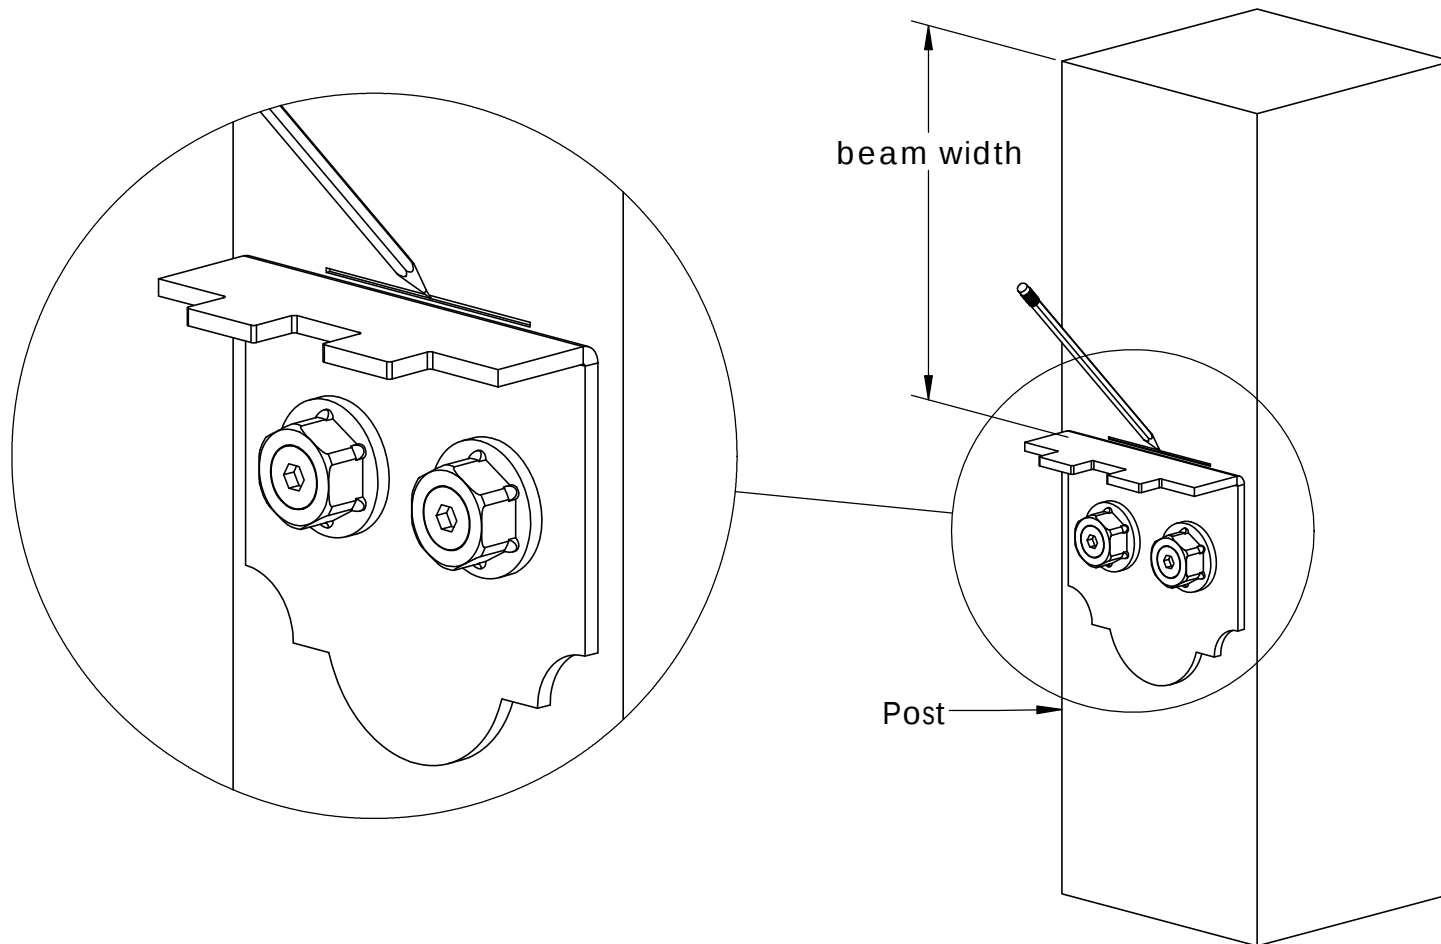

step 1


Installation Instructions, 56610 & 56635

V1.00 - Installation Instructions effective May 1, 2015 and reflects information that available as of April 10, 2014. This information is updated periodically and should not be relied upon after May 1, 2015. Please visit www.OZCOBP.com to get current information

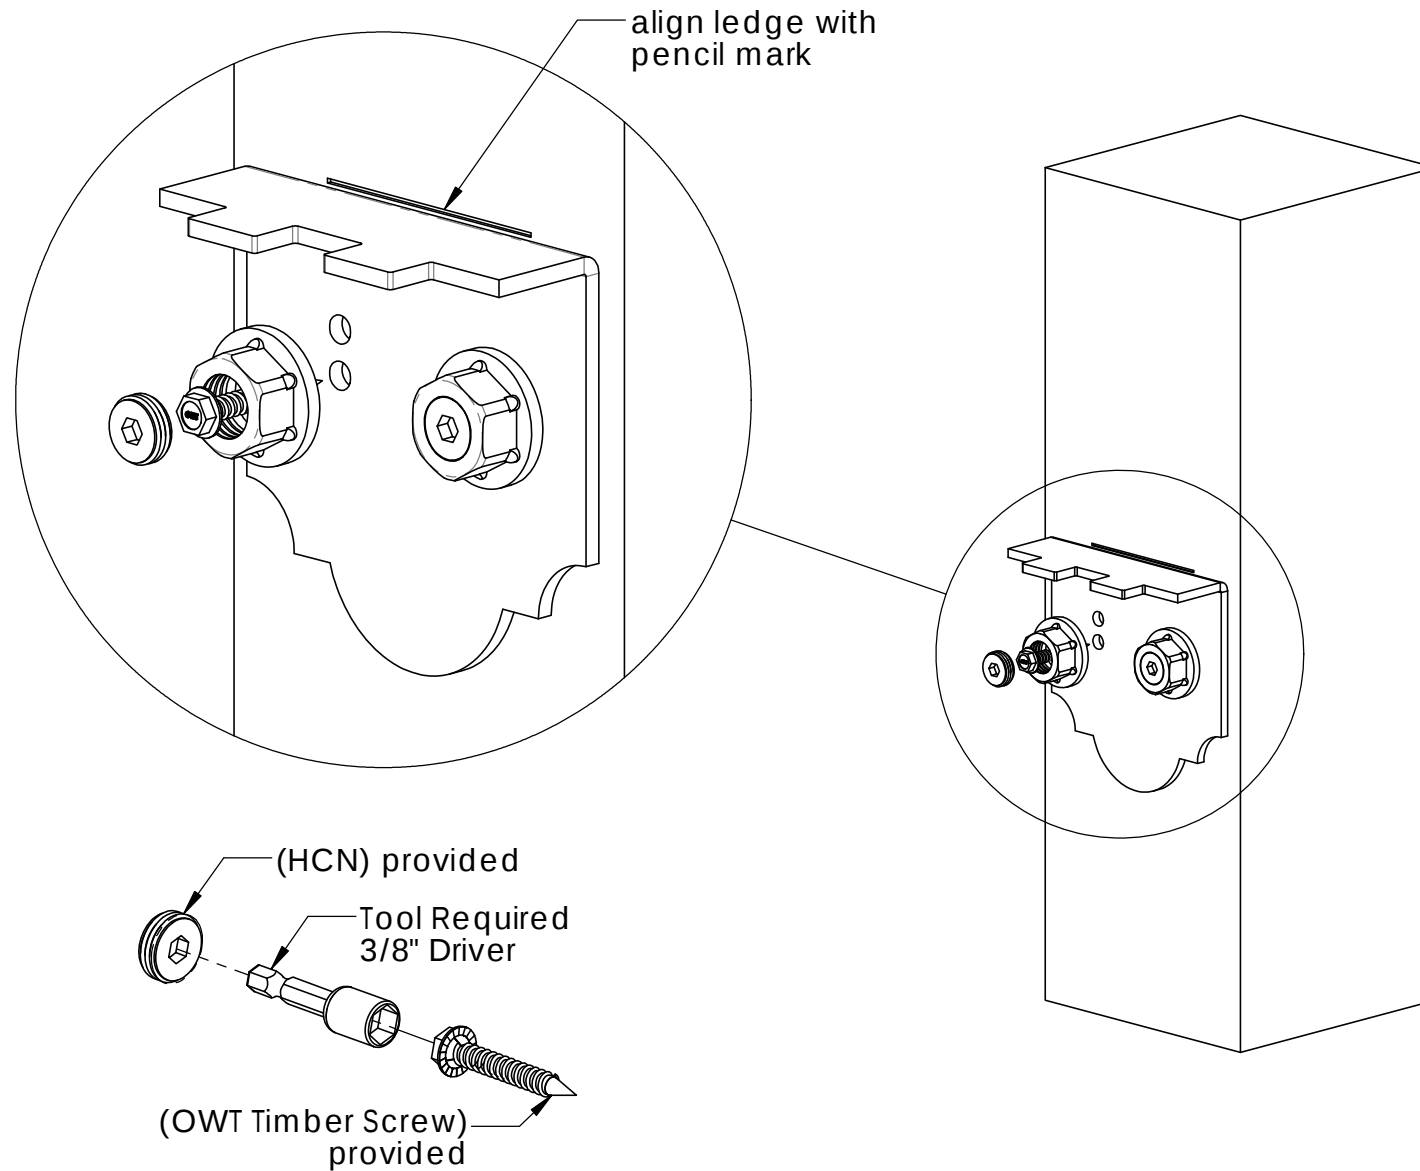


step 2

Installation Instructions, 56610 & 56635

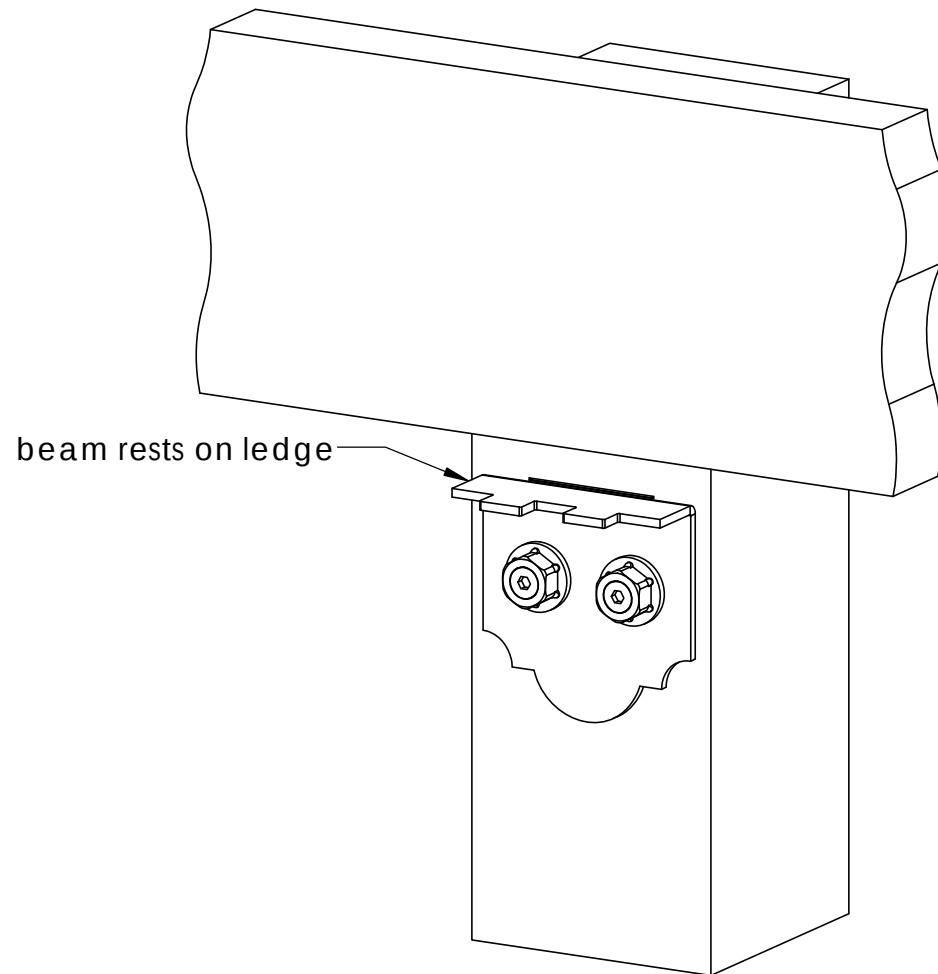

step 3

Installation Instructions, 56610 & 56635

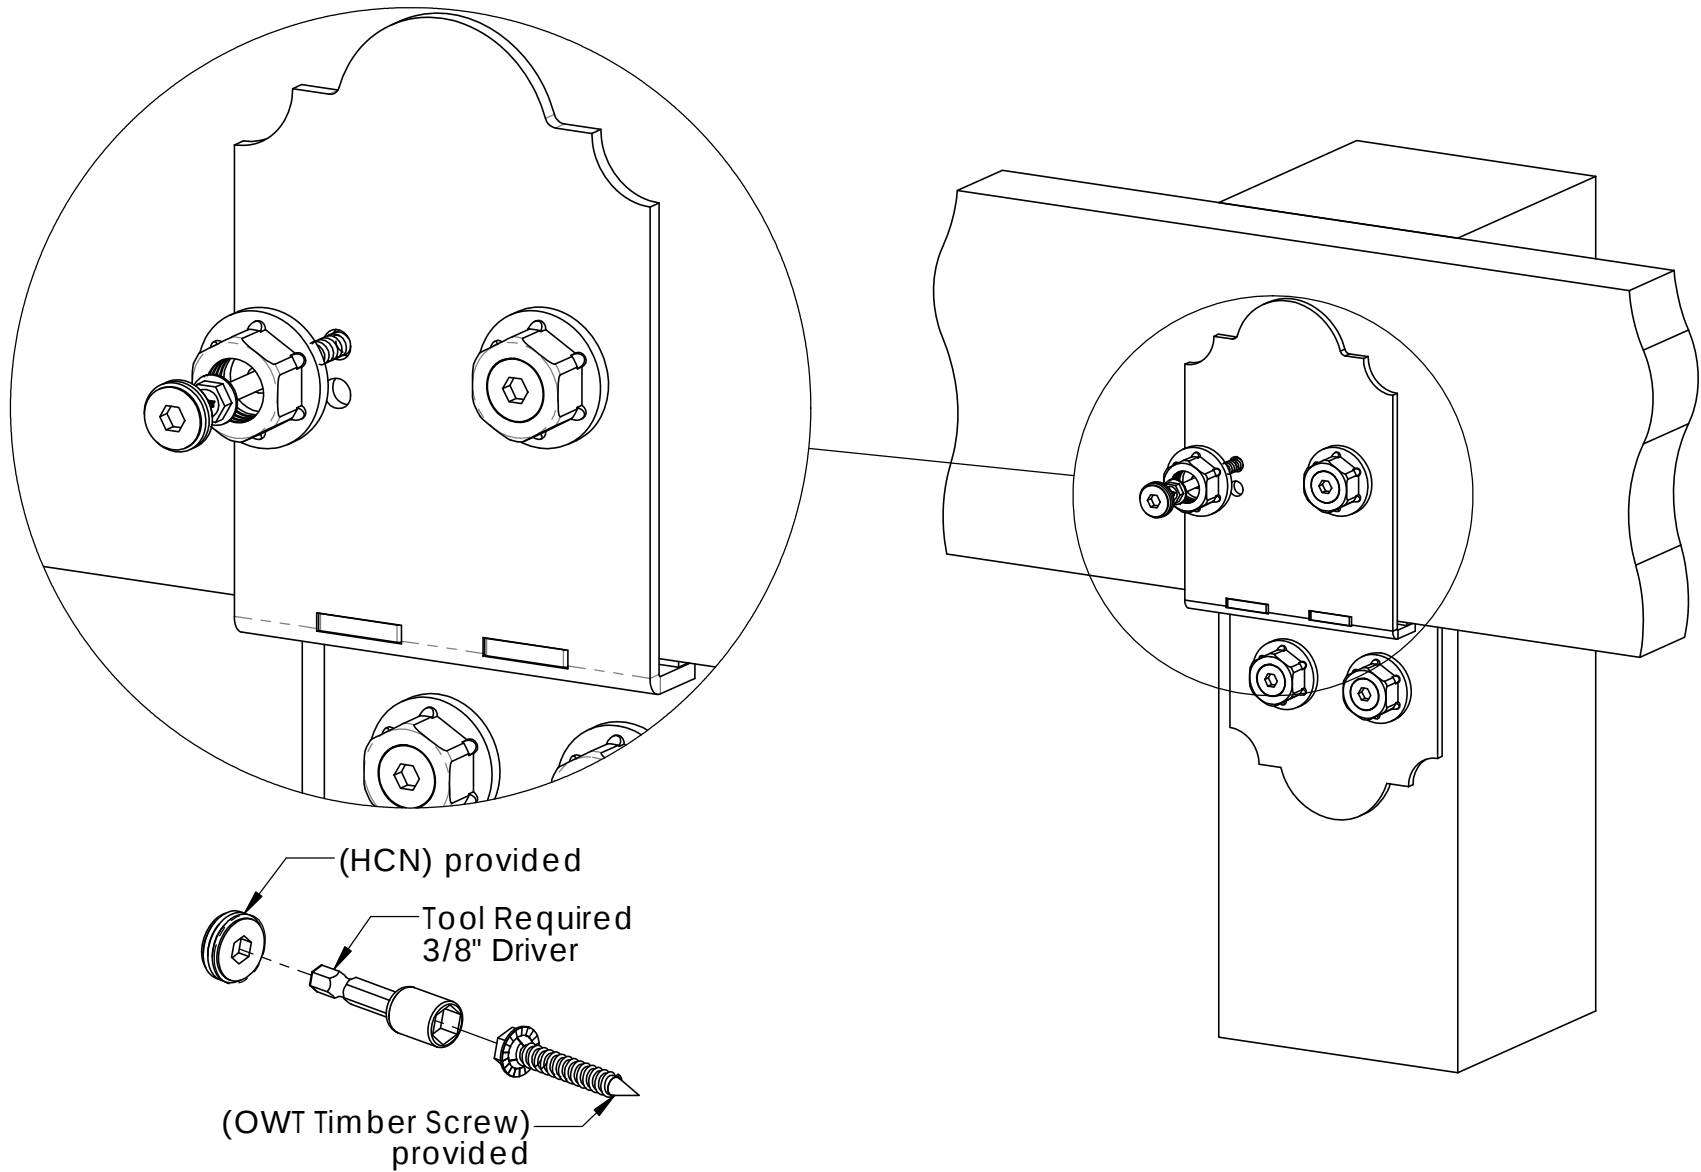

step 4

Installation Instructions, 56610 & 56635