


KING BED

CLAVERYKC / CLAVERYKS / CLAVERYKG

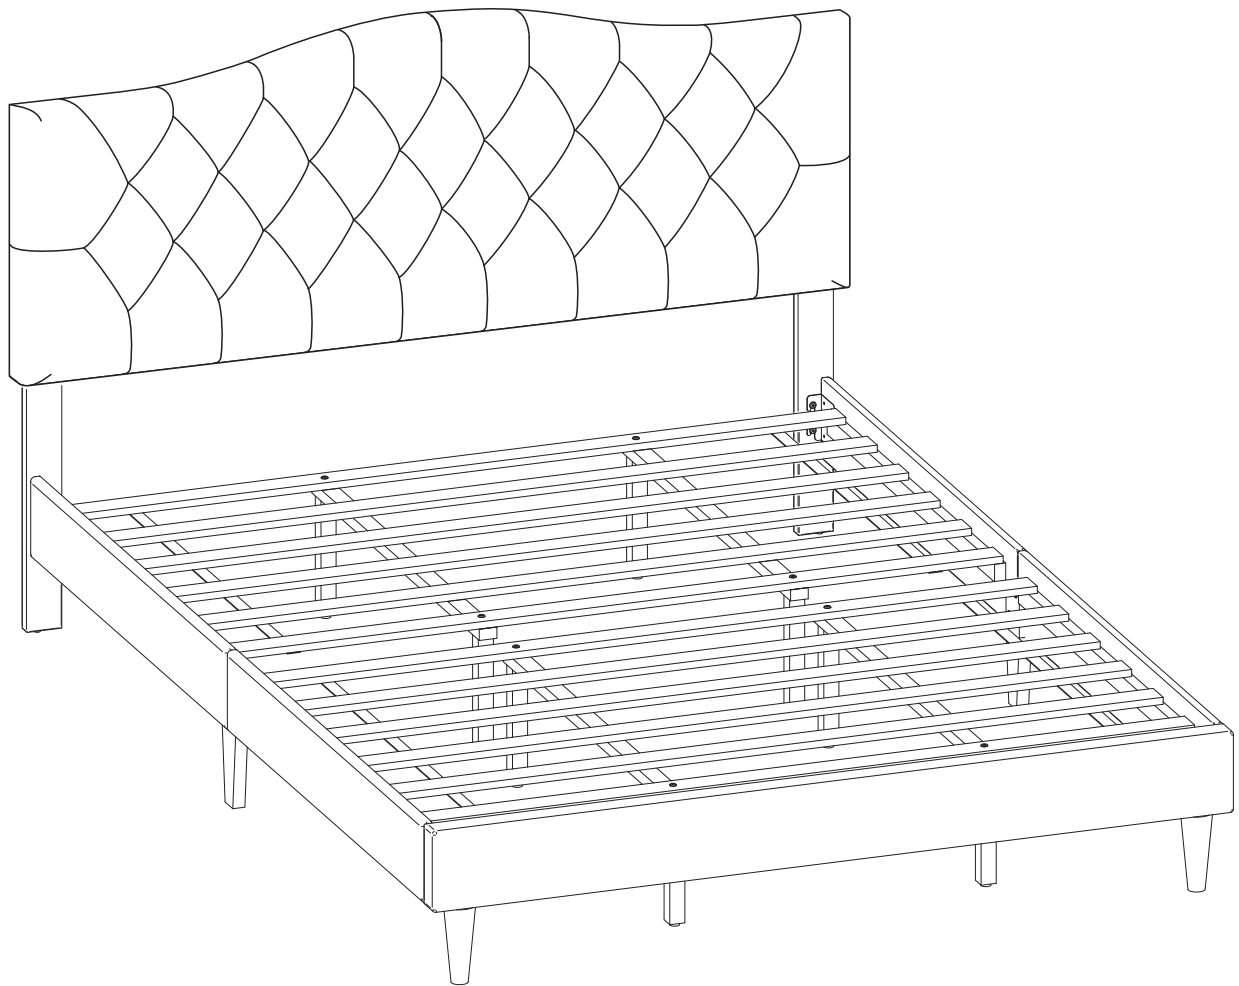

Driftwood Bed



Estimated Time for Assembly

45:00 - 60:00



Weight Limitation

600 lbs

Tools Needed

All necessary tools are included in the package.

(Phillips Screwdriver Not Included)

PLEASE CONTACT US FOR QUESTIONS

Email our support team: service@furnsdirect.com

CAUTION:


Do not attempt to move the bed when fully assembled. This could result in damage to the rails, headboard, or footboard.

When placing furniture on non-carpeted flooring, we recommend the use of floor protection such as an area rug or furniture pads. Area rugs and padding not included with purchase.

PLEASE CONTACT US FOR QUESTIONS

Email our support team: service@furnsdirect.com


Bed Parts are shipped inside a compartment
in the back of the headboard.

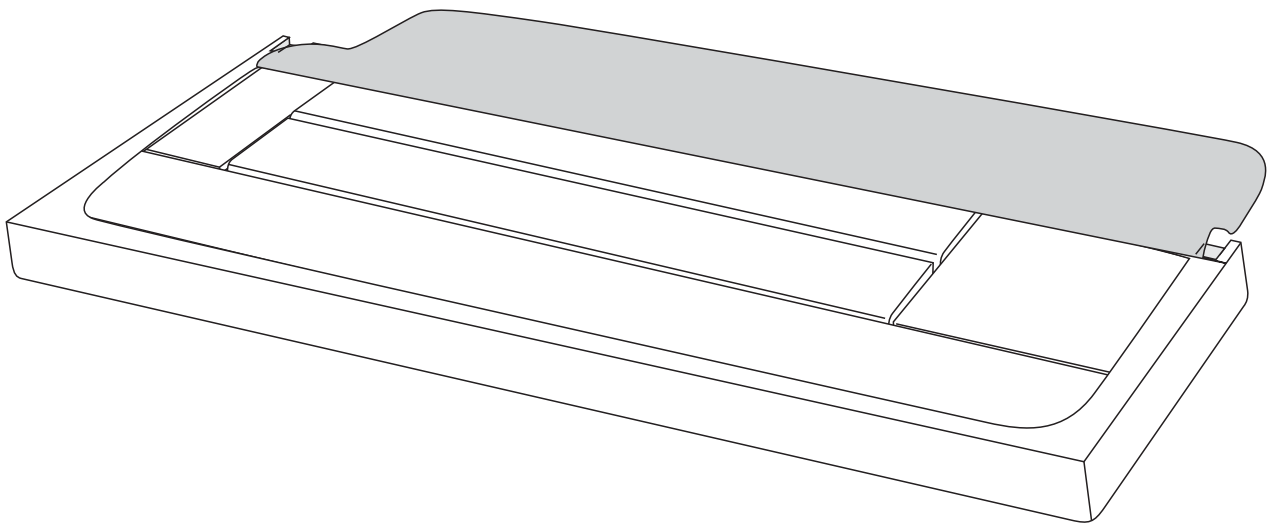

PLEASE CONTACT US FOR QUESTIONS


Email our support team: service@furnsdirect.com

Remove parts from headboard compartment

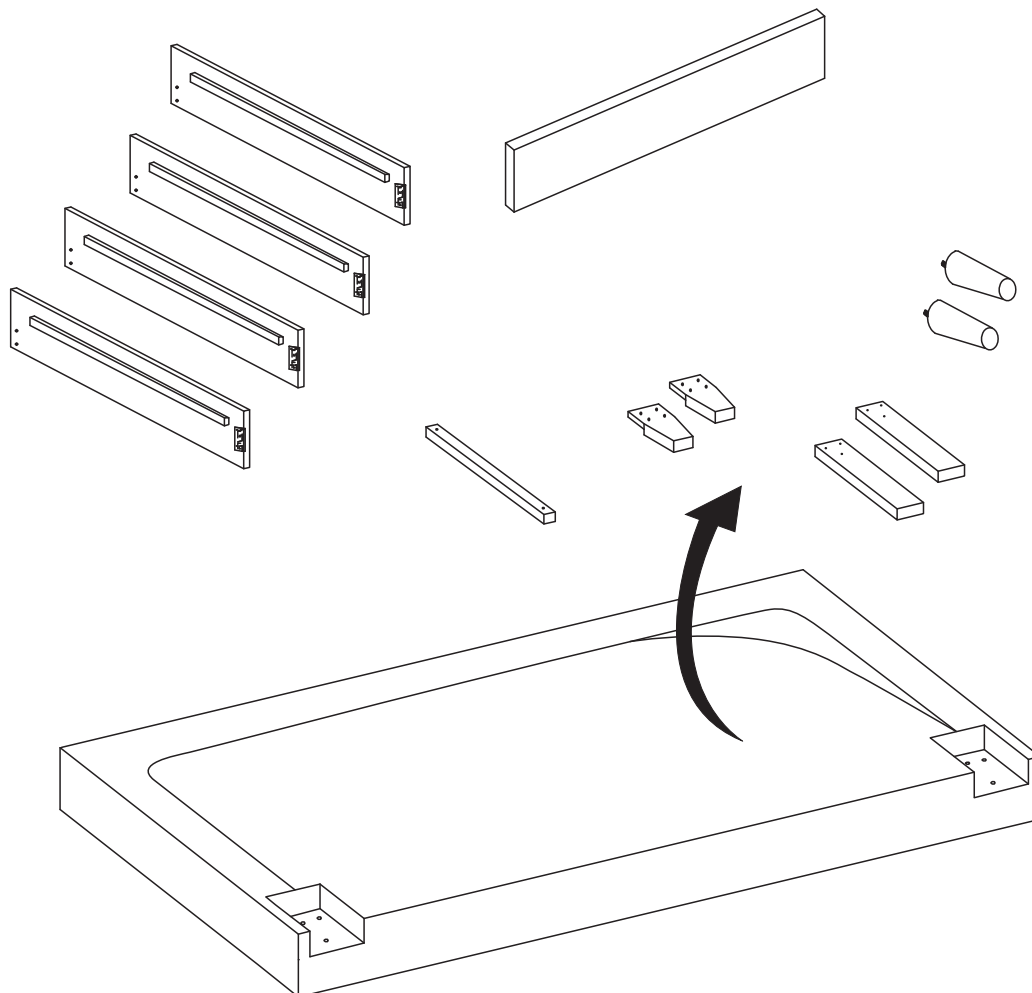


PACKAGE CONTENT

CAUTION:
DO NOT SLIDE BED AFTER
ASSEMBLY. LIFT THE BED FRAME
INTO ITS FINAL POSITION.

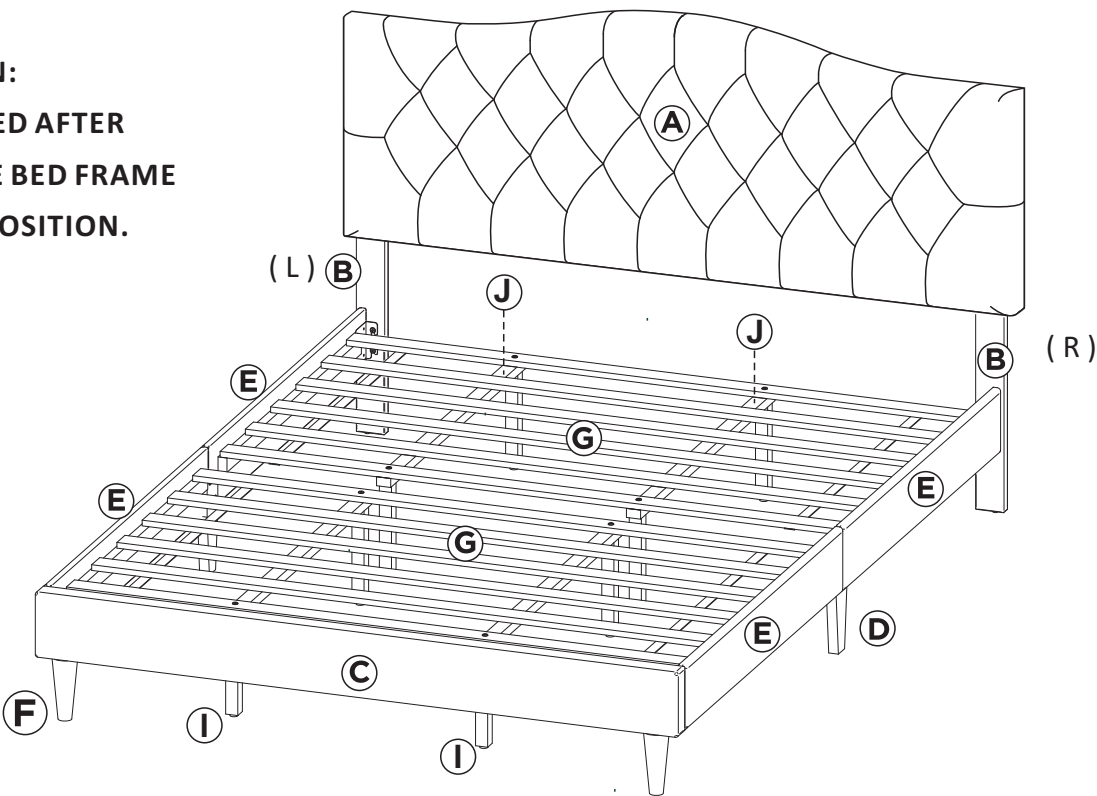


KING BED
CLAVERYKC / CLAVERYKS / CLAVERYKG



Components

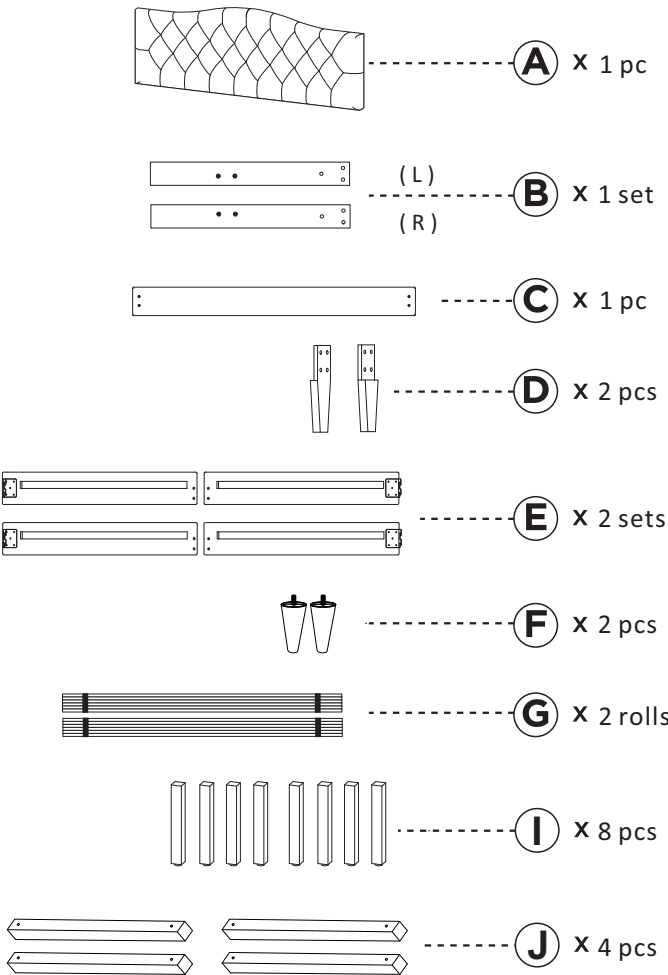


Hardware

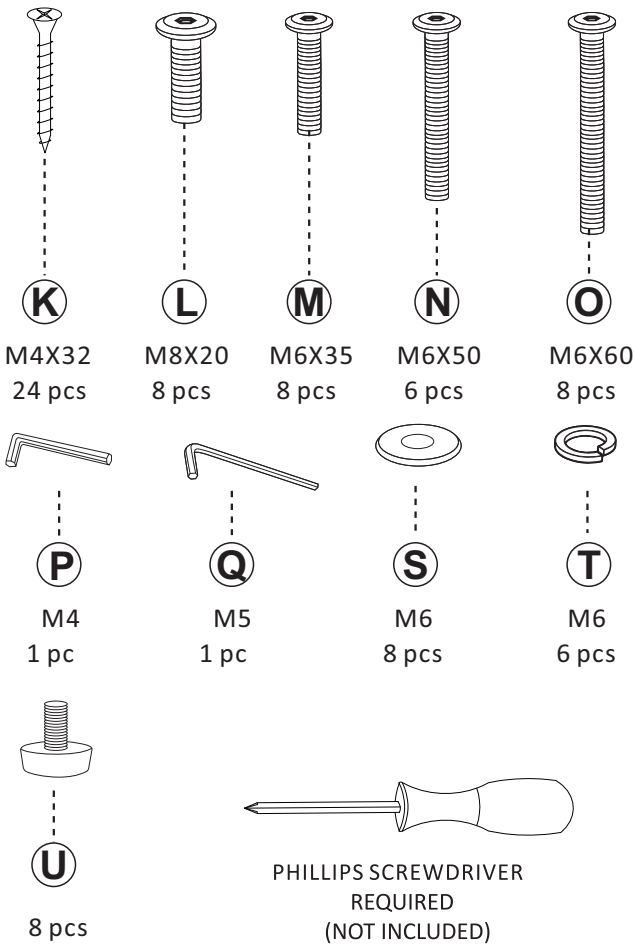



1.

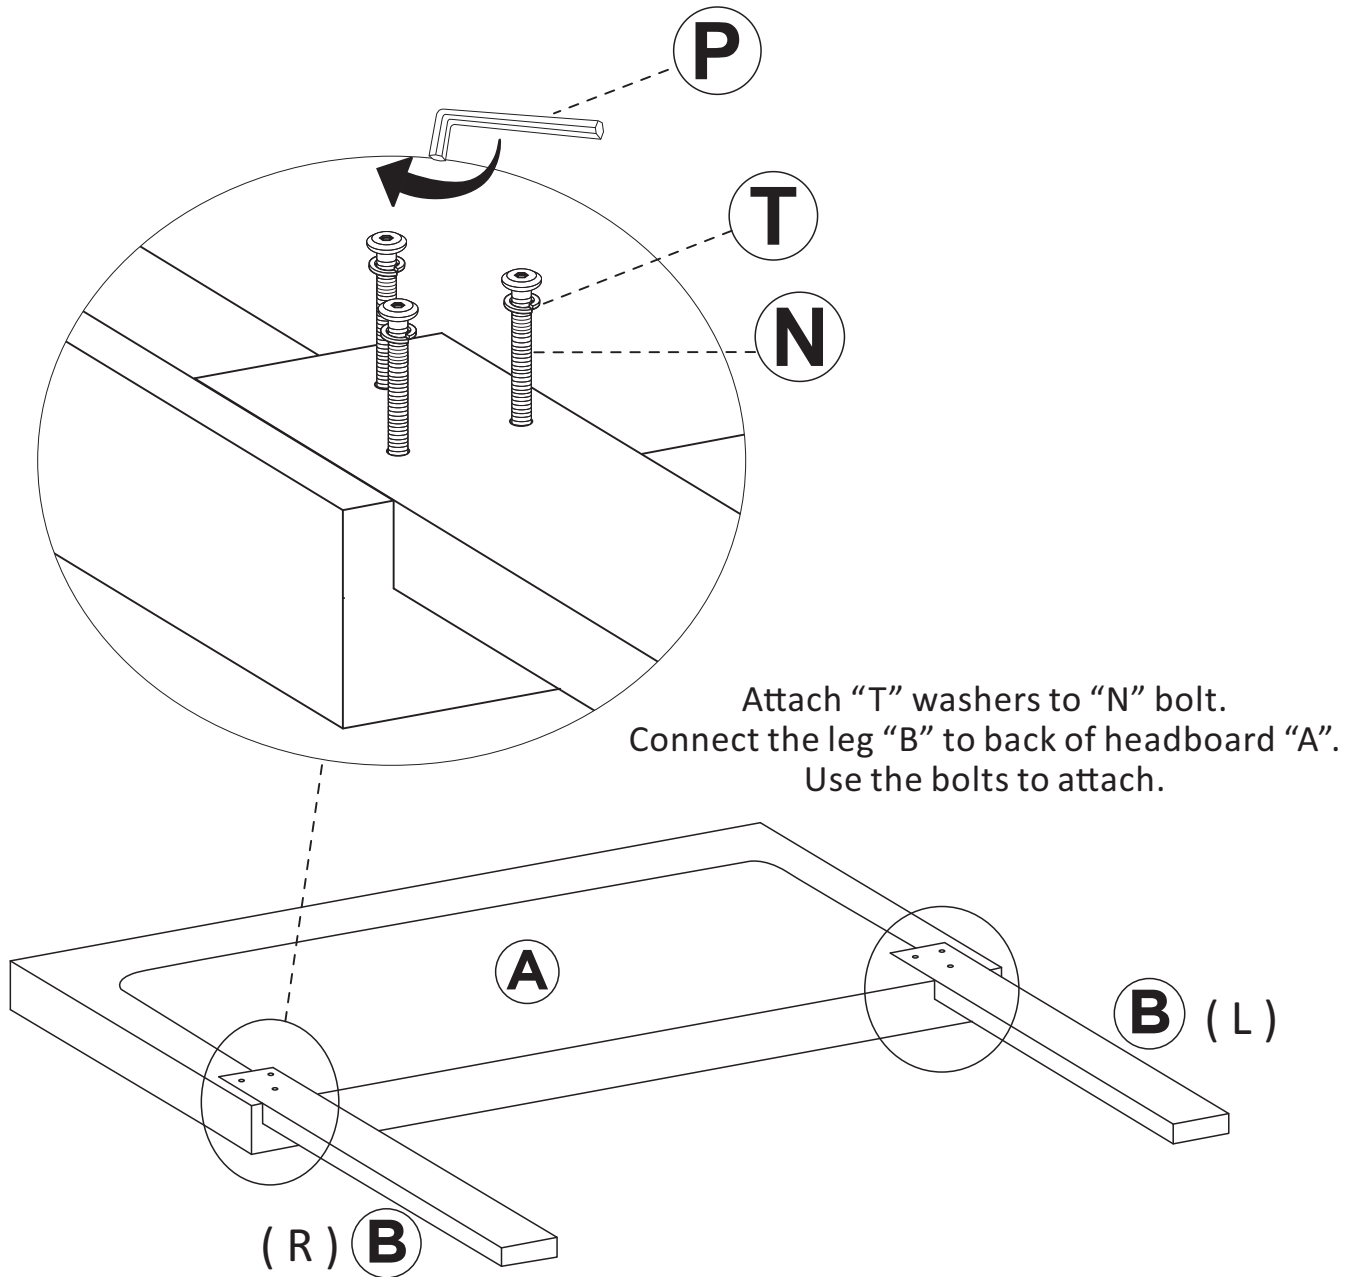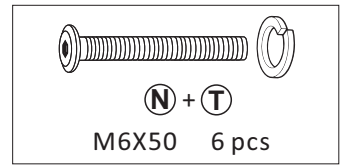



2.

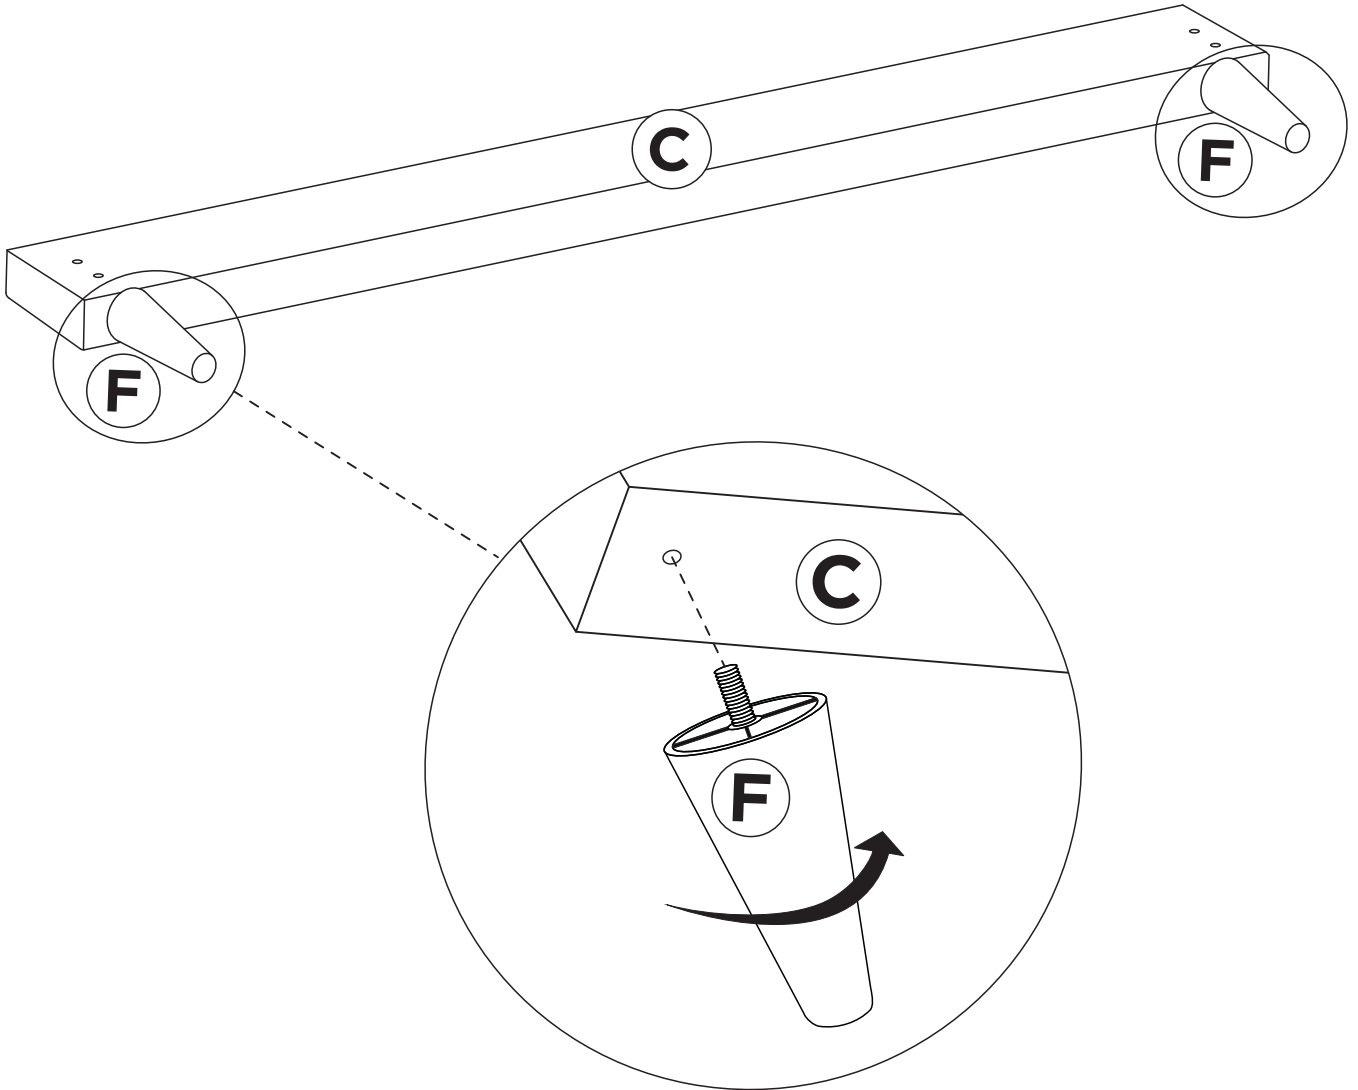

3.

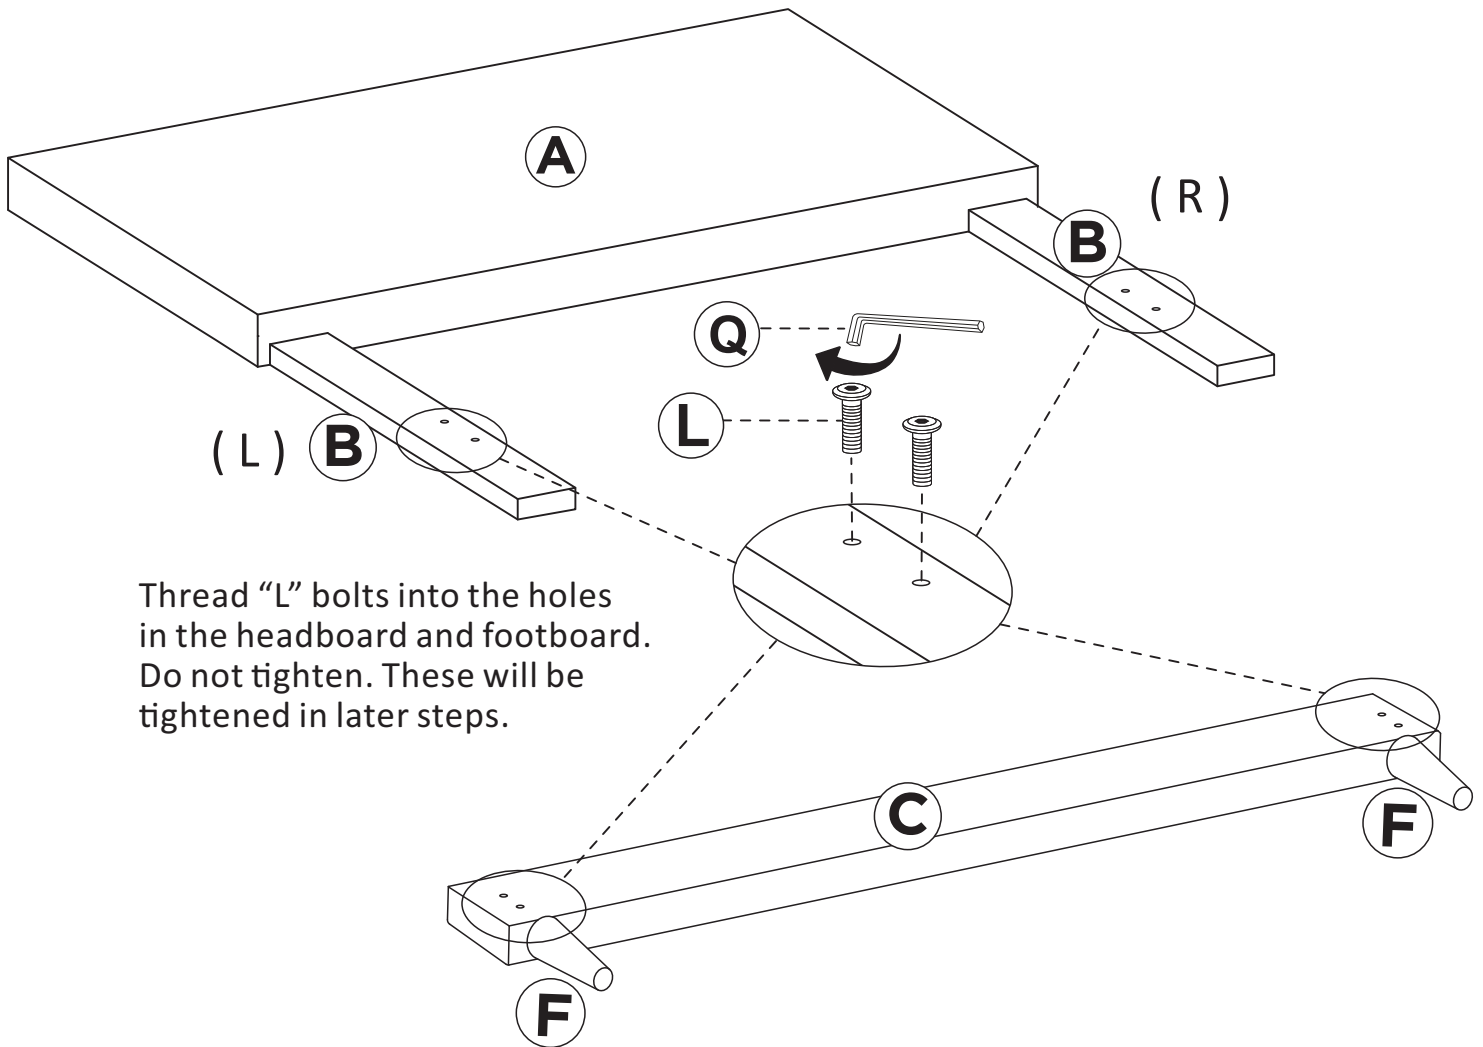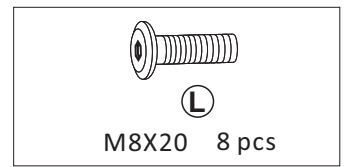

4.

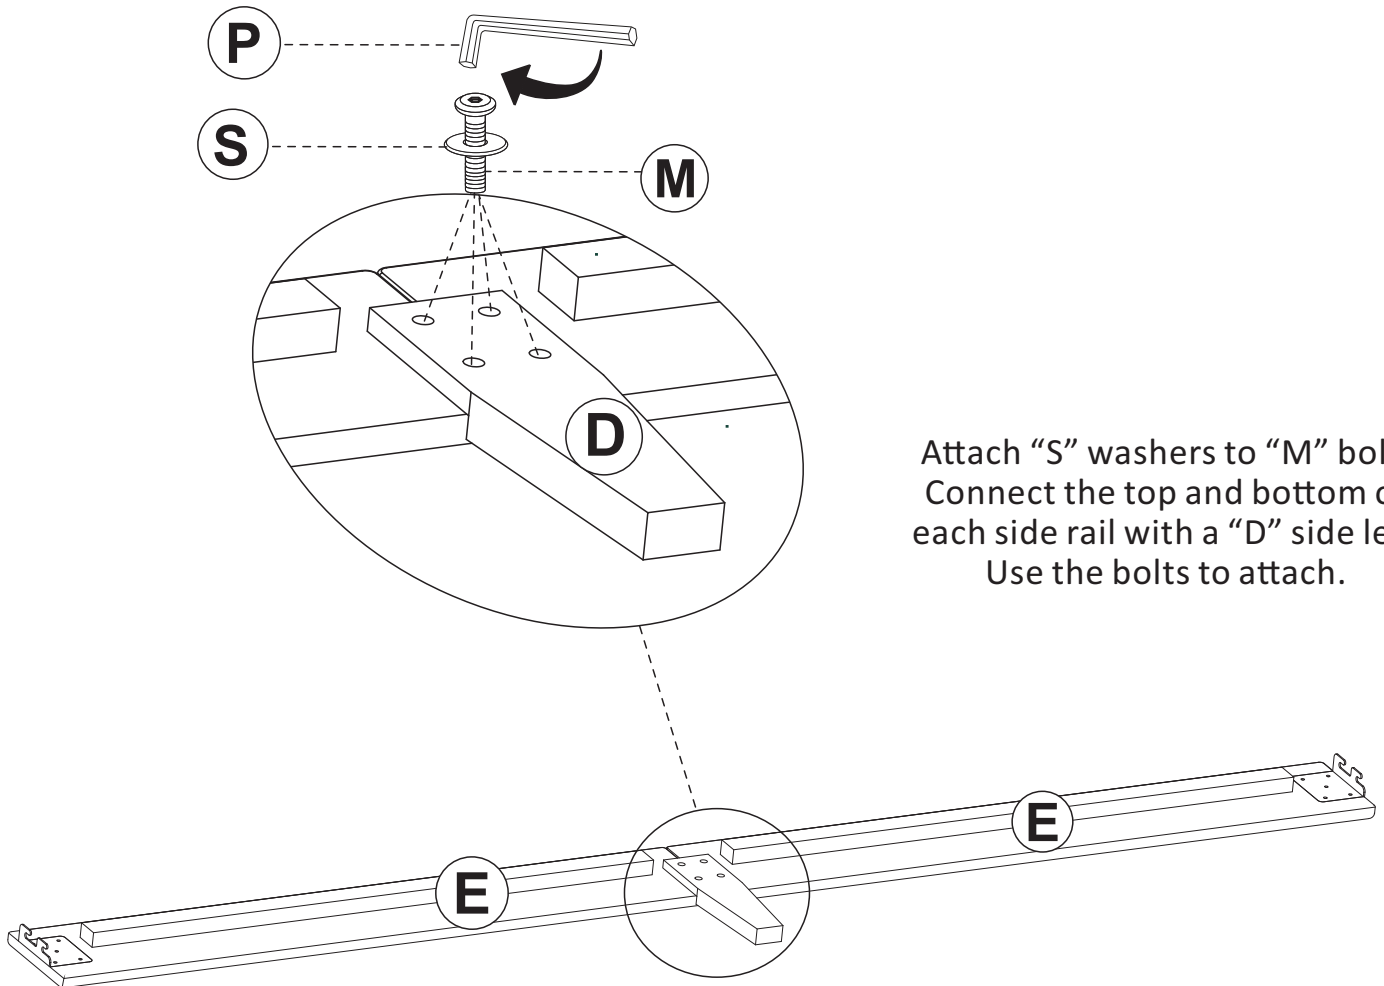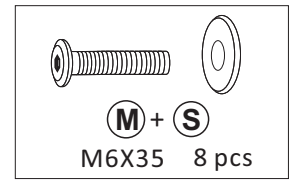


Attach "S" washers to "M" bolt.
Connect the top and bottom of
each side rail with a "D" side leg.
Use the bolts to attach.



Same assembly steps to the second set of side rail.

5.


Hang the hooks at the ends of the side rails onto the “L” bolts in the headboard leg and the footboard. Do not fully tighten the “L” bolts. The bolts will be tightened in a later step.

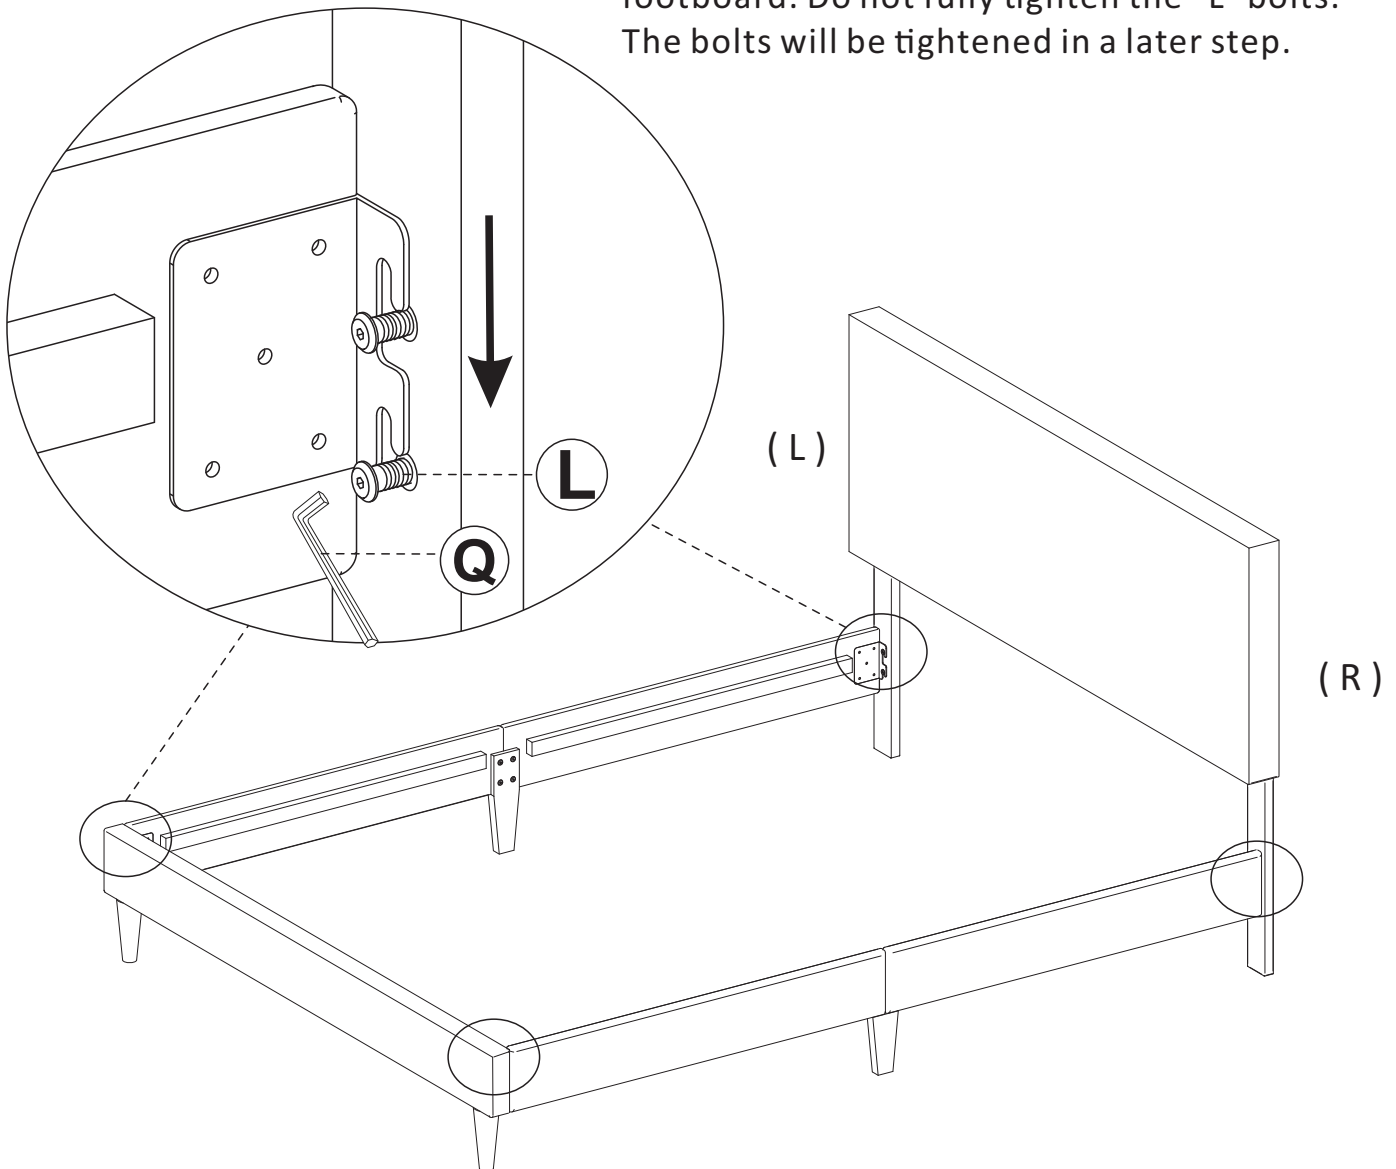

6.

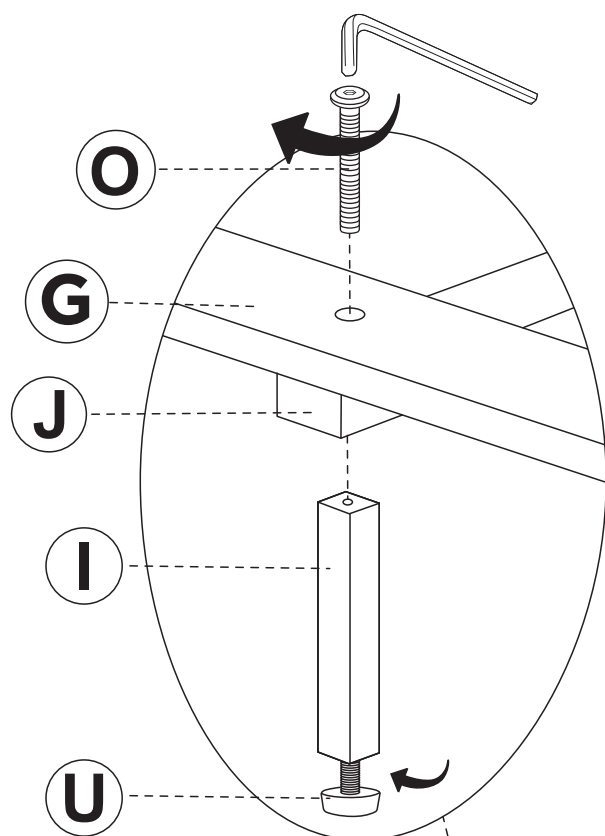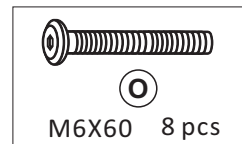


Attach adjustable leveling feet "U" to the bottom of leg "I". Then assemble the slat system by attaching the slats "G" to the "J" supports and "I" legs. First, extend the slats. Then, line up the holes in the slats with the holes in the "J" supports and the holes in the tops of the "I" legs. Use an "O" bolt through the holes to attach them together.

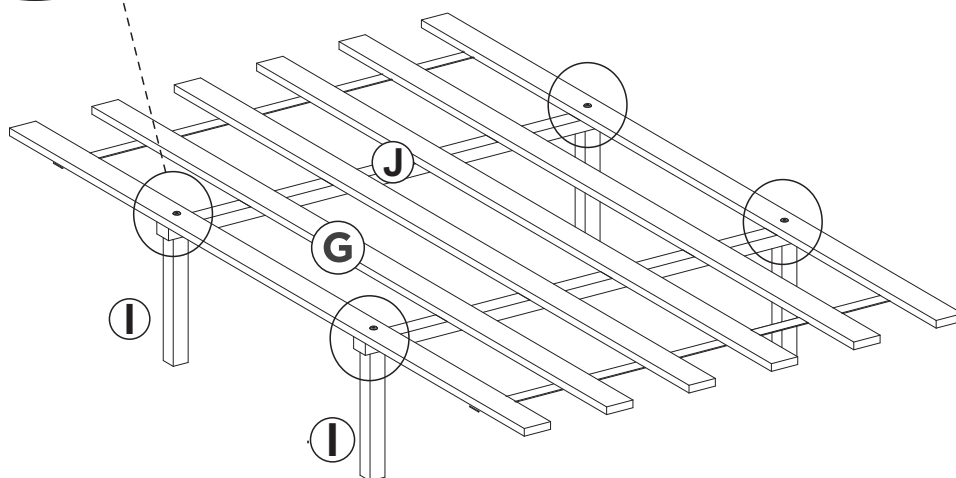

**Same assembly steps
to the second roll slat**


After the slat system is assembled, place the slats into the frame of the bed as shown next page.

7.



(K)

M4X32 24 pcs

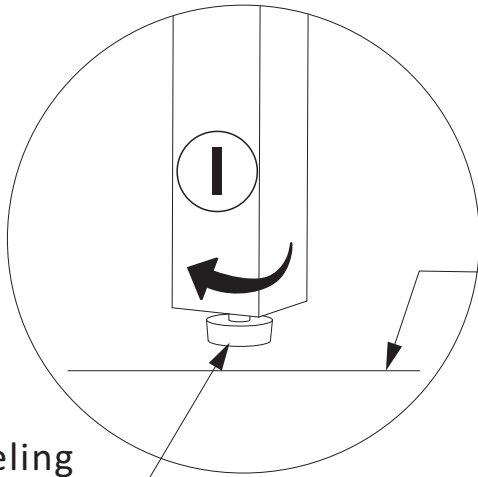



Floor line

Leveling
feet "U"

Then, adjust slat leveling feet on the bottom of leg "I" to a distance 1/2" above the floor.

Then, use screwdriver to
install "K" screws into
side rail cleat

(K)

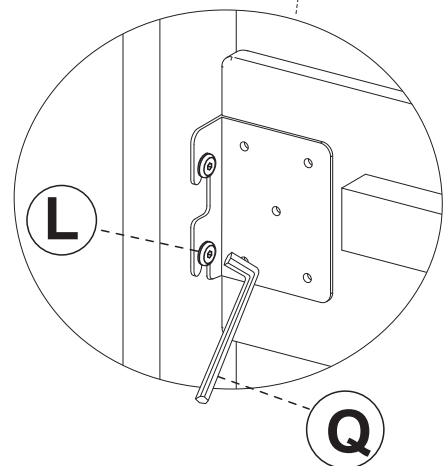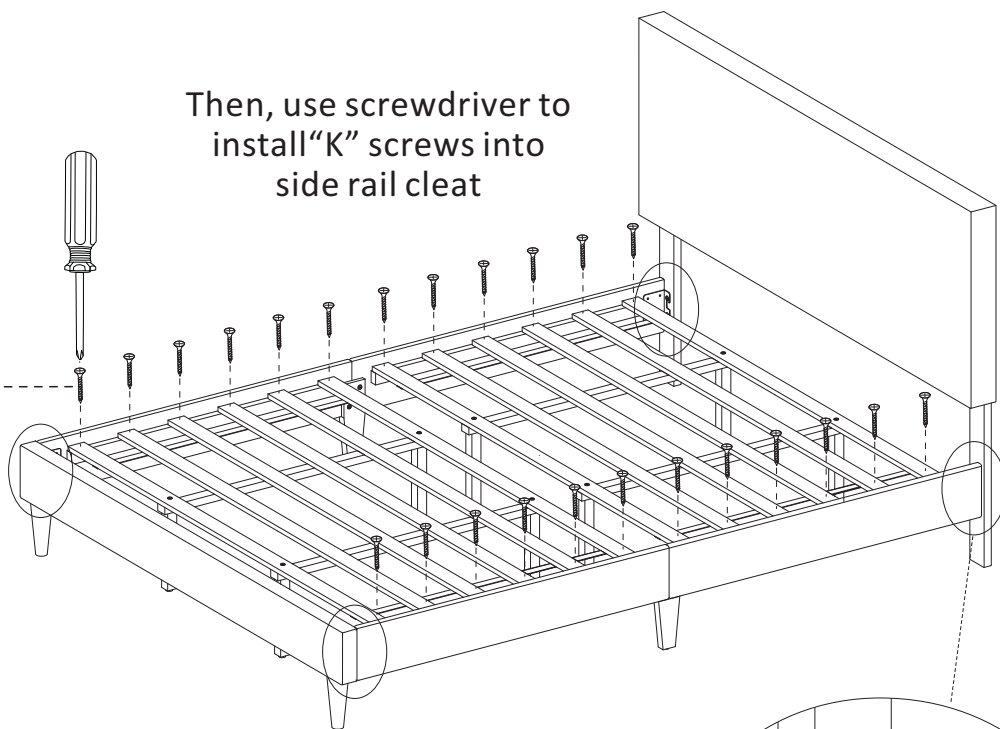

Finally, tighten all "L" bolts.

FINISH !

FOR ADDITIONAL HELP:

Email our support team: service@furnsdirect.com

THANK YOU FOR PURCHASING !