
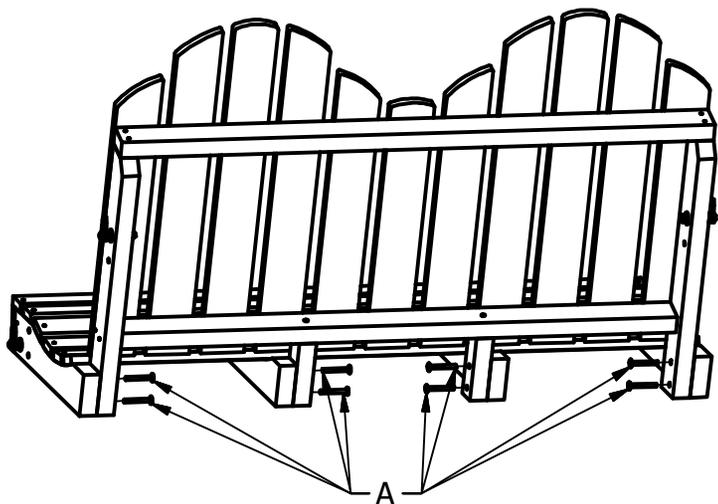


Adirondack Collection



Classic Westport Porch Swing

Assembly Guide

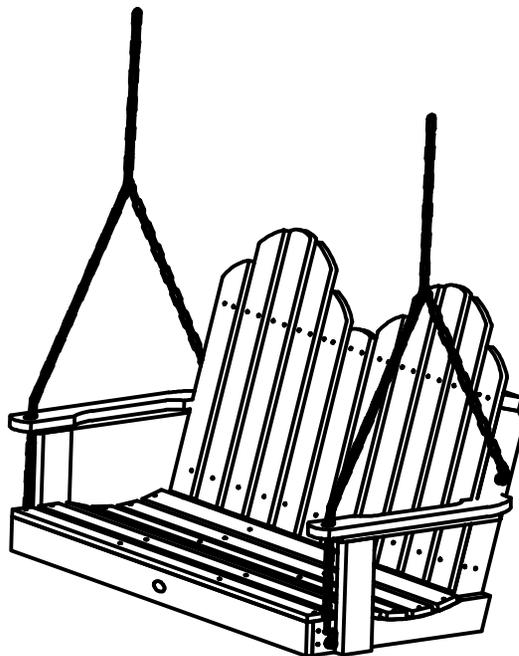

- 1) Using Two A Bolts on each side, attach Swing Back to Swing Seat.
- 2) Using Two A Bolts for each brace, attach Back Braces to Swing Seat.

HARDWARE

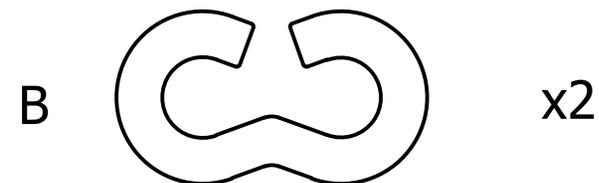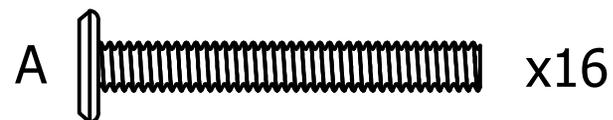


IMPORTANT!

DO NOT fully tighten the bolts until all bolts are started. Once all bolts are inserted, go back & tighten all the bolts.

Retain these instructions for future reference


INCLUDED TOOLS

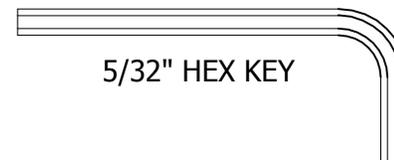



Adirondack Collection

Classic Westport Porch Swing

Assembly Guide

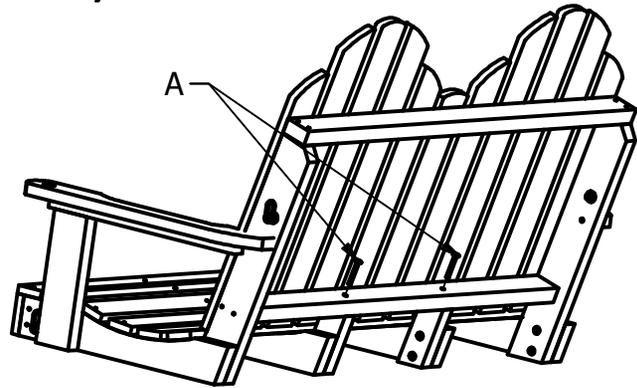

- 3) Attach Back Braces to Swing Back with Two A Bolts.
- 4) Attach Arm Assembly to Swing Seat using Two A Bolts in the front. Attach Swing Back to Arm using One A Bolt.
- 5) Repeat on other side.

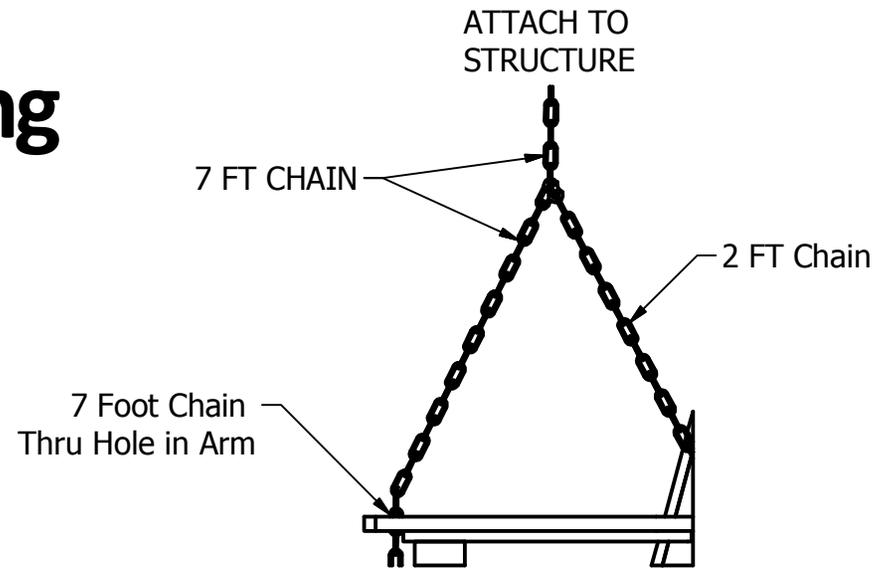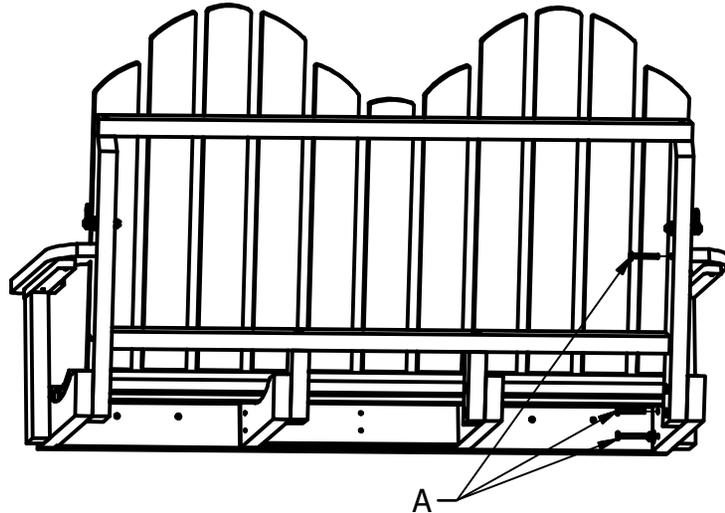

- 6) Attach Chain Connector B to End of 2 Foot Chain.
- 7) Guide 7 Foot Chain Thru Hole in Arm and Attach other End of Chain Connector B to 7 Foot Chain so that Arm is Level as shown.
- 8) Repeat on Other Side.
- 9) Attach Ends of 7 Foot Chain to Structure.

