


HOME DECORATORS COLLECTION

BF-25323 FREMONT DOUBLE VANITY 34"Hx72"Wx22"D

INV#29439

ASSEMBLY INSTRUCTIONS

Made In China

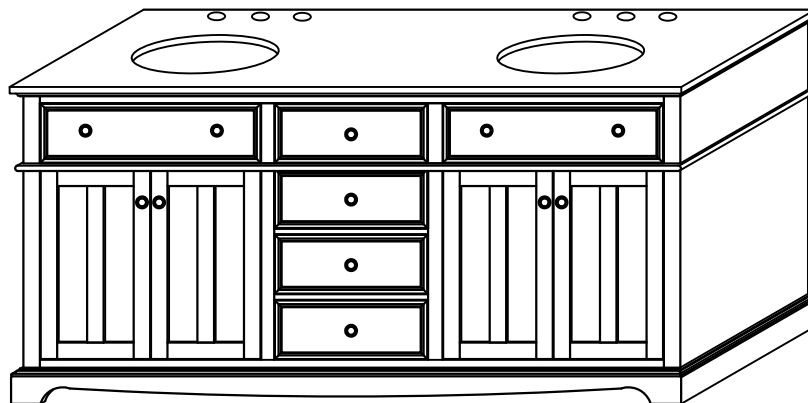

PRODUCT SPECIFICATION:


- NATURAL GRANITE TOP PRE-ASSEMBLED
- (72W x 22D x 34.1H) INCH
- N.W.: 264.6LBS G.W.: 292.1LBS

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.





IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

NOTE: ● UPON OPENING THOROUGHLY CLEAN ALL WOOD SURFACES WITH FURNITURE POLISH TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST THREE PEOPLE.


STRUCTURAL DIAGRAM

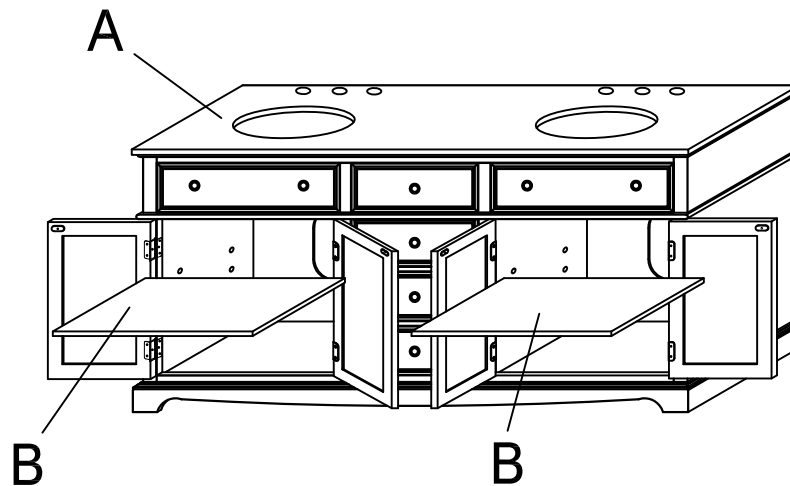

PARTS LIST

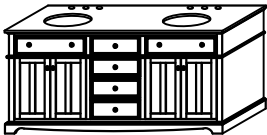
<p>A</p>  <p>CABINET-1PC</p>	<p>B</p>  <p>SHELVES-2PCS</p>	<p>C</p>  <p>SHELF SUPPORTS-8PCS</p>	<p>D</p>  <p>FEET-6PCS</p>
--	---	---	--

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

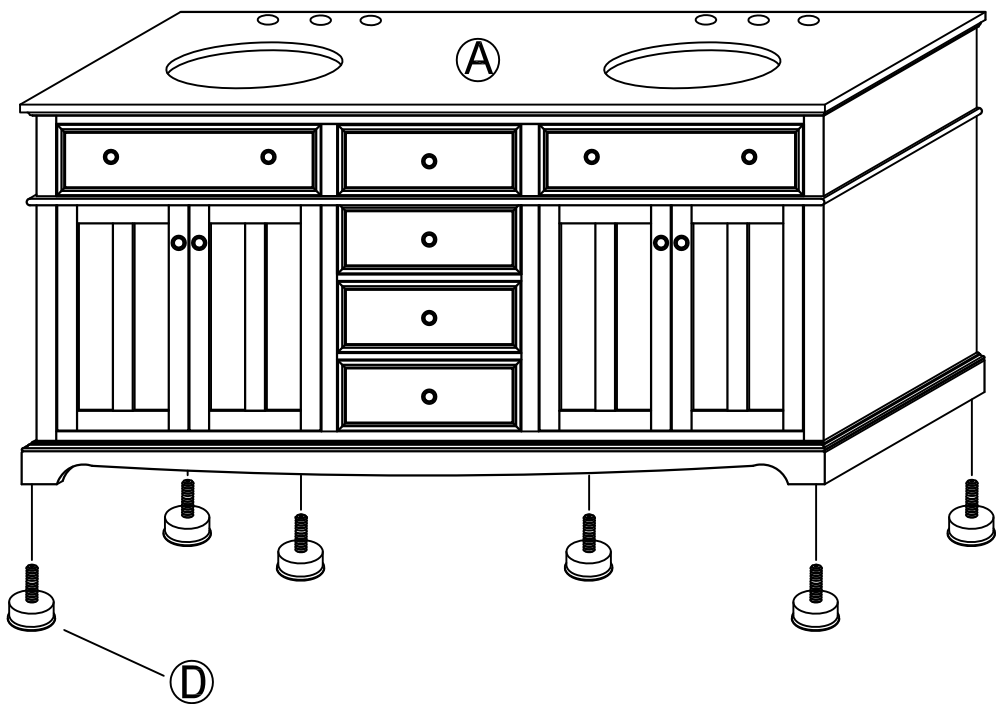


1) . ASSEMBLE THE FEET(D) .

- ROTATE 6 FEET(D) INTO THE HOLES IN THE CABINET(A) .

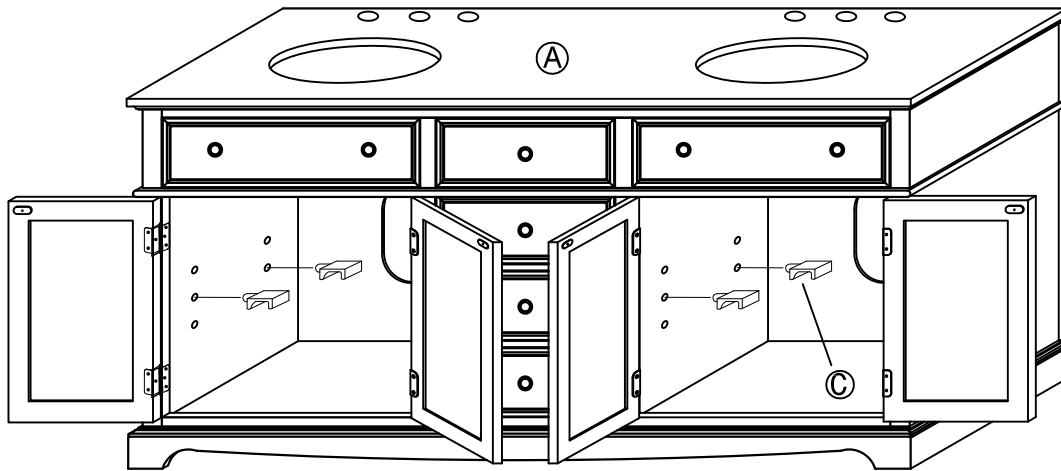

2) . ASSEMBLE THE SHELF SUPPORTS(C) .

- INSERT 8 SHELF SUPPORTS(C) INTO THE HOLES IN THE CABINET(A) .

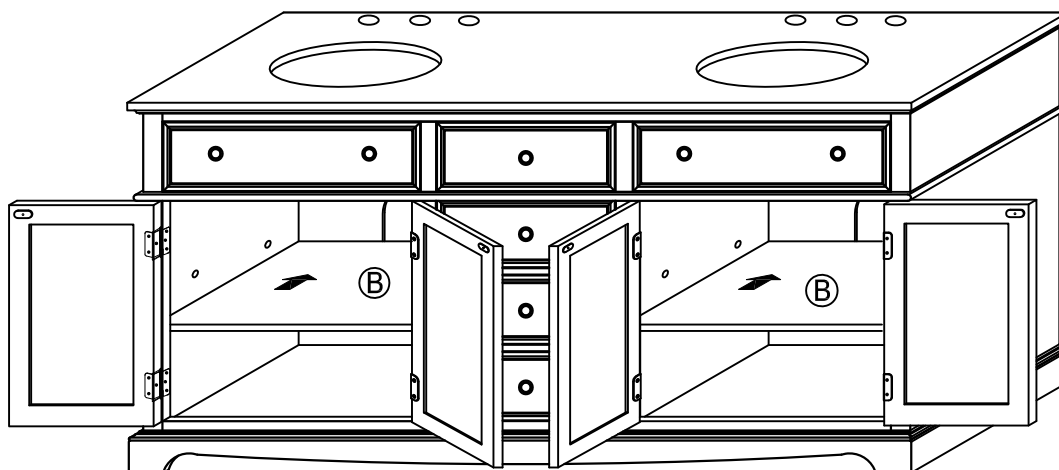

3) . ASSEMBLE THE SHELVES(B) .

- PUT THE SHELVES(B) ONTO THE SHELF SUPPORTS(C) .