


# BUBBLE WINDOW WELL COVER

## INSTALLATION INSTRUCTIONS

### WHAT YOU NEED

Attachment anchors (not included)

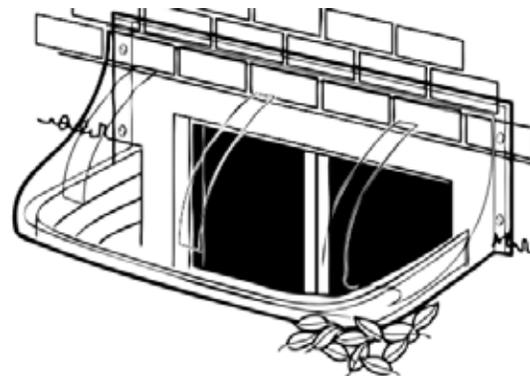

### INSTALLATION

1. Place cover over window well
2. Drill (2) mounting holes on both sides of the window well cover through the plastic flanges. Mark anchor hole locations on both sides of the window.
3. Determine length and type of anchor screws required.
4. Remove window well cover and drill anchor holes to proper sizes.
5. Position cover over window aligning holes with anchors.
6. Secure the window well cover to the wall using anchors. If gaps occur, they may be filled in with caulk. *NOTE: Make sure to maintain sufficient ventilation to allow moisture to escape.*

### CLEANING INSTRUCTIONS

Clean your window well cover with a mild solution detergent and water. Use of harsh chemicals or solvents may damage plastic and void warranty.

