

A close-up photograph of a wooden deck board. A black plastic grid underlayment is partially installed under the board. A yellow square marker is placed on the wood surface. The text 'DECK-A-FLOOR' is overlaid at the top.

DECK-A-FLOOR

Engineered by NewTechWood. Designed by You.

Installation Guidelines

Legend

For an easier read and explanation we have taken the parts of the kit for this installation guide and used symbols to denote them.

Components in 1 Kit

Symbol

12 x  Snap Clips


> Snap Clip in the horizontal direction

4 x  Locking Inserts

^ Snap Clip in the vertical direction

4 x  Capped Composite Timbers

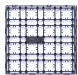

3 x  Grids



1 x  Gap Spacer

For spacing the ends of each timber evenly



4 x  Butt Joint Clips





Installation

Below shows an example of a one (1) kit installation, please refer to the legend if you forget which symbols represent which parts. Design paper can be downloaded from our website at www.newtechwood.com to draw out your layout before installation.


Step 1. Lay the grids on a flat solid surface

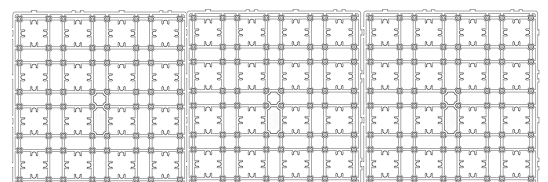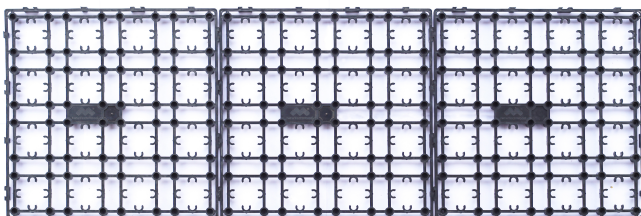

Step 2. Insert the accessories

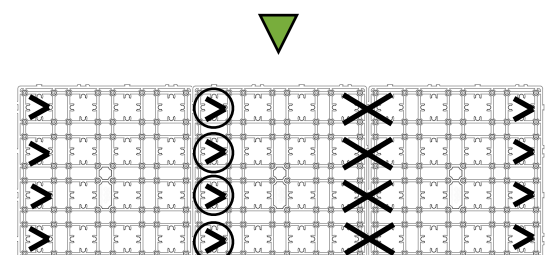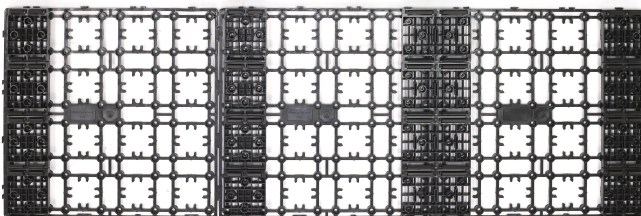

Step 3. Snap in the timbers and your DONE!!

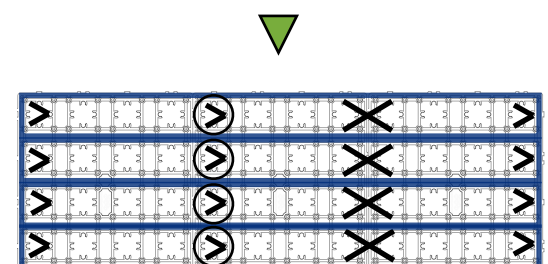

DECK-A-FLOOR


Engineered by NewTechWood. Designed by You.

Components in 1 Kit

Installation Guidelines


4

Locking Inserts


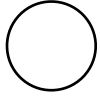


Actual


Symbol

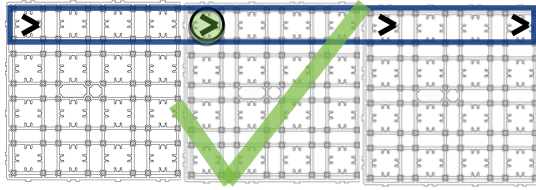

Locking insert in the middle of the timber

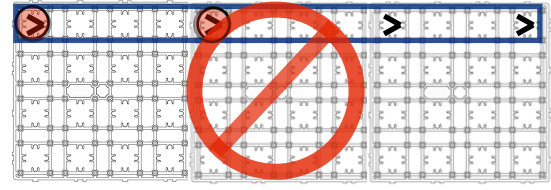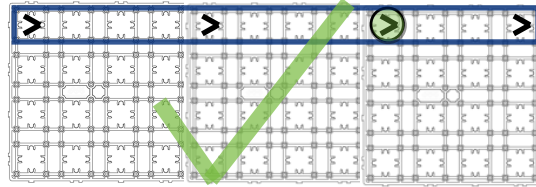



More than two locking inserts per timber

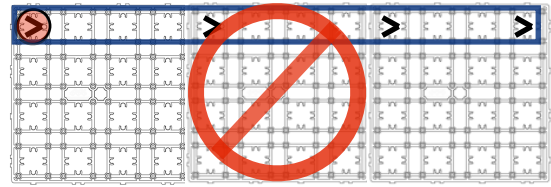

Locking insert at the end of timber


3

Grids

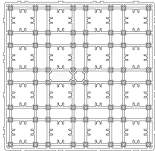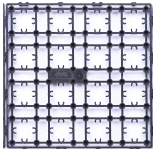


Actual

Symbol

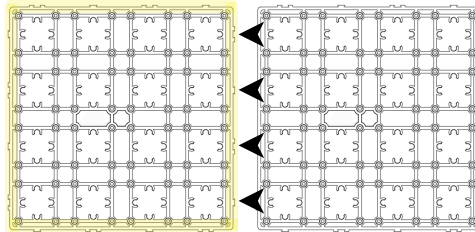

4 interlocking sides highlighted in yellow

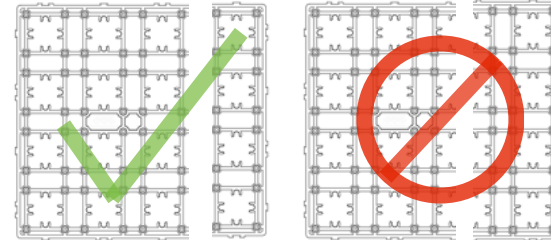

Cutting grids the same width as boards


12

Snap Clips




Actual

Symbol

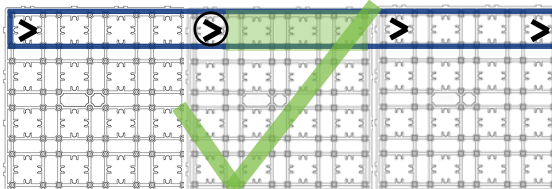


Snap Clips at a maximum distance of three (3) holes away

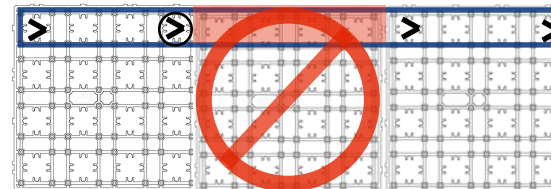

Snap Clips not at a maximum distance of three (3) holes away


4

Butt Joint Clips

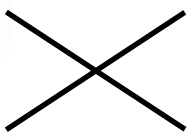


Actual

Symbol

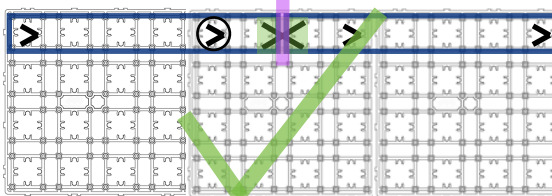

Connecting two timbers on the same clip and using the Gap Spacer to space them evenly

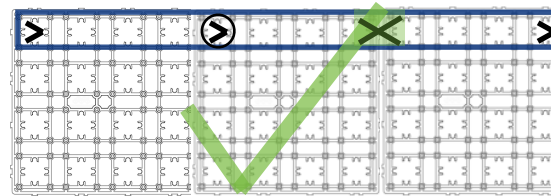

Using the butt joint clip as a snap clip

DECK-A-FLOOR

Engineered by NewTechWood. Designed by You.

Components in 1 Kit

Installation Guidelines (Cont.)


1

Gap Spacer




Actual

Symbol

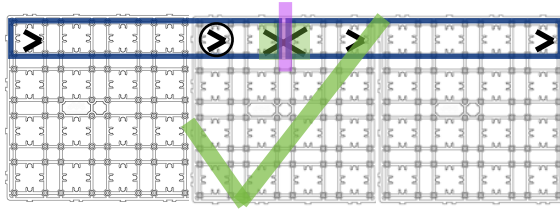

Two timbers being spaced evenly with the Gap Spacer

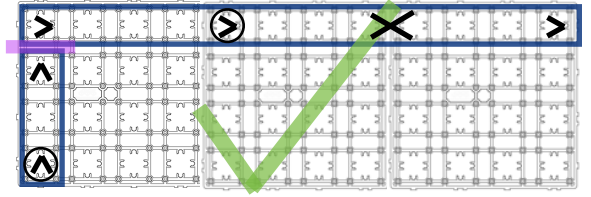

A timber in the horizontal direction and a timber in the vertical direction being spaced evenly by the Gap Spacer

DECK-A-FLOOR


Engineered by NewTechWood. Designed by You.

Visit www.newtechwood.com for a detailed installation guide. Call us at 1-866-728-5273


Patterns / Layouts

Below shows some examples of what kind of patterns/layouts can be completed with the Deck-A-Floor.

Border / Picture Frame

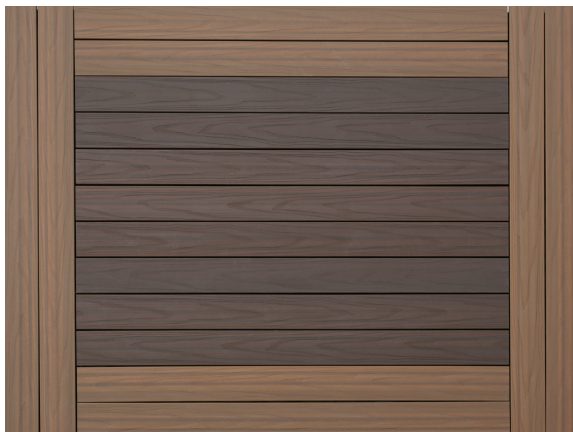


Starting Corner

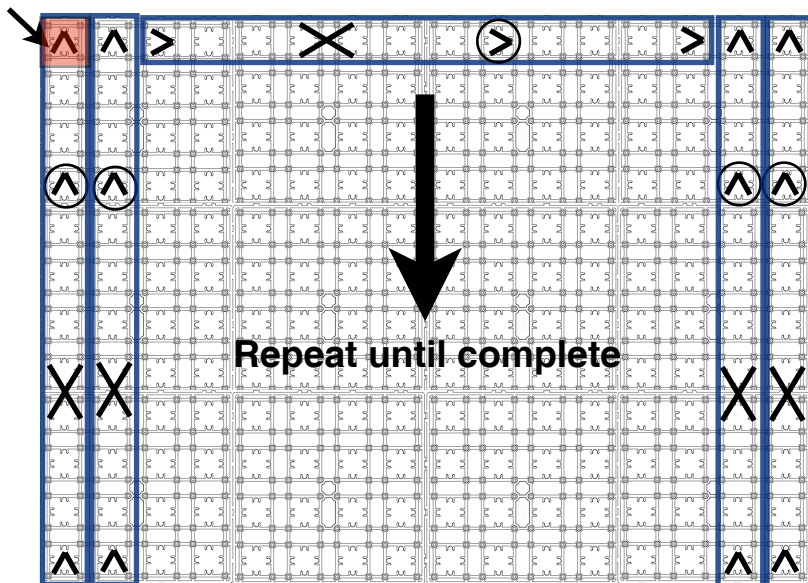


Brick Layout




Starting Corner

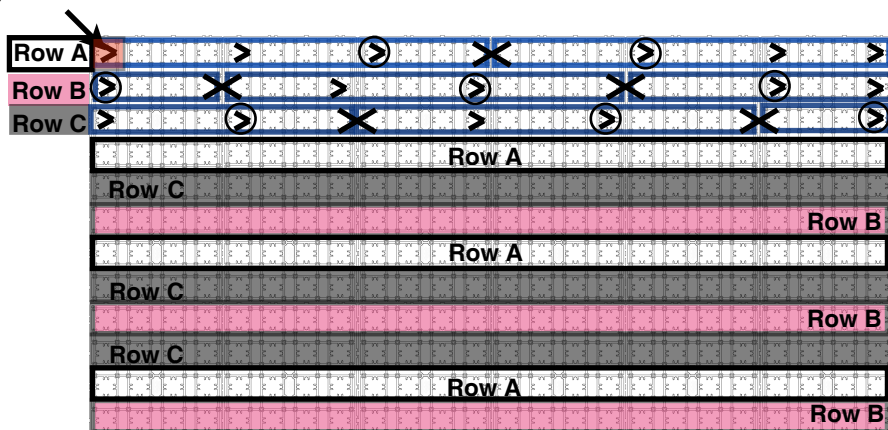

Straight Layout

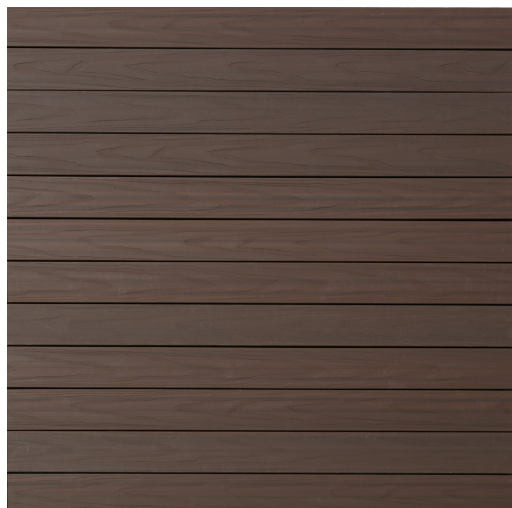


Starting Corner

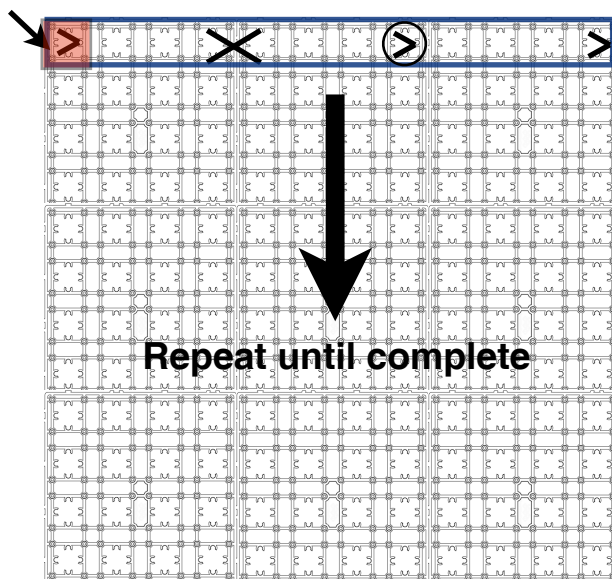

DECK-A-FLOOR

Engineered by NewTechWood. Designed by You.

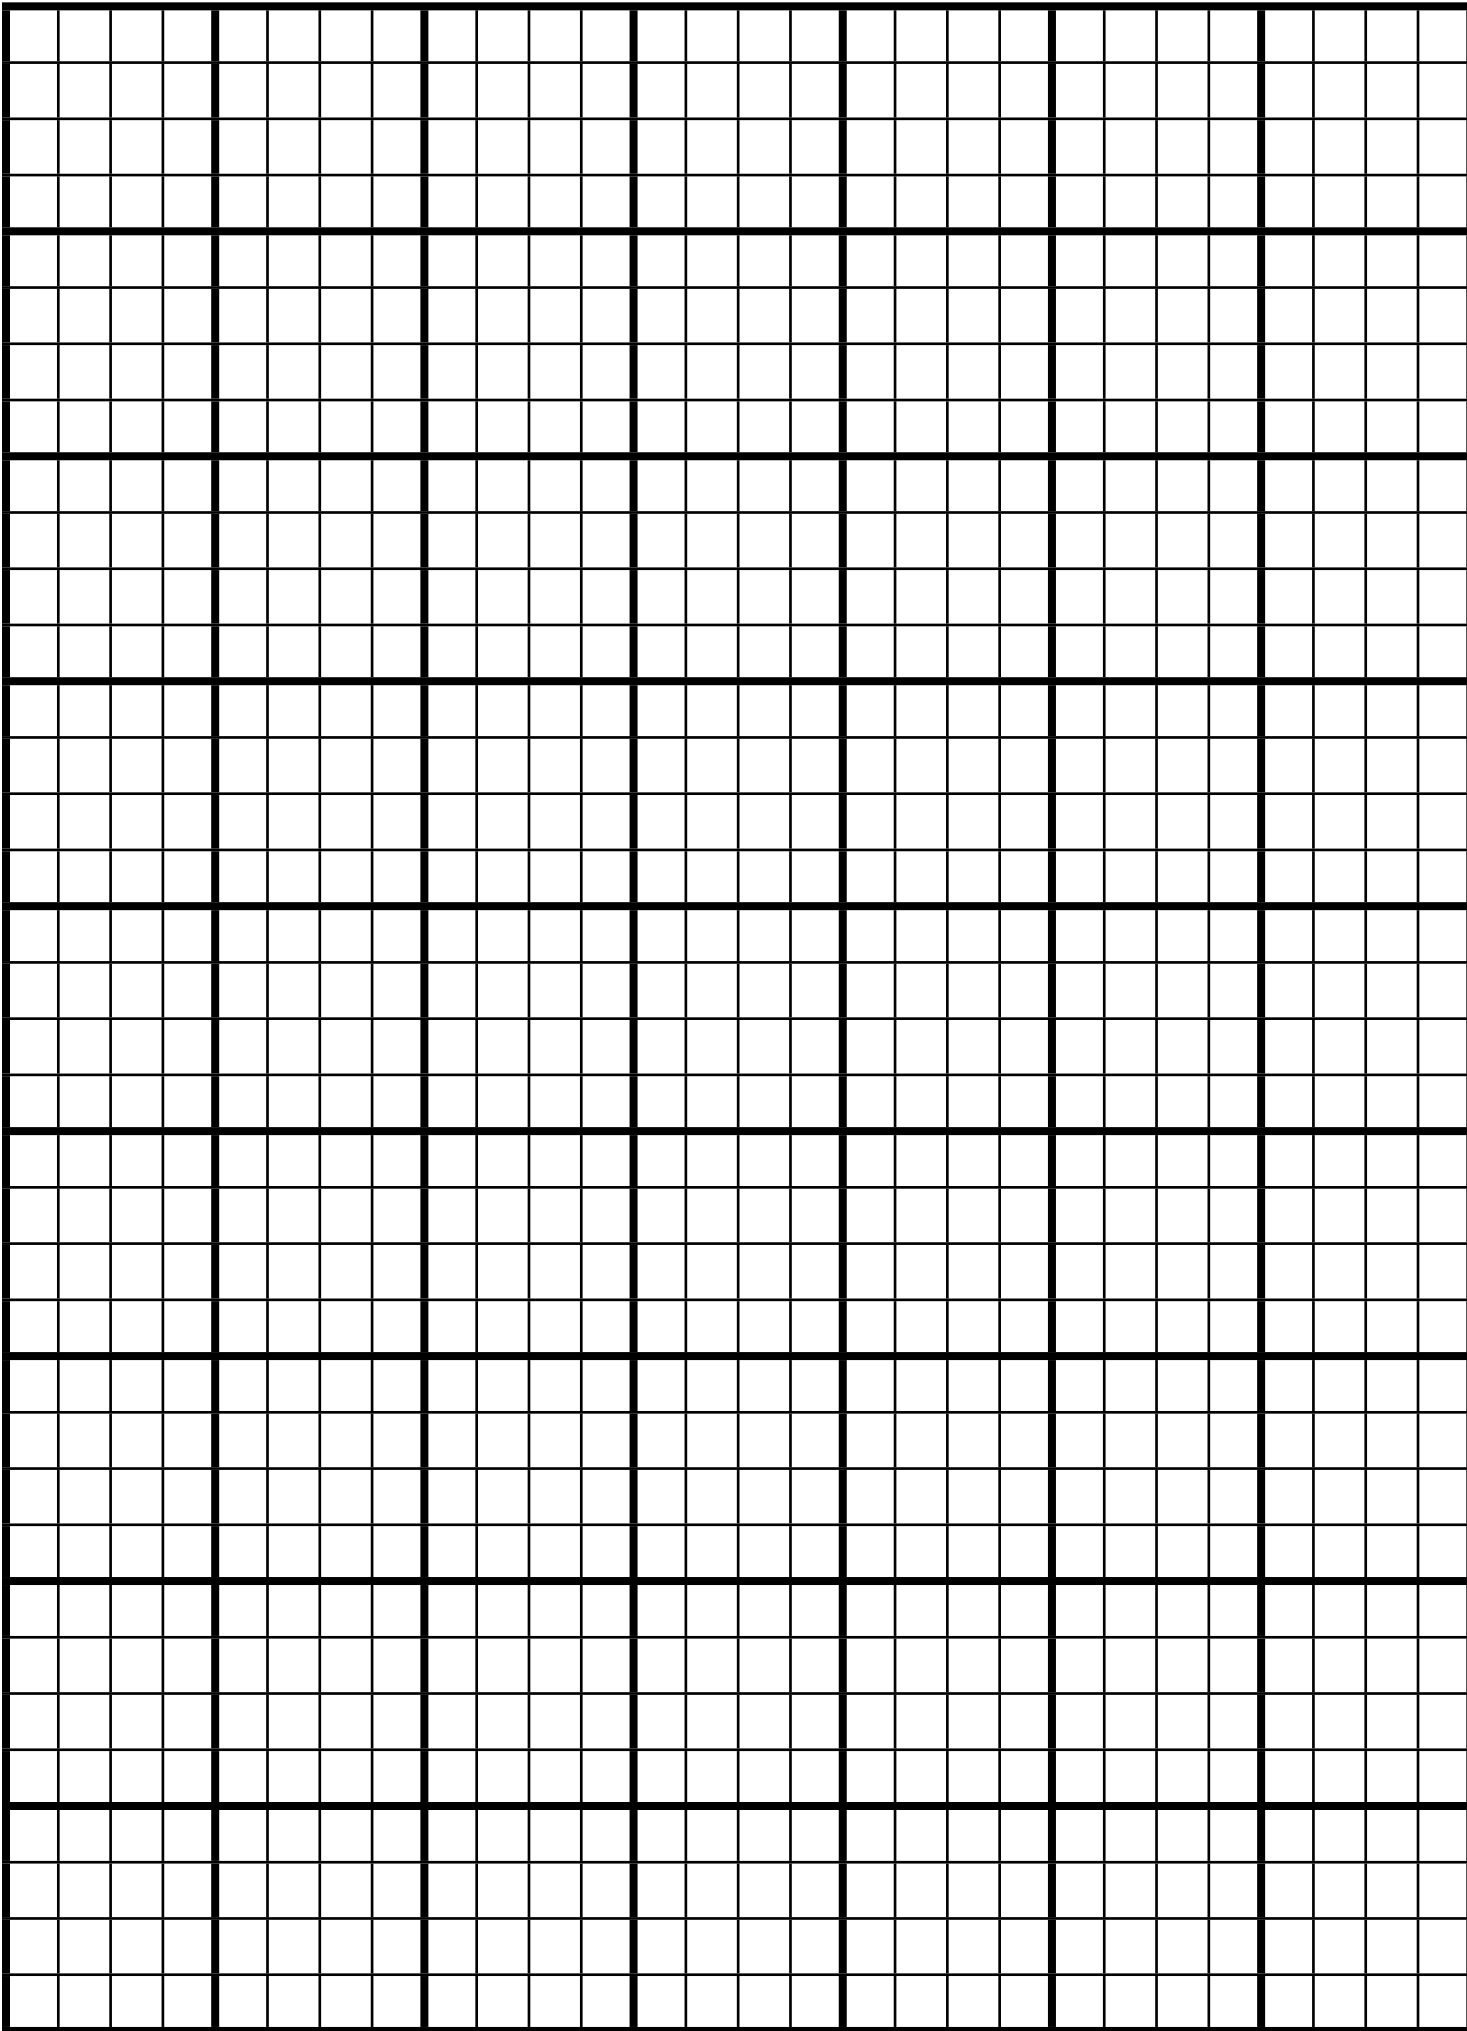

DECK-A-FLOOR

Engineered by NewTechWood. Designed by You.