


ORDERING CAN BE AS EASY AS 1-2-3

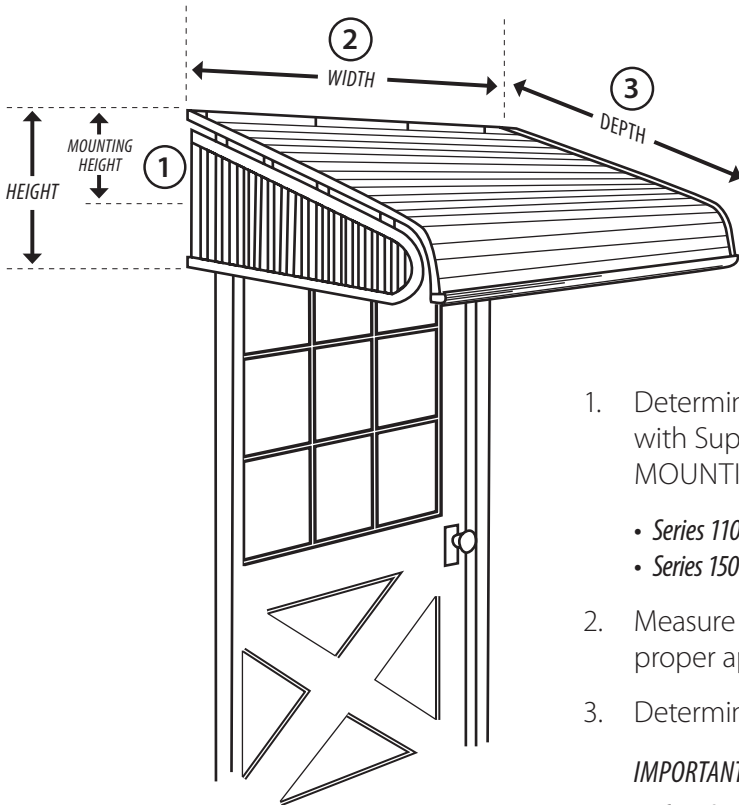

This depicts Series 1500 with Sidewings. The same measurement requirements apply if ordering Series 1100 with Support Arms.

If you have any questions or need assistance, please call:
1-800-858-5818

1. Determine which series is best for your entryway: Series 1100 with Support Arms or Series 1500 with Sidewings. Measure the MOUNTING HEIGHT ① over your door casing.
 - Series 1100 with Support Arms requires a minimum of 3" over the door.
 - Series 1500 with Sidewings requires a minimum of 6" over the door.
2. Measure the WIDTH ② of your doorway and add 3"-5" for proper appearance.
3. Determine your desired DEPTH ③.

IMPORTANT THINGS TO KEEP IN MIND:

- If you have an out swinging door, you should order a minimum projection of 42".
- Watch for nearby lights when measuring and determine if you want the exterior lighting under the canopy or outside the canopy.

Frequently Asked Questions:

Q: How long does it take to get my order?

A: Your awning will arrive within 8-12 days.

Q: Is it assembled or unassembled?

A: Unassembled.


Q: Is this a stock product?

A: No, this product is custom made based on the width and color.


Q: What will I need for tools?

A: The awning comes with the fasteners for a wood framed home. You will need the tools shown below.


Required Tools:




Phillips, Regular & 1/4" Hex Head Screwdrivers or Bits

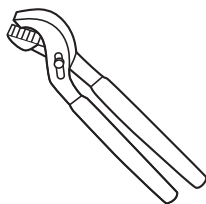


Channel Lock Pliers

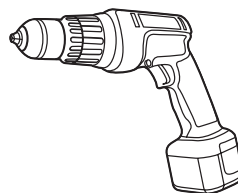

Power Drill

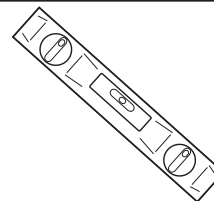

Level

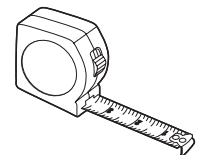

Tape Measure