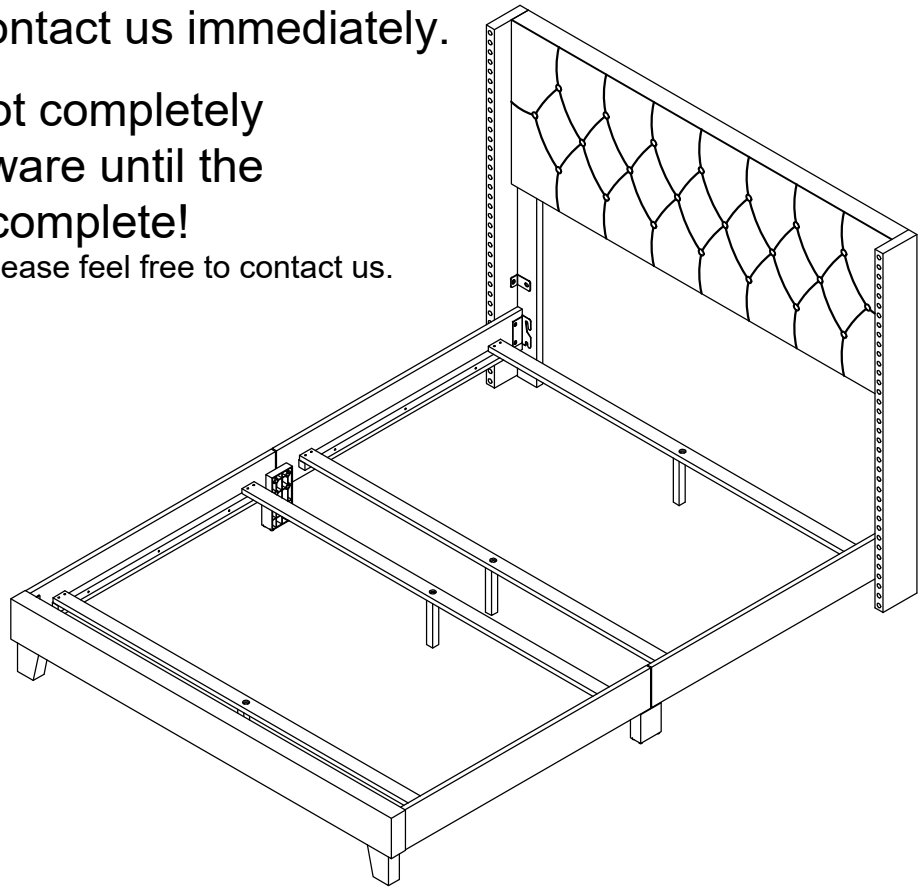


Assembly Instruction

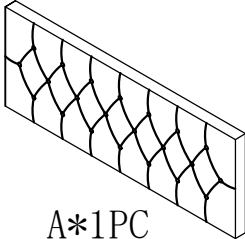
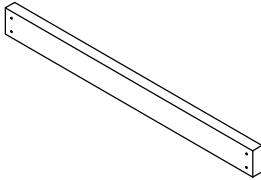
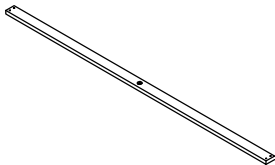
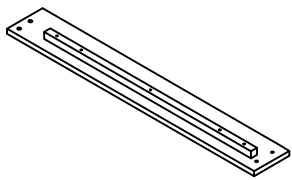
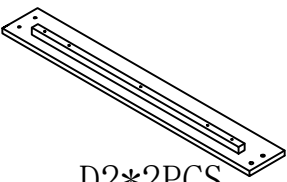
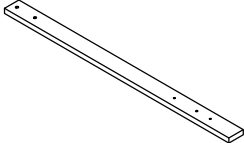
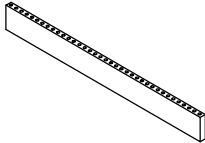
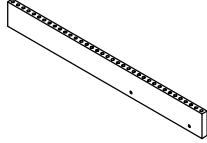



Please check that you have all the parts listed before you start assembling, if you do find that something is missing, do not continue assembly, please contact us immediately.

NOTE: Please do not completely tighten all the hardware until the entire assembly is complete!


If you have any questions, please feel free to contact us.
Email: service@qualfurn.net



Part list

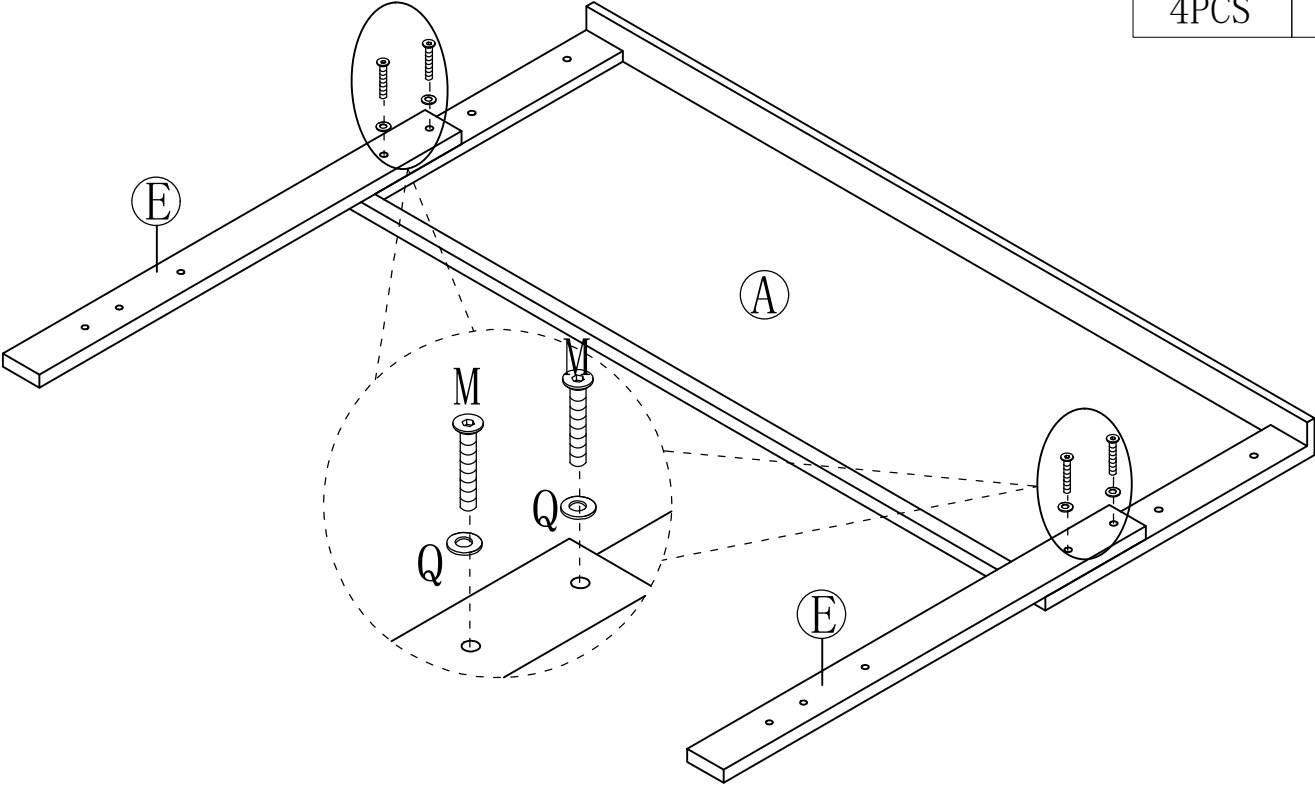
 A*1PC	 B*1PC	 C*4PCS	 D1*2PCS
 D2*2PCS	 E*2PCS	 F1*1PC	 F2*1PC
 G*2PCS	 H*2PCS	 I*4PCS	 J1*2PCS
 J2*2PCS	 K*6PCS		

Hardware list


 M6*70MM L*4PCS	 M8*45mm M*12PCS	 M8*25mm N*24PCS	 M8*18mm O*8PCS	 M5*40mm P*16PCS	 Ø22*Ø8.5 Q*12PCS	 M8 R*1PC	 M6 S*1PC
---	---	---	--	---	--	--	--

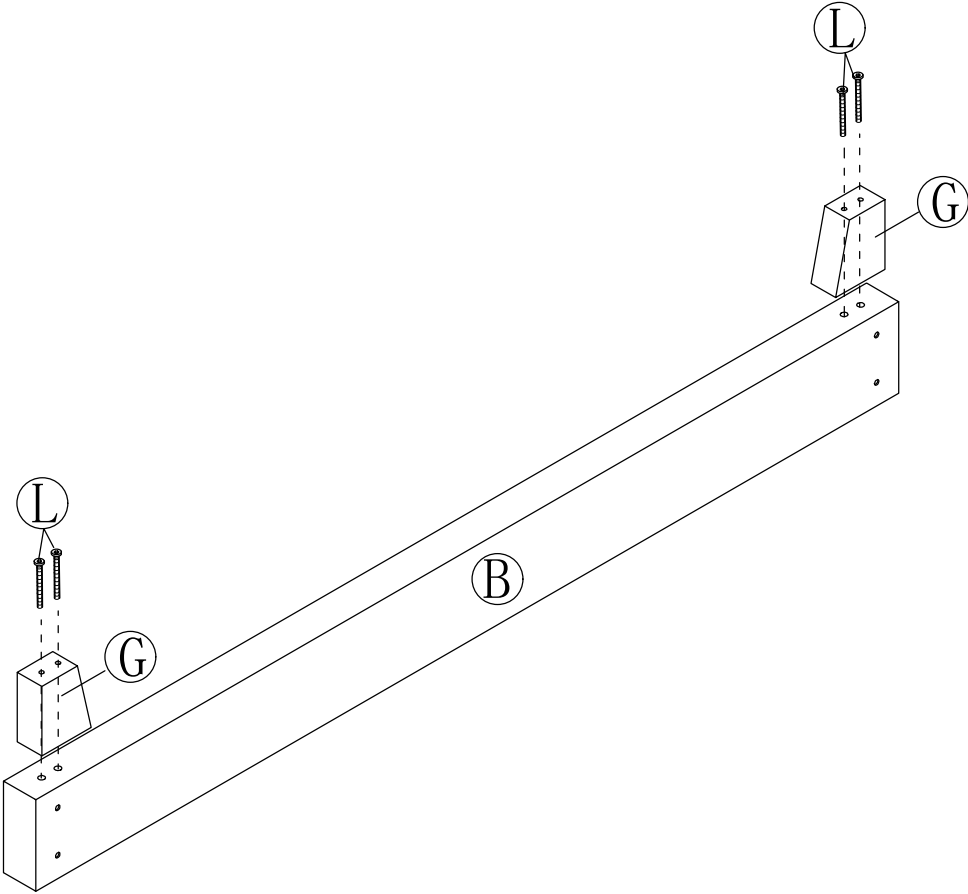
step1

M	Q
	
4PCS	4PCS



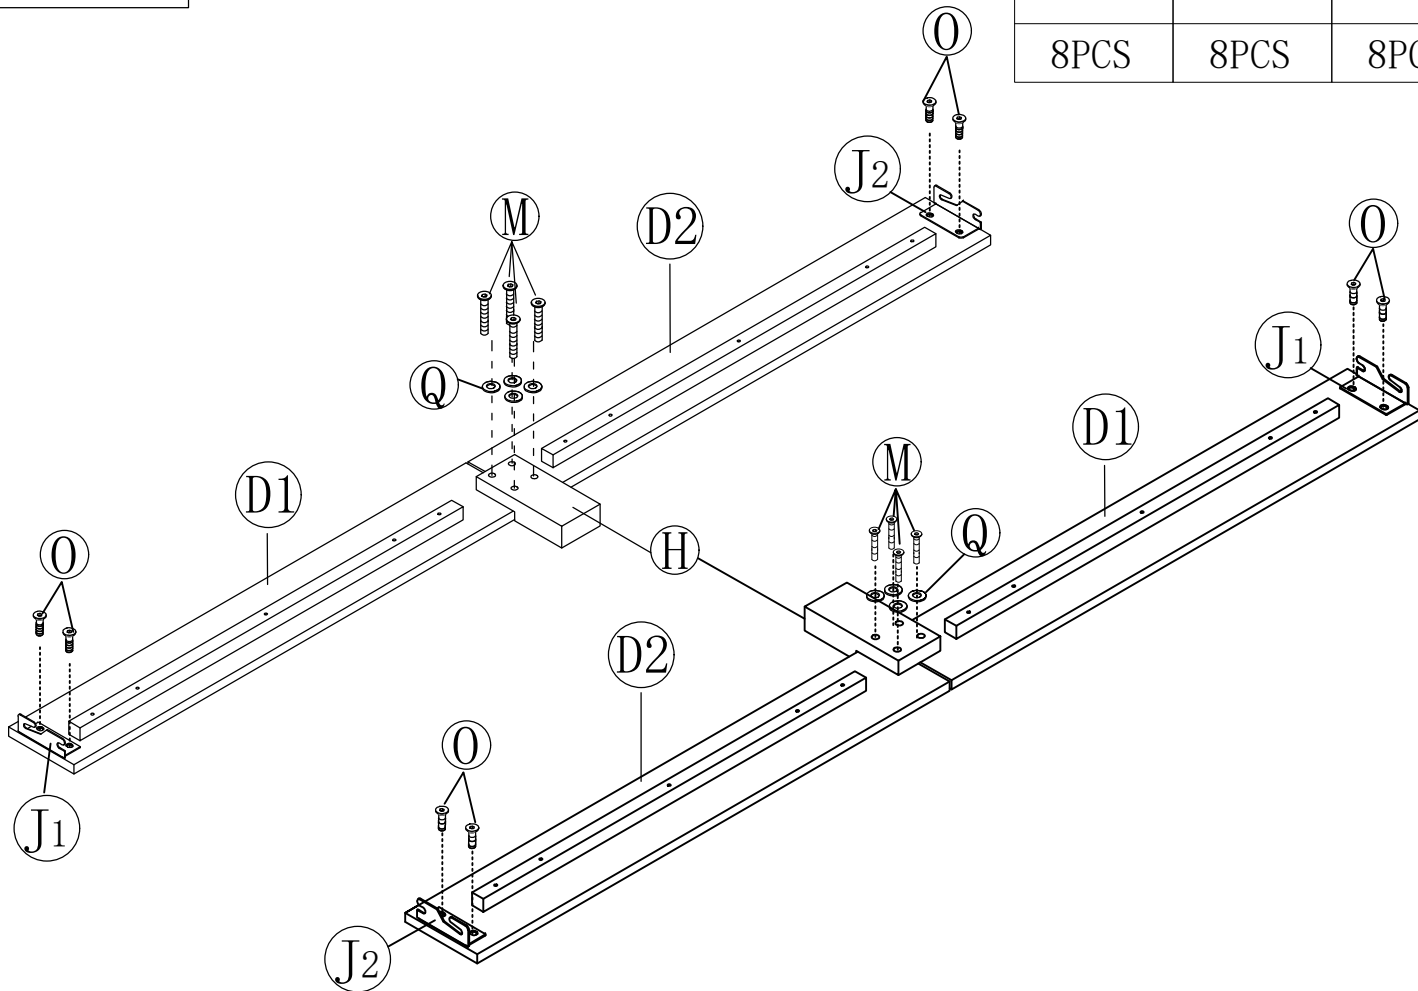
step2

L

4PCS



step3

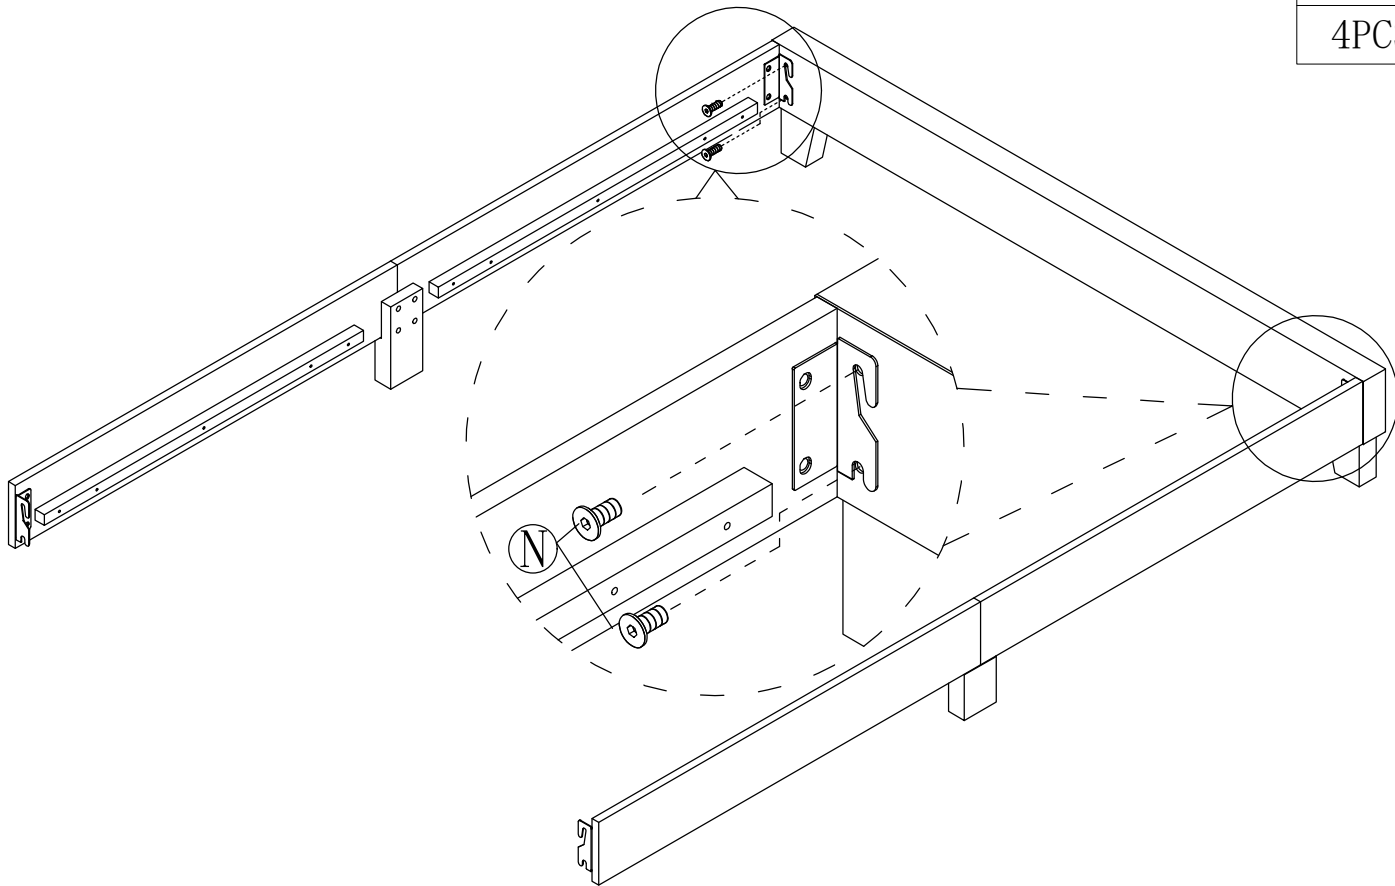
M	Q	O
		
8PCS	8PCS	8PCS



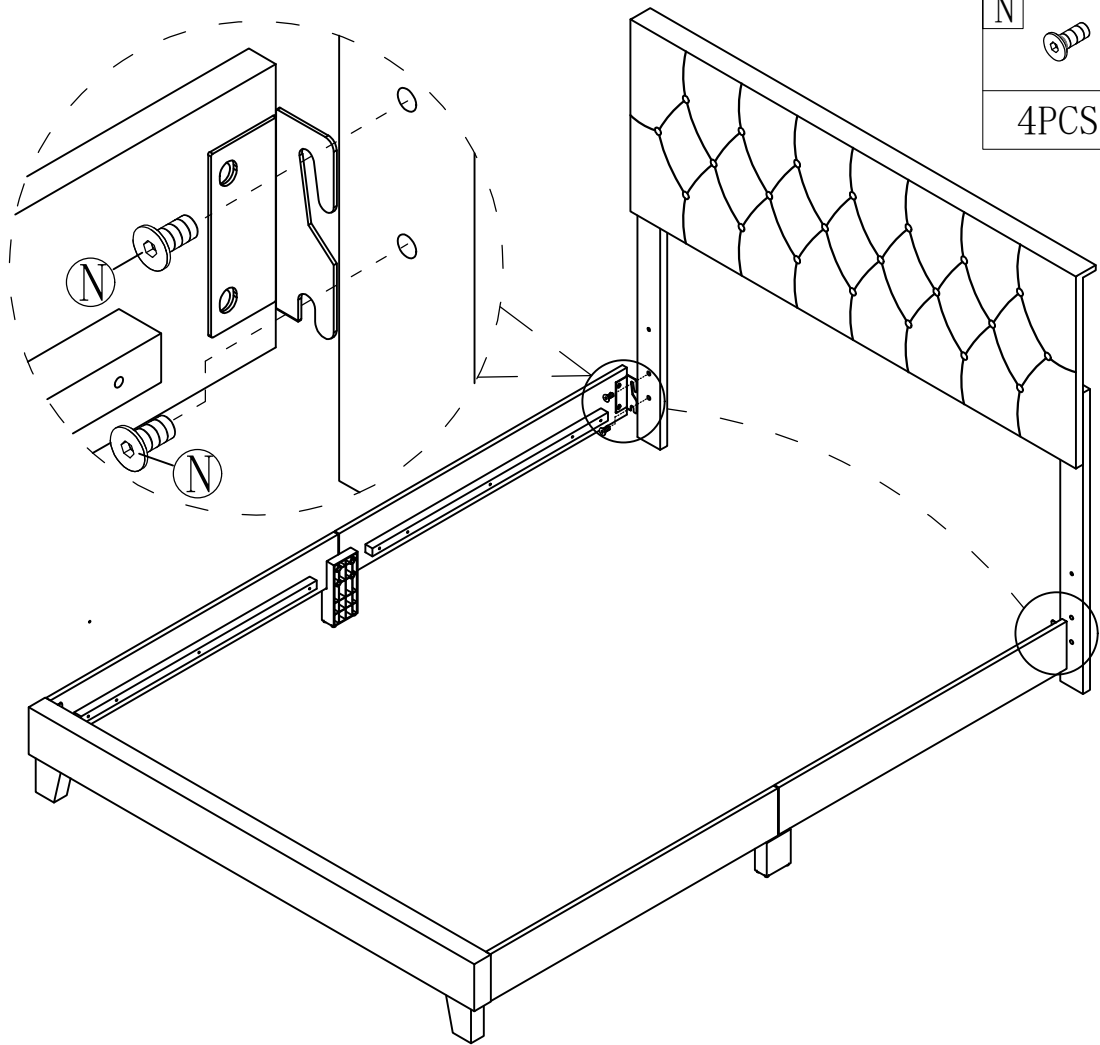
step4

N

4PCS



step5

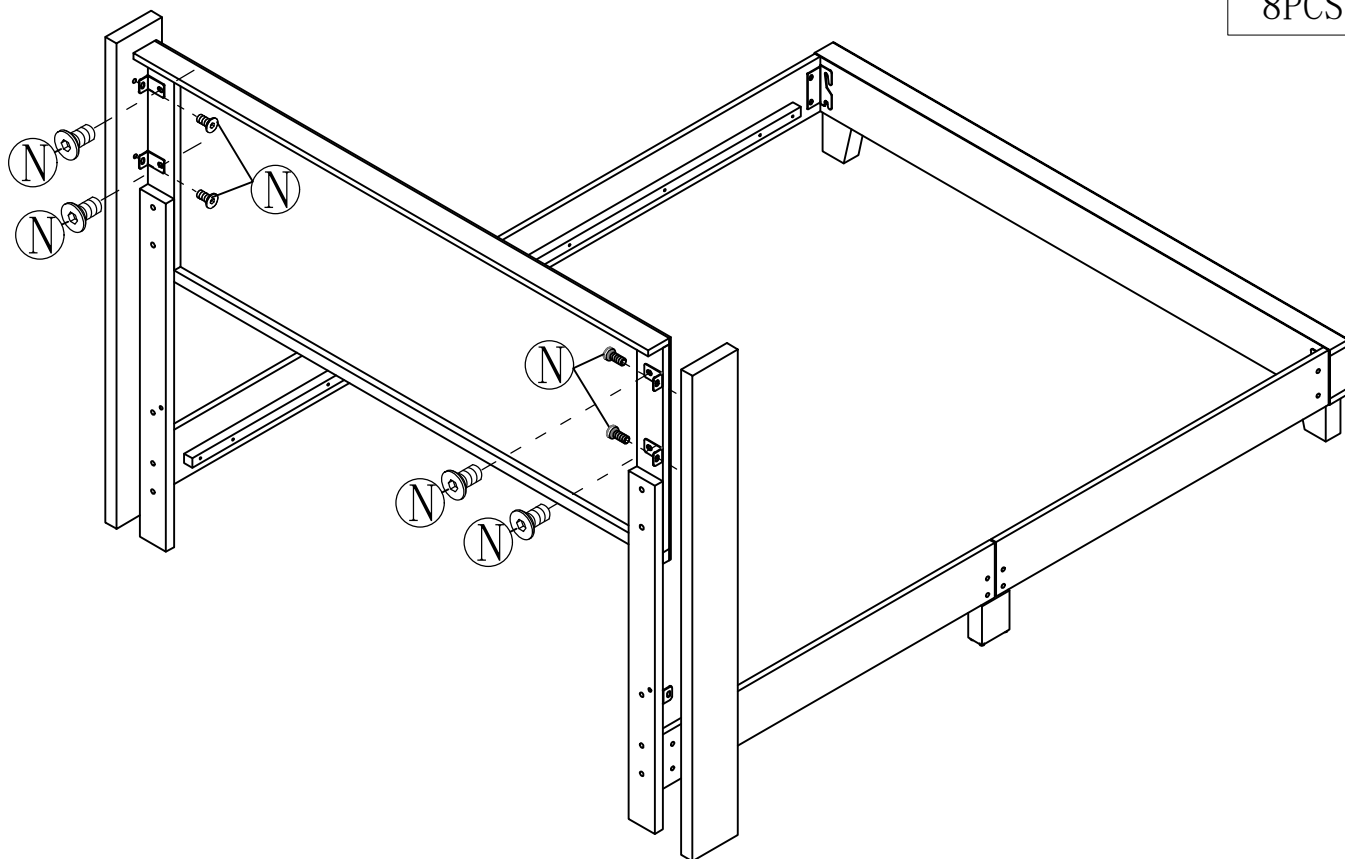


N



4PCS

step6

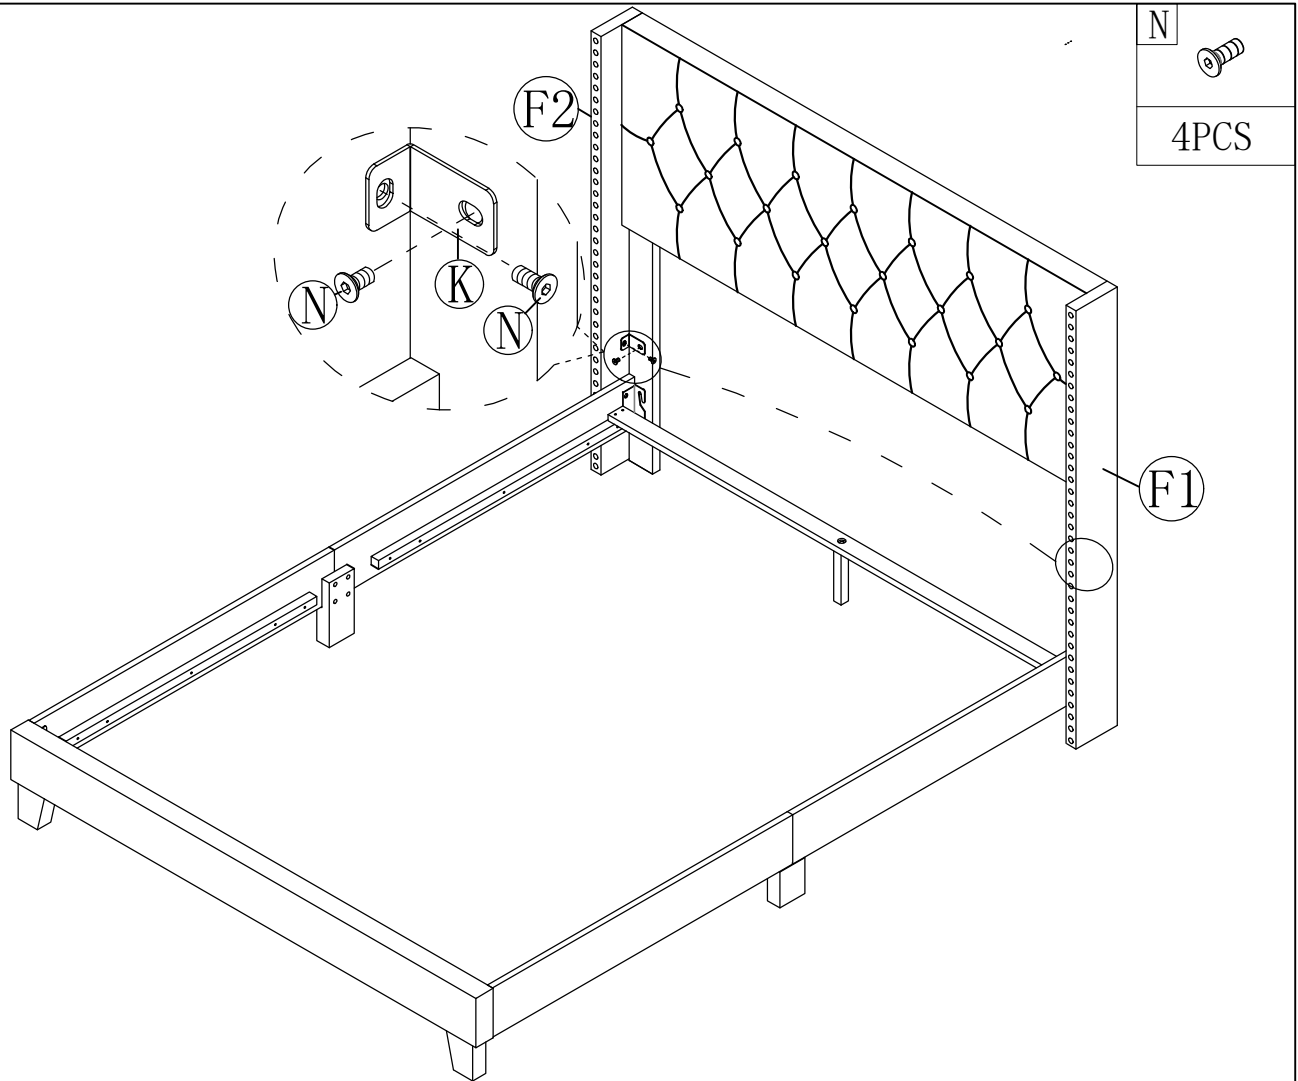


N



8PCS

step7



step8

