


USE AND CARE GUIDE

ARBOR POINT COMMERCIAL DAY BED

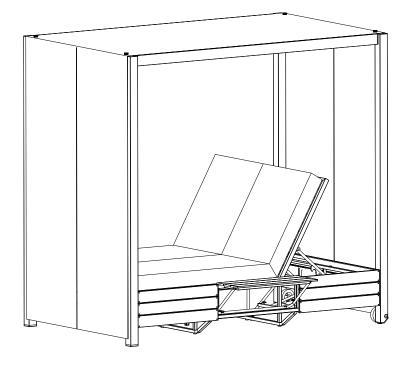

Questions, problems, missing parts? Before returning to the store, call Home Decorators Collection Customer Service 8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-800-986-3460

HOMEDEPOT.COM/HOMEDECORATORS

THANK YOU

We appreciate the trust and confidence you have placed in Home Decorators Collection through the purchase of this day bed. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Decorators Collection!

Table of Contents

Table of Contents	
Important Safety Instructions	
Warranty 2 What is Covered 2 What is not Covered 2	

Important Safety Instructions

SAVE THESE INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

- 1. Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
- 2. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.

Warranty

THIS IS A RESIDENTIAL WARRANTY ONLY AND DOES NOT APPLY TO COMMERCIAL USE

5 YEAR FRAME AND FABRIC LIMITED WARRANTY

WHAT IS COVERED

We warrant the frame and the fabric to be free of manufacturing defects to the original purchaser for five years.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing, and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

For a copy of our full limited warranty, please contact our customer service team at 1-800-986-3460 or visit www.HomeDepot.com/Home Decorators.

Pre-Assembly3
Planning Assembly
Hardware Included
Package Contents4
Assembly
Care and Cleaning8

Pre-Assembly

PLANNING ASSEMBLY

Please read this entire instruction manual prior to assembly.

Verify all parts packed in the carton against the parts list. Remove all protective materials and place the parts on a non-abrasive surface to avoid scratching.



NOTE: More than one person may be required to complete the assembly of this product.

HARDWARE INCLUDED




NOTE: Hardware not shown to actual size.

Part	Description	Quantity
AA	M6 x 30 mm bolt	9
BB	M6 x 50 mm bolt	8
CC	M6 x 35 mm bolt	13
DD	M6 x 20 mm bolt	8
EE	M6 wrench	2
FF	M6 washer	38
GG	M6 spring washer	38
HH	Adjustable foot	4

Pre-Assembly (continued)

PACKAGE CONTENTS

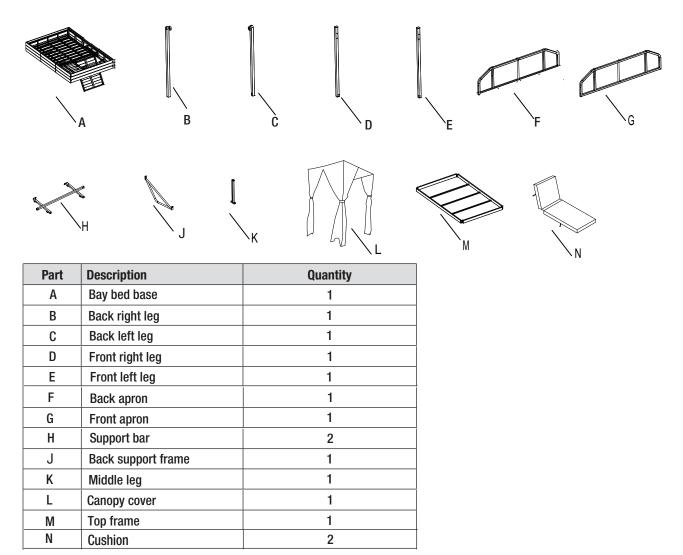


Assembly

Attaching the back support frame to the back apron

□ Attach the back support frame (J) to the back apron (F) with M6 washers (FF), M6 spring washers (GG) and M6 x 20 mm bolts (DD) using the M6 wrench (EE).




NOTE:Please ensure all bolts are aligned and assembled correctly. Do not tighten all the bolts until Step 10.

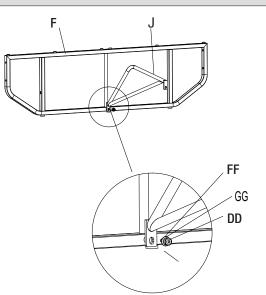


3 Attaching another support bar to the front and back aprons

Attach another support bar (H) to the front and back aprons (G and F) with M6 washers (FF), M6 spring washers (GG) and M6 x 35 mm bolts (CC) using the M6 wrench (EE).

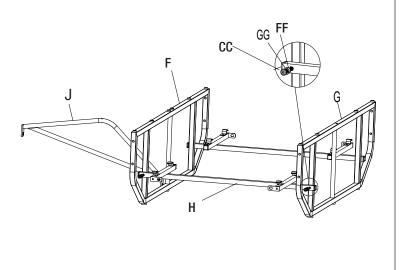


2 Attaching one support bar to the front and back aprons

 Attach the support bar (H) to the front and back aprons (G and F) with M6 washers (FF), M6 spring washers (GG) and M6 x 35 mm bolts (CC) using the M6 wrench (EE).

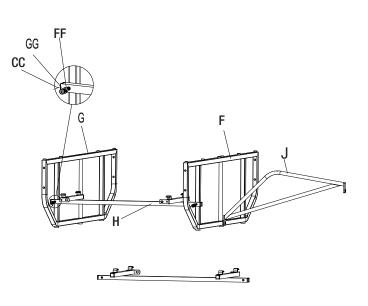

4 Attaching the middle leg and support bars to the day bed base

Attach the middle leg (K) and the support bars (H) to the day bed base (A) with M6 washers (FF), M6 spring washers (GG) and M6 x 20 mm bolts (DD) using the M6 wrench (EE).

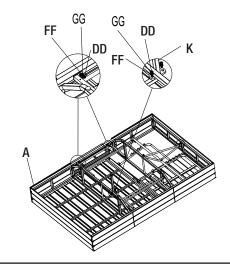


Assembly (continued)

$5\,$ Attaching the front and back aprons to the day bed base


Attach the front apron (G) and back apron (F) to the day bed base (A) with M6 washers (FF), M6 spring washers (GG) and M6 x 35 mm bolts (CC) using the M6 wrench (EE).

 \Box Attach the back support frame (J) to the day bed base (A) with M6 washers (FF), M6 spring washers (GG), M6 x 30 bolts (AA) and M6 x 20 mm bolts (DD) using the M6 wrench (EE).

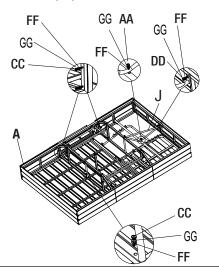


7 Attaching the back right leg to the day bed base

□ Attach the back right leg (B) to the day bed base (A) with M6 washers (FF), M6 spring washers (GG) and M6 x 50 mm bolts (BB) using the M6 wrench (EE).

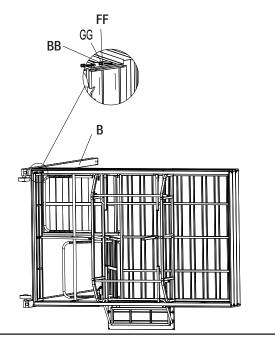


6 Attaching the back left leg to the day bed base

 $\hfill \label{eq:FF}$ Attach the back left leg (C) to the day bed base (A) with M6 washers (FF), M6 spring washers (GG) and M6 x 50 mm bolts (BB) using the M6 wrench (EE).

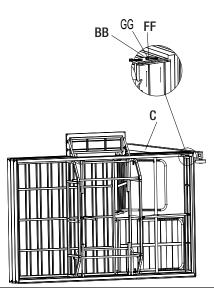


8 Attaching the front left leg to the day bed base

□ Attach the front left leg (E) to the day bed base (A) with M6 washers (FF), M6 spring washers (GG) and M6 x 50 mm bolts (BB) using the M6 wrench (EE).

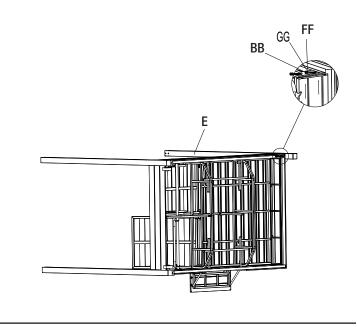


9 Attaching the front right leg to the day bed base

 Attach the front right leg (D) to the day bed base (A) with M6 washers (FF), M6 spring washers (GG) and M6 x 50 mm bolts (BB) using the M6 wrench (EE).

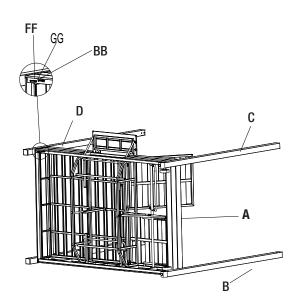


Adding the cushions

 $\hfill\square$ Place the cushions (N) on the day bed.

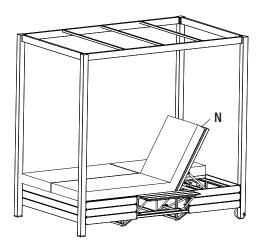


1 O Attaching the top frame to the day bed base

- Attach the top frame (M) to the day bed base (A) with M6 washers (FF), M6 spring washers (GG) and M6 x 35 mm bolts (CC) using the M6 wrench (EE).
- $\hfill\square$ Tighten all the bolts with the wrench (EE).

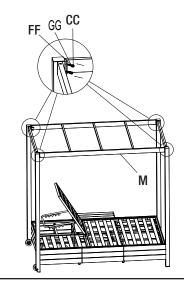

- 12 Attaching the canopy cover to the day bed base
 - □ Attach the canopy cover (L) to the finished frame with adjustable feet (HH).
 - $\hfill\square$ The day bed now is ready for use.

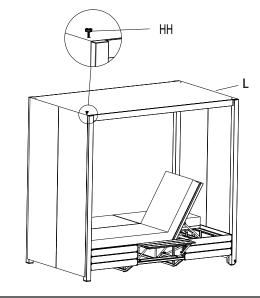

Care and Cleaning

- Do not allow water to build up in the frames. This will cause corrosion and possible freezing damage in cold climates.
- Use a mild soap and water for normal cleaning. Do not use janitorial or alcohol based cleaners. Some cleaners may be marked as natural, but some ingredients may cause discoloration or have an adverse reaction to your finish.
- $\hfill\square$ Rinse with clean water and dry with a soft, absorbent cloth towel.
- □ Treat the frames with a liquid wax for maximum protection against UV rays and/or salty, damp air.

HOME DECORATORS COLLECTION®

Questions, problems, missing parts? Before returning to the store, call Home Decorators Collection Customer Service 8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-800-986-3460

HOMEDEPOT.COM/HOMEDECORATORS

Retain this manual for future use.