Warnings and Cautions

Please retain this instruction for future usage and read carefully before assembly.

Make sure you have all the parts & hardware as item list shows.

***3 adults or more** are recommended to install your Sunroom.*

Do not discard any of the packaging until you have checked that you have all the parts and pack of fittings.

Check all bolts for tightness before use, and periodically check and tighten bolts ensure your gazebo works properly.

Some parts might have sharp edger/corners/Please follow basic safety precautions to reduce the risk of hurts.

Avoid installing and settling the solarium in a corridor of heavy wind.

Some assembly parts contain sharp edges, you should wear protective gloves when handling these items.


For safety issues you must not leave the unit unattended if it is not completed, even if it is already anchored to the ground.

*It is essential to place the gazebo on level ground and not less than **6 feet** from any obstruction such as fences, garages, the house, overhanging branches, laundry lines, or electrical wires.*

If you have questions or concerns.
*Please contact us via email at **service@domioutdoorliving.com***

Domi outdoor living

domi
outdoor living

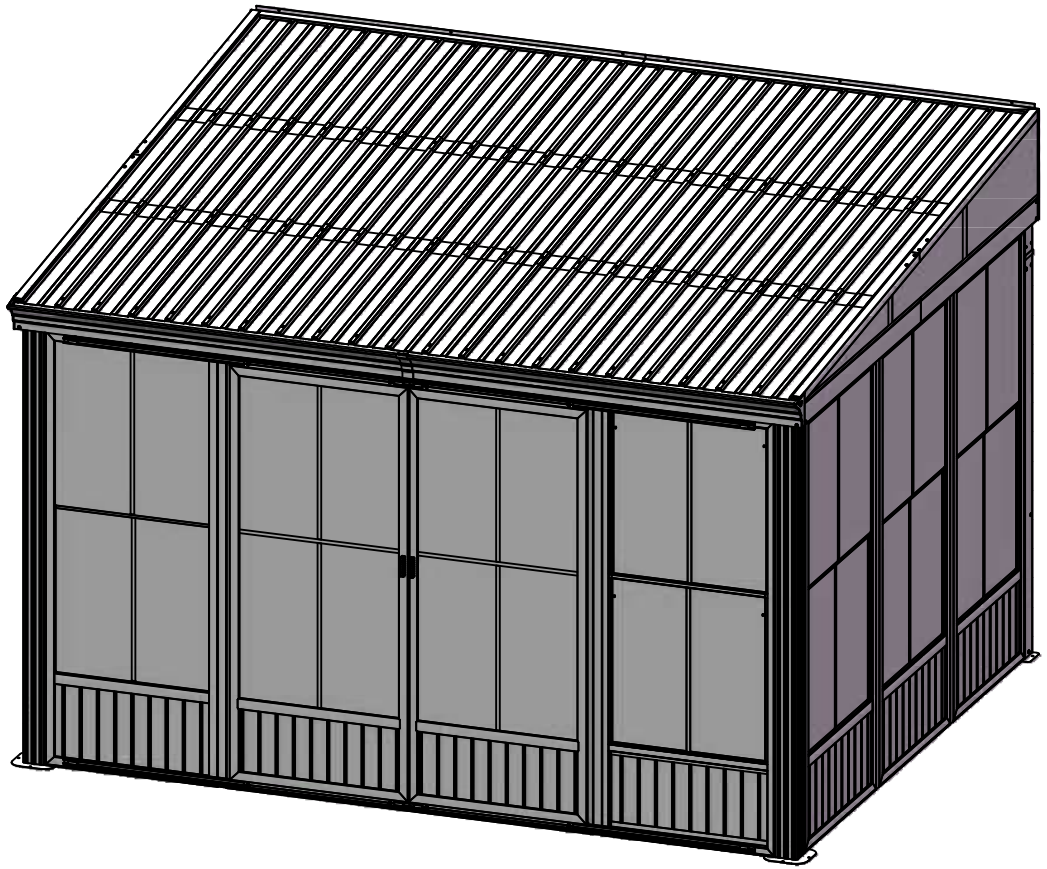


10'×12'


SKU:LGMF1612

Solarium Wall-Mounted Sunroom

Assembly Manual

© Copyright 2020-2023 Domi Outdoor Living LLC.All Rights Reserved.

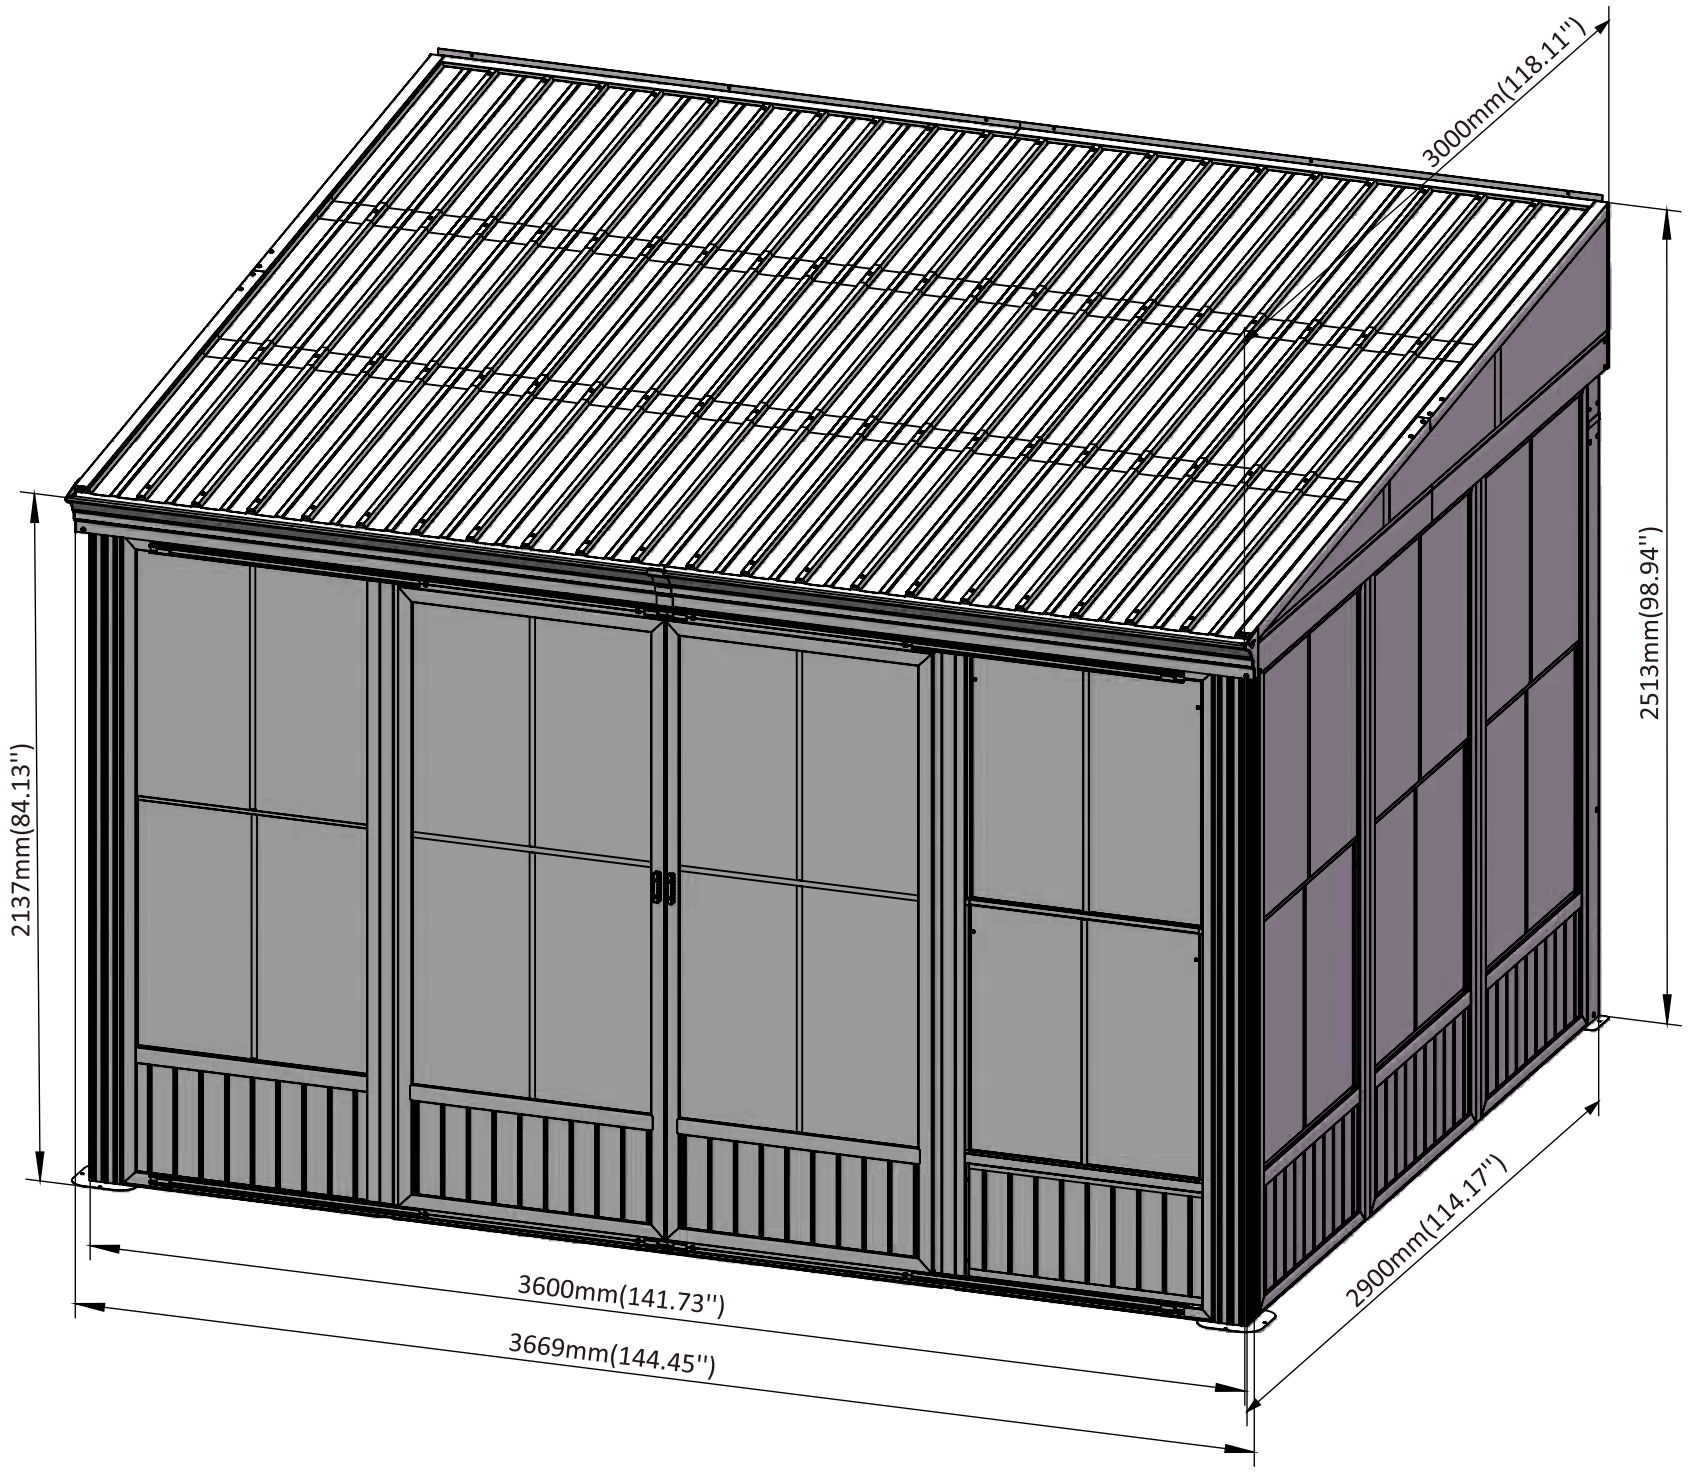
3000mm(118.11'')
2513mm(98.94'')
2137mm(84.13'')
3600mm(141.73'')
3669mm(144.45'')
2900mm(114.17'')

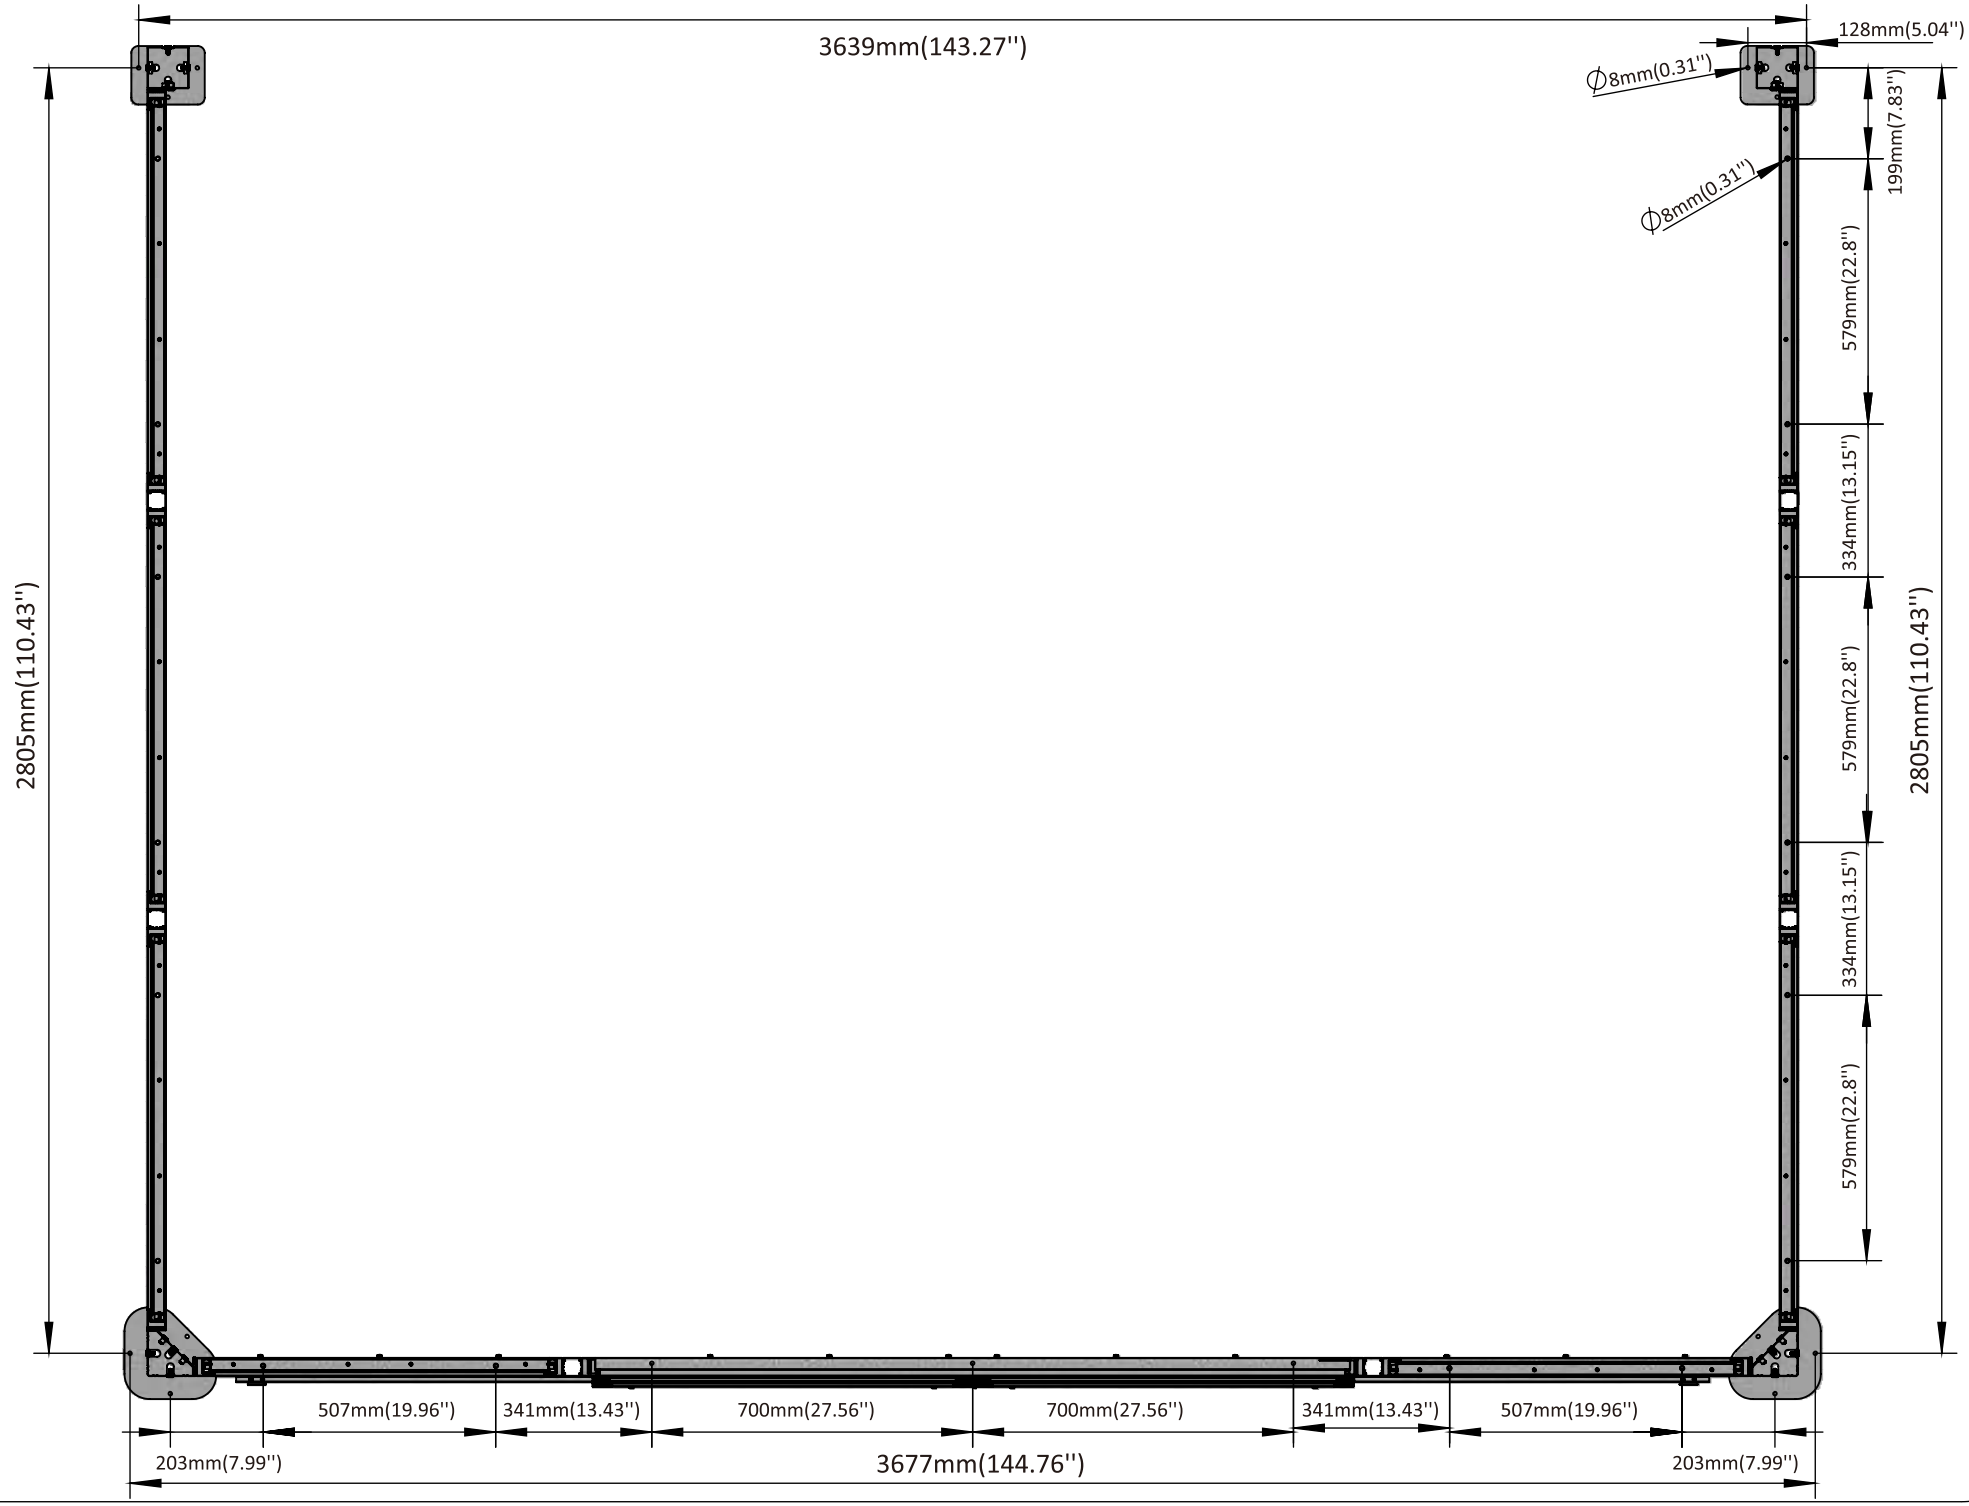
3639mm(143.27'')
128mm(5.04'')
Φ8mm(0.31'')
Φ8mm(0.31'')
199mm(7.83'')
579mm(22.8'')
334mm(13.15'')
579mm(22.8'')
334mm(13.15'')
579mm(22.8'')
2805mm(110.43'')
2805mm(110.43'')
507mm(19.96'')
341mm(13.43'')
700mm(27.56'')
700mm(27.56'')
341mm(13.43'')
507mm(19.96'')
203mm(7.99'')
3677mm(144.76'')
203mm(7.99'')

Thank you for your purchase of

Domi outdoor living's Sunroom

Read and follow this assembly and operation guide.

To reduce personal injury and damage to you Sunroom

We recommend a **three-person team** for assembly and disassembly.

Please **remove** snow accumulation at all times.

Please schedule enough time to complete the assembly of the sunroom.

It will takes approximately 7 hours to set up.

If you like our products, please tell other customers

If you have problem with our products, please tell us

Please feel free to contact us.

DOMI OUTDOOR LIVING

domi
outdoor living


Pre-assembly

TOOLS THAT MAY BE REQUIRED (Not included in boxes)

**NOTE: Tools / equipment are not shown to actual size and scale.*



LEVEL



RUBBER MALLET




PHILLIPS SCREW



DRILL



ALLEN KEY



ALLEN KEY

EQUIPMENT REQUIRED (Not included in boxes)

**NOTE: Equipment are not shown to actual size and scale.*



SAFETY HAT



GLOVES



SAFETY GOGGLES



STEPLADDER

Matters needing attention



1. Three or more people are required for assembly.



2. Do not fully tighten screws prior to complete assembly.


Regulation


IMPORTANT: A sunroom may entail to purchase a municipal permit or be subject to specific building codes. It is the consumer's responsibility to inform themselves of any restrictions.

Care and Cleaning:

For cleaning, use a domestic soap or detergent and wash with warm water using a sponge or fabric. Rinse with clean water.


1

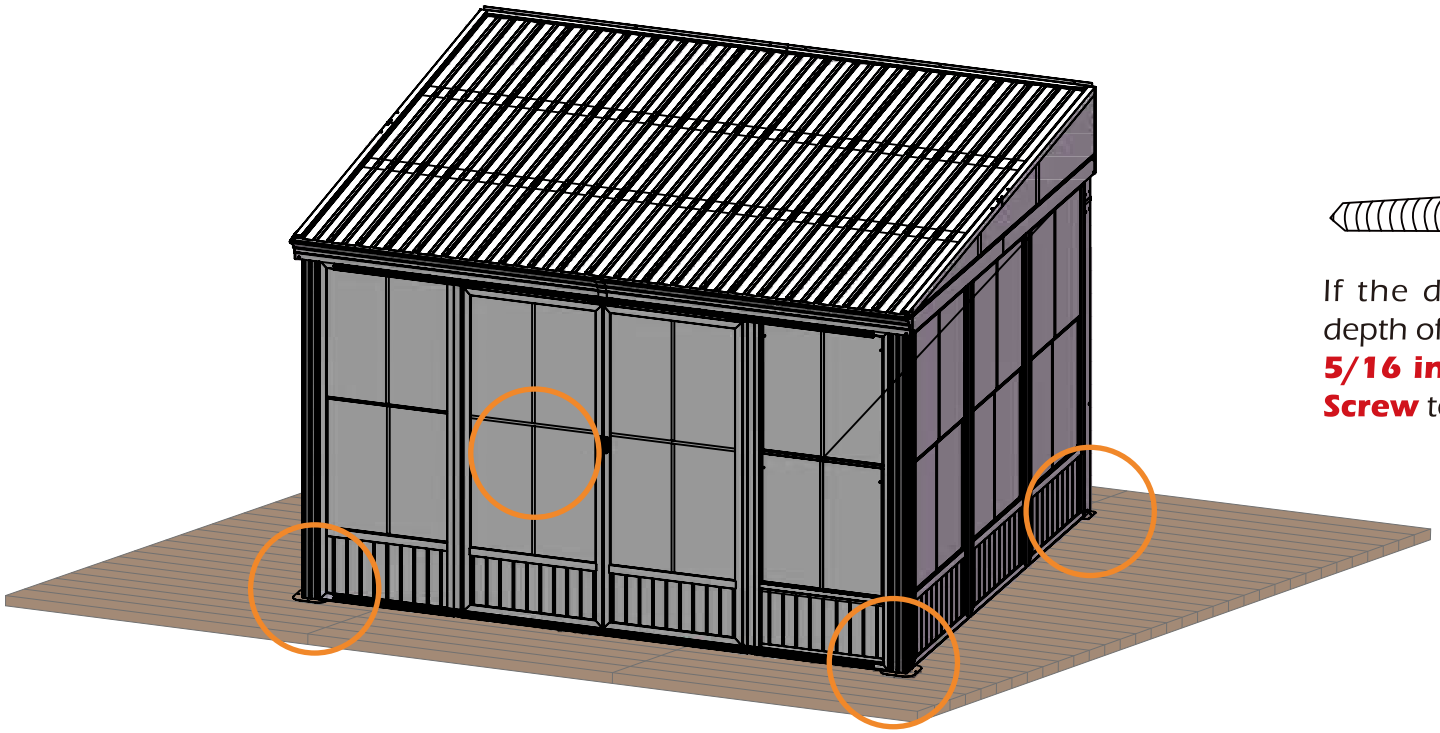





x14


If the deck is hard wood and the depth of it is over 3 inch, you can use **5/16 in. ×4 in. Structural Wood Screw** to mount the pergola.

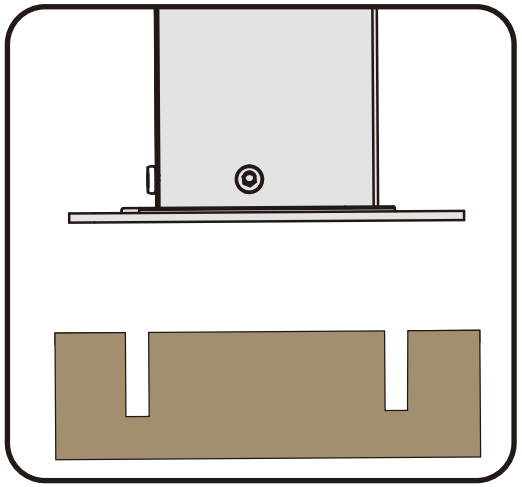

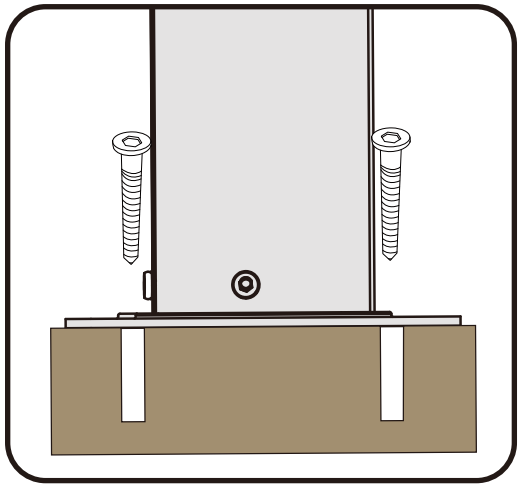


2

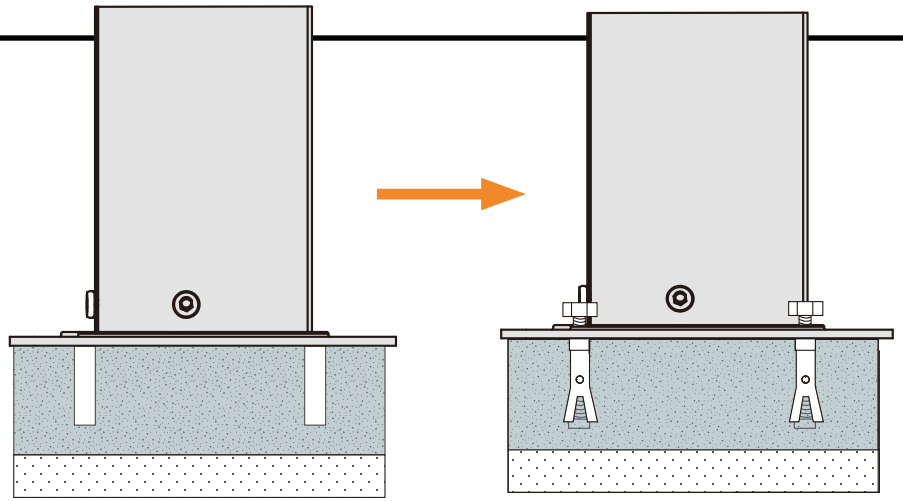


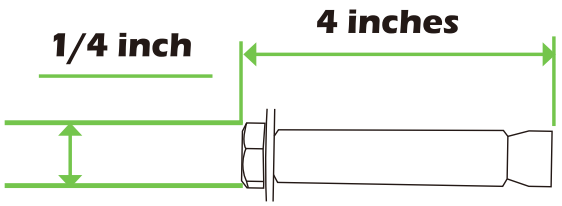

If the ground is concreted and the depth of it is over 3 inch, you can use 1/4 inch expansion bolts to mount the pergola


3

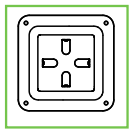

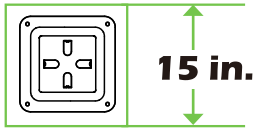



Or you can make a concrete footing for pergola, **15×15×15 inches** is recommended.use expansion bolts to mount the pergola like (2) shows.



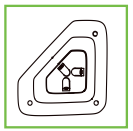


IMPORTANT:
Anchor is not recommended

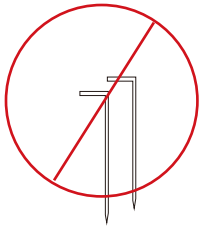


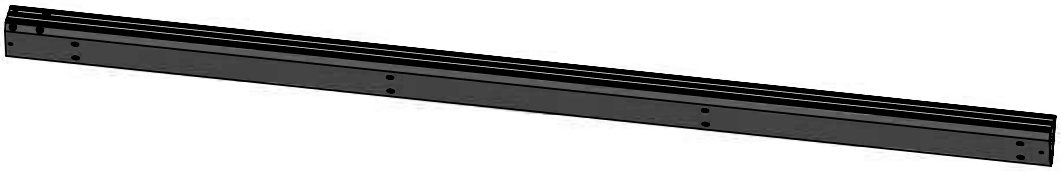


A1 1X

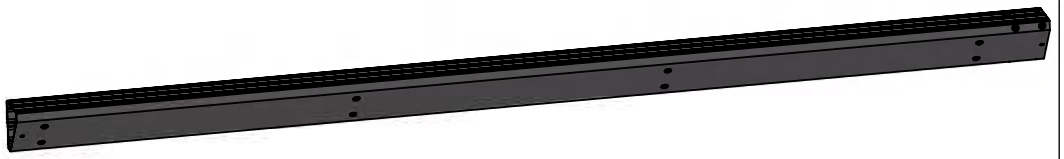


A2 1X

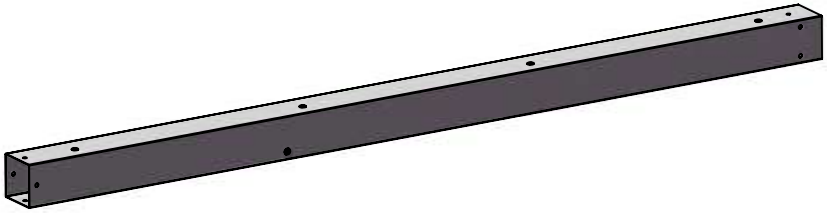


A3 1X

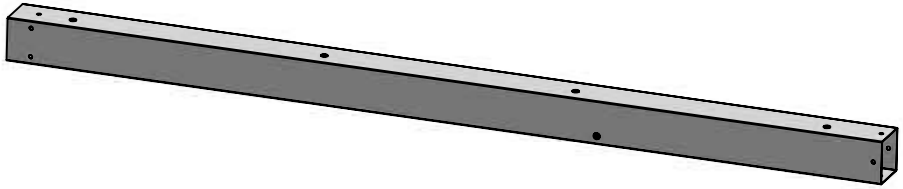


A4 1X

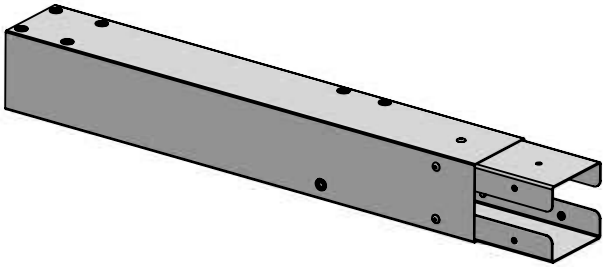


A5 1X

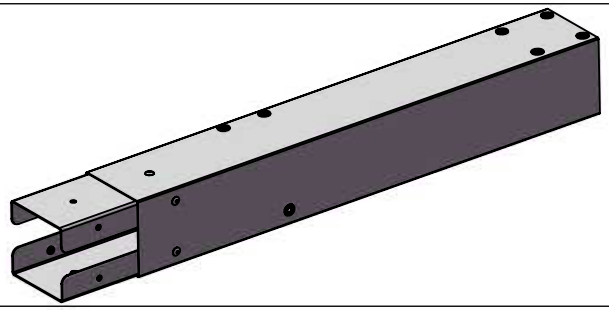


A6 1X

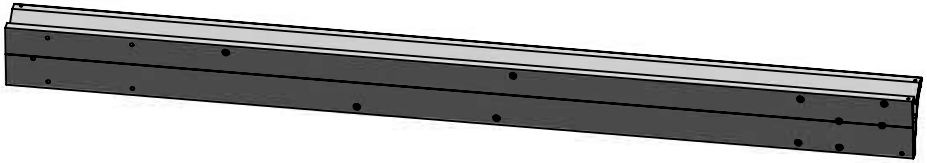


B1 1X

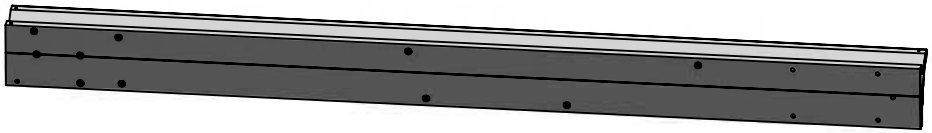


B2 1X

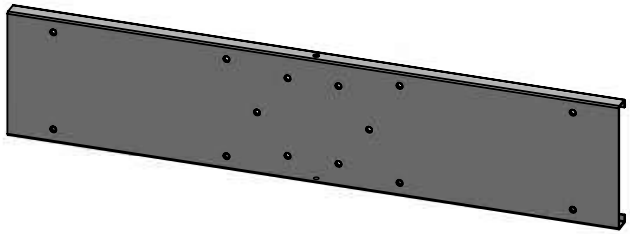

C 1X

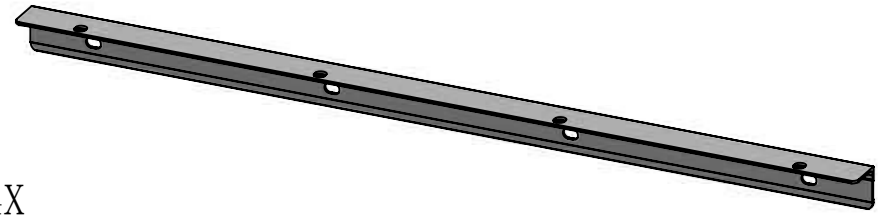


D1 4X

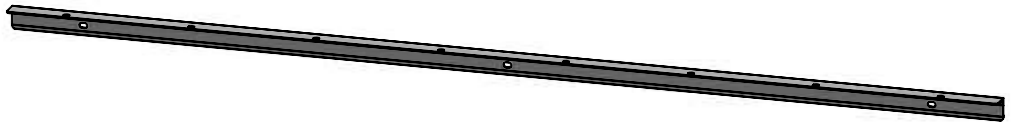


D_2 8X




E_1 4X

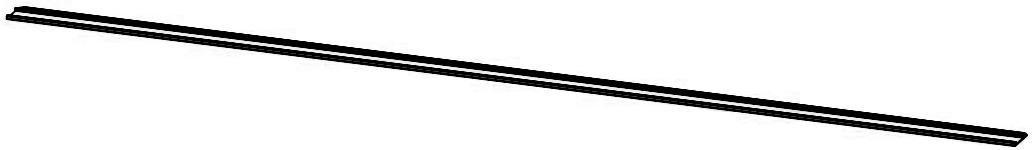


E_2 2X

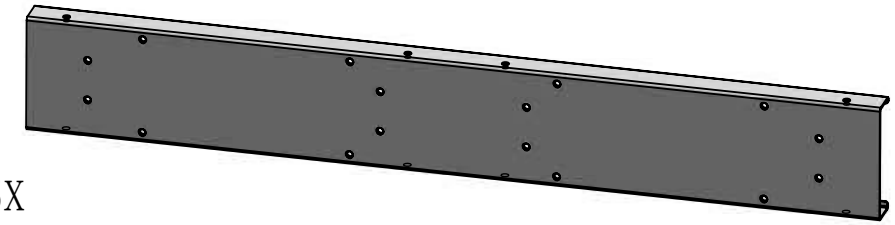


F 5X

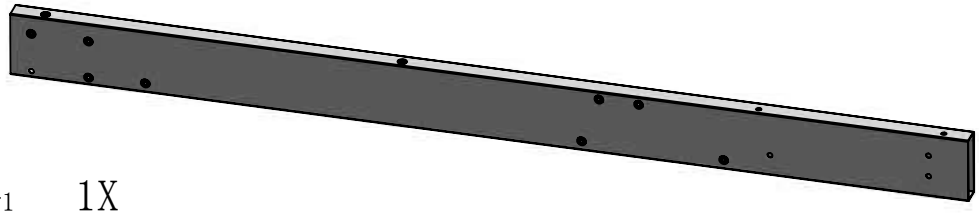


G_1 1X

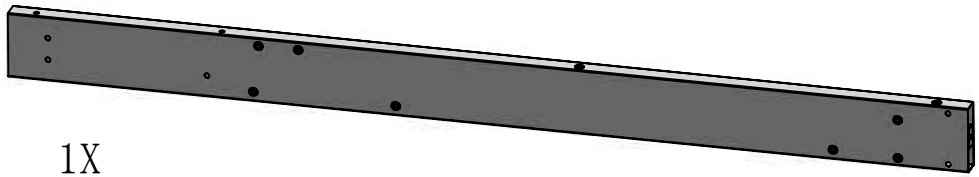

G_2 1X

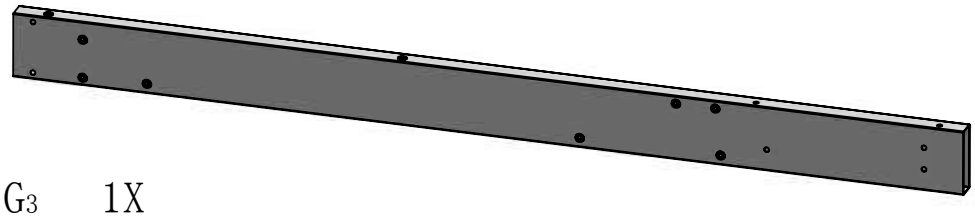


G_3 1X

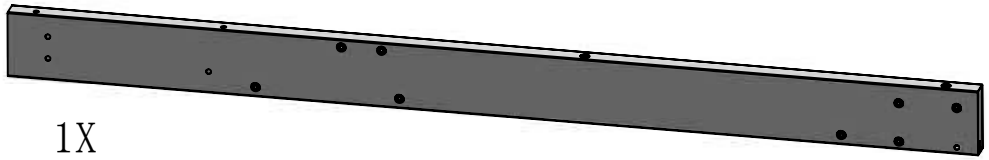


G_4 1X




H_1 1X

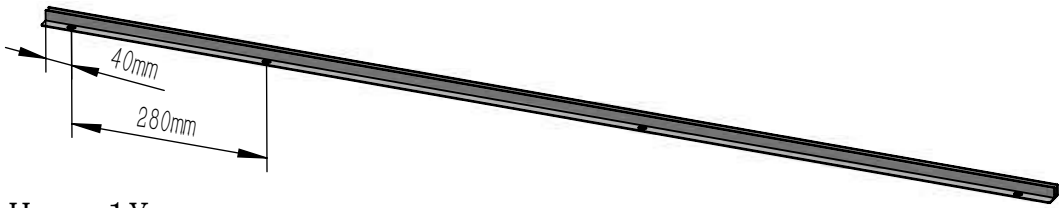


H_2 1X

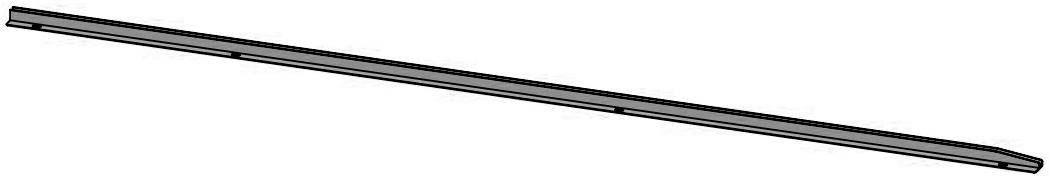


H3 1X

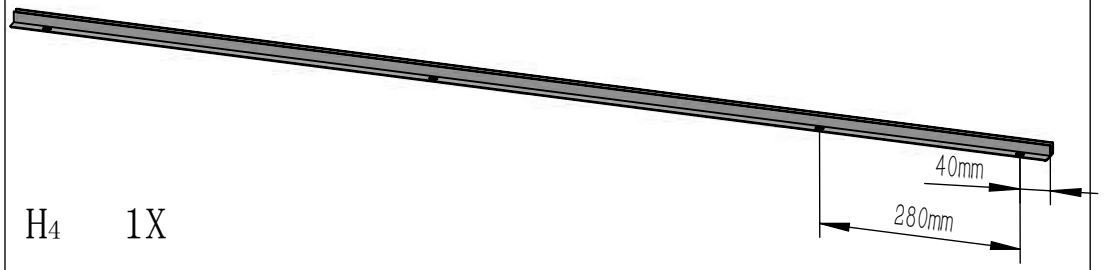


H4 1X

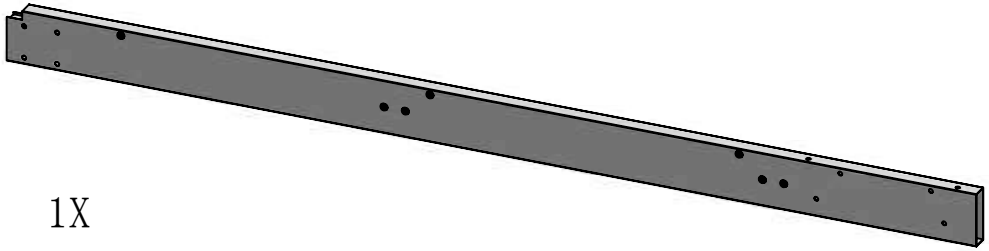


I1 1X

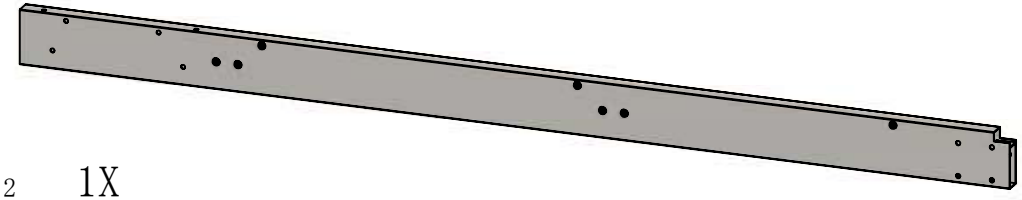


I2 1X

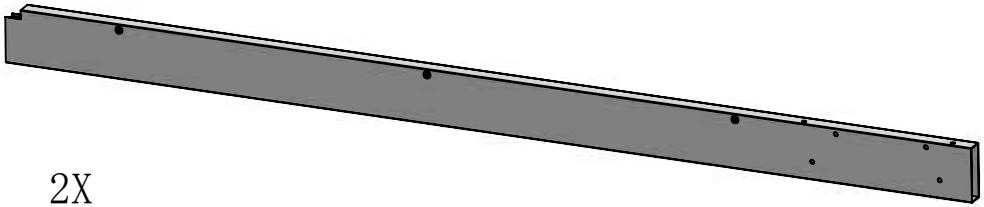

I3 2X

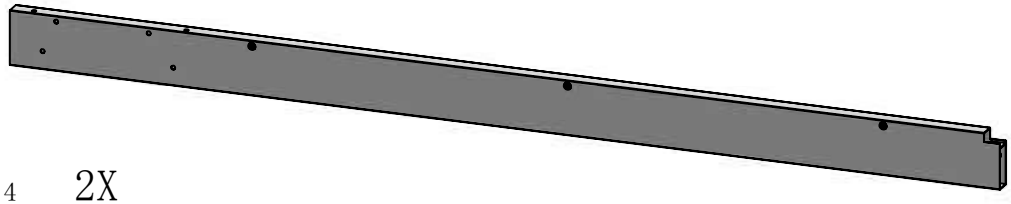


I4 2X

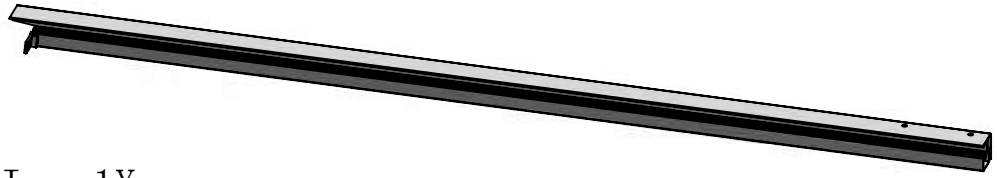


J1 1X













J2 1X










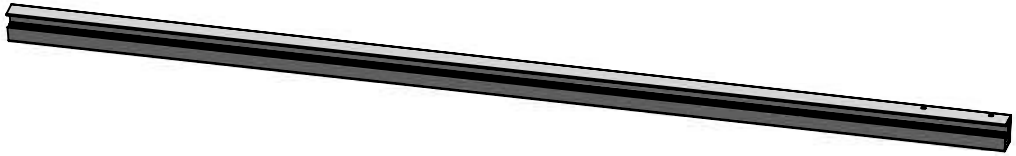










J3 1X










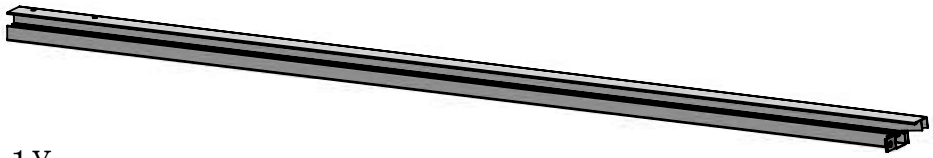



J4 1X

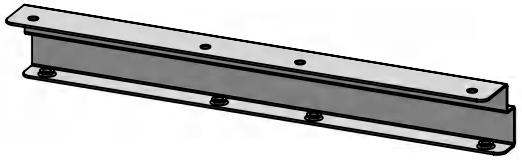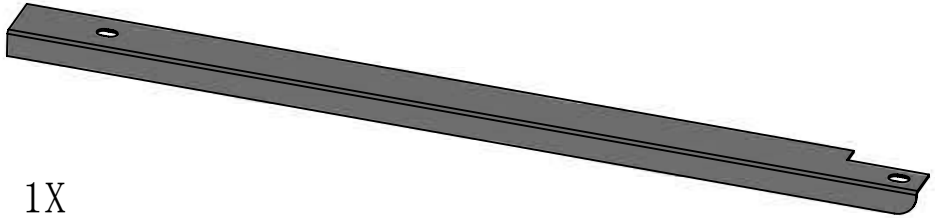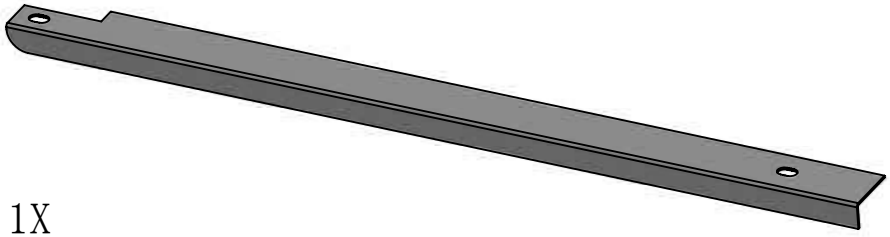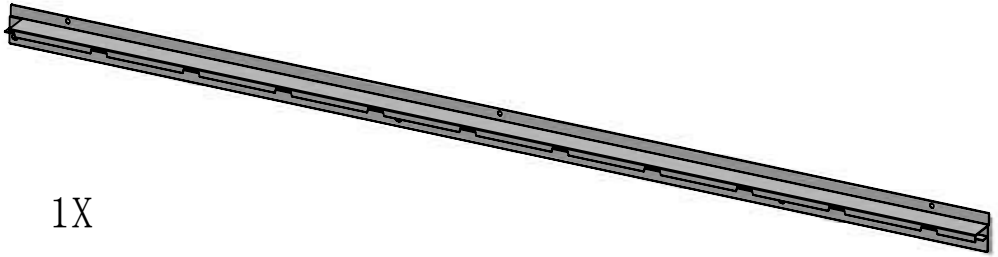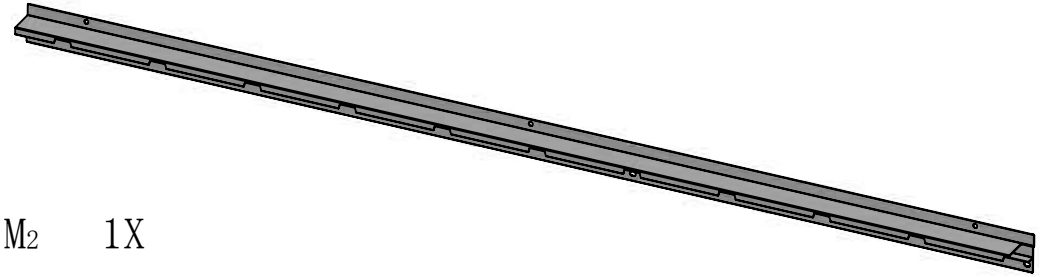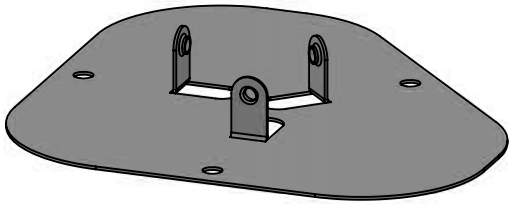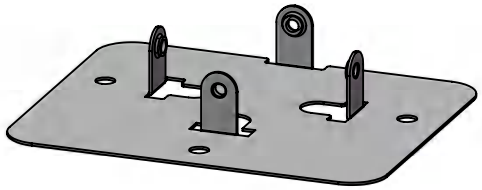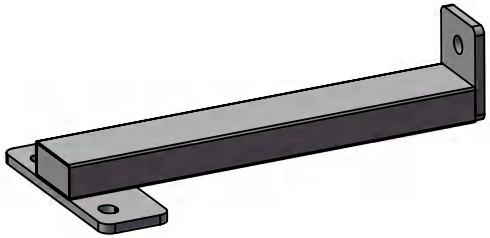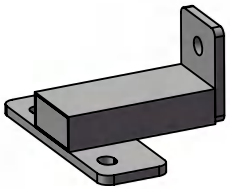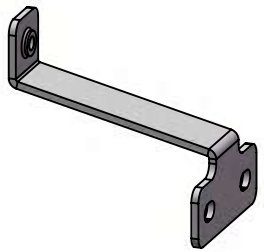 K 2X	 L_1 1X
 L_2 1X	 M_1 1X
 M_2 1X	 N_1 2X
 N_2 2X	 O_1 2X
 O_2 2X	 P 4X

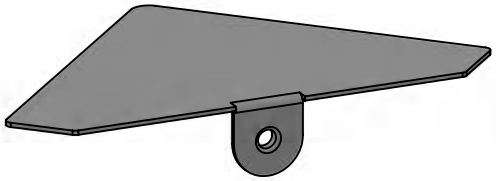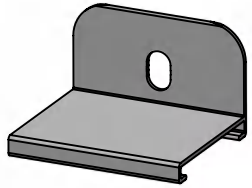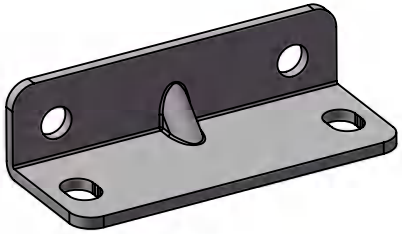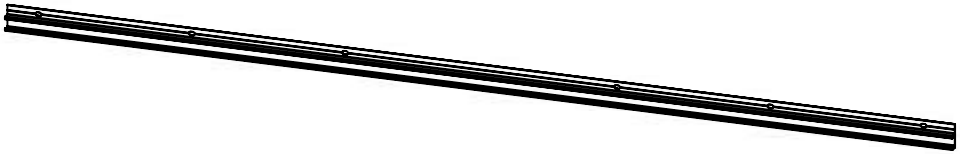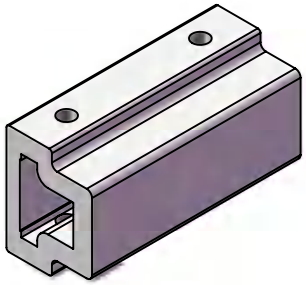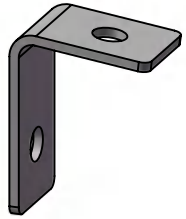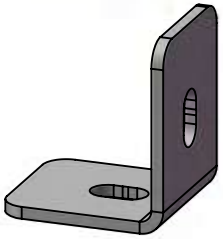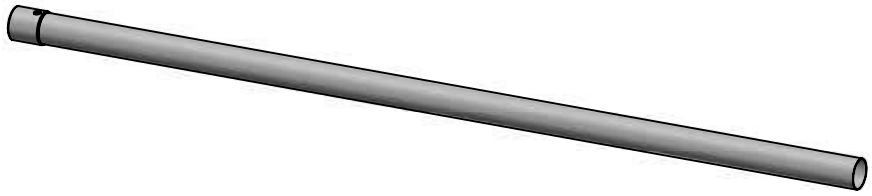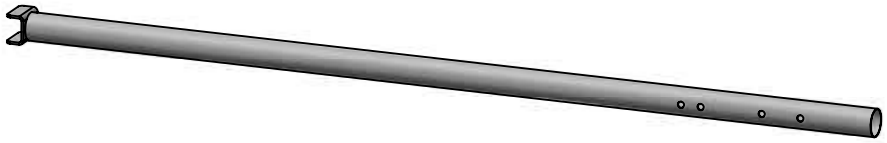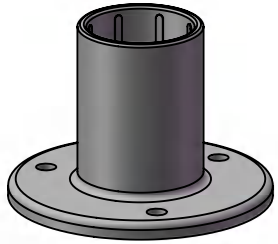
Q 2X 	R_1 20X 
R_2 6X 	S_1 4X 
S_2 8X 	T_1 6X 
T_2 4X 	U_1 2X 
U_2 2X 	U_3 2X 

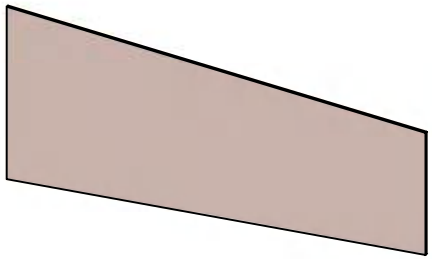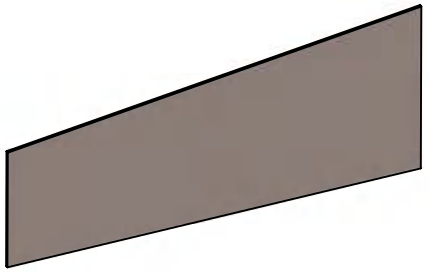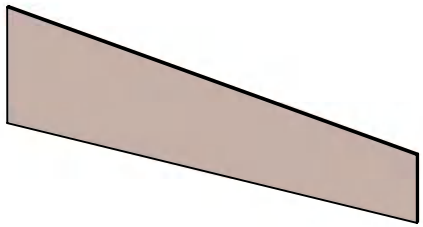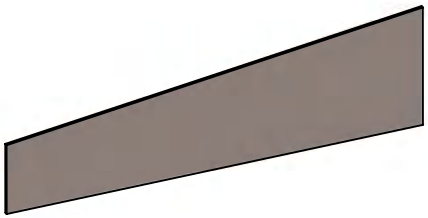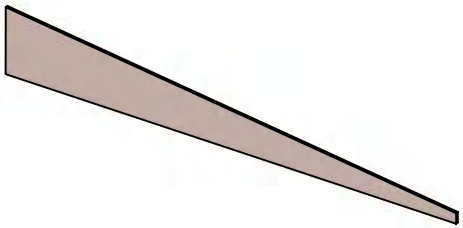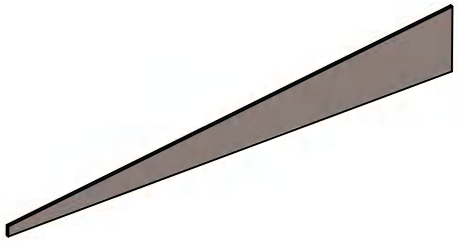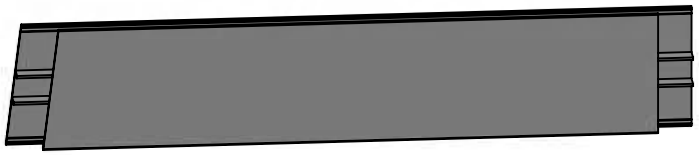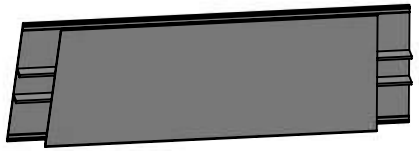V_1 1X 	V_2 1X 
V_3 1X 	V_4 1X 
V_5 1X 	V_6 1X 
V_7 1X 	V_8 1X 
V_9 1X 	V_{10} 1X 

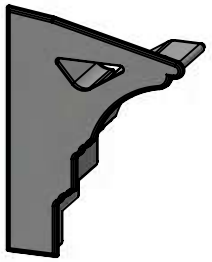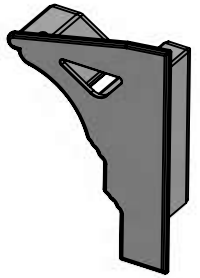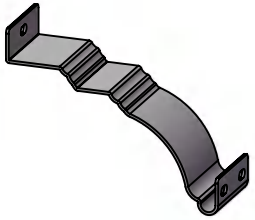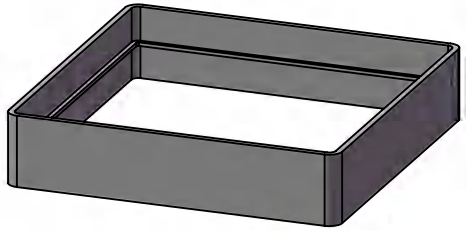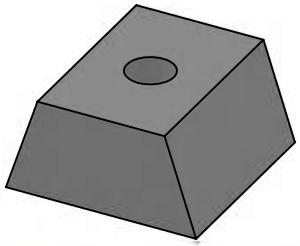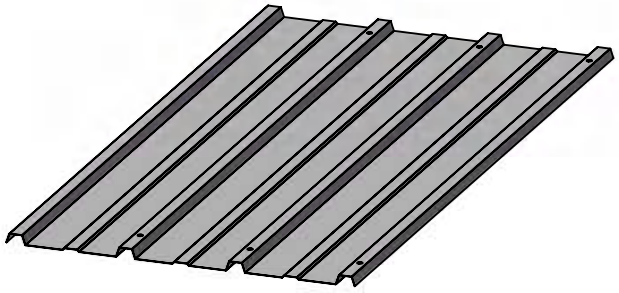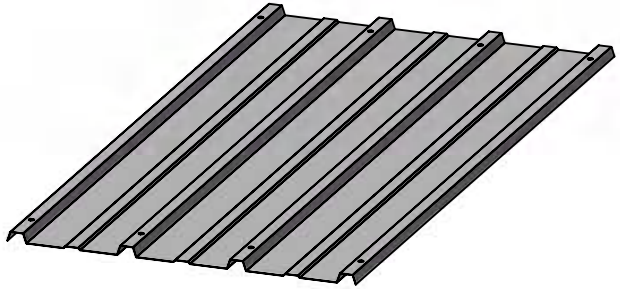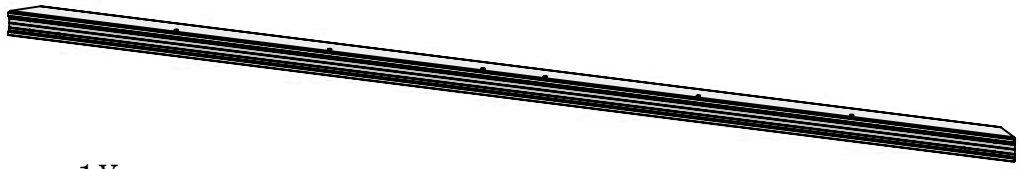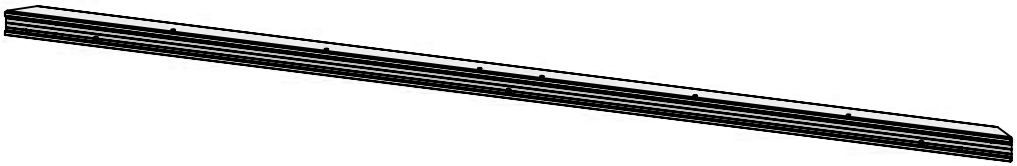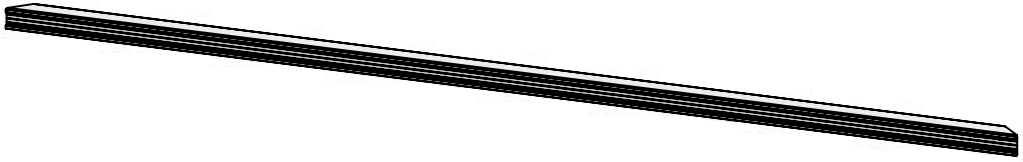
W_1 1X 	W_2 1X 
W_3 1X 	W_4 2X 
X 80X 	Y_1 6X 
Y_2 15X 	Z_1 1X 
Z_2 1X 	Z_3 2X 

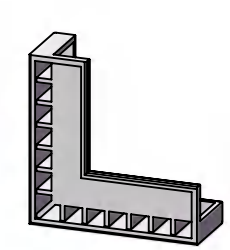


Z_4 4X

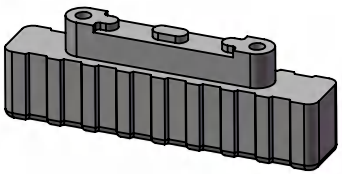


Z_5 4X

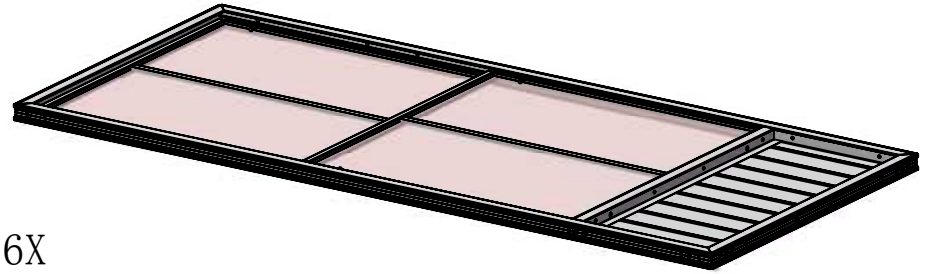


Z_6 6X

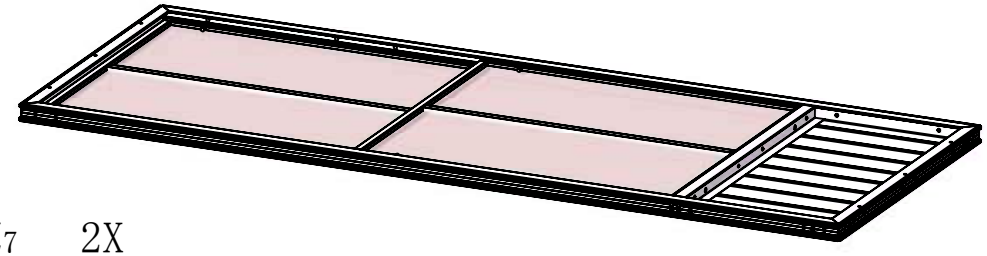

Z_7 2X

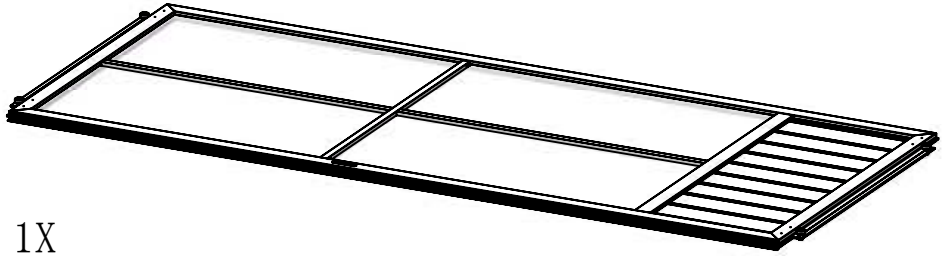










Z_8 1X





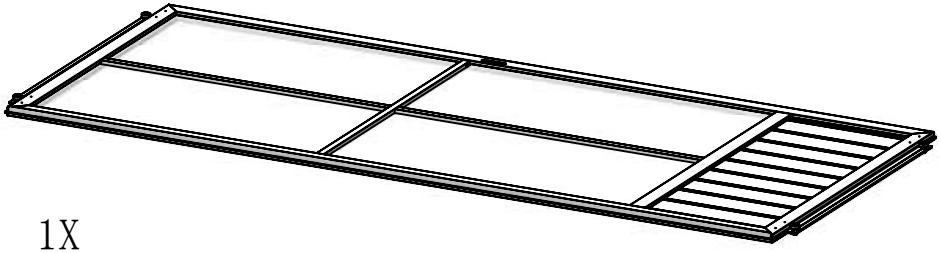


Z_9 1X



Z_{10} 12X

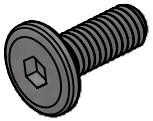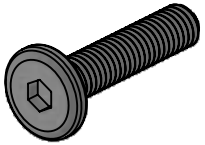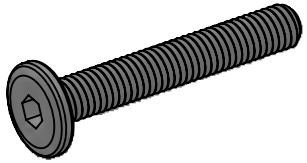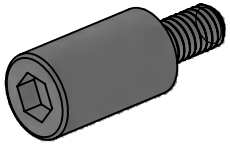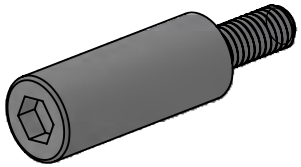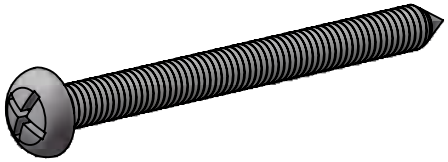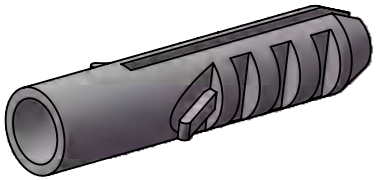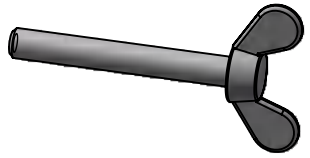 1# 8 ST4.8*13	 2# 2 M5*12	 3# 32 ST3.5*13
 4# 280 M6*16	 5# 80 M6*28	 6# 8 M6*40
 7# 2 M6*12(L20)	 8# 6 M6*15(L30)	 9# 10 ST6*70
 10# 10	 11# 80 M6	 12# 2 M8*60
 13# 2 M8	 14# 2 M8	 15# 1

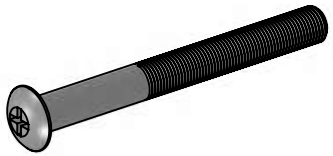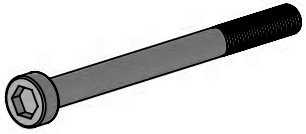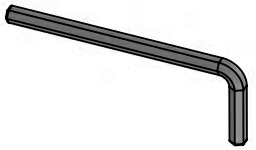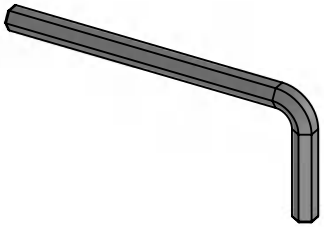
 16# 16 S3.5*19	 17# 24 M5*48	 18# 24 M5
 19# 24 M5	 20# 4 M4*50	 21# 4 M4
 22# 1 S8	 23# 1 S13	 24# 1 S4
 25# 1 S6	 26# 1 S3	




A1 1X




A2 1X




N1 2X

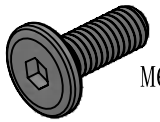



4# 6X

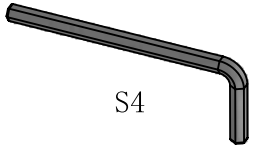



24# 1X

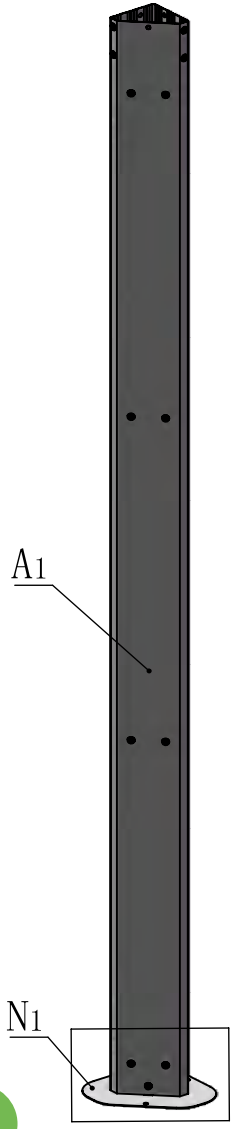

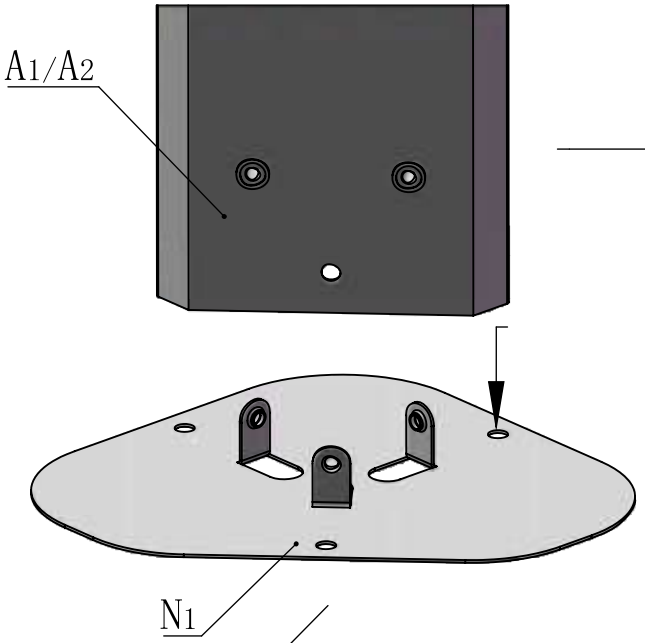


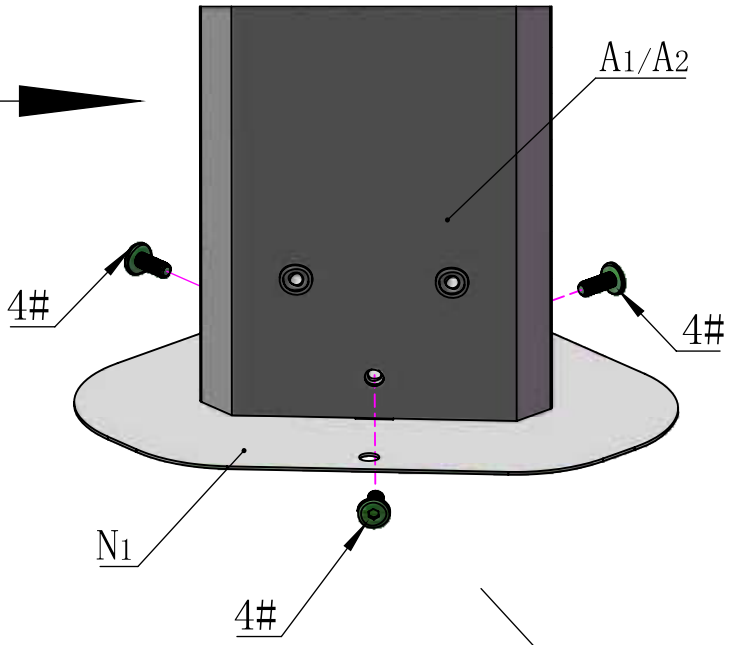

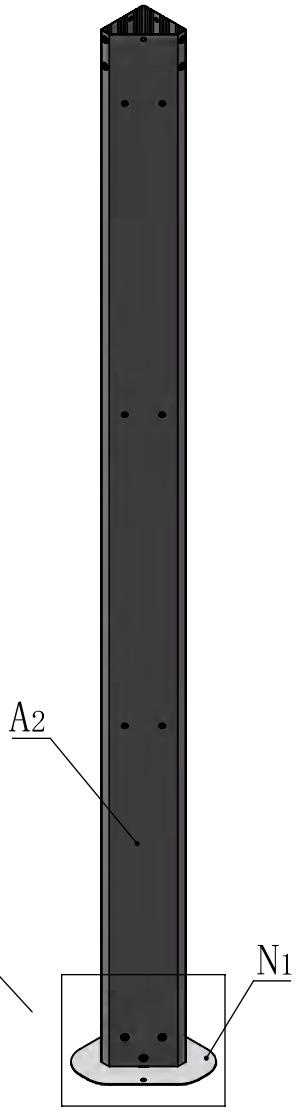


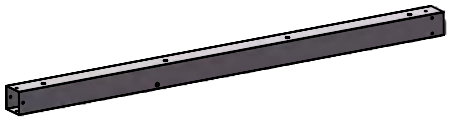

A3 1X




A4 1X




N2 2X





4# 8X

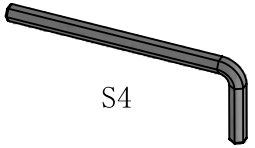



24# 1X

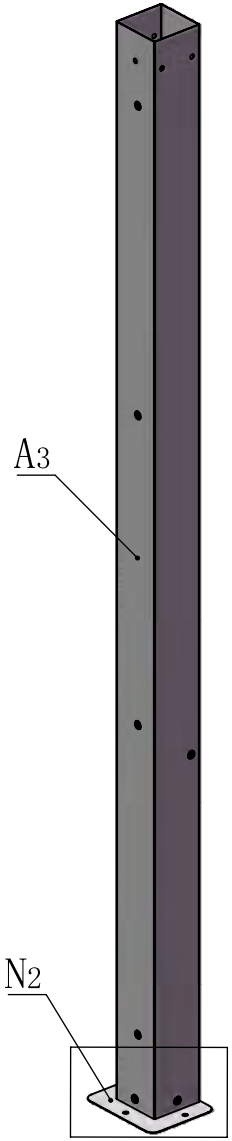

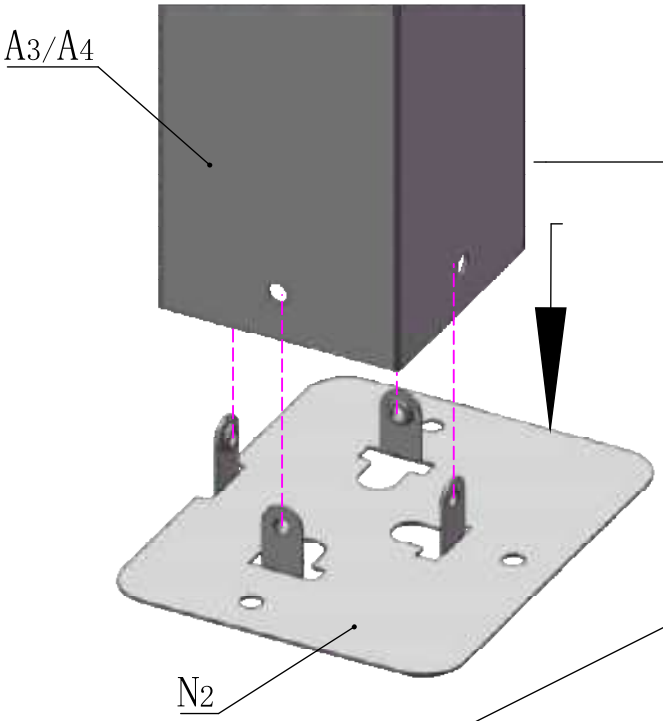


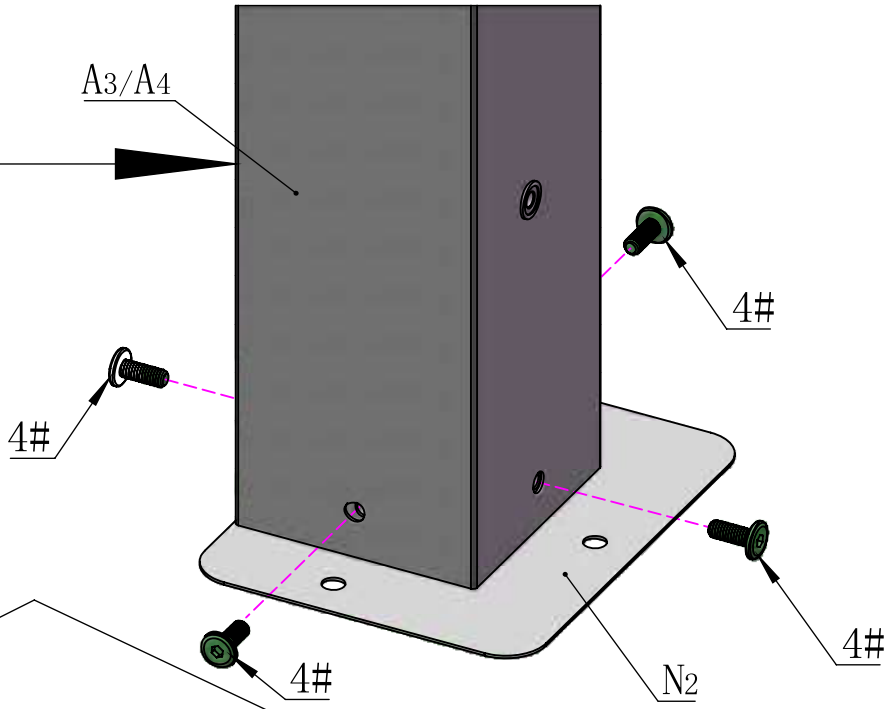

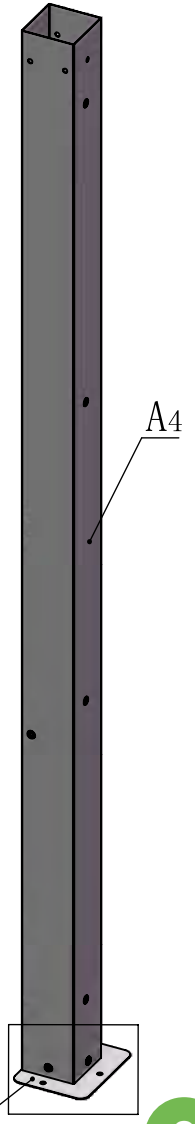


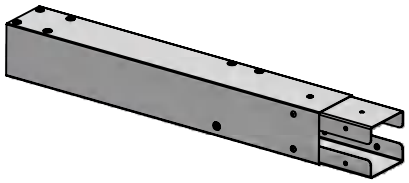


A5 1X

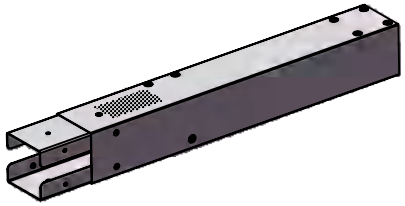


A6 1X




W4 2X

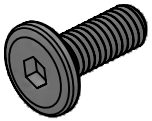



4# 12X

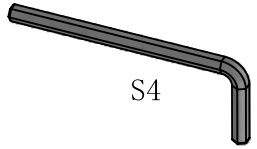



24# 1X

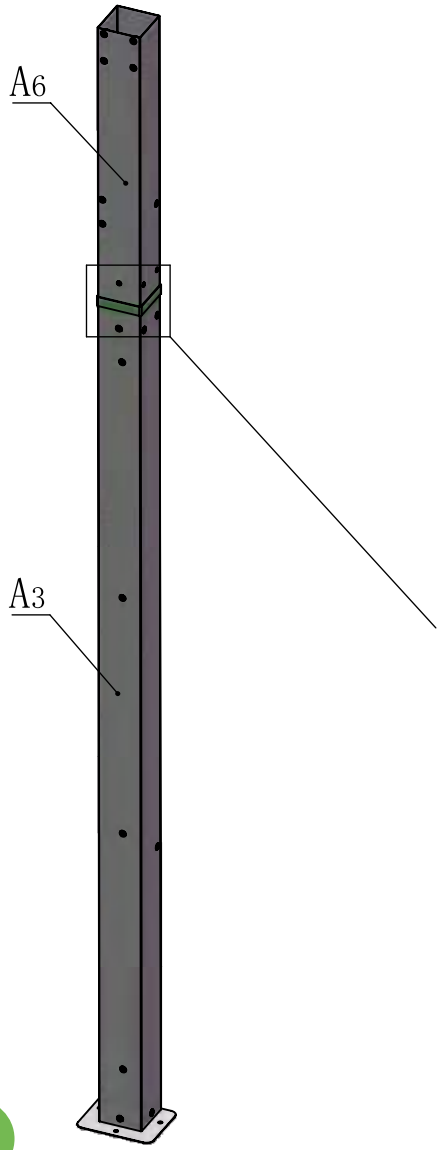

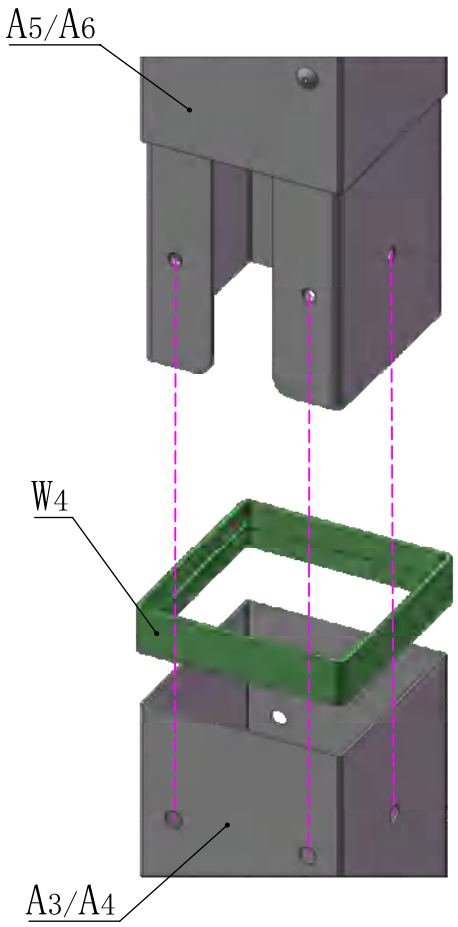


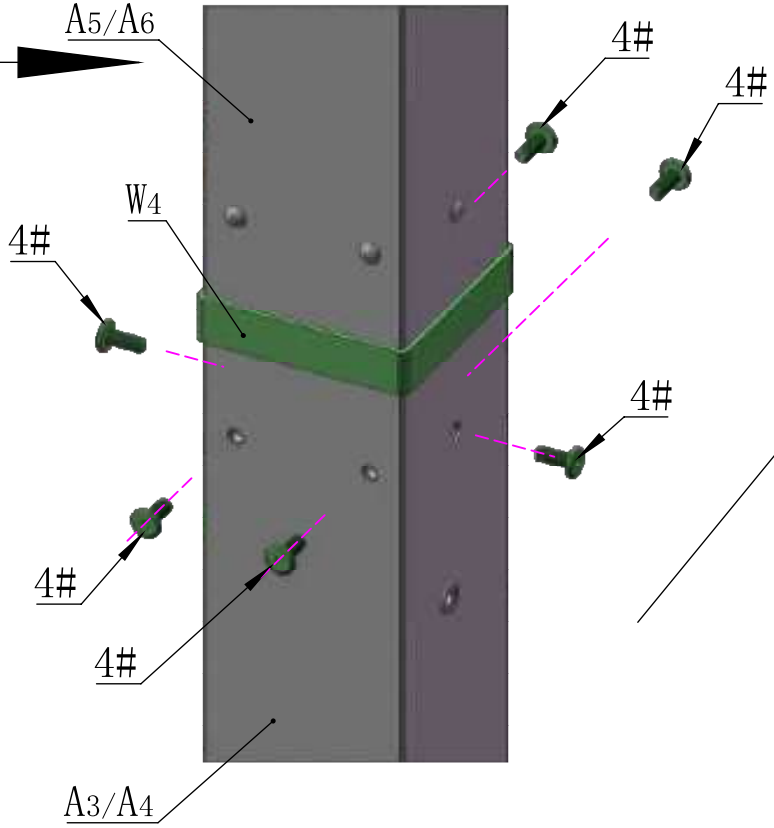

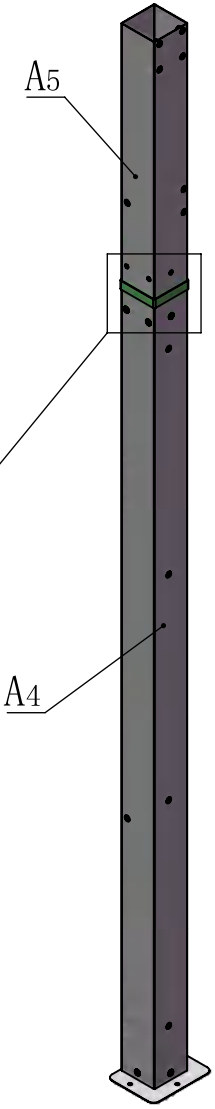


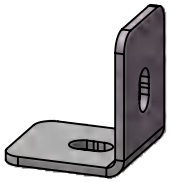

T2 4X

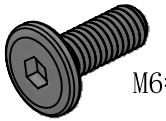


4# 4X

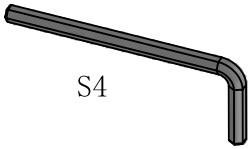



24# 1X

⚠The bracket #2 is used to fix the post against the wall. If you don't need that, please retain for future use. If you don't need this, please skip this step.

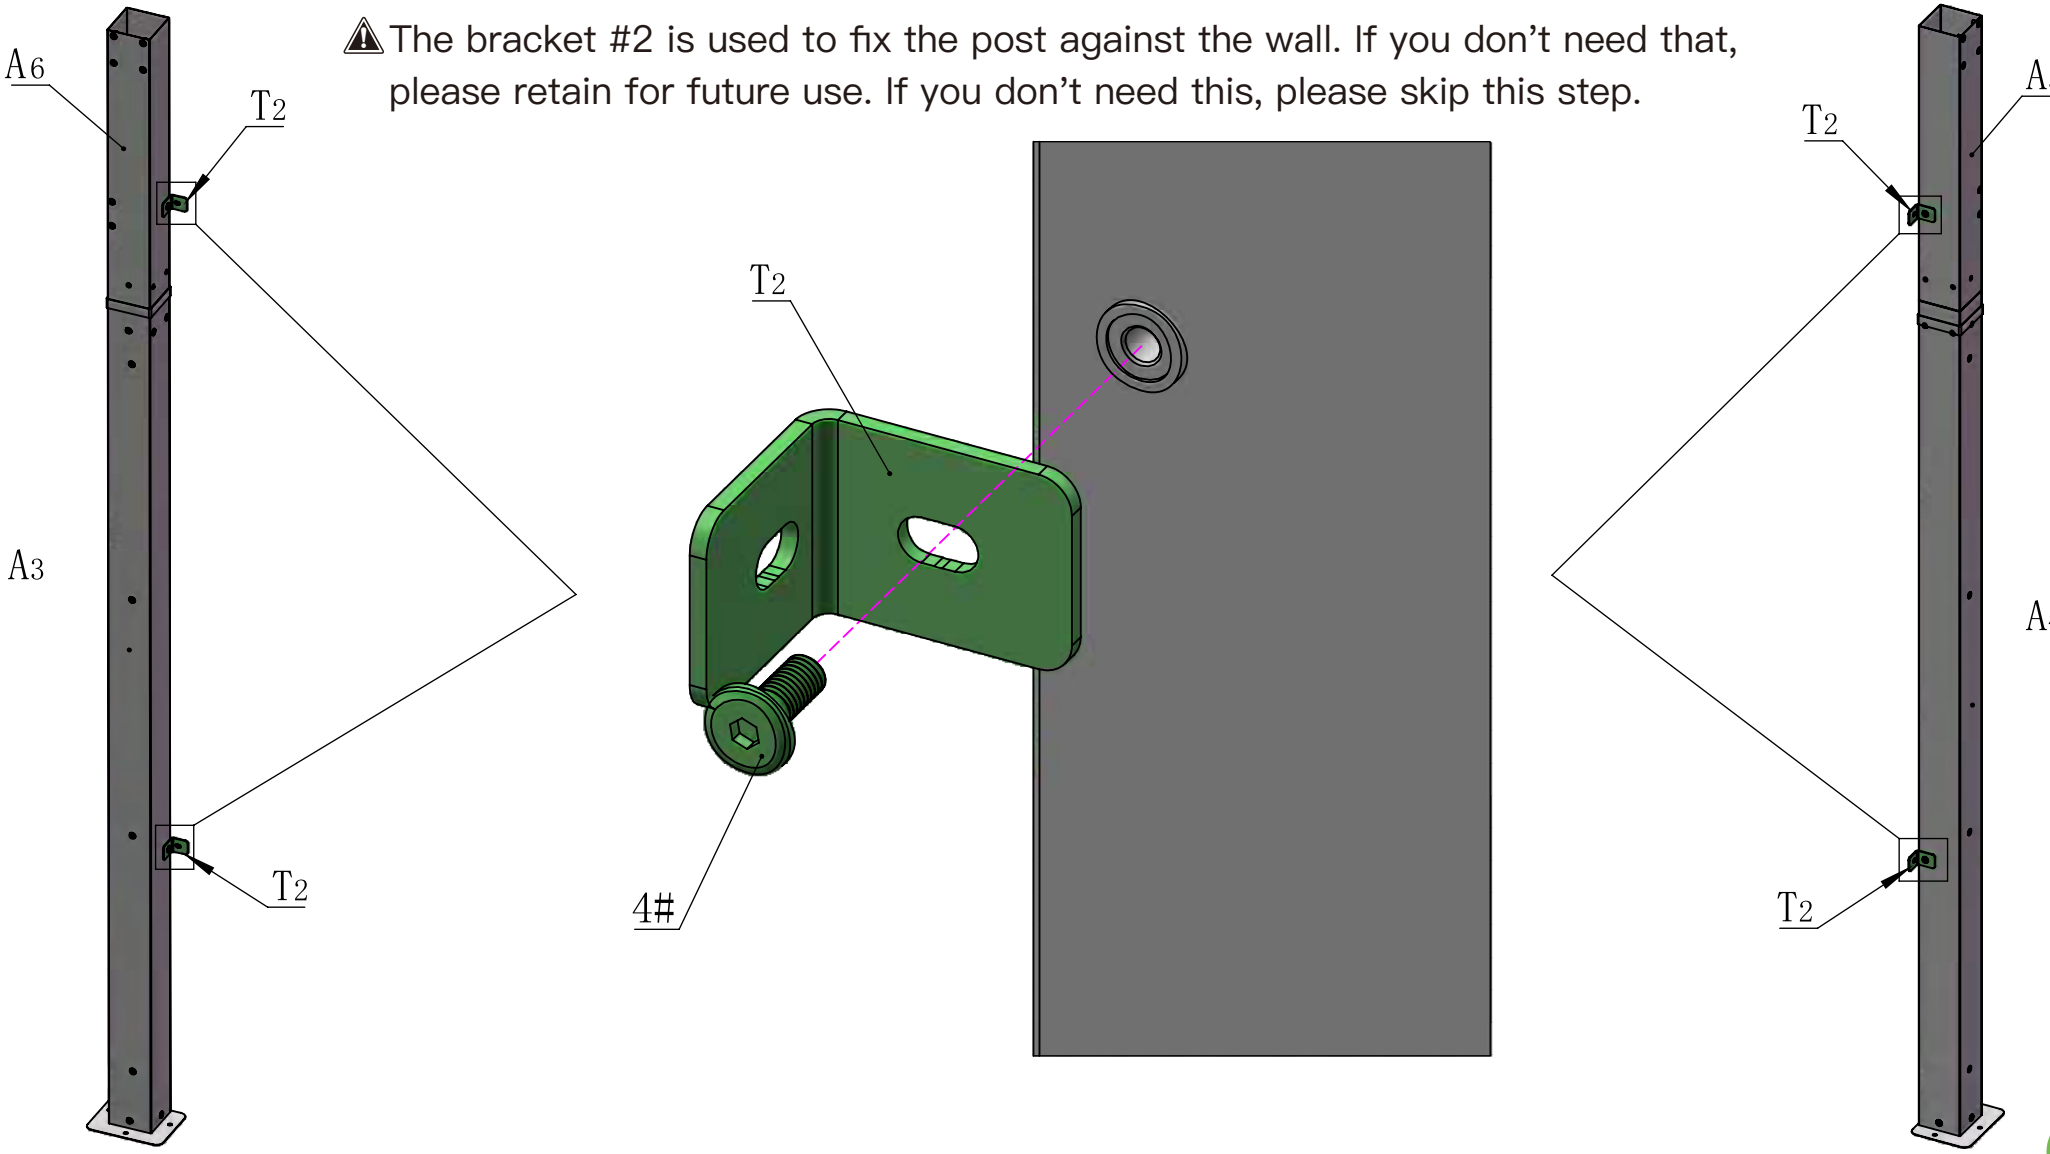


Front Beam Assembly

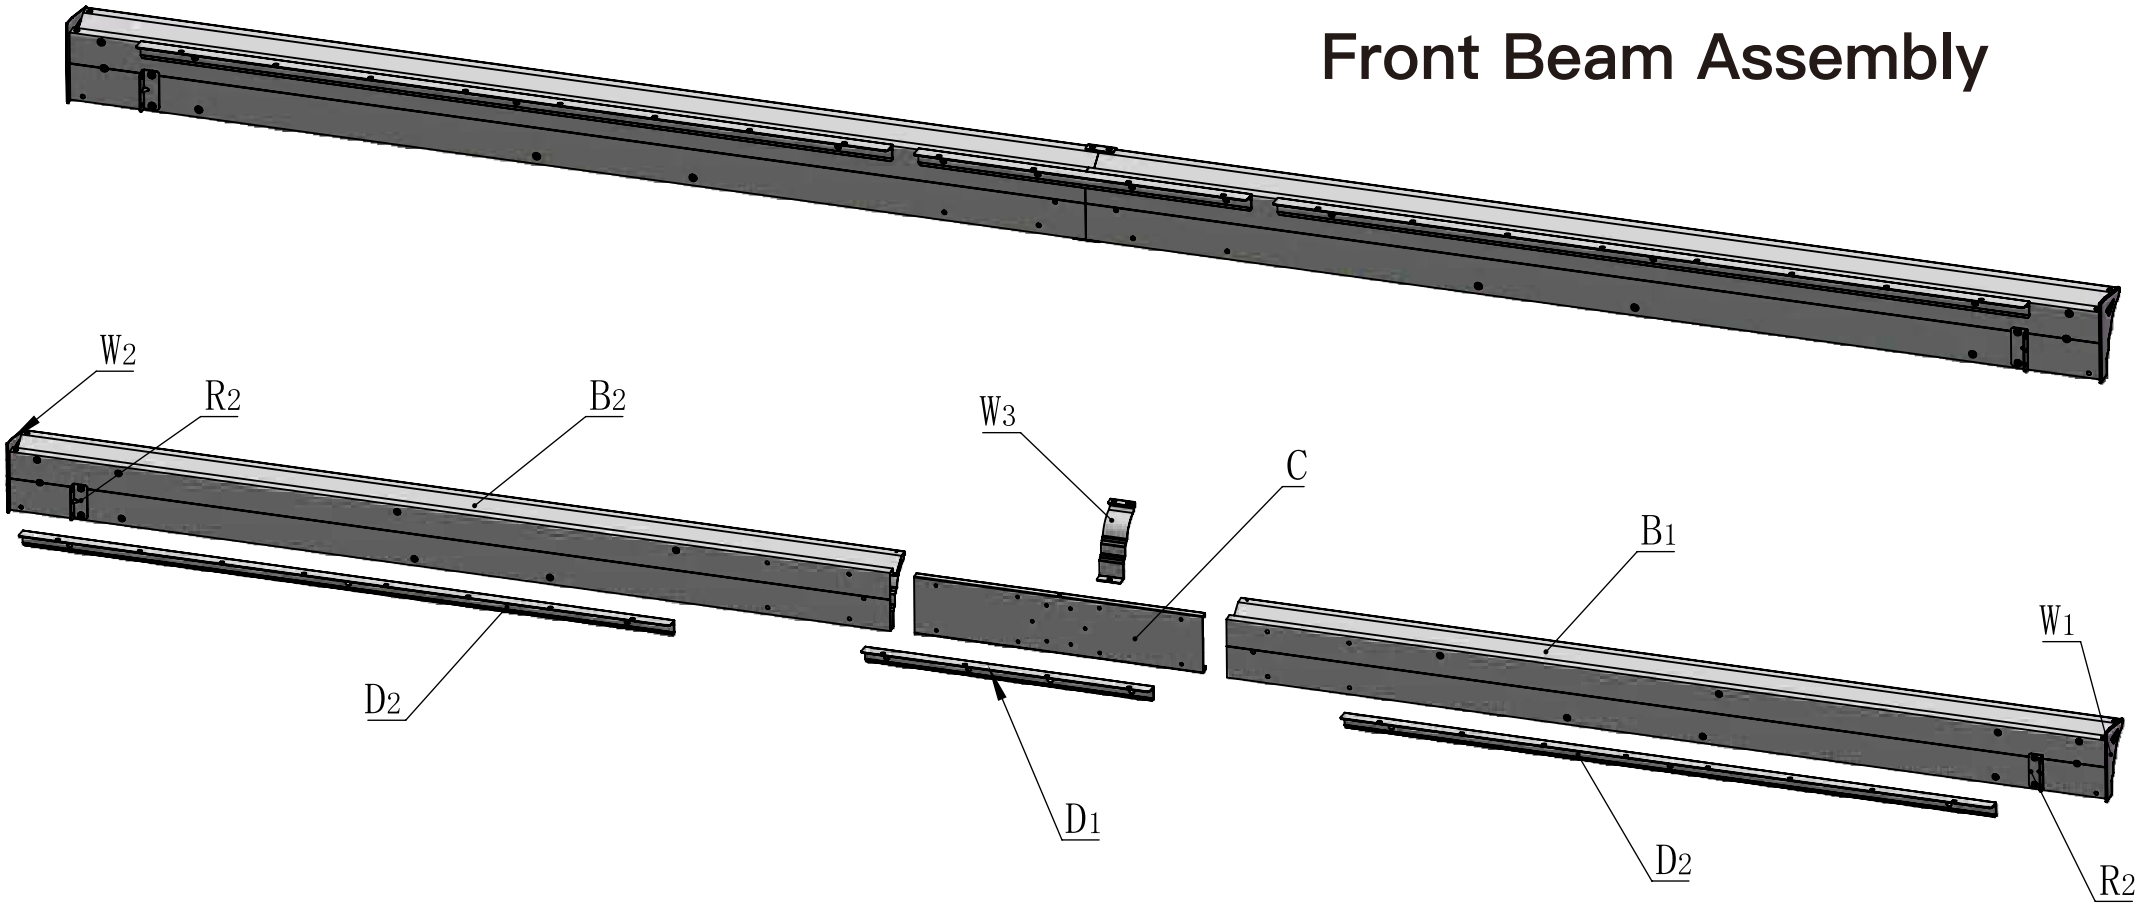

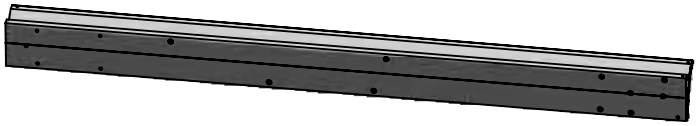


B1 1X

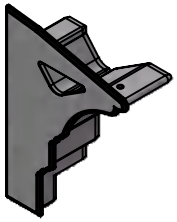


W1 1X




1# 3X

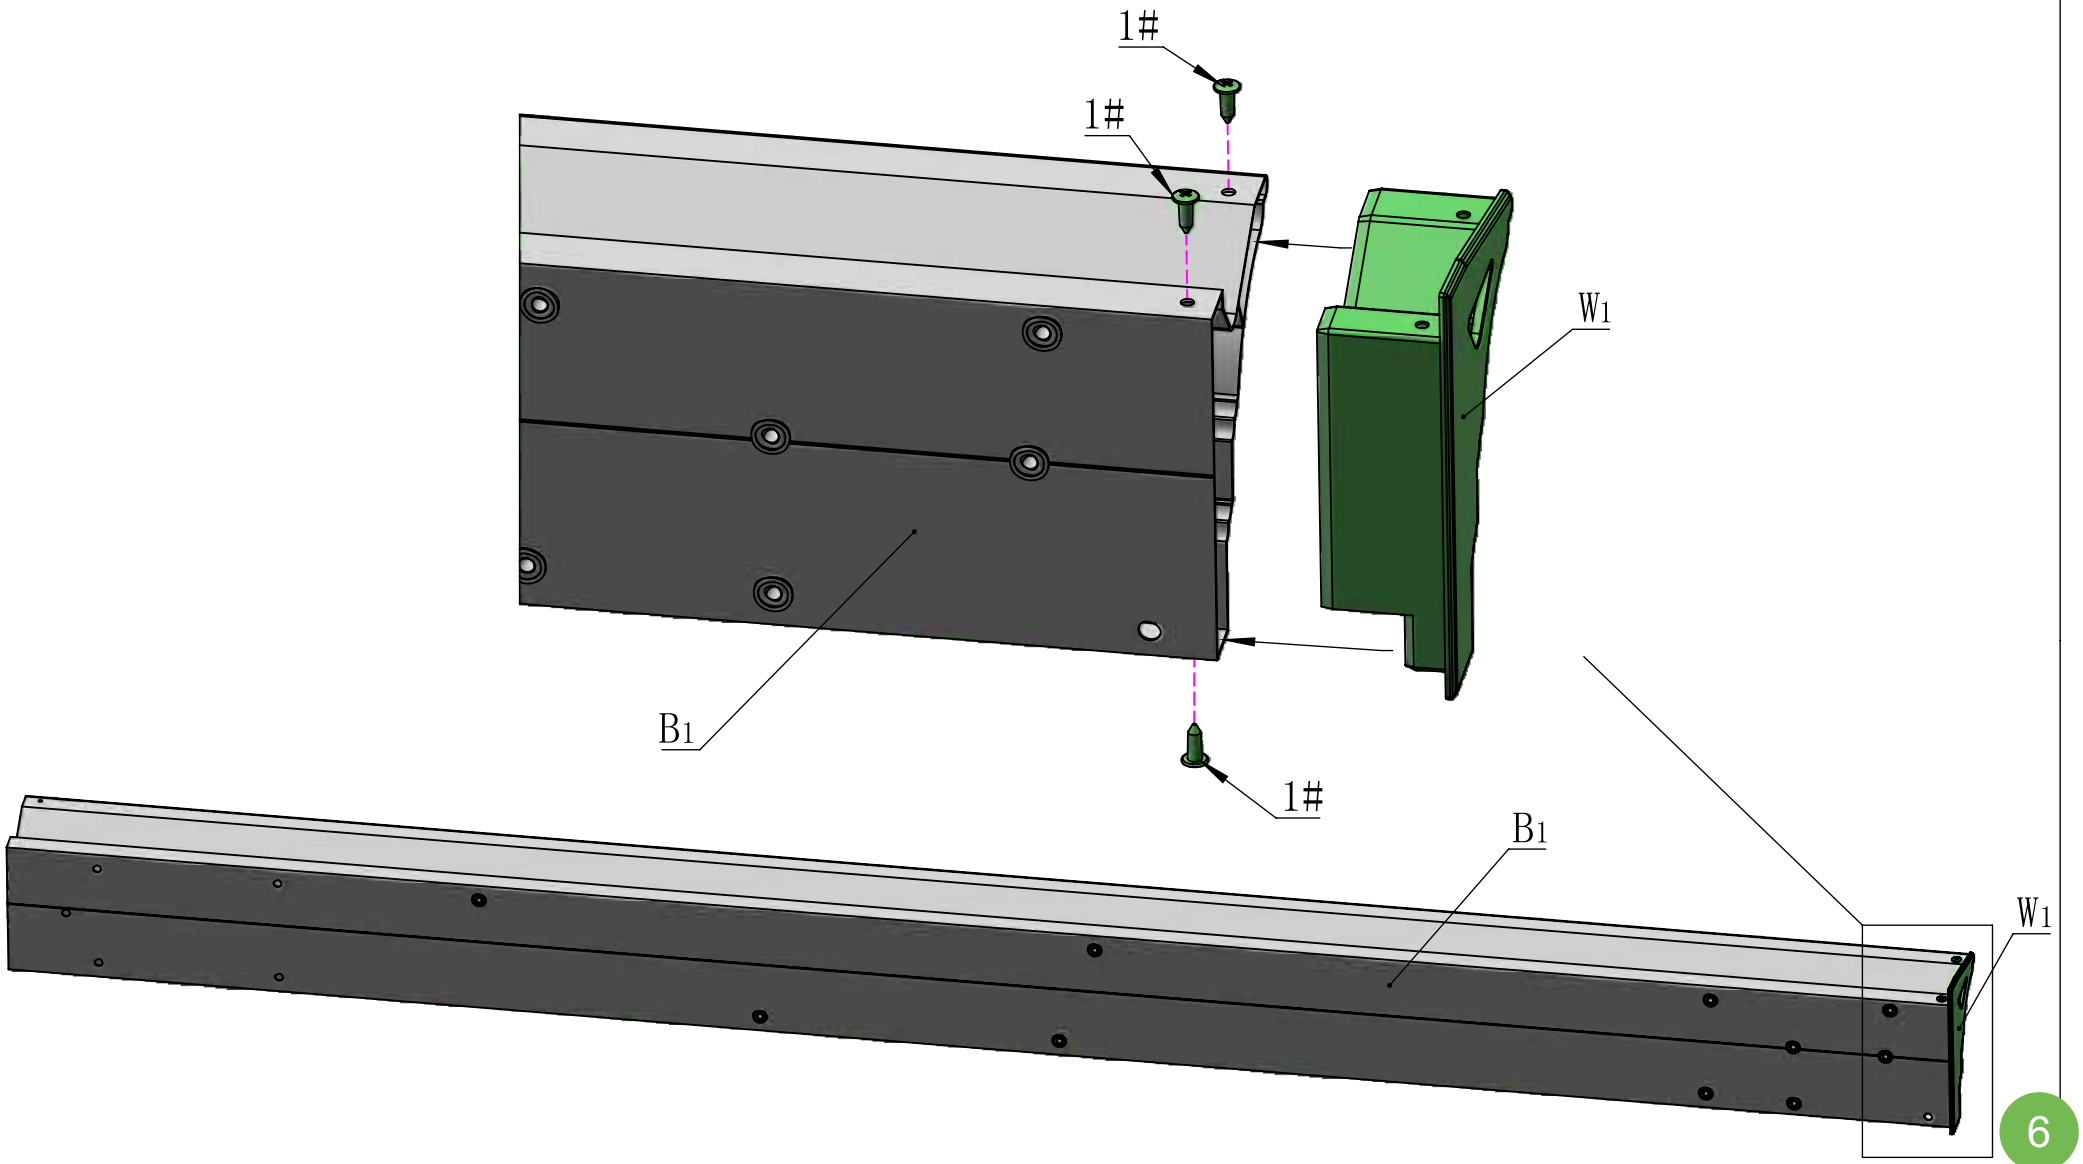


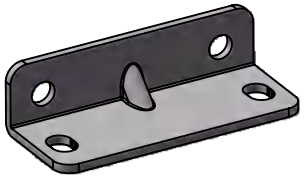


R2 1X

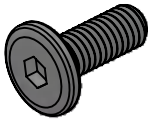


4# 2X

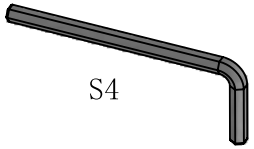


24# 1X

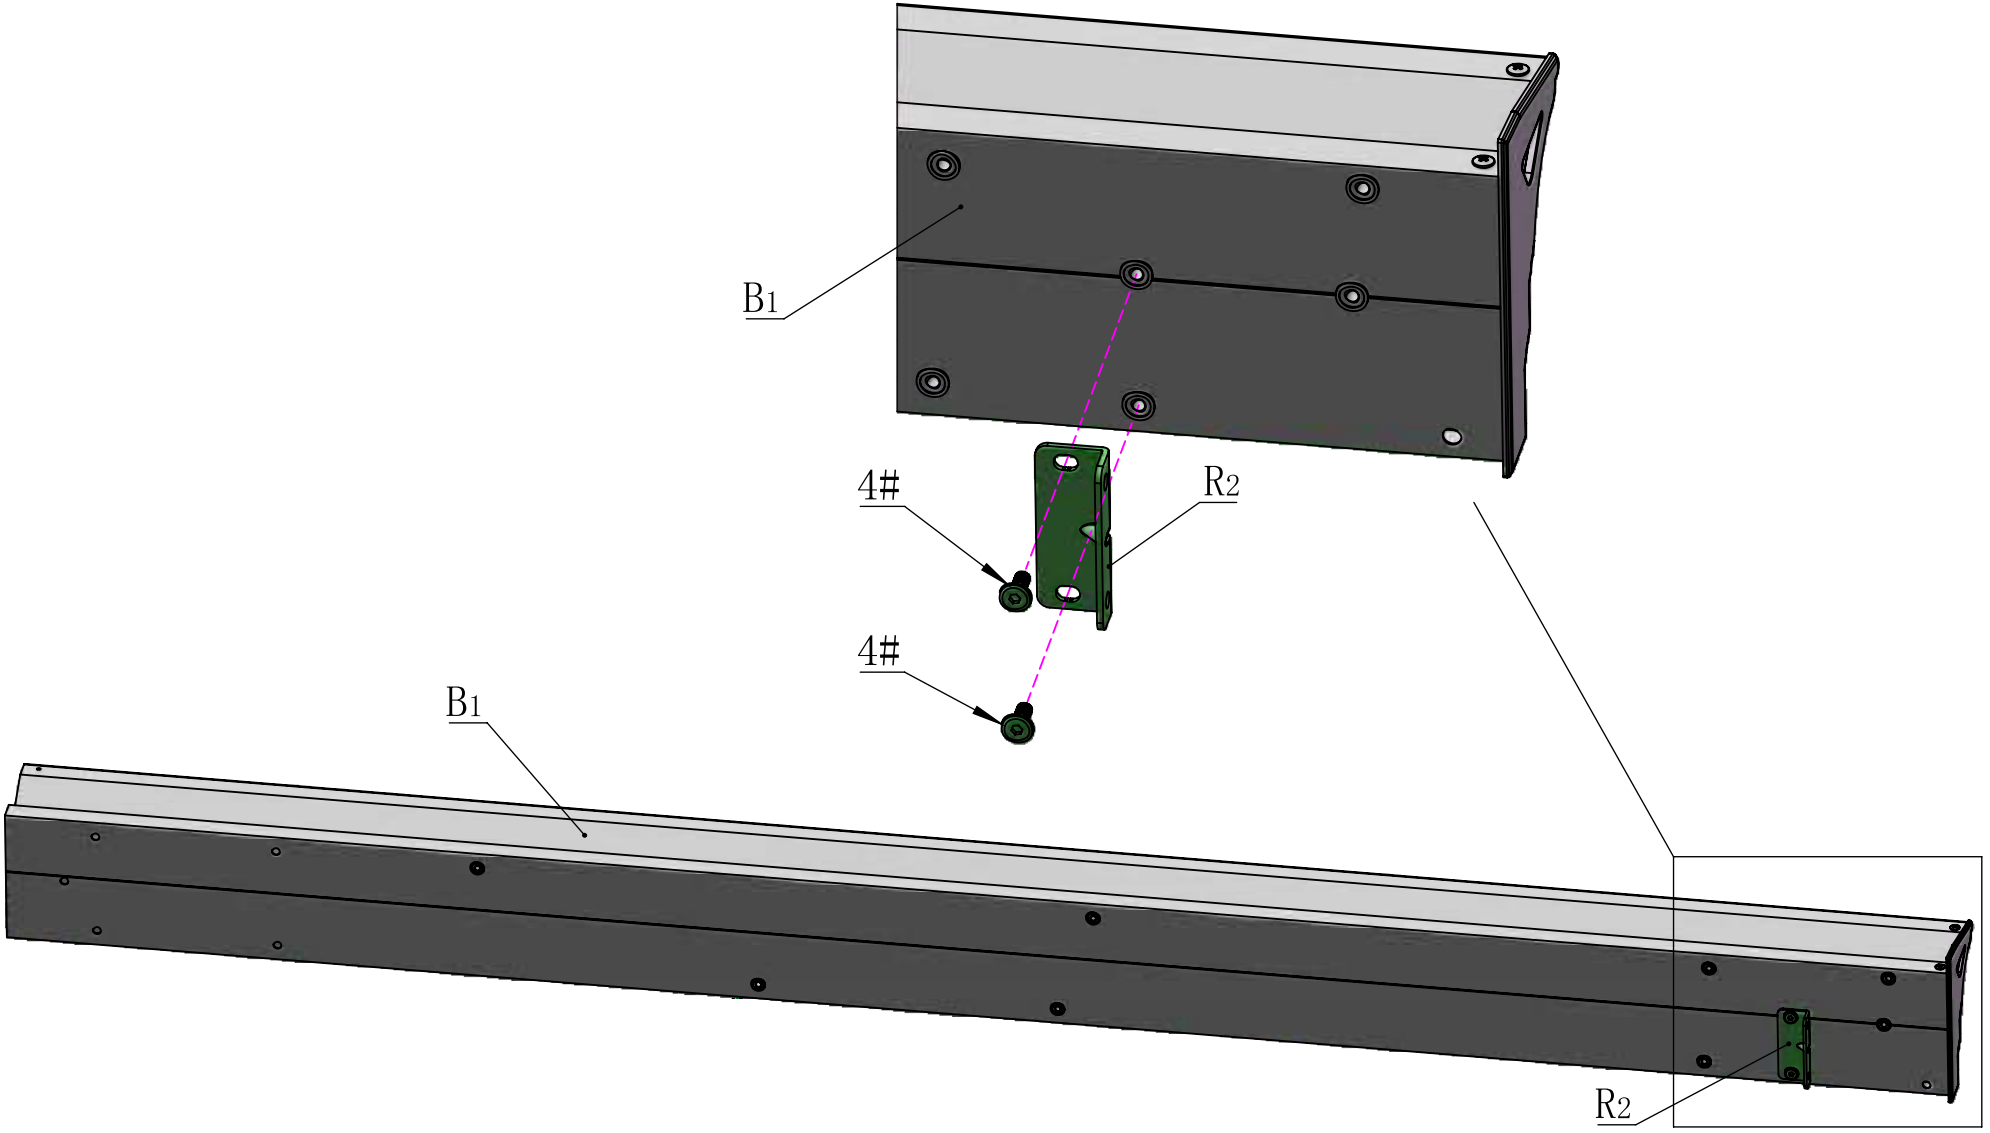




B2 1X

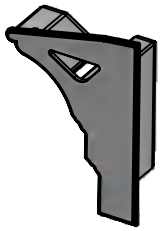


W2 1X




1# 3X

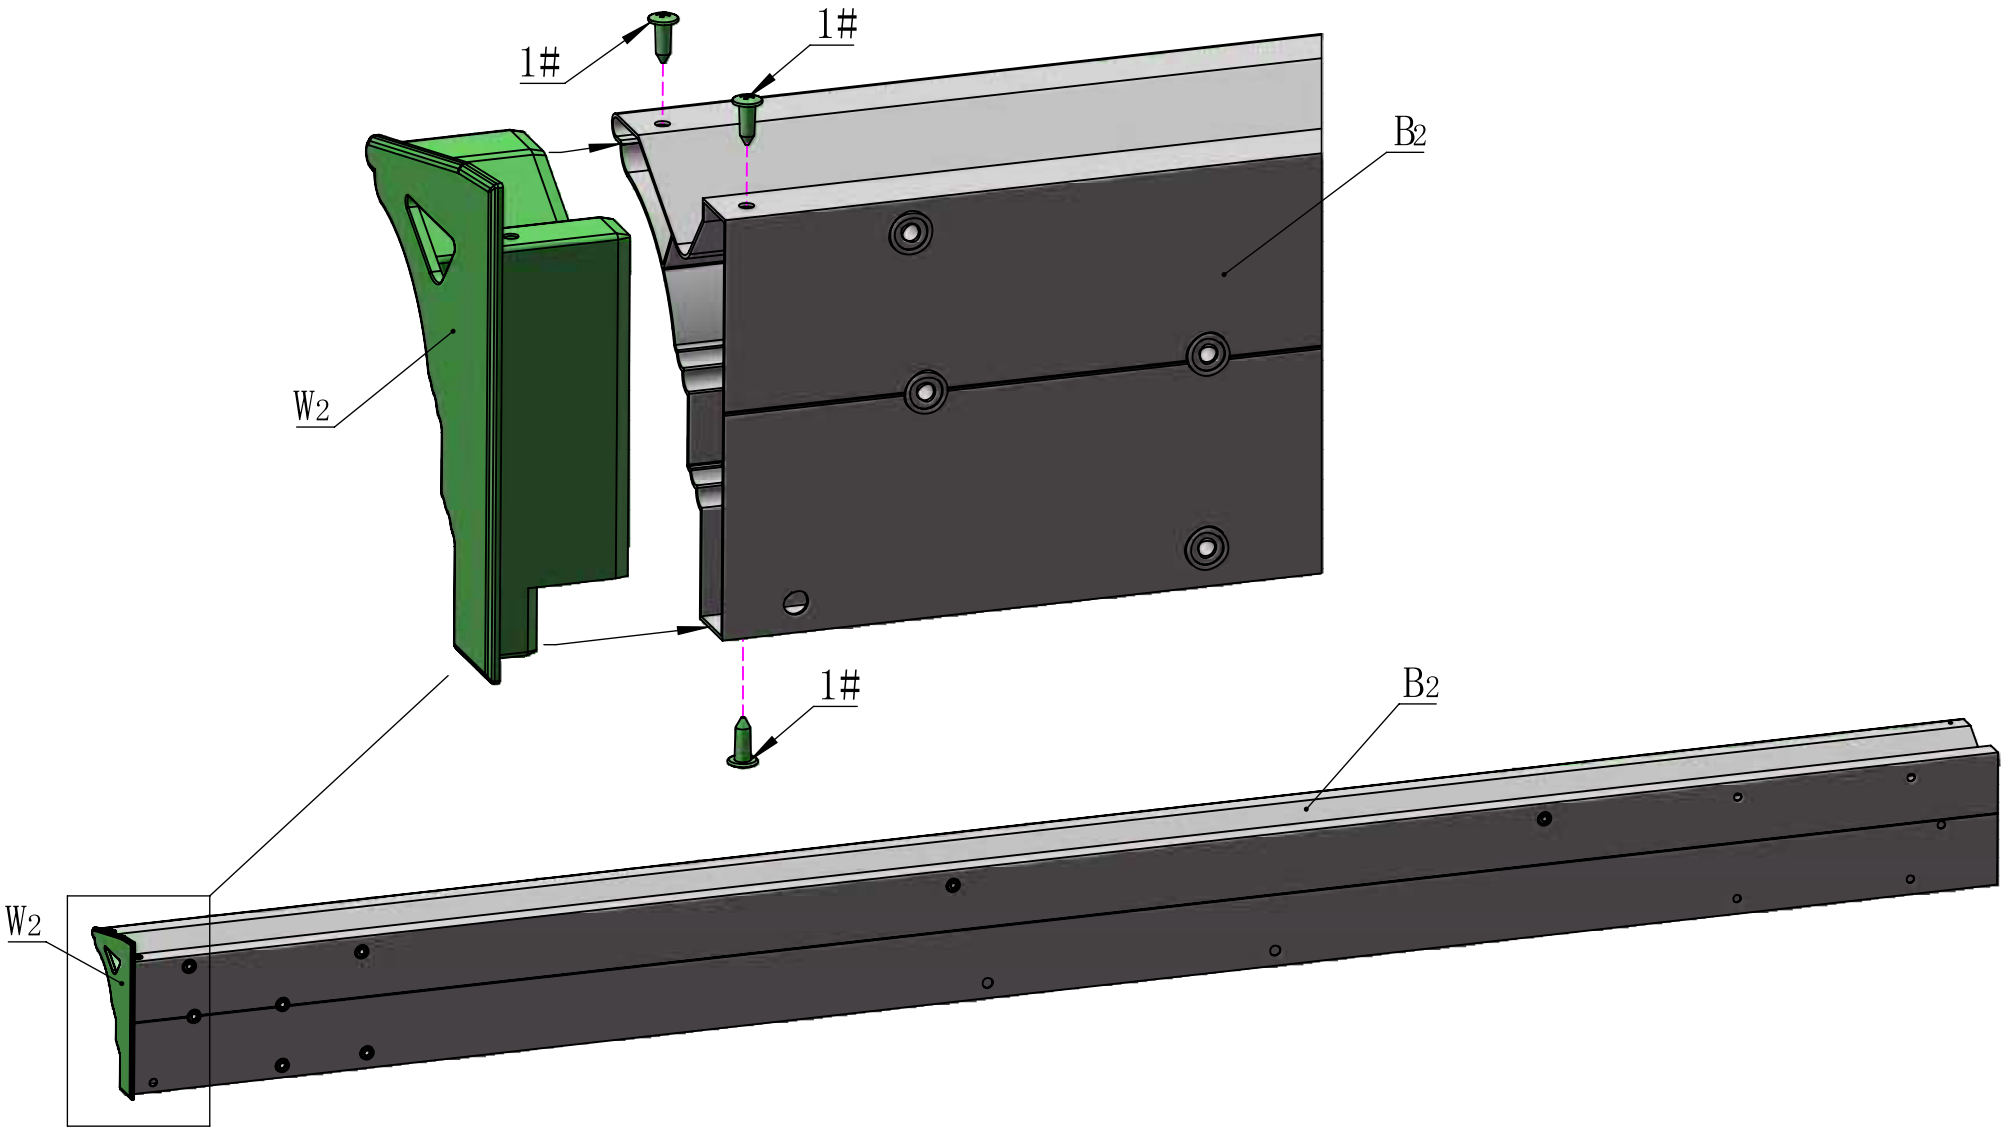


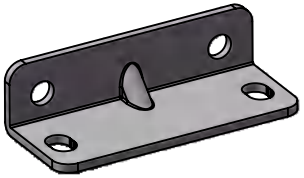


R2 1X

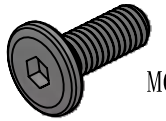


4# 2X

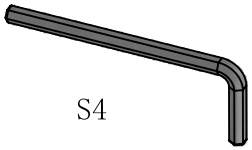


24# 1X

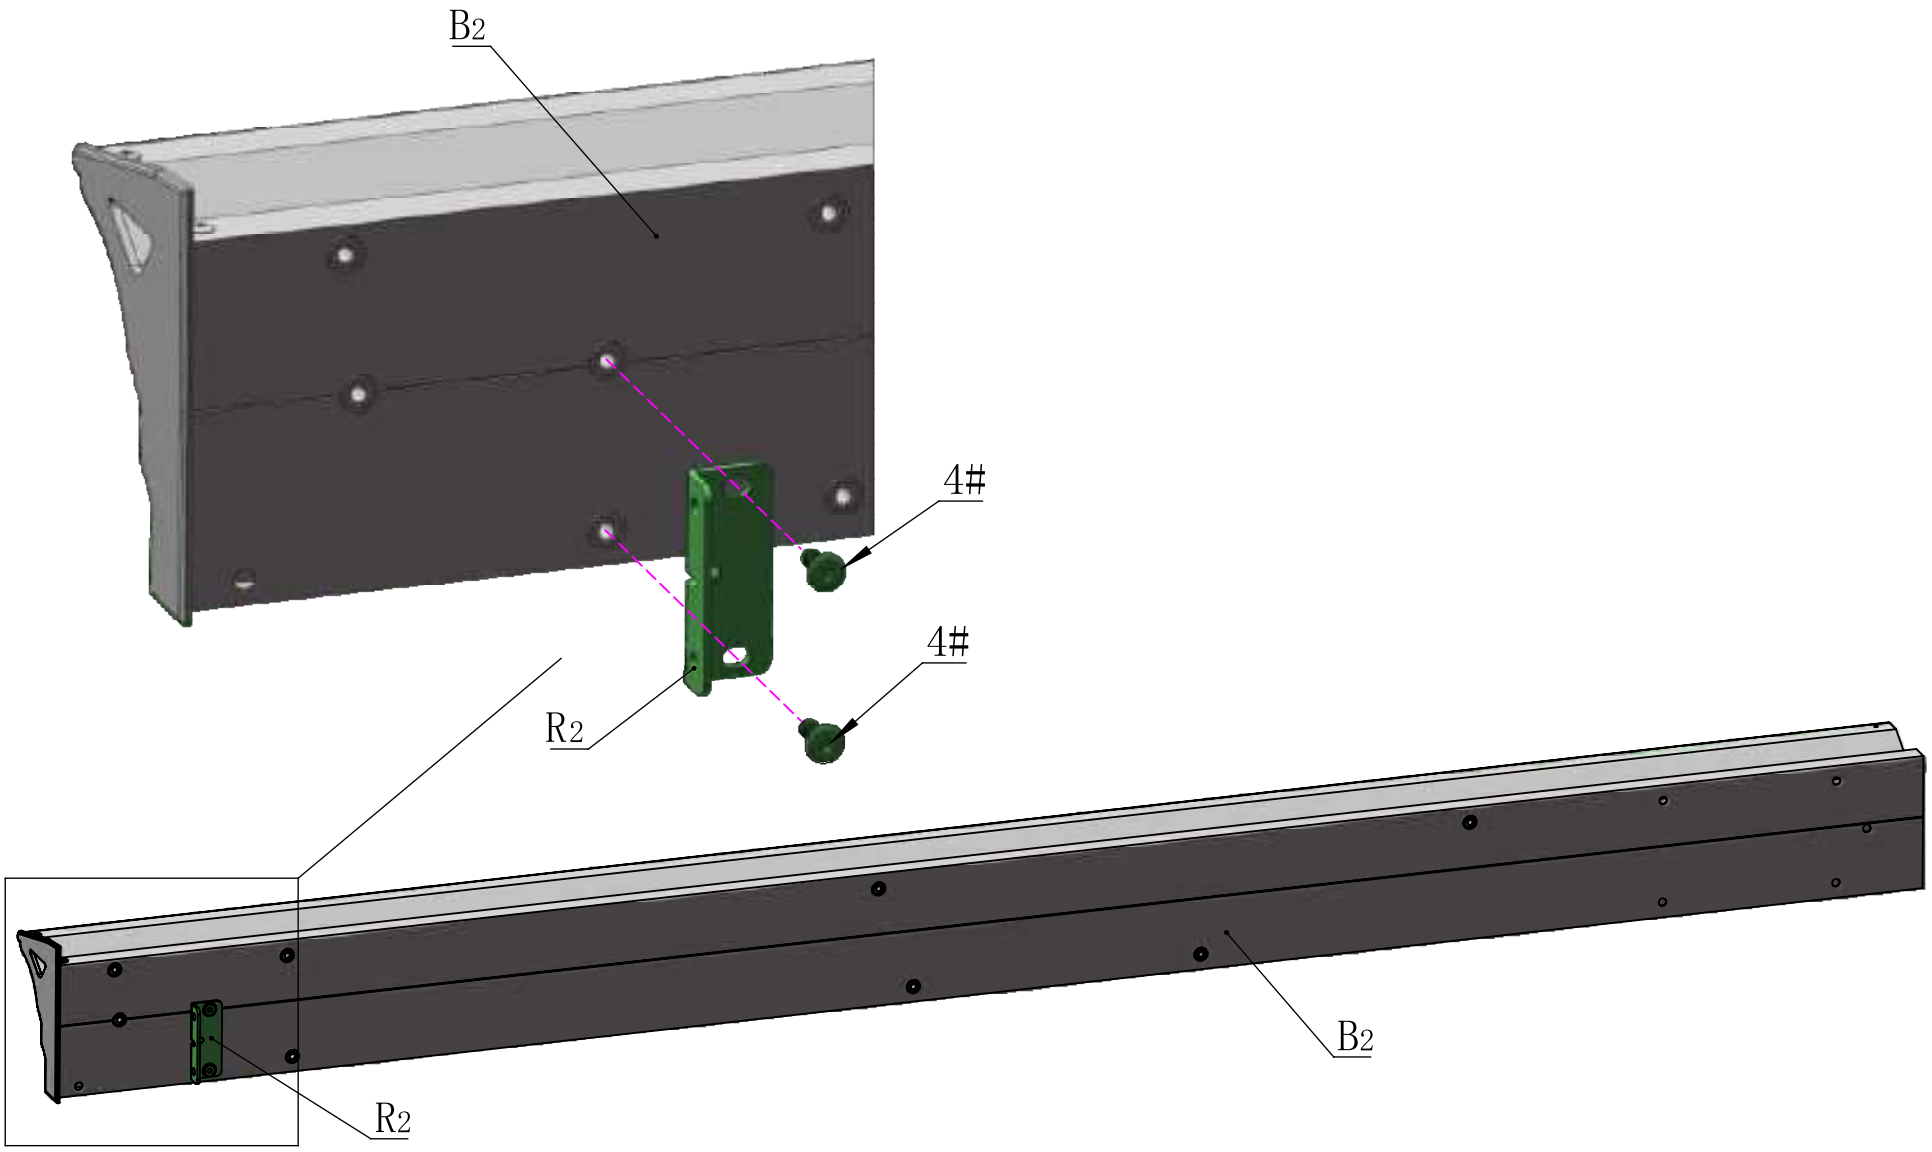


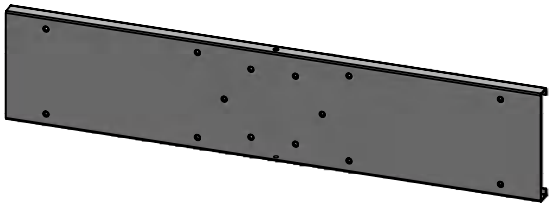


C 1X

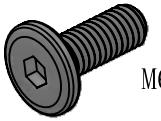


4# 4X

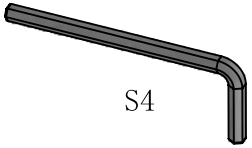


24# 1X

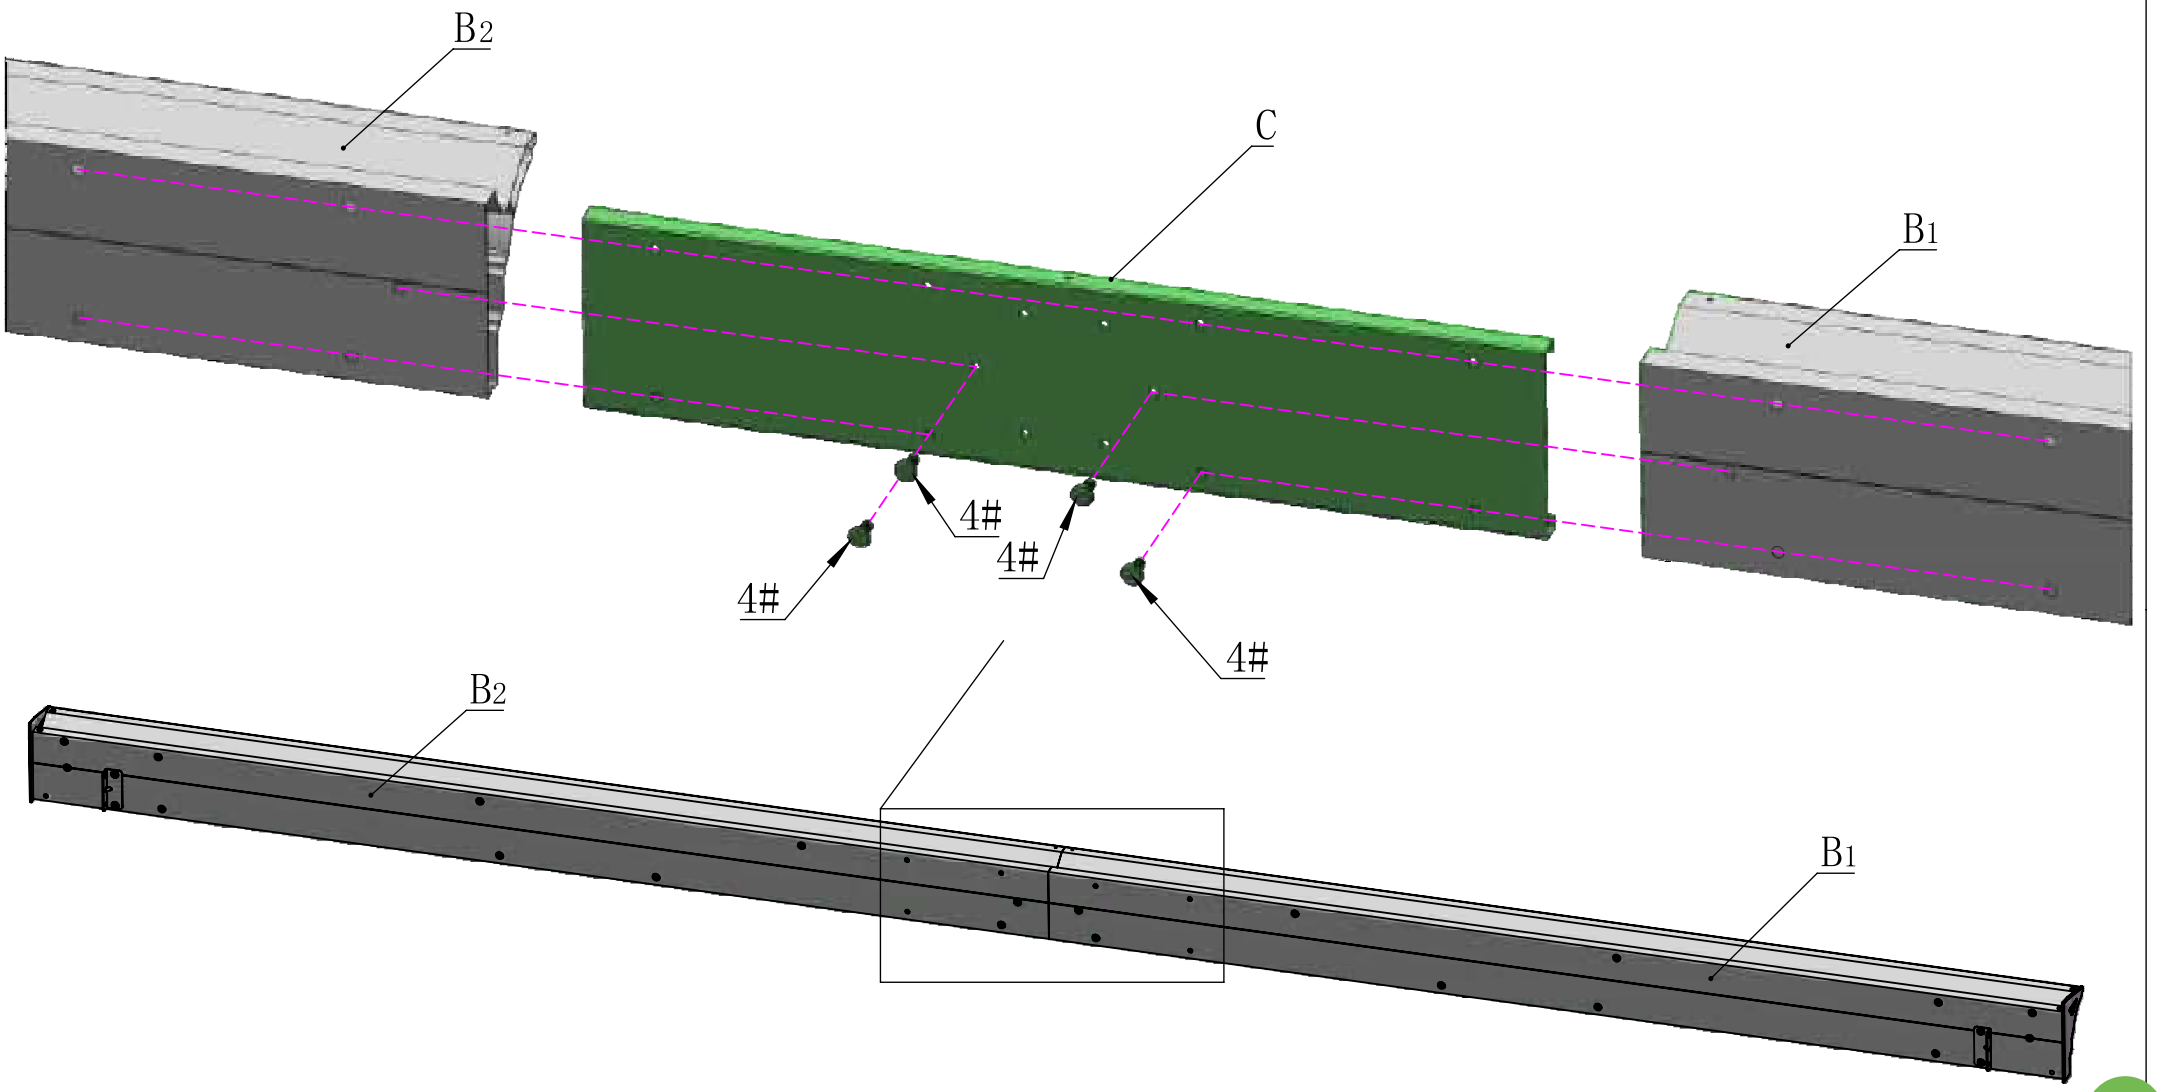


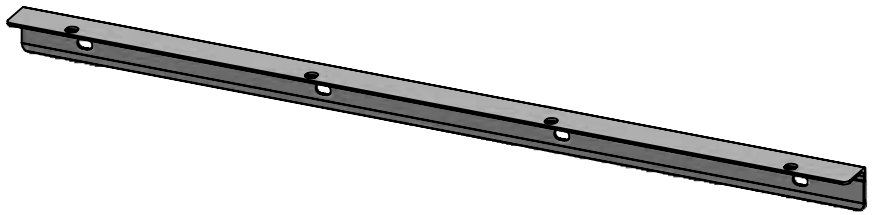


D 1　　1X

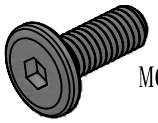


4#　　4X

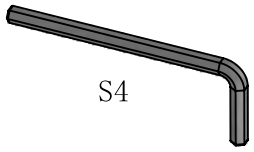


24#　　1X

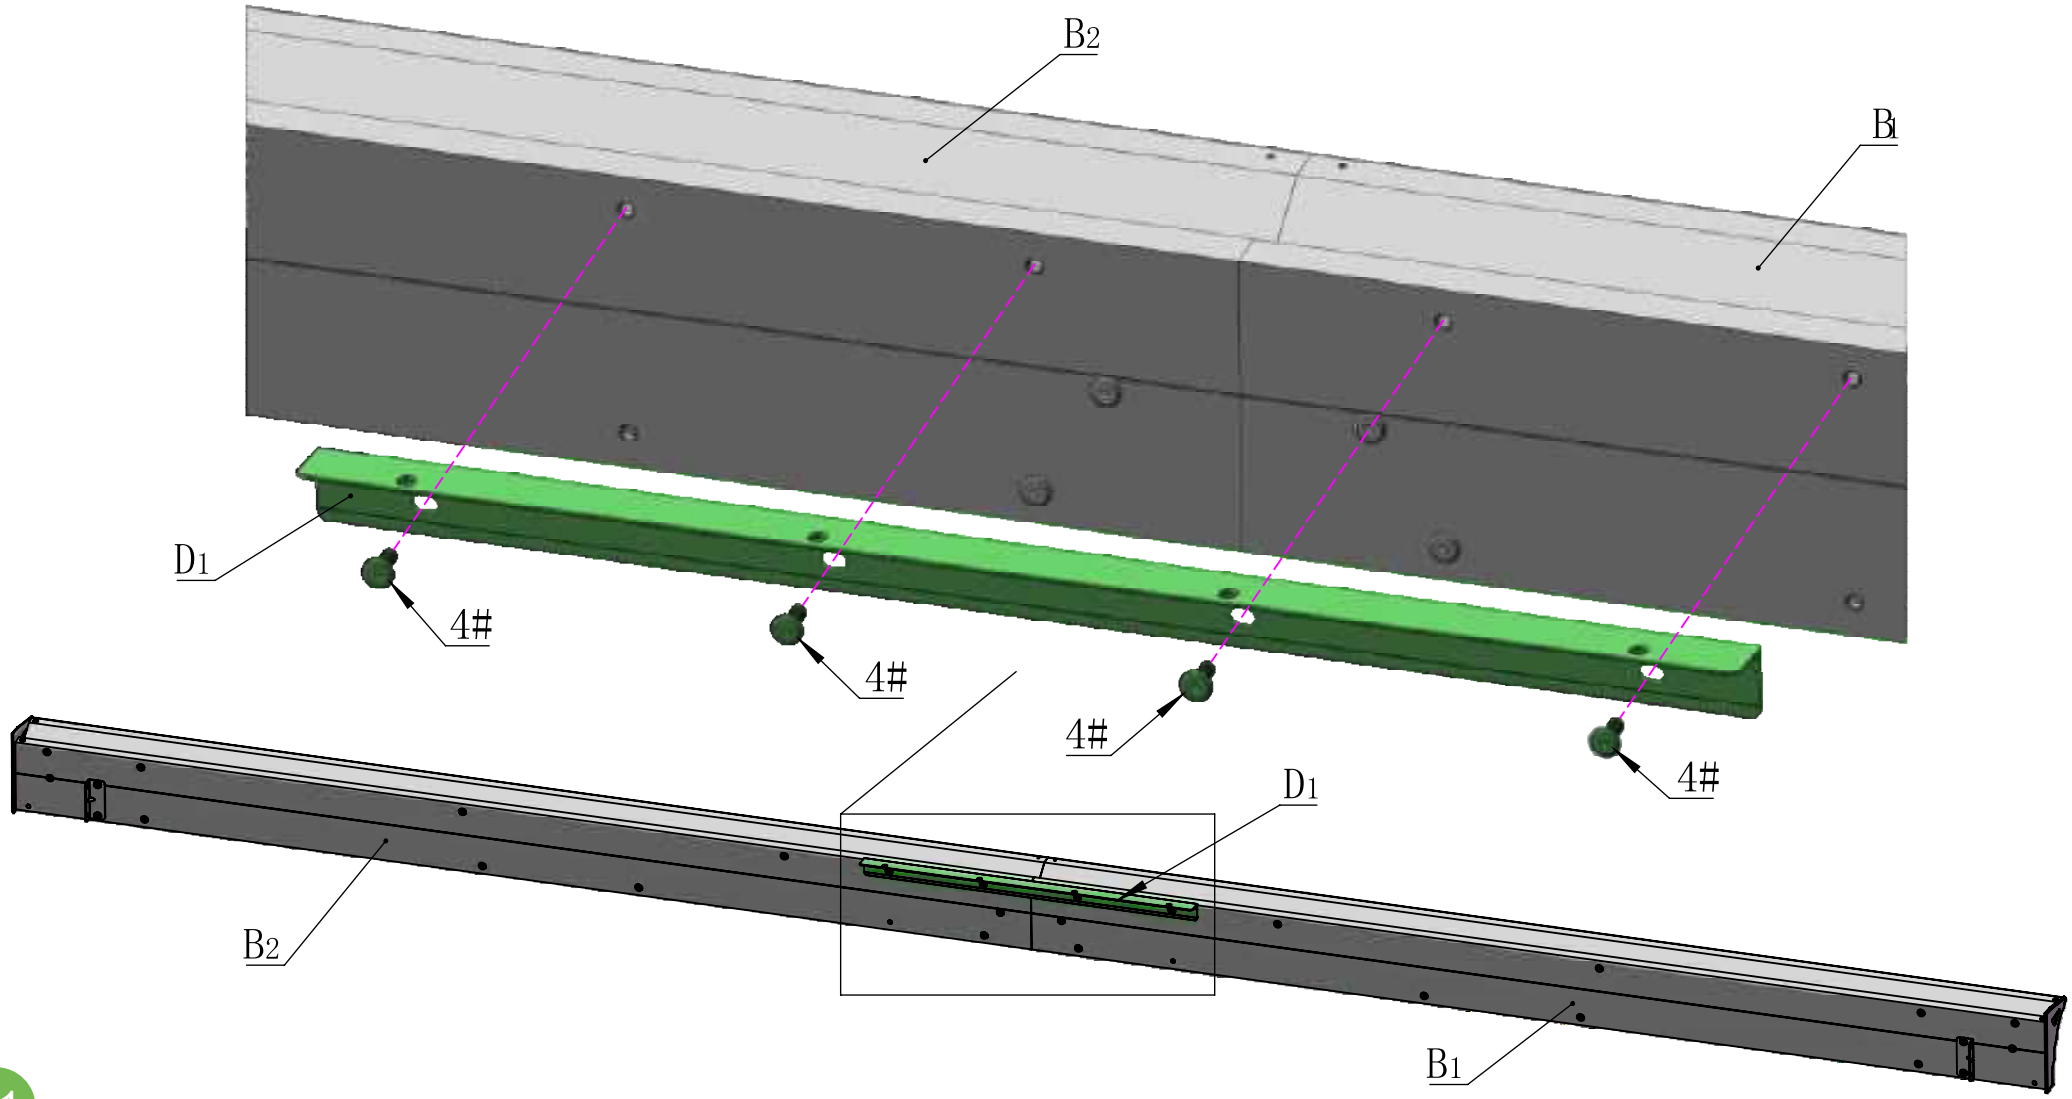


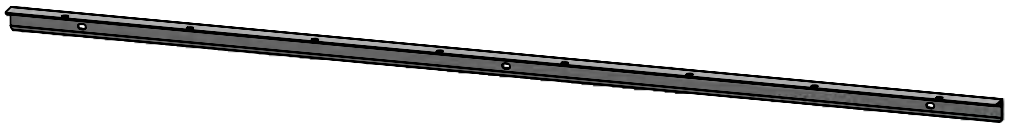


D2 2X

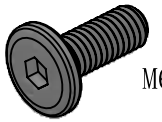

4# 6X

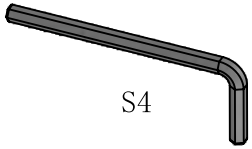


24# 1X

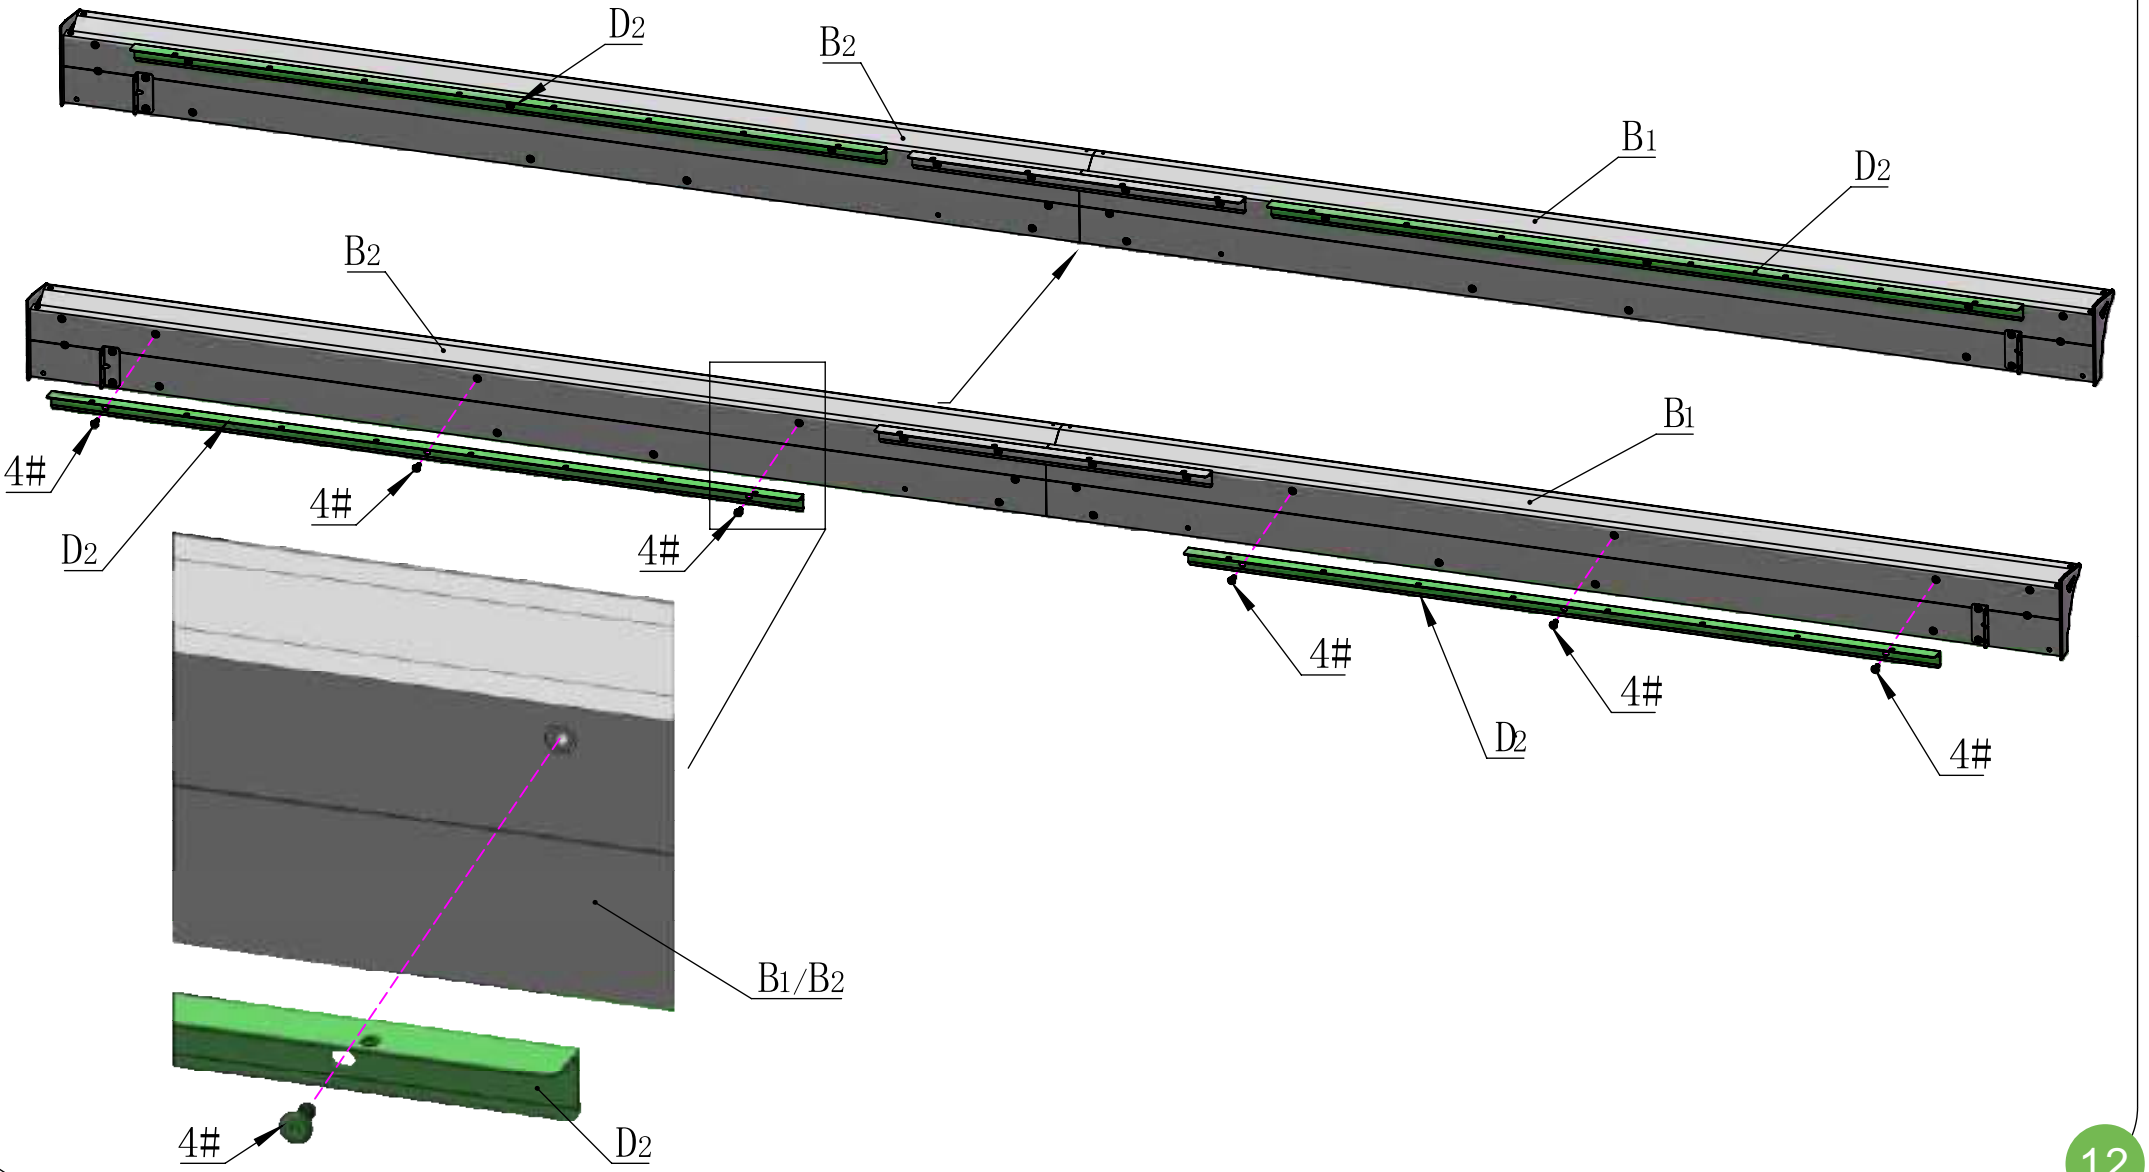





15# 1X

Use silicone sealant (part #15) to affix the gap between the two beams.

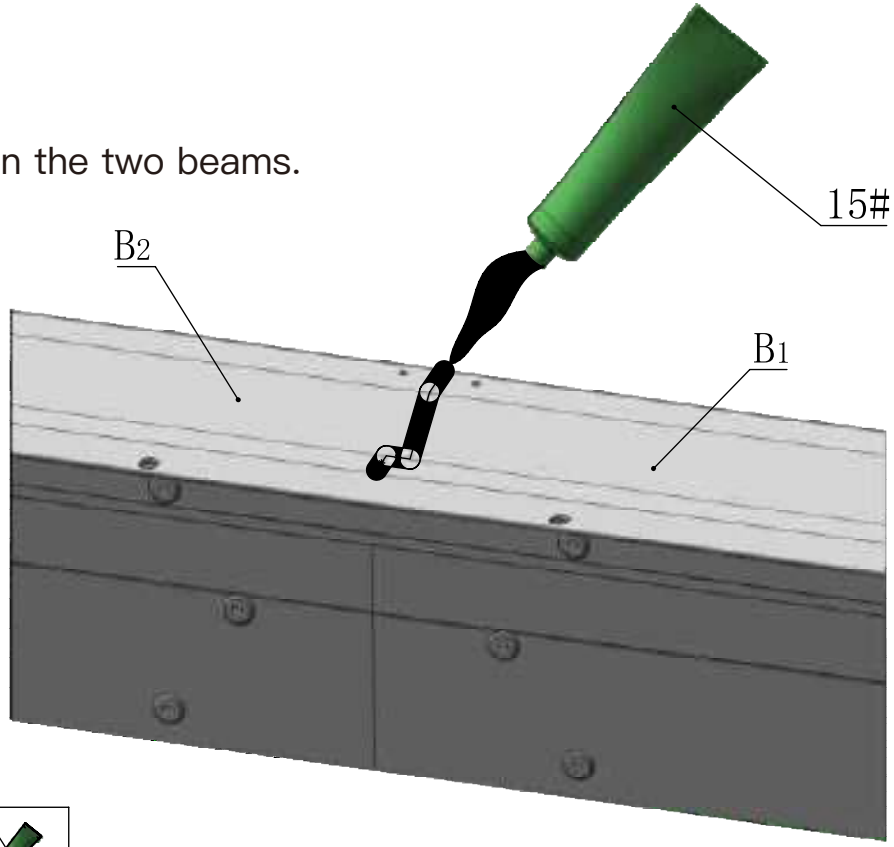

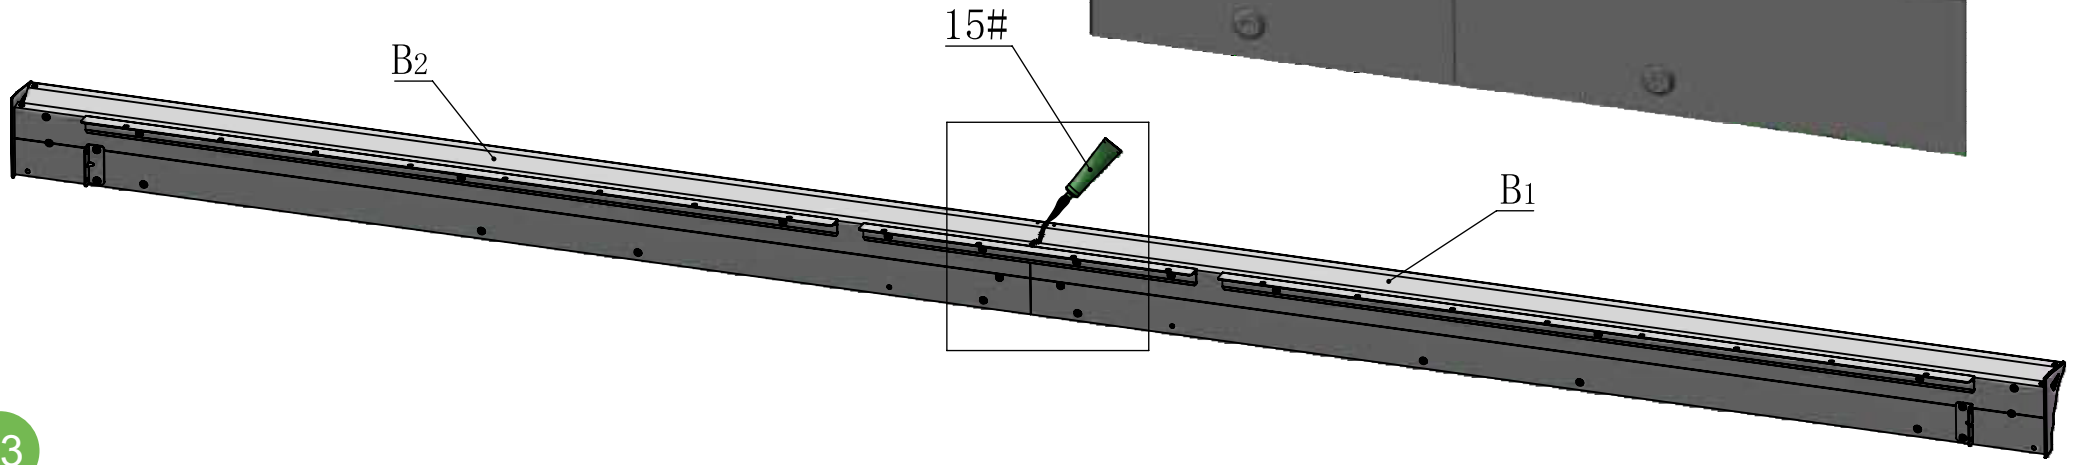

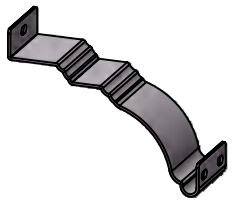

W3 1X

ST4.8*13




1# 2X




M5*12

2# 1X

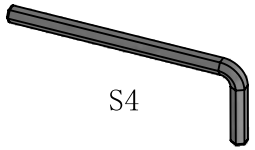



S4

24# 1X

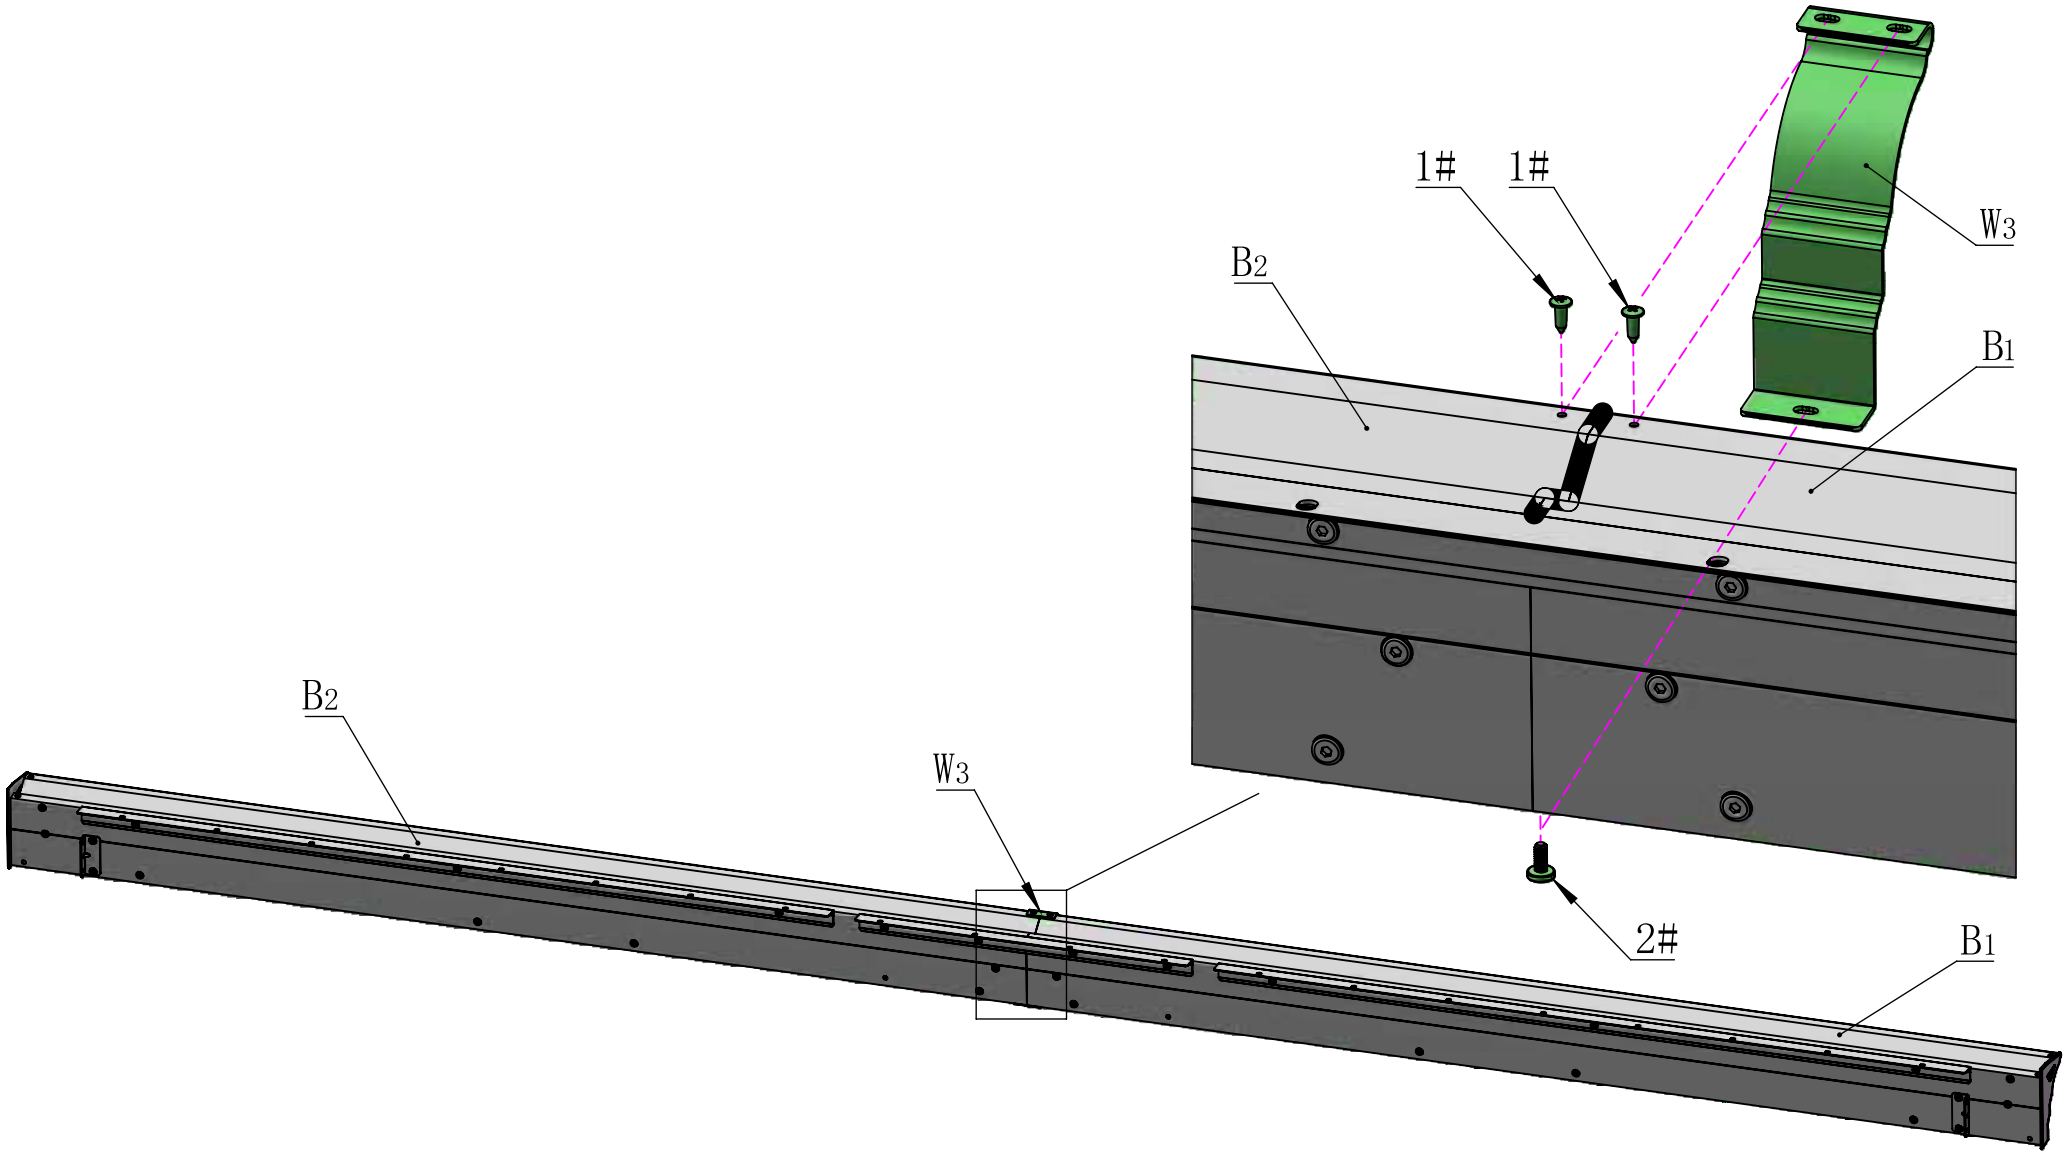


Side Beam Assembly

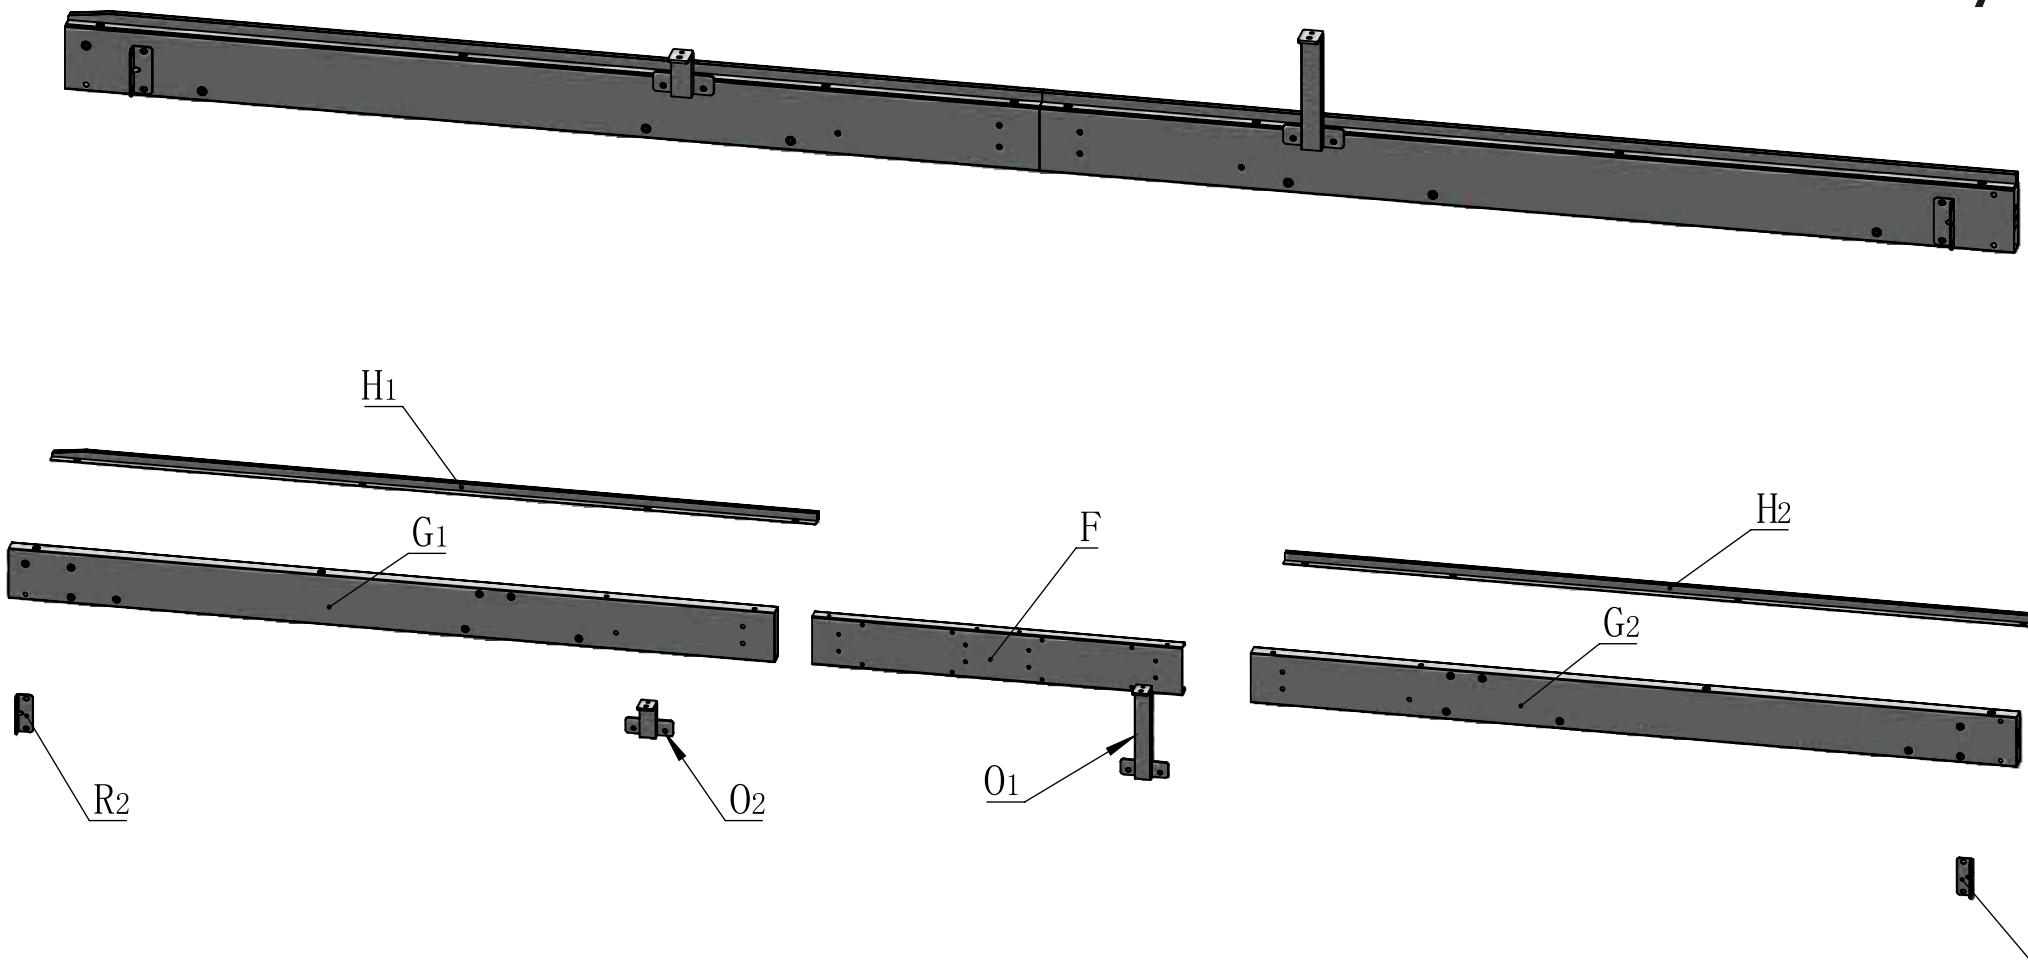

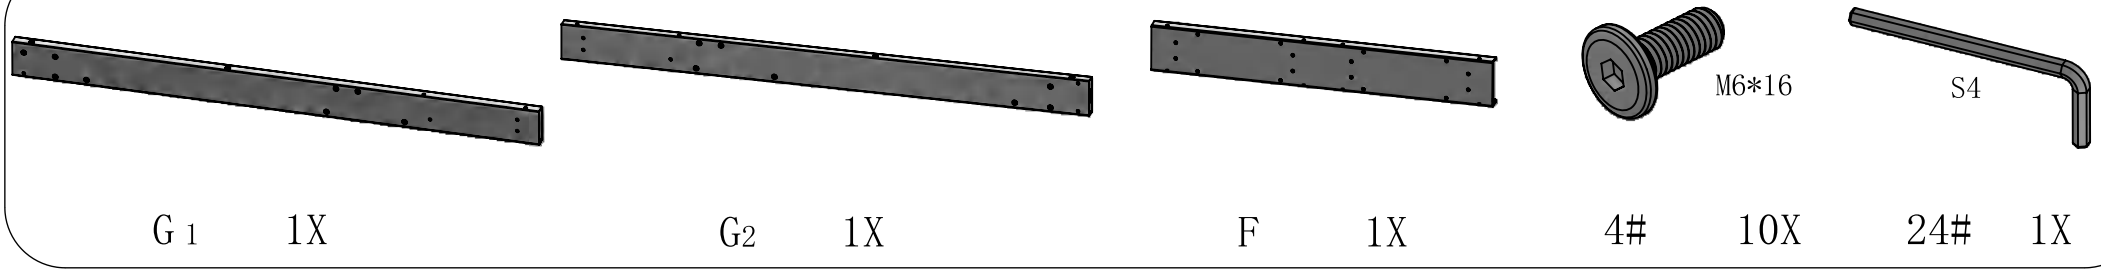

G 1 1X G2 1X F 1X 4# 10X 24# 1X

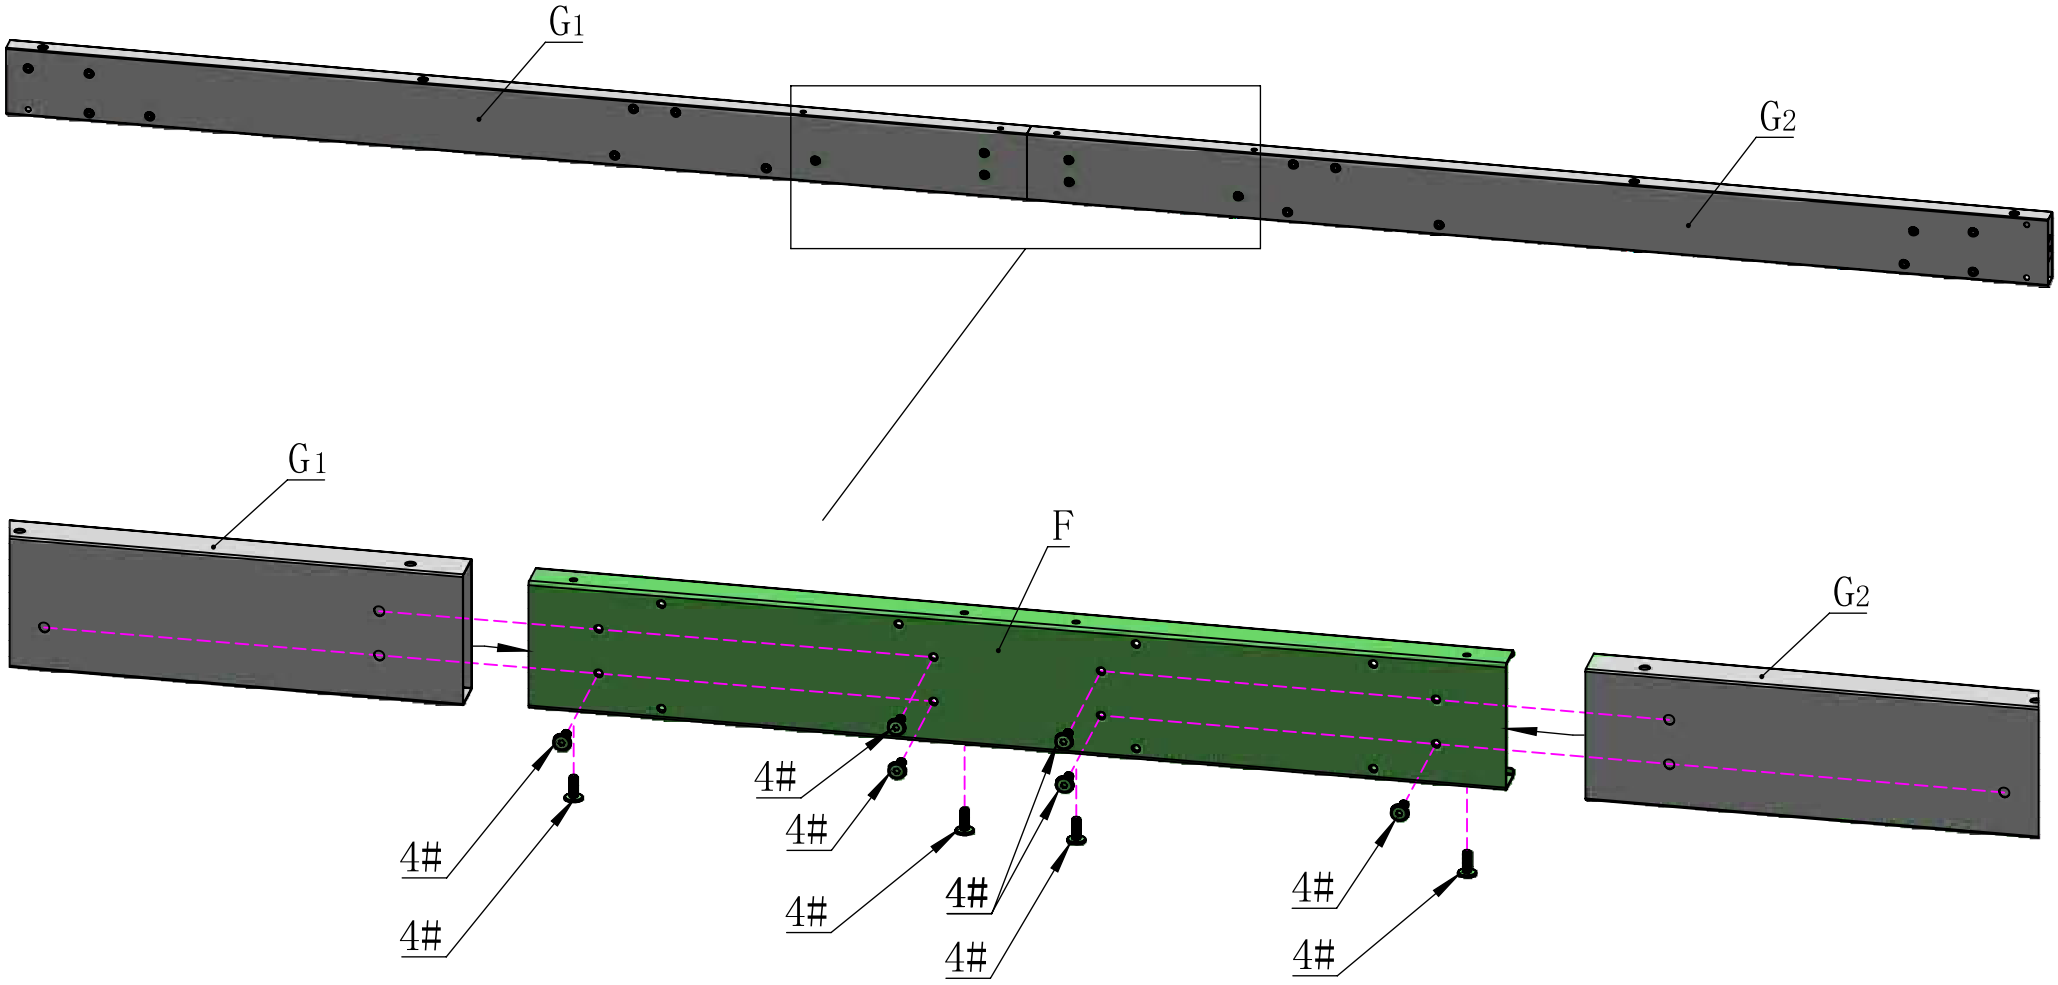





H1 1X




H2 1X

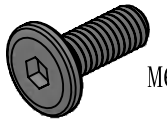


4# 8X

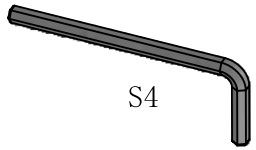


24# 1X

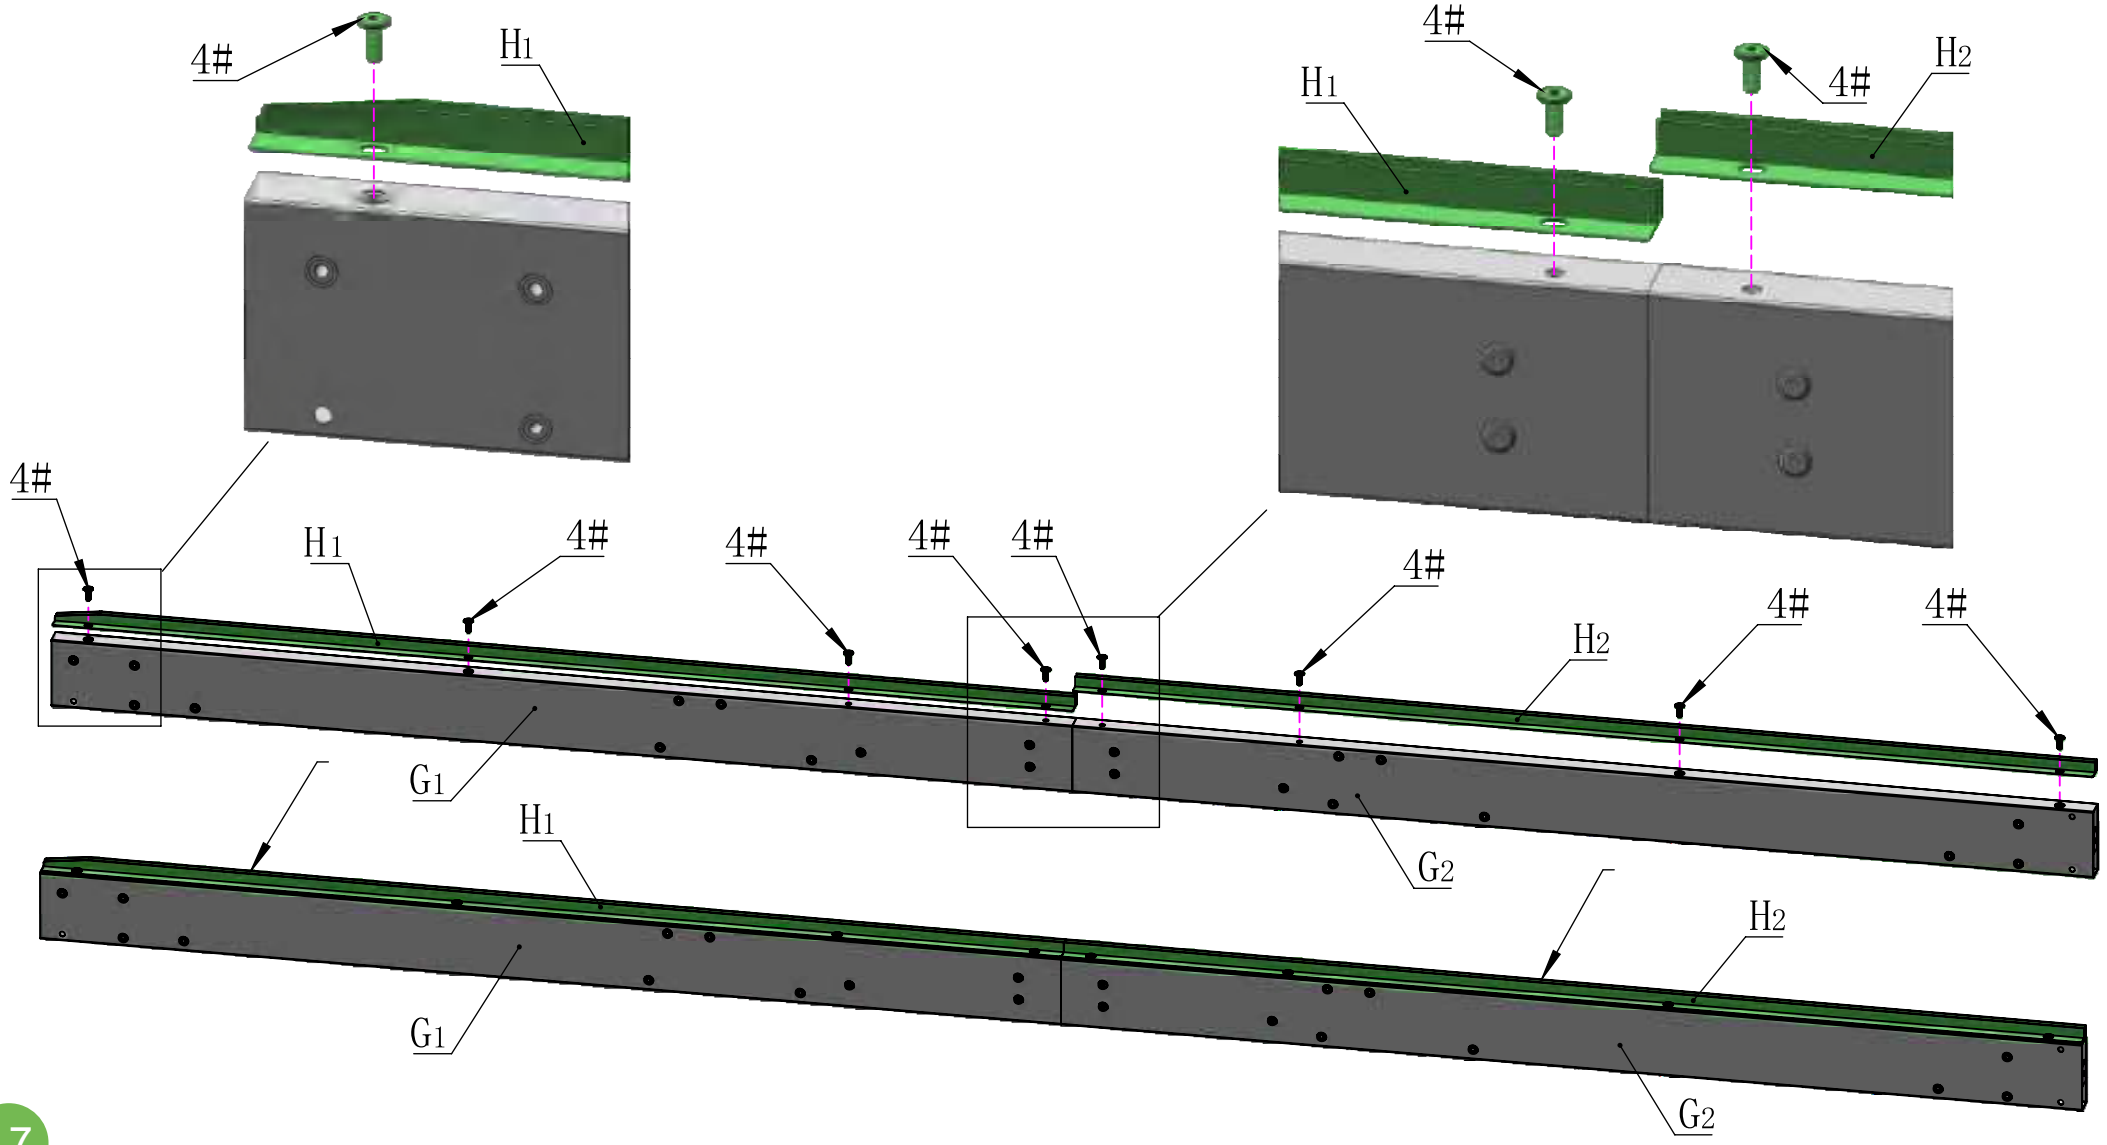

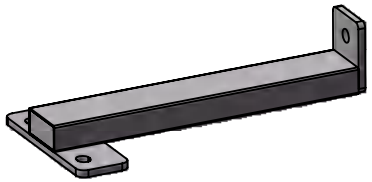


O1 1X

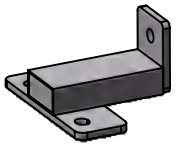


O2 1X





4# 4X

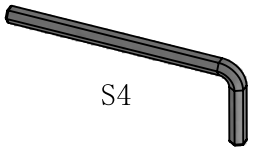


24# 1X

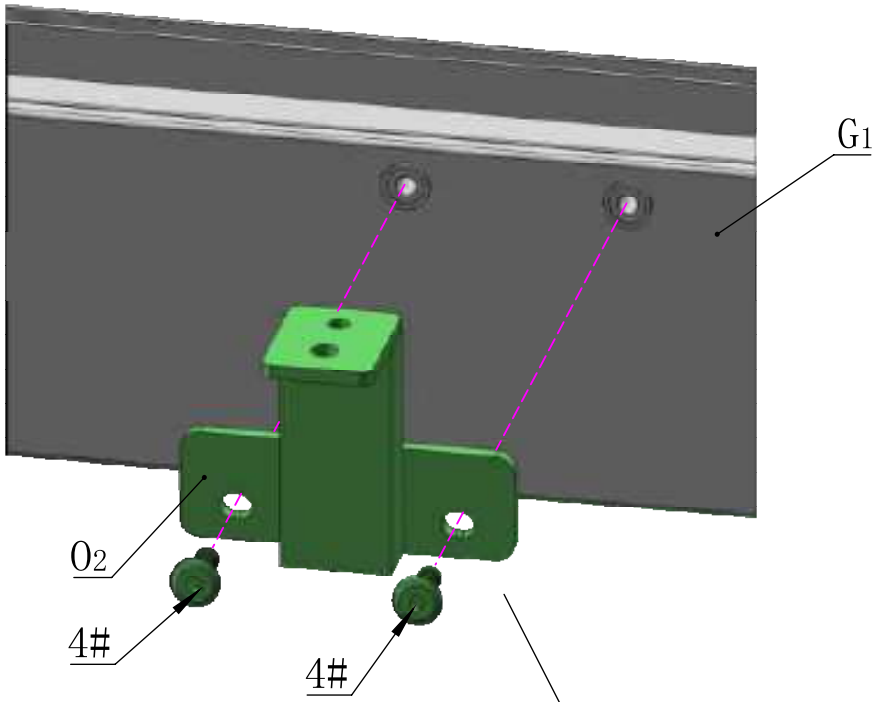


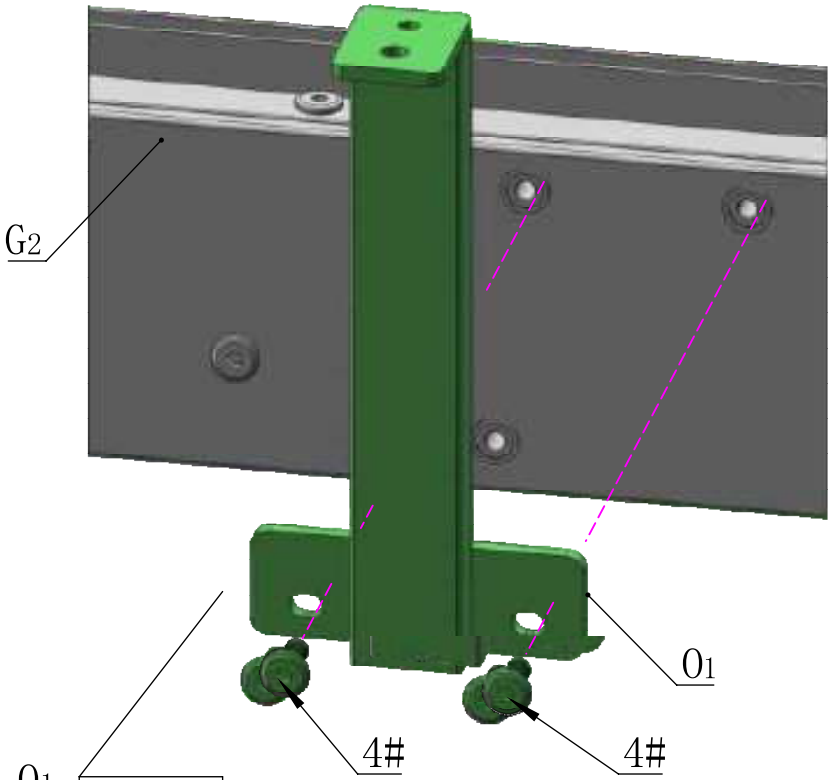

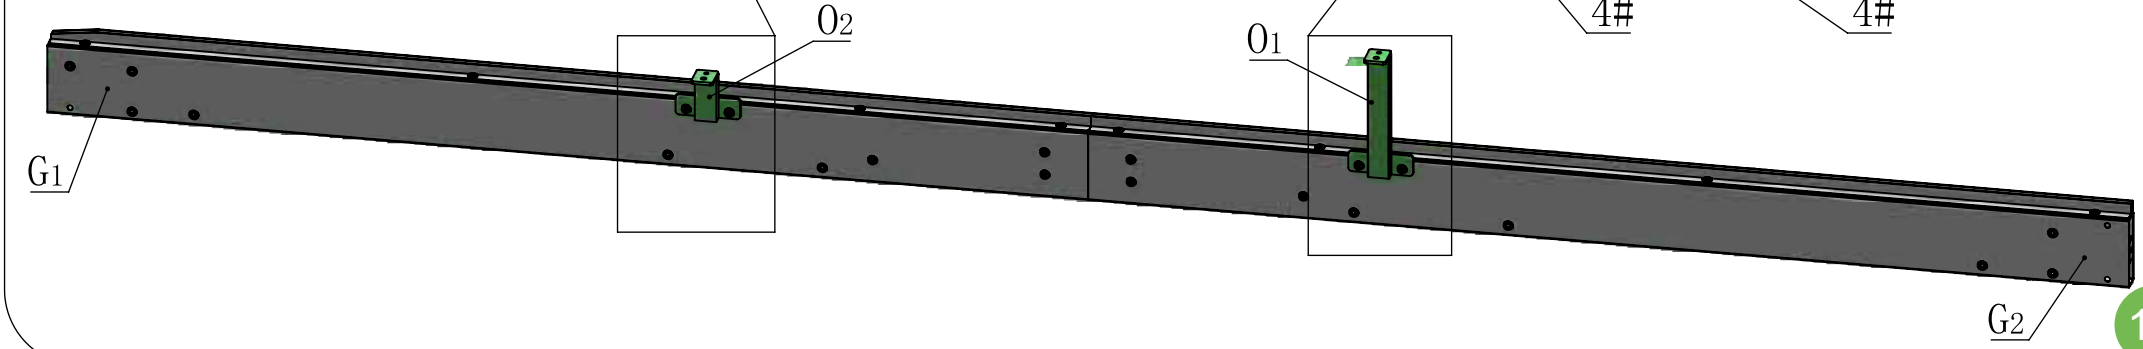


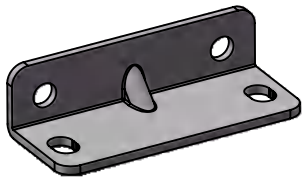


R2 2X

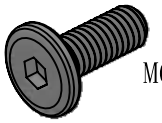



4# 4X

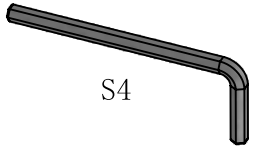


24# 1X

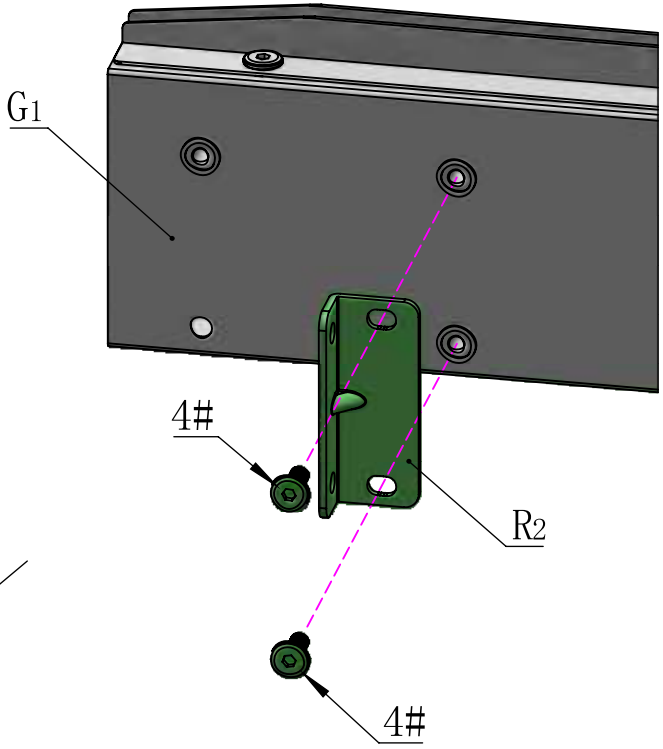


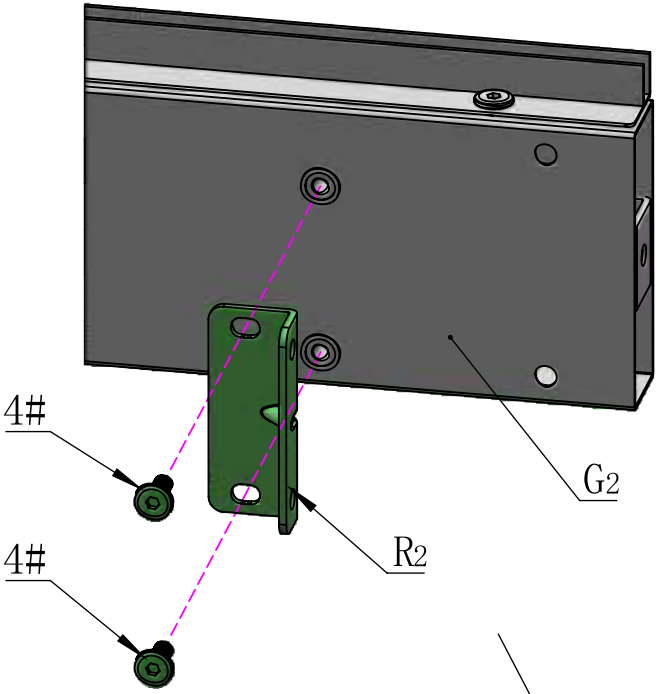

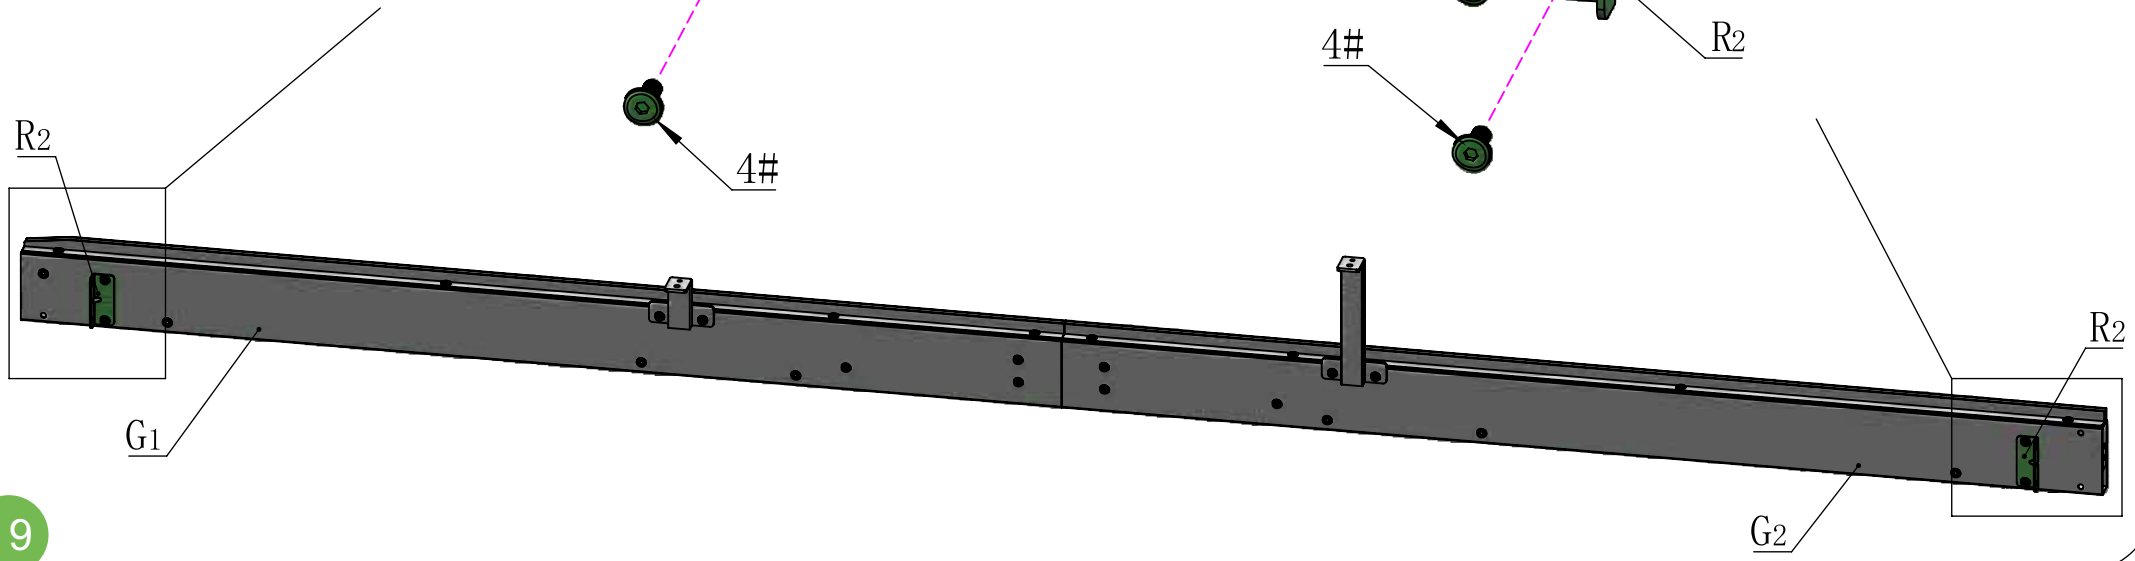


Side Beam Assembly

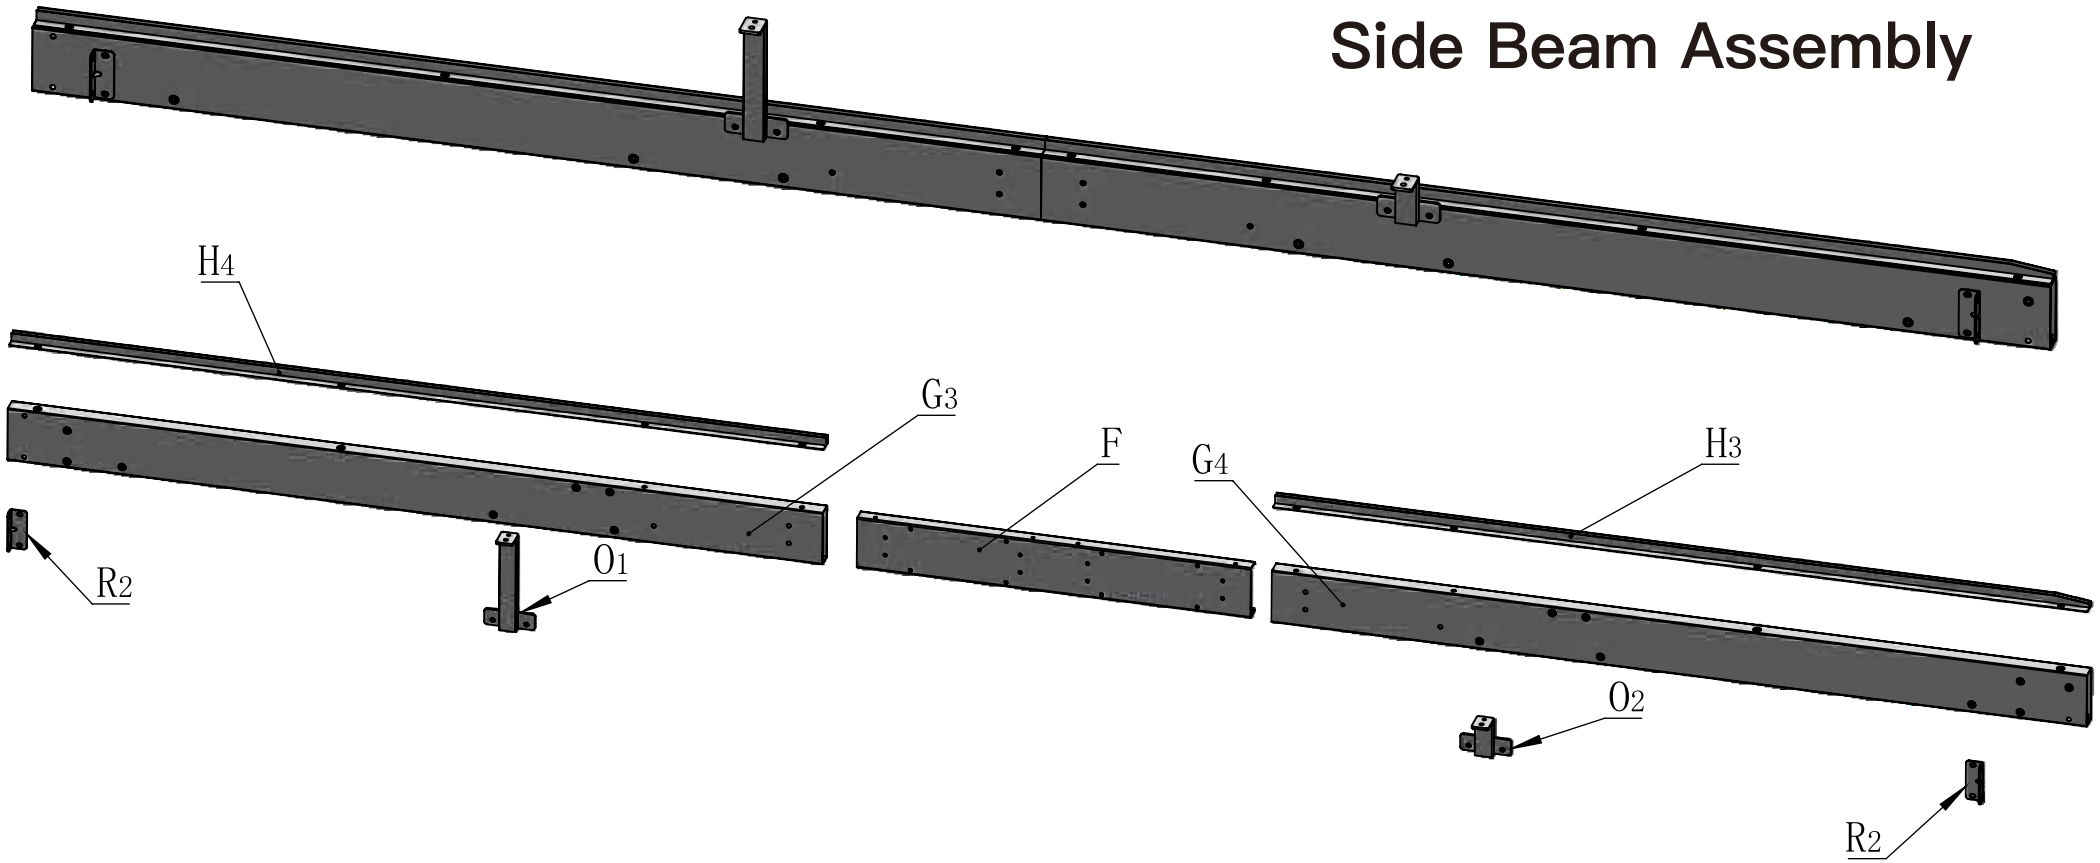





G3 1X




G4 1X




F 1X

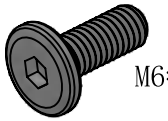



4# 10X

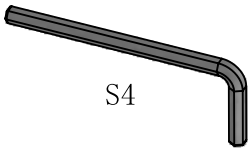


24# 1X

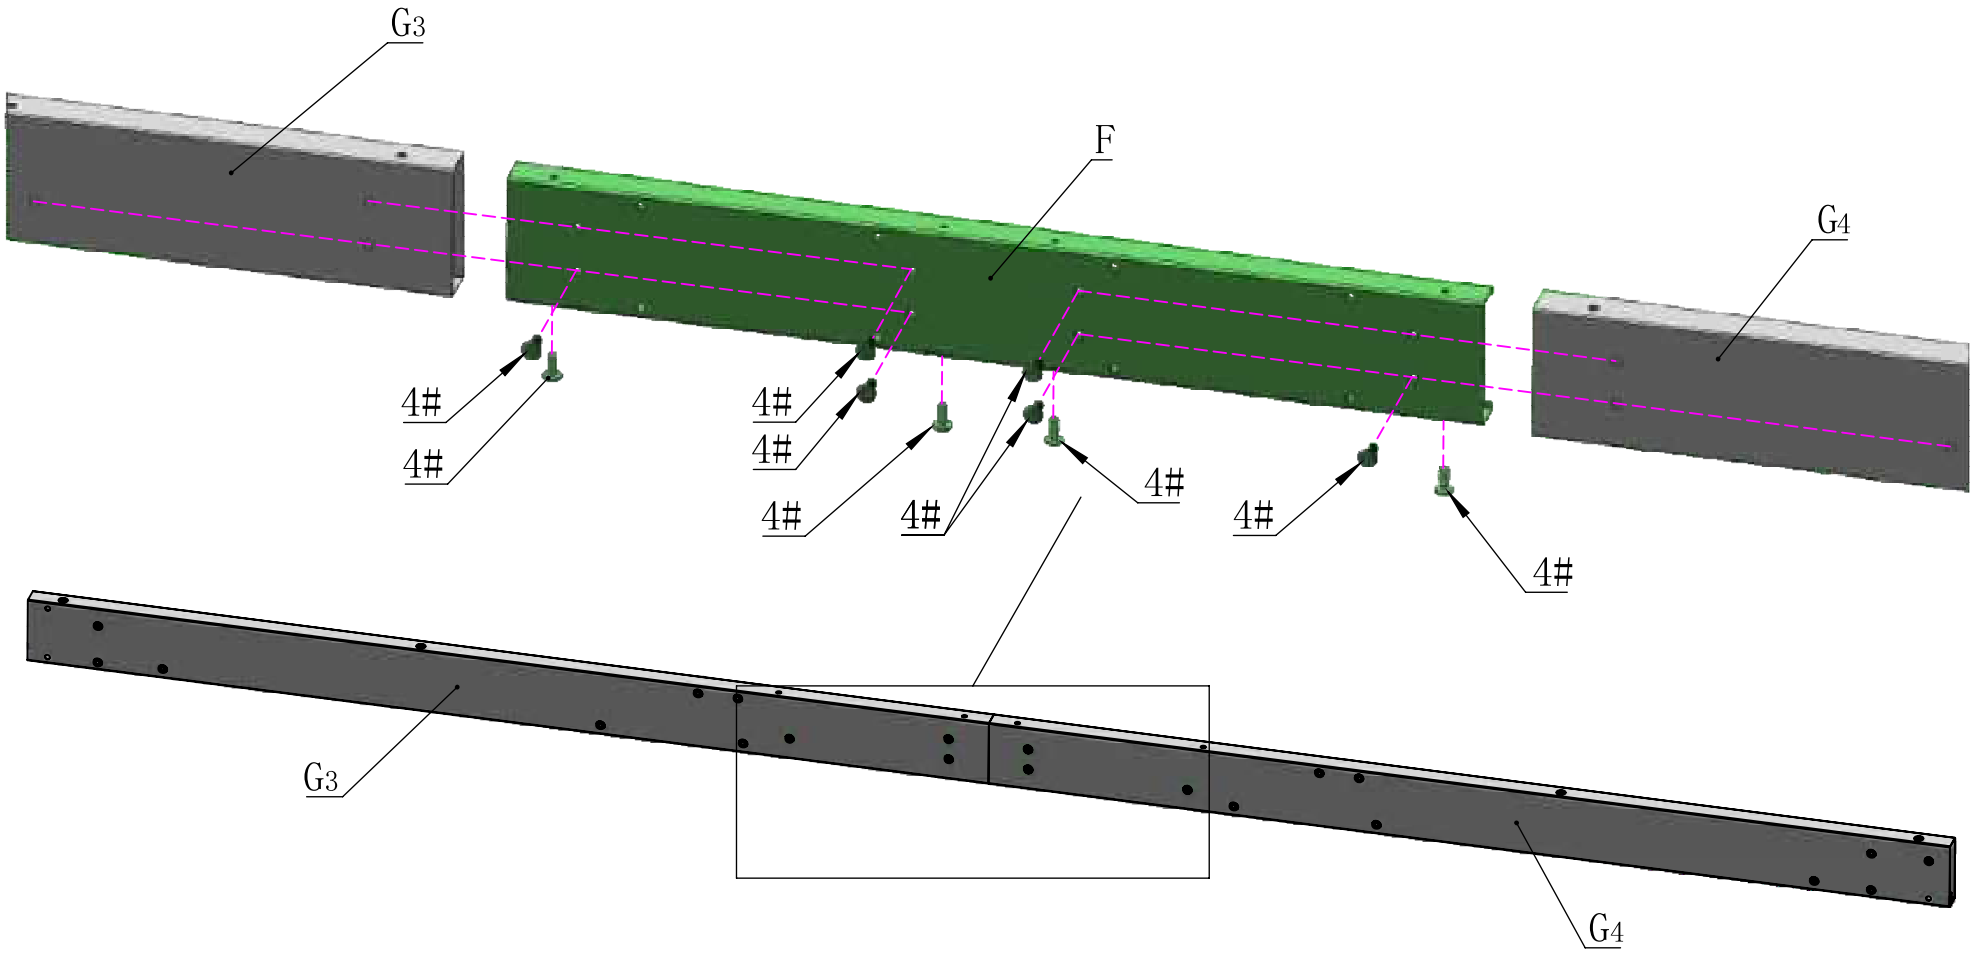

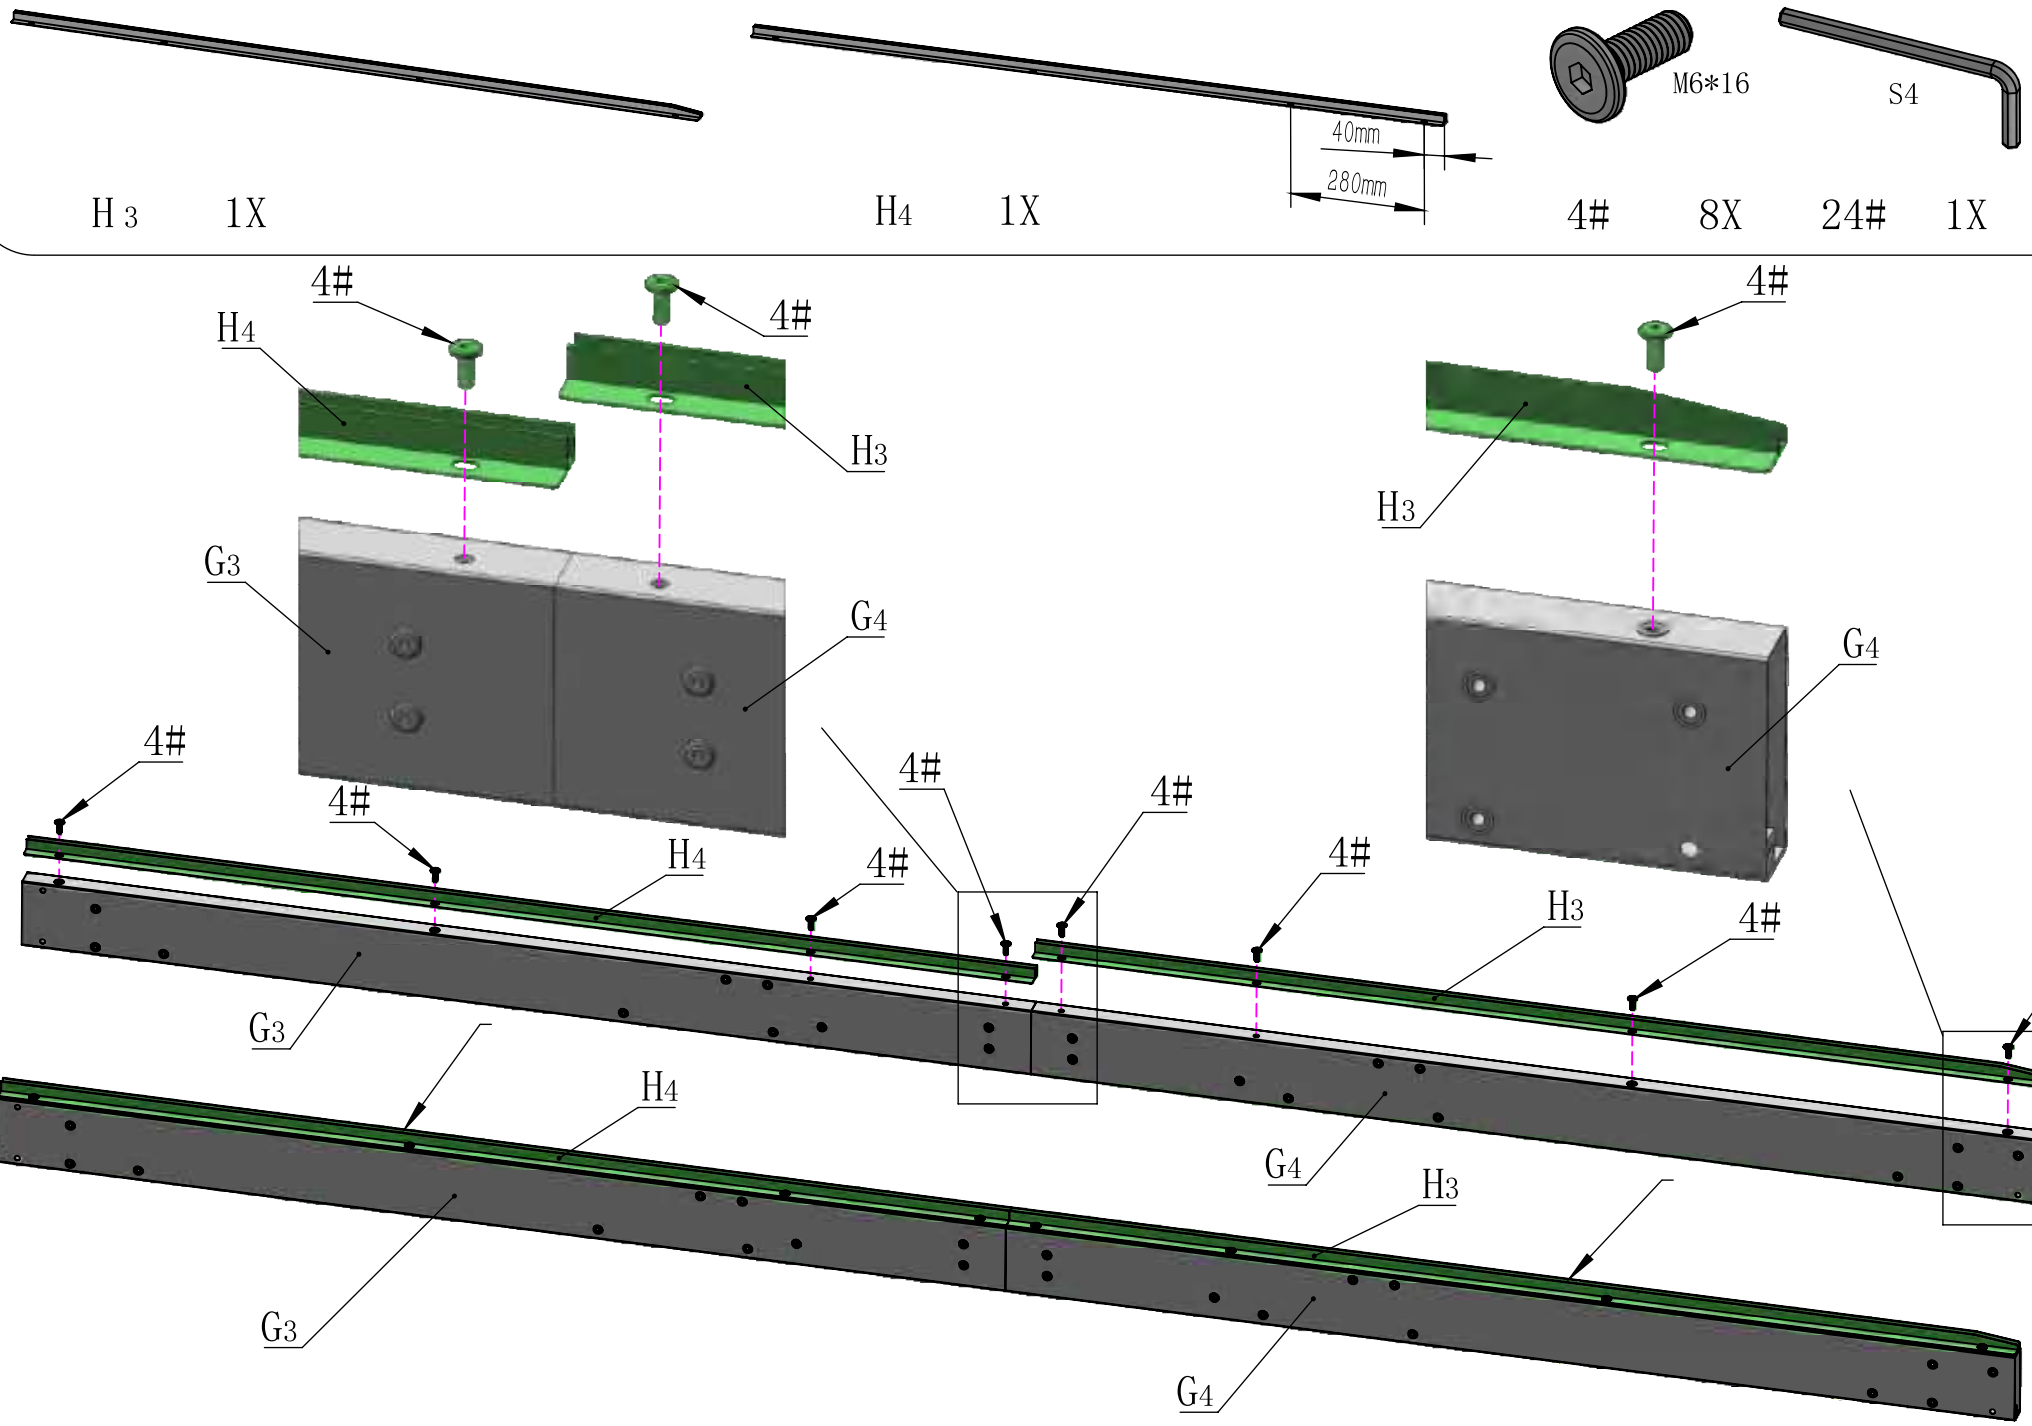

H3 1X
H4 1X
40mm
280mm
4# 8X
M6*16
24# 1X
S4
4#
H4
H3
G3
G4

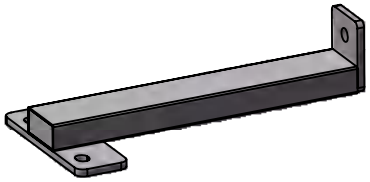


O1 1X

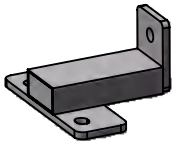


O2 1X

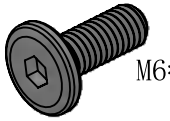


4# 4X

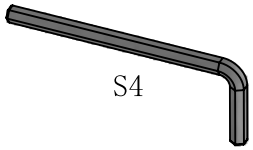


24# 1X

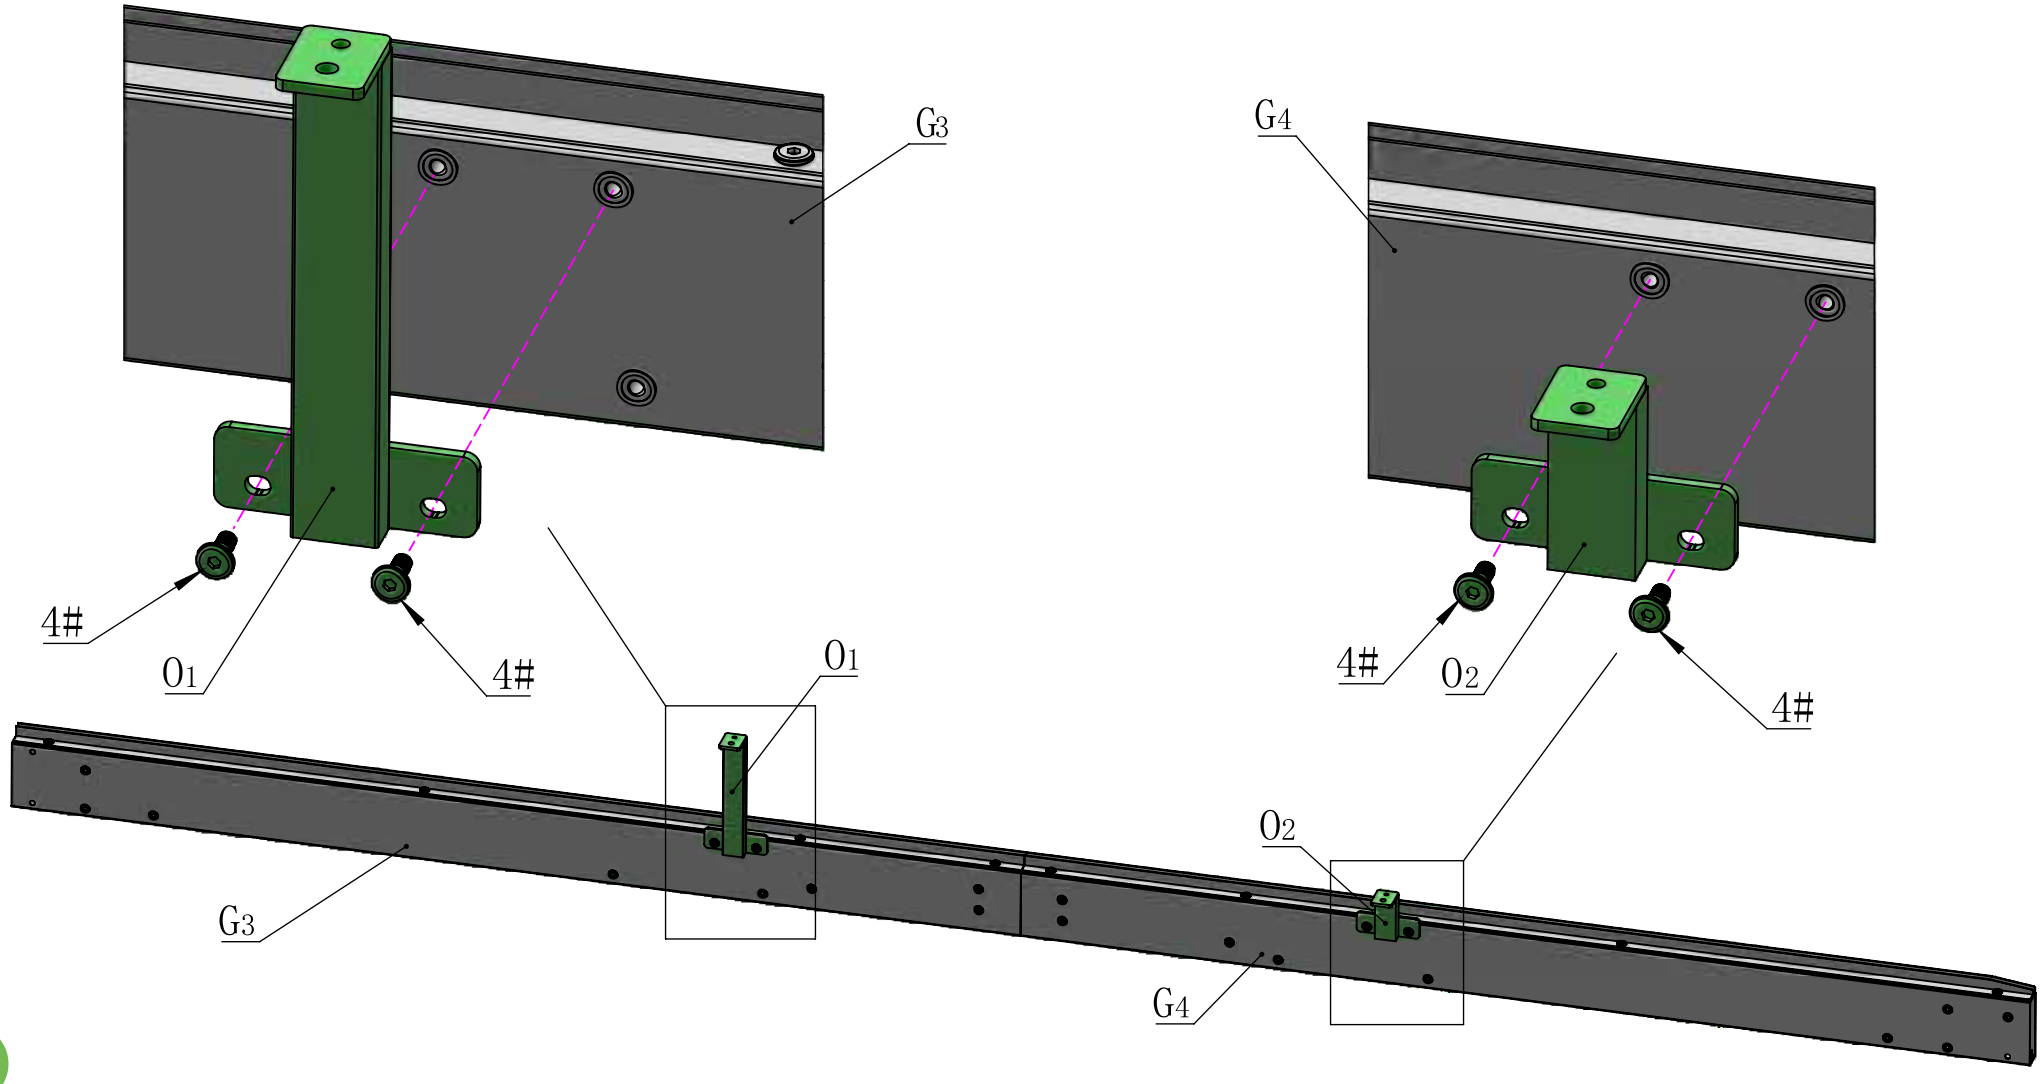


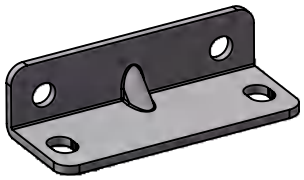


R2 2X

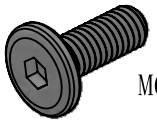


4# 4X

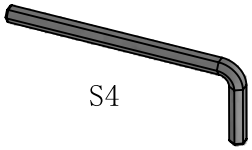


24# 1X

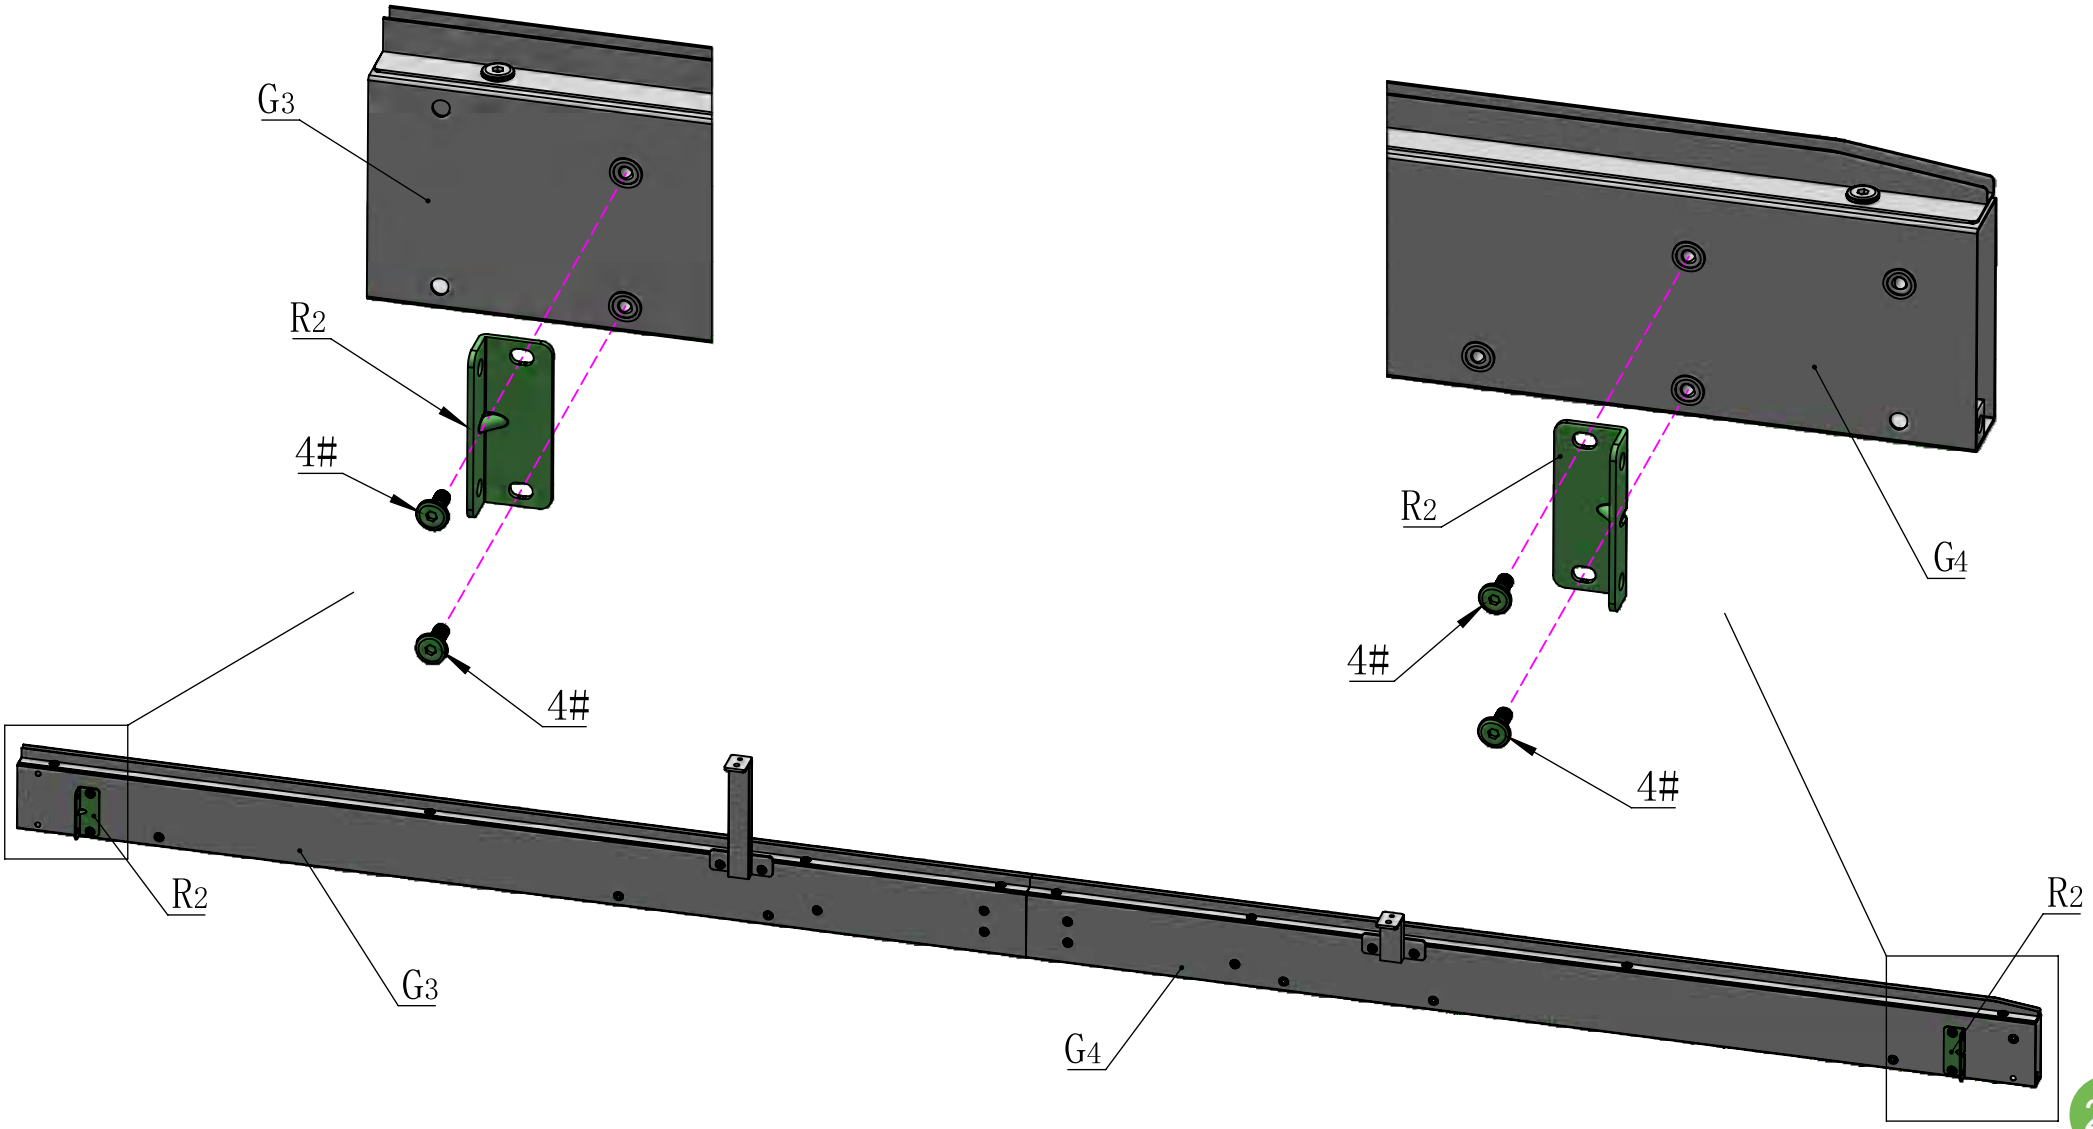


Rear Beam Assembly

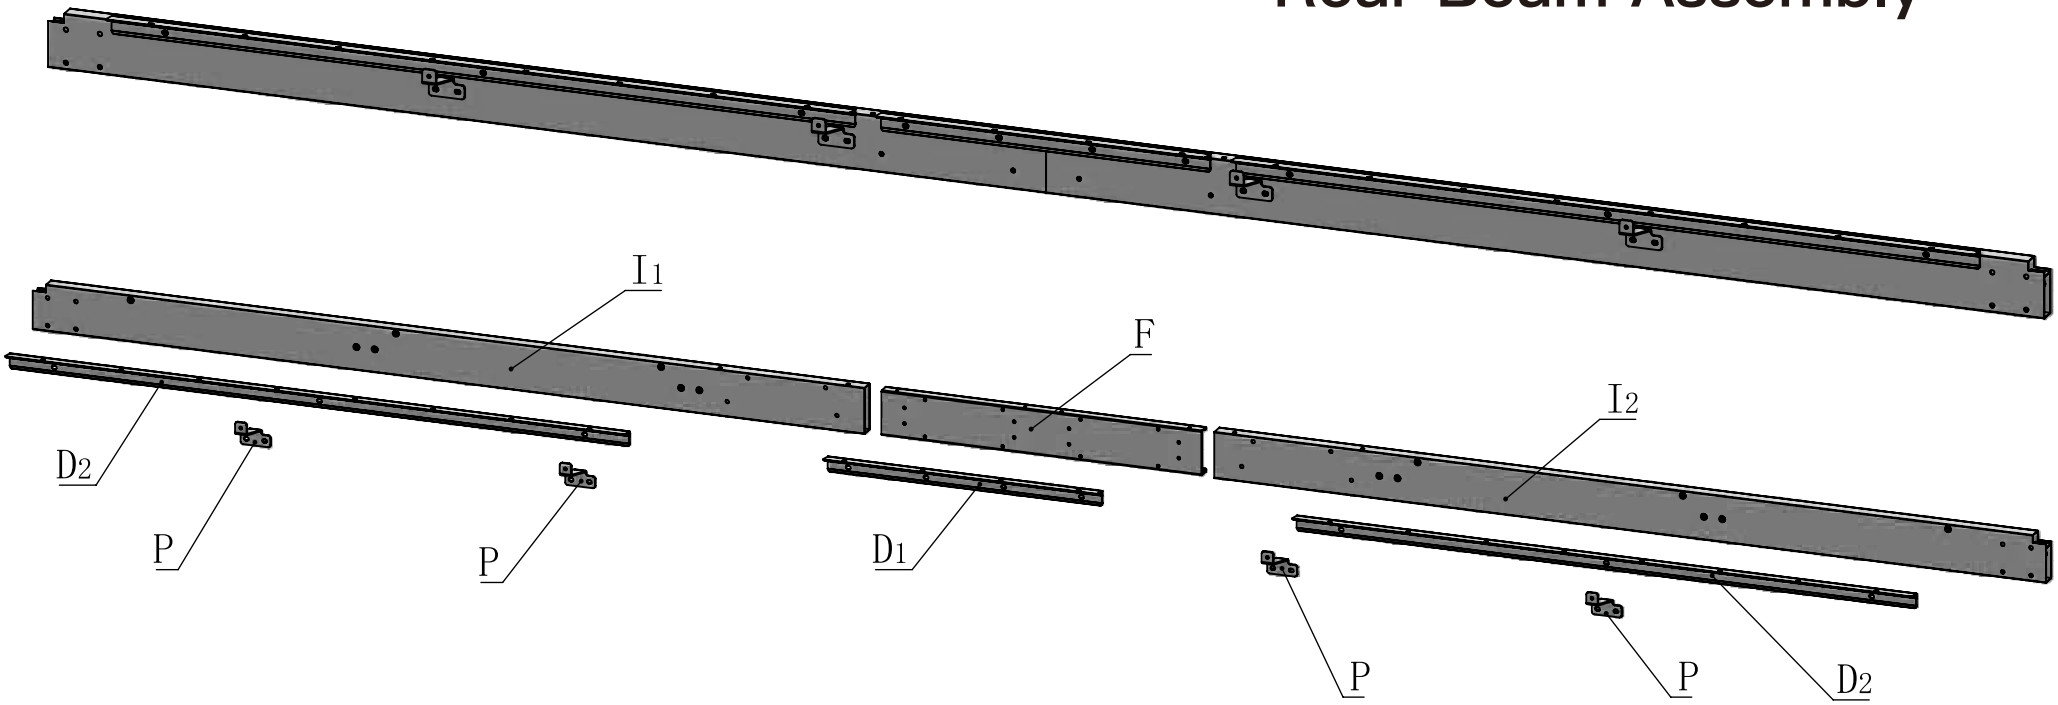

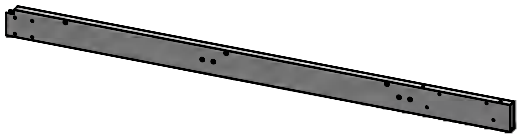


I 1 1X




I2 1X




F 1X

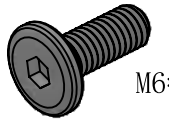


4# 12X

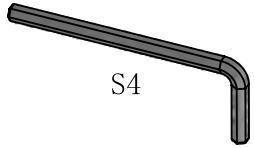


24# 1X

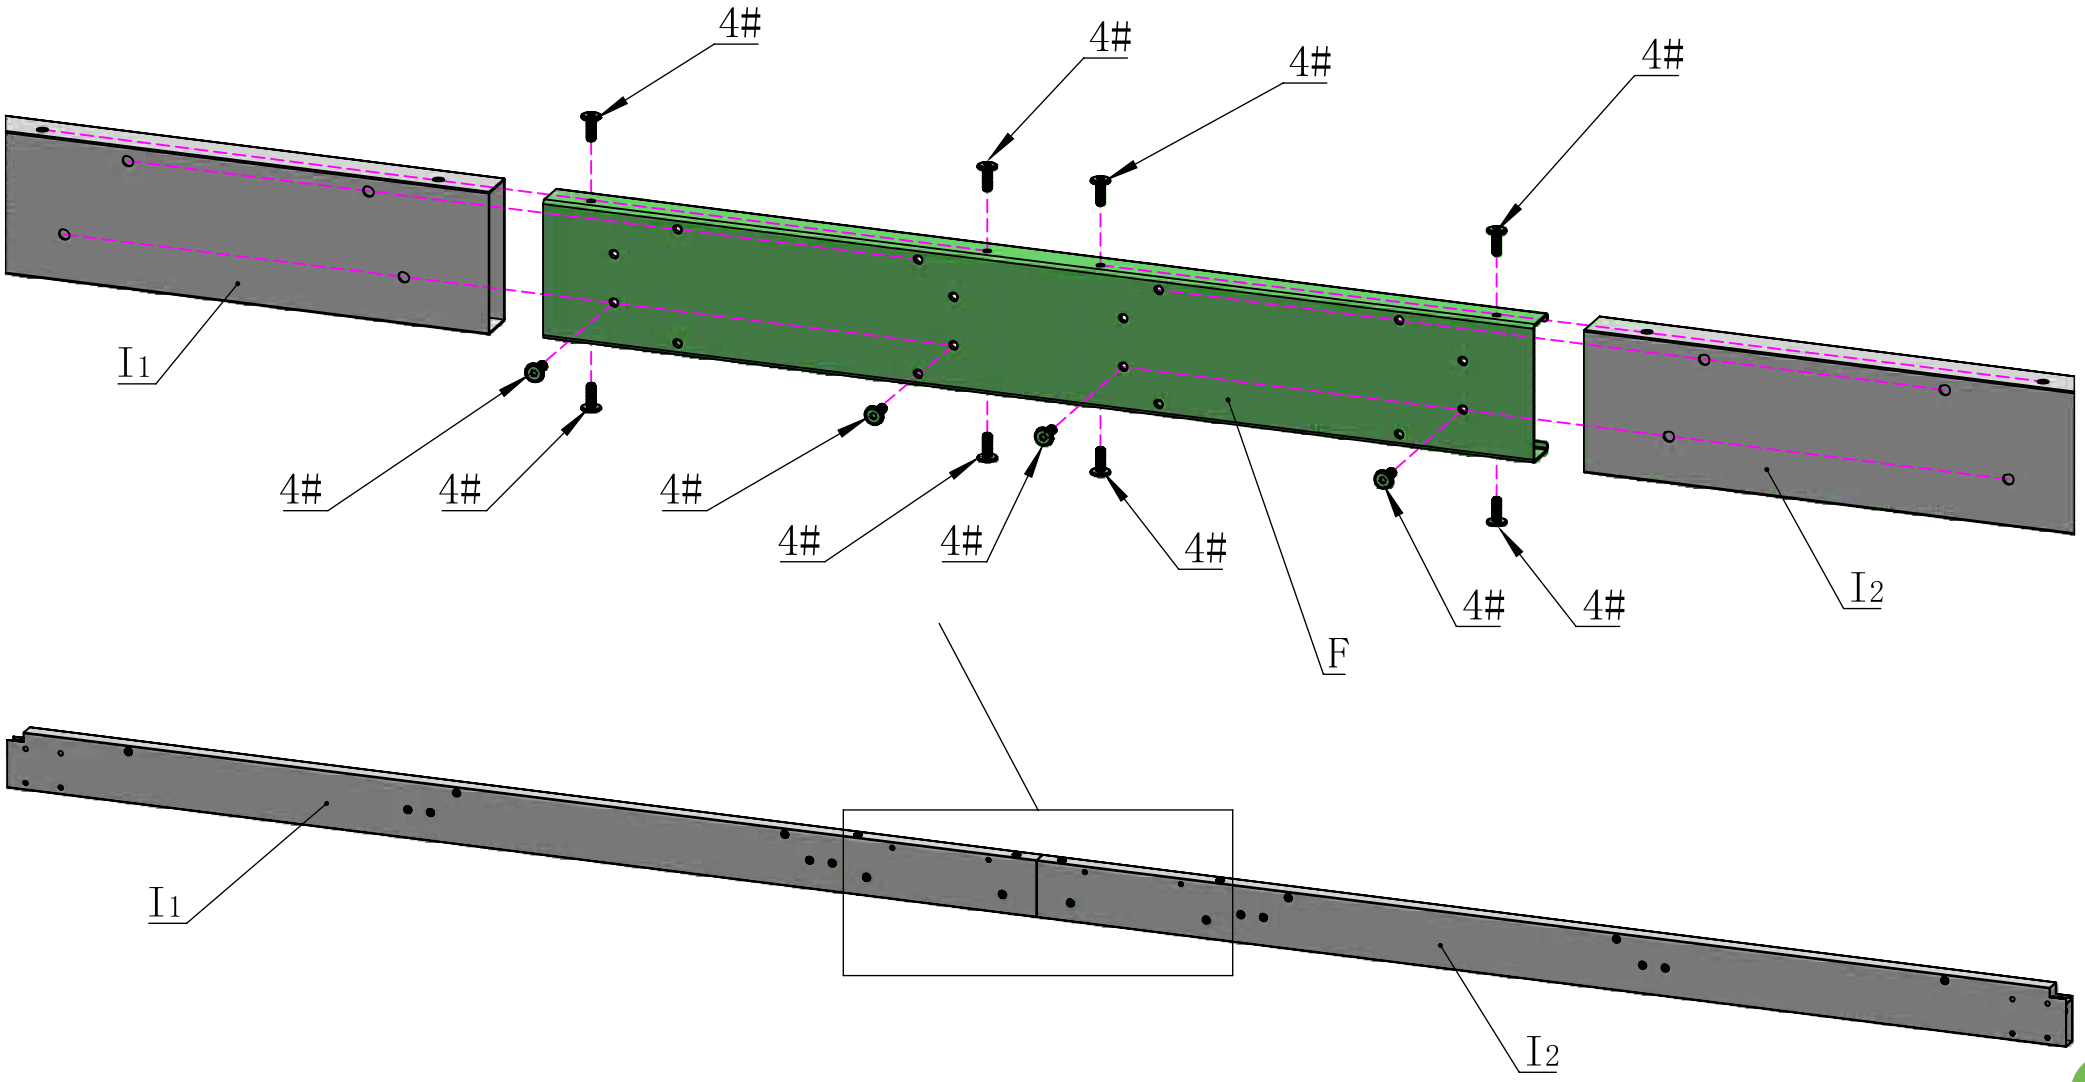


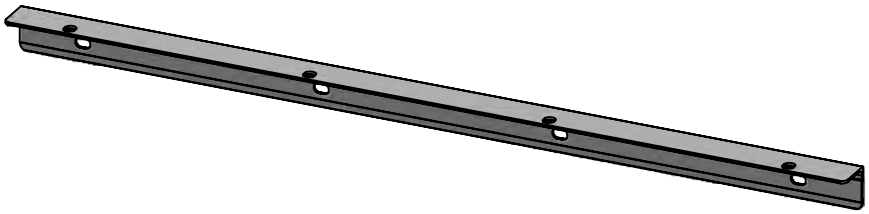


D1 1X

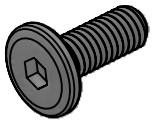


4# 4X

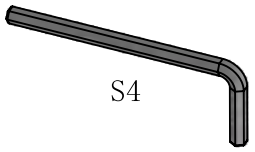

24# 1X

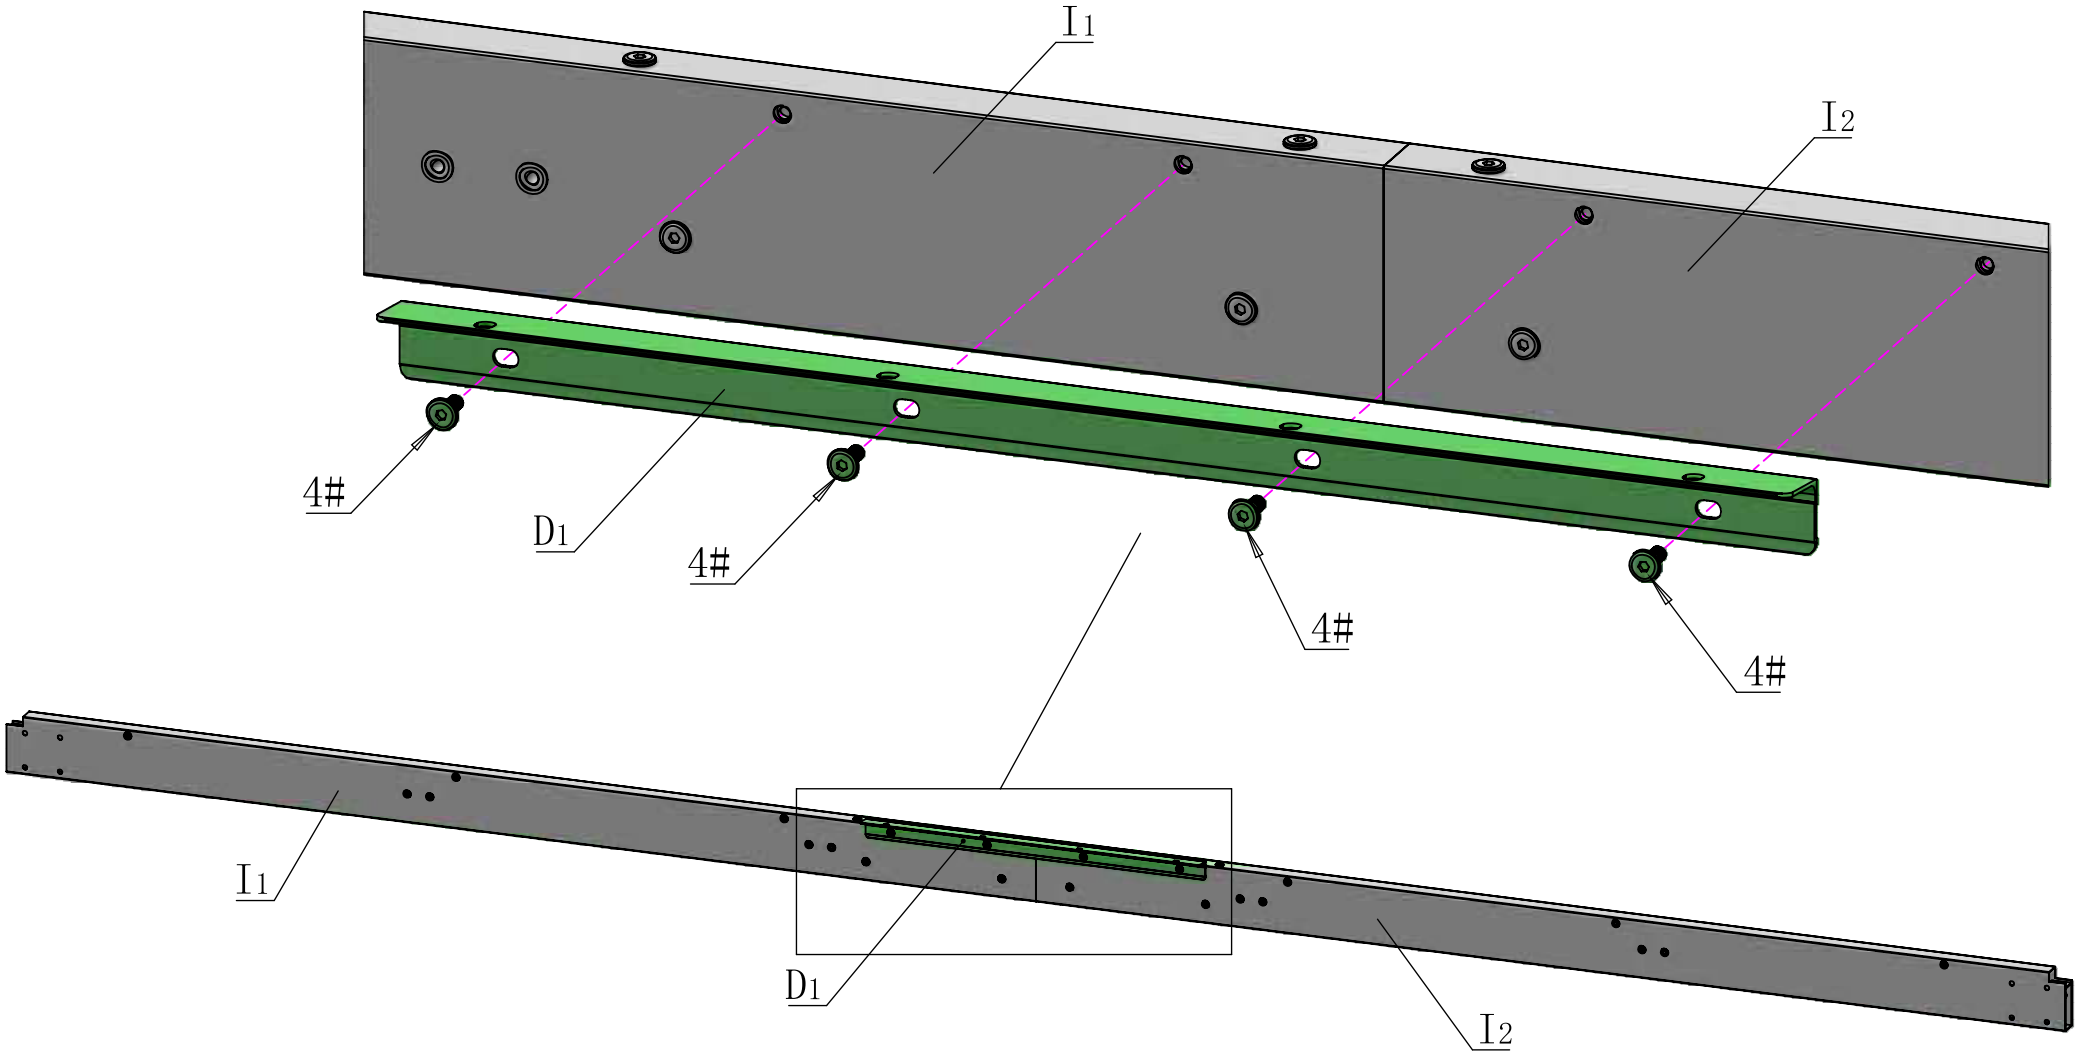


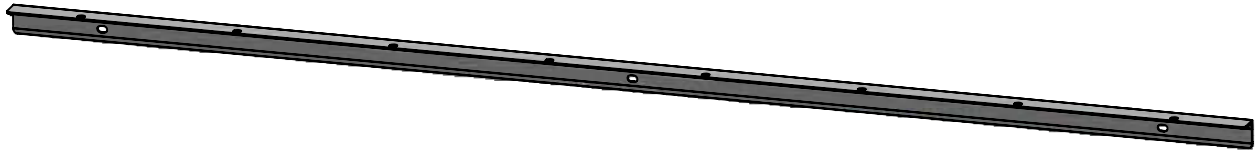


D 2 2X




4# 6X

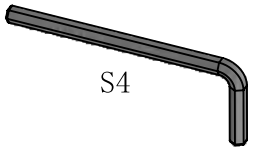


24# 1X

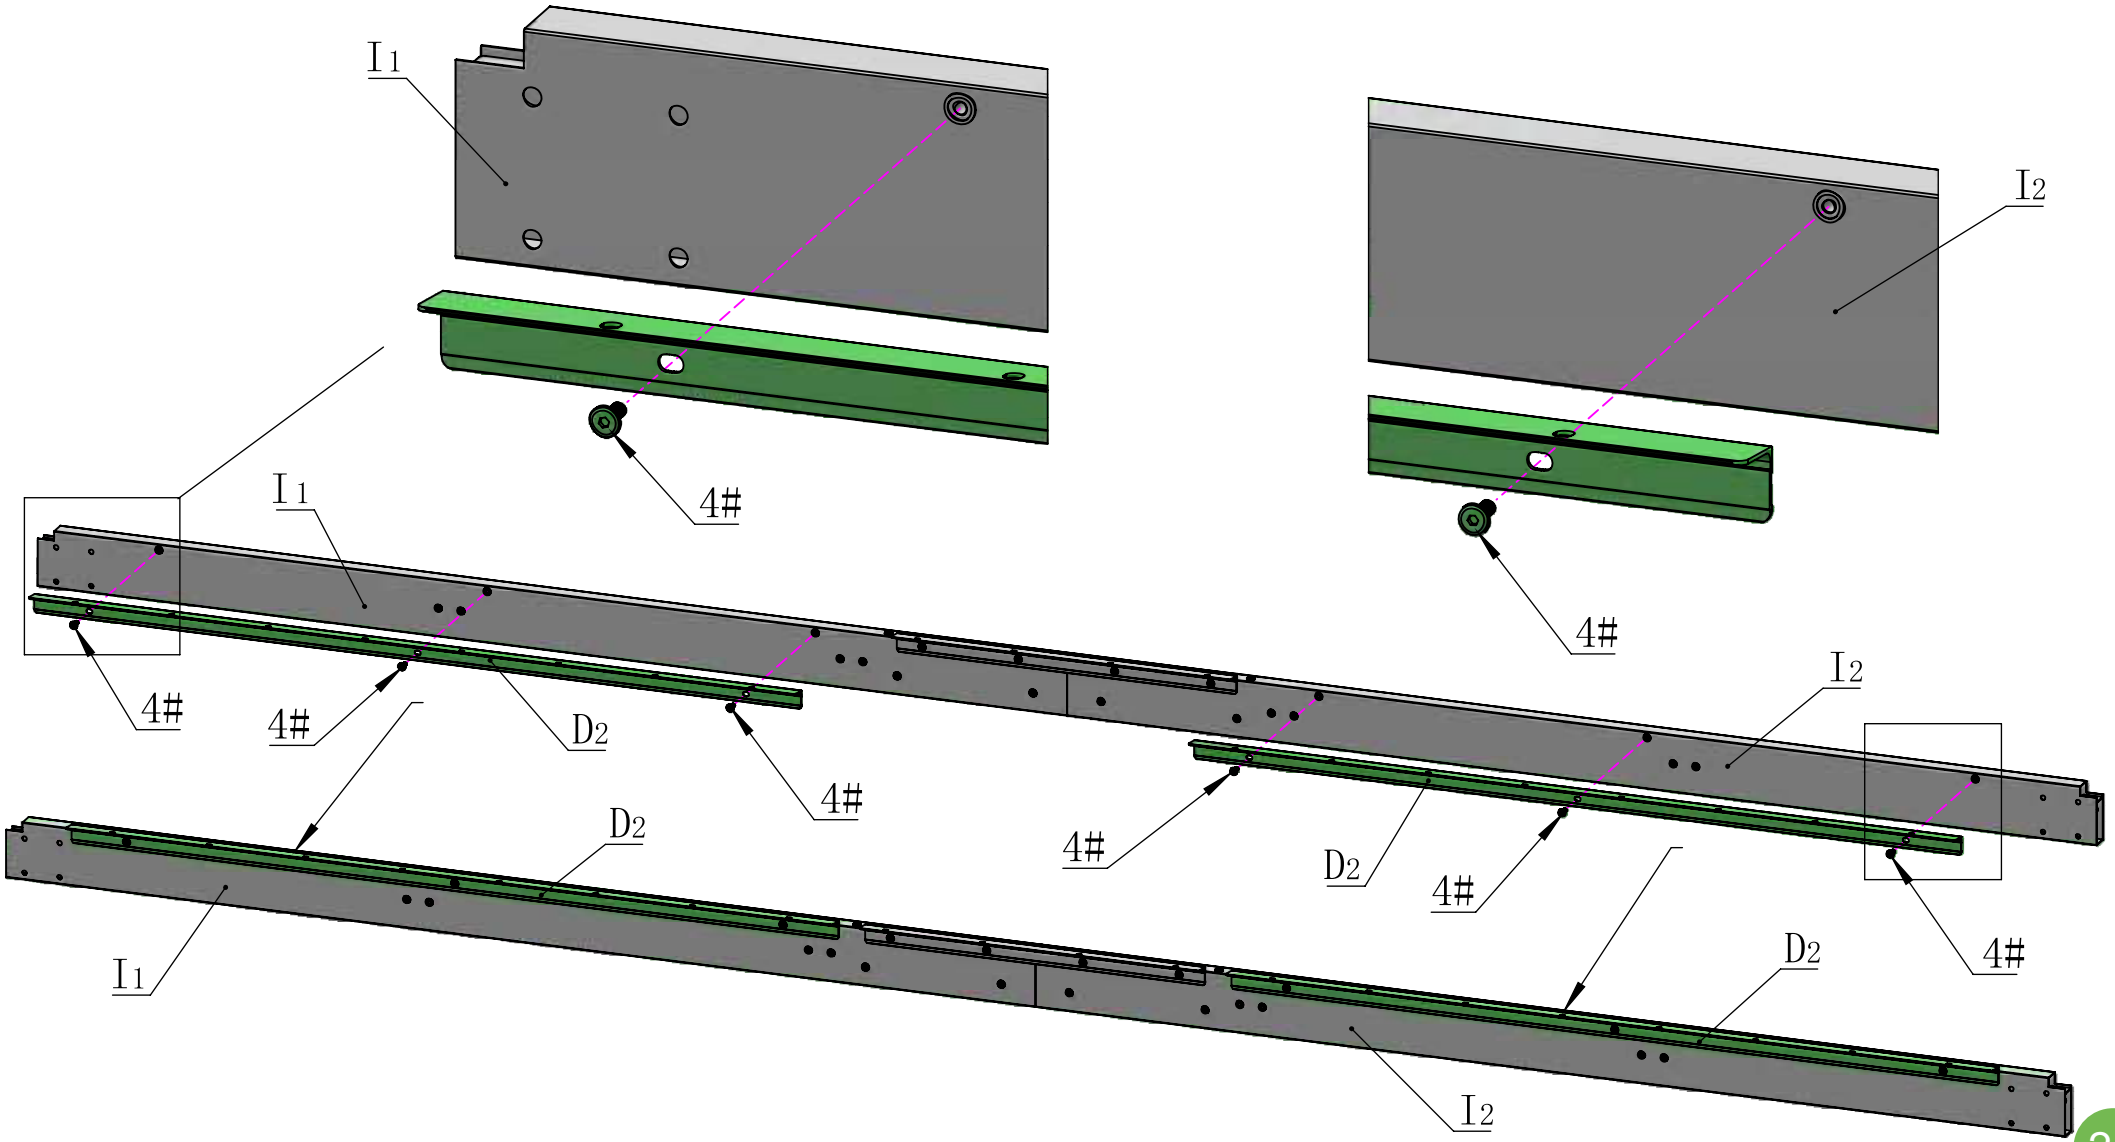


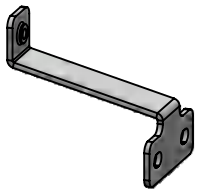


P 4X

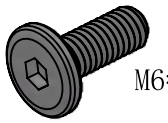


4# 8X

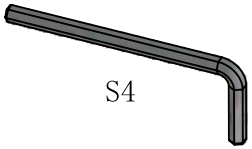


24# 1X

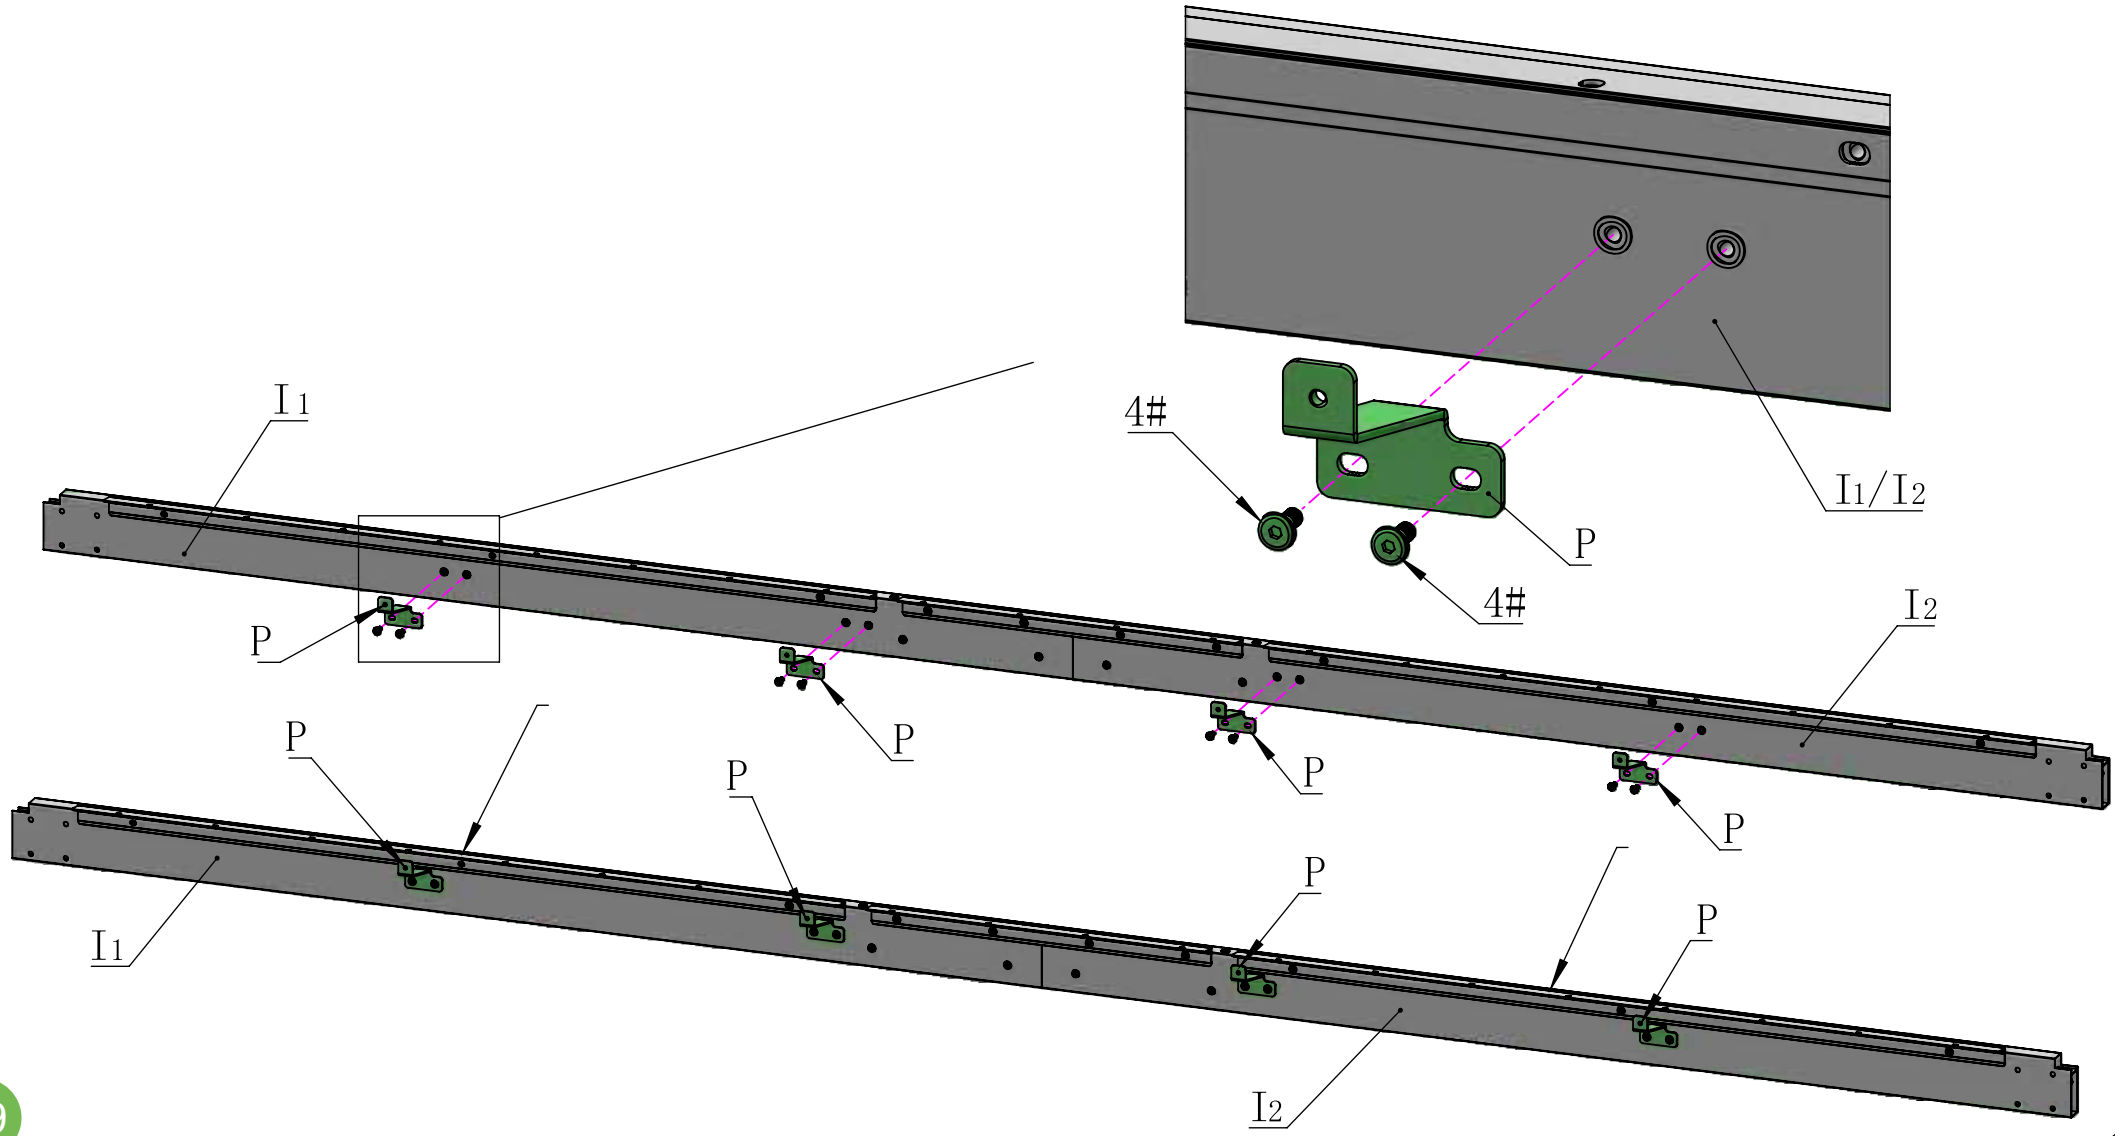


Frame Assembly

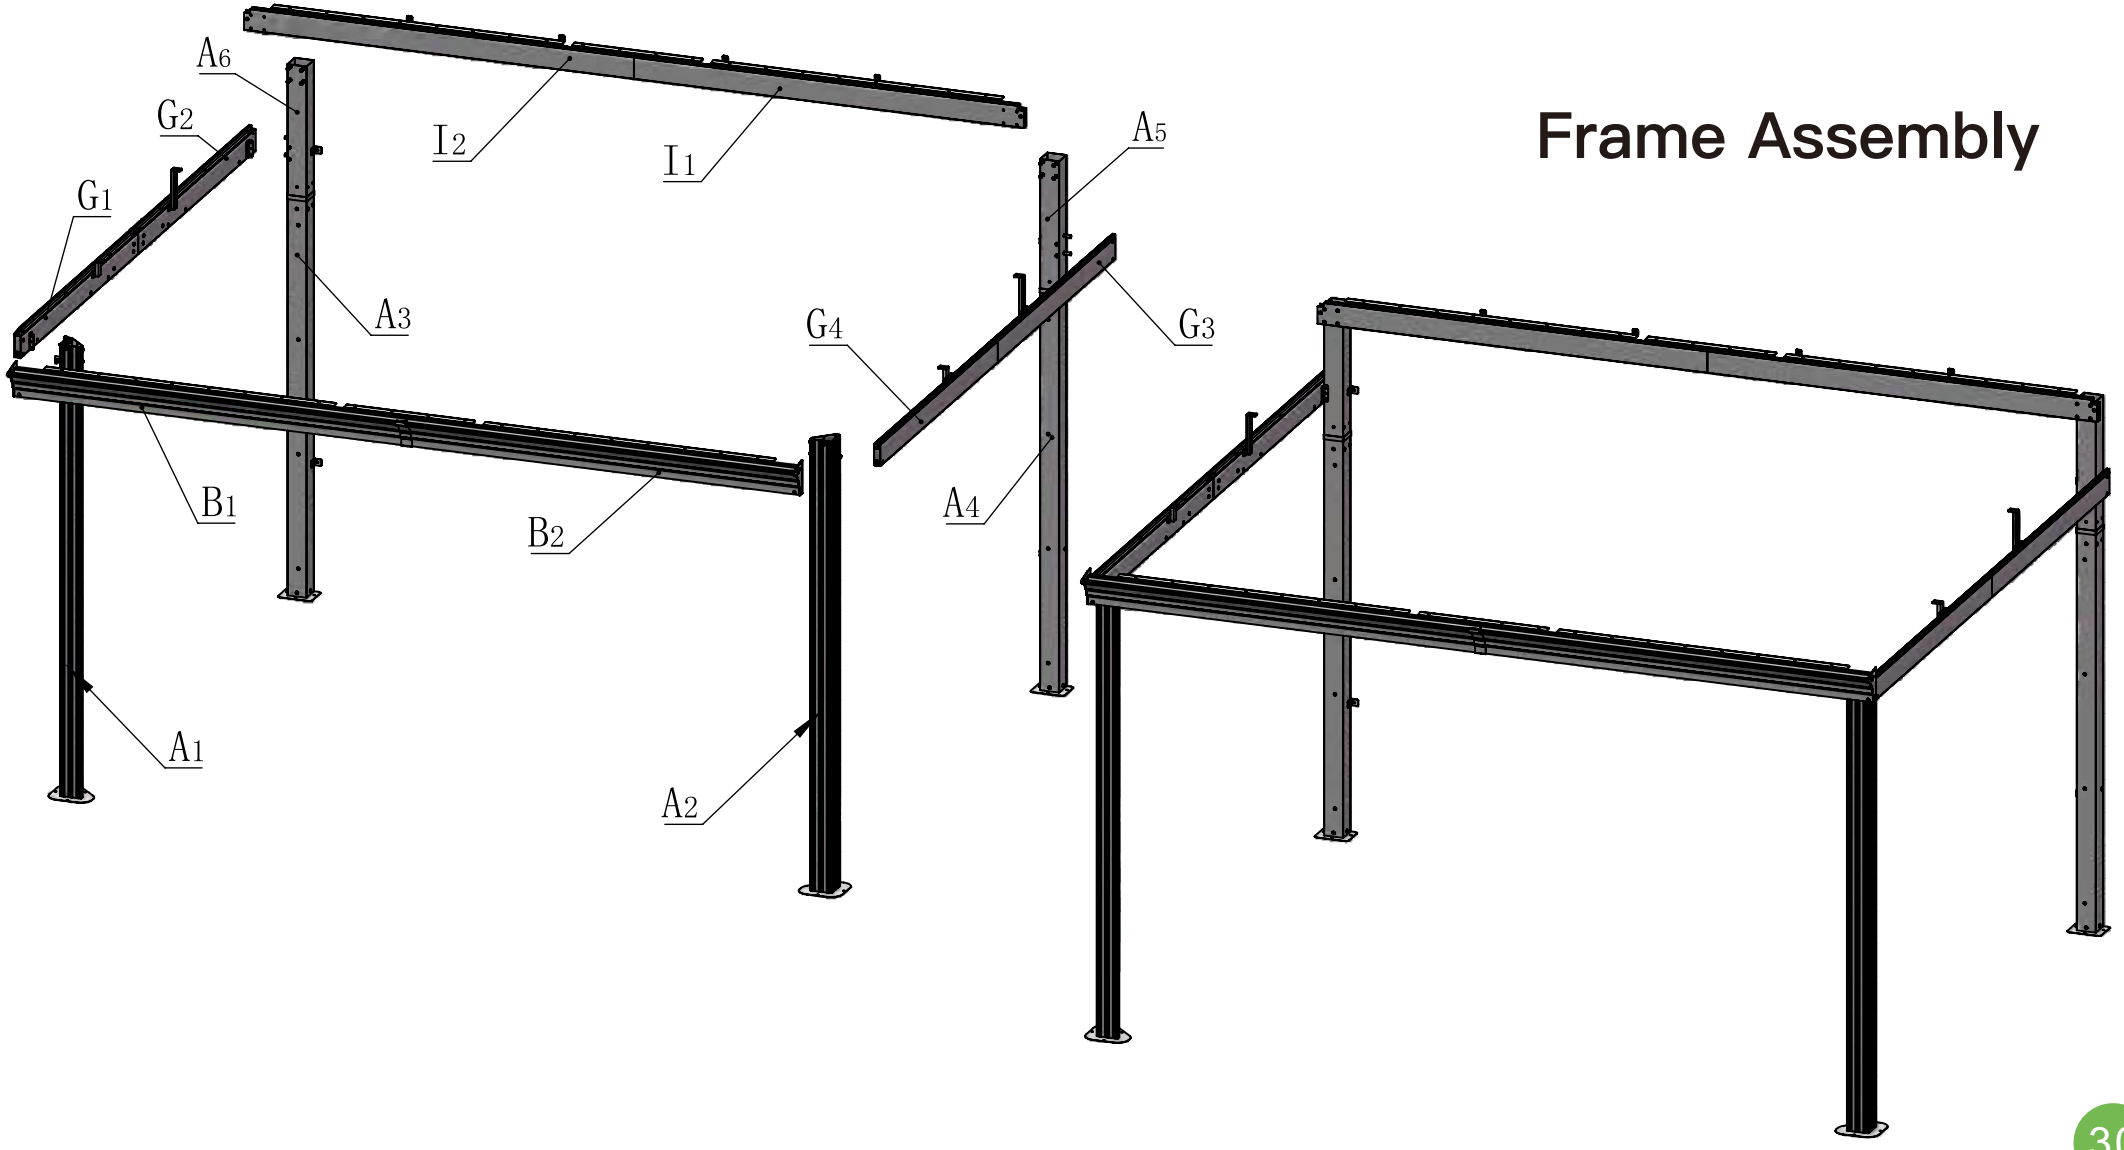


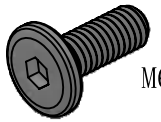


4# 6X

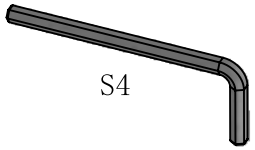


24# 1X

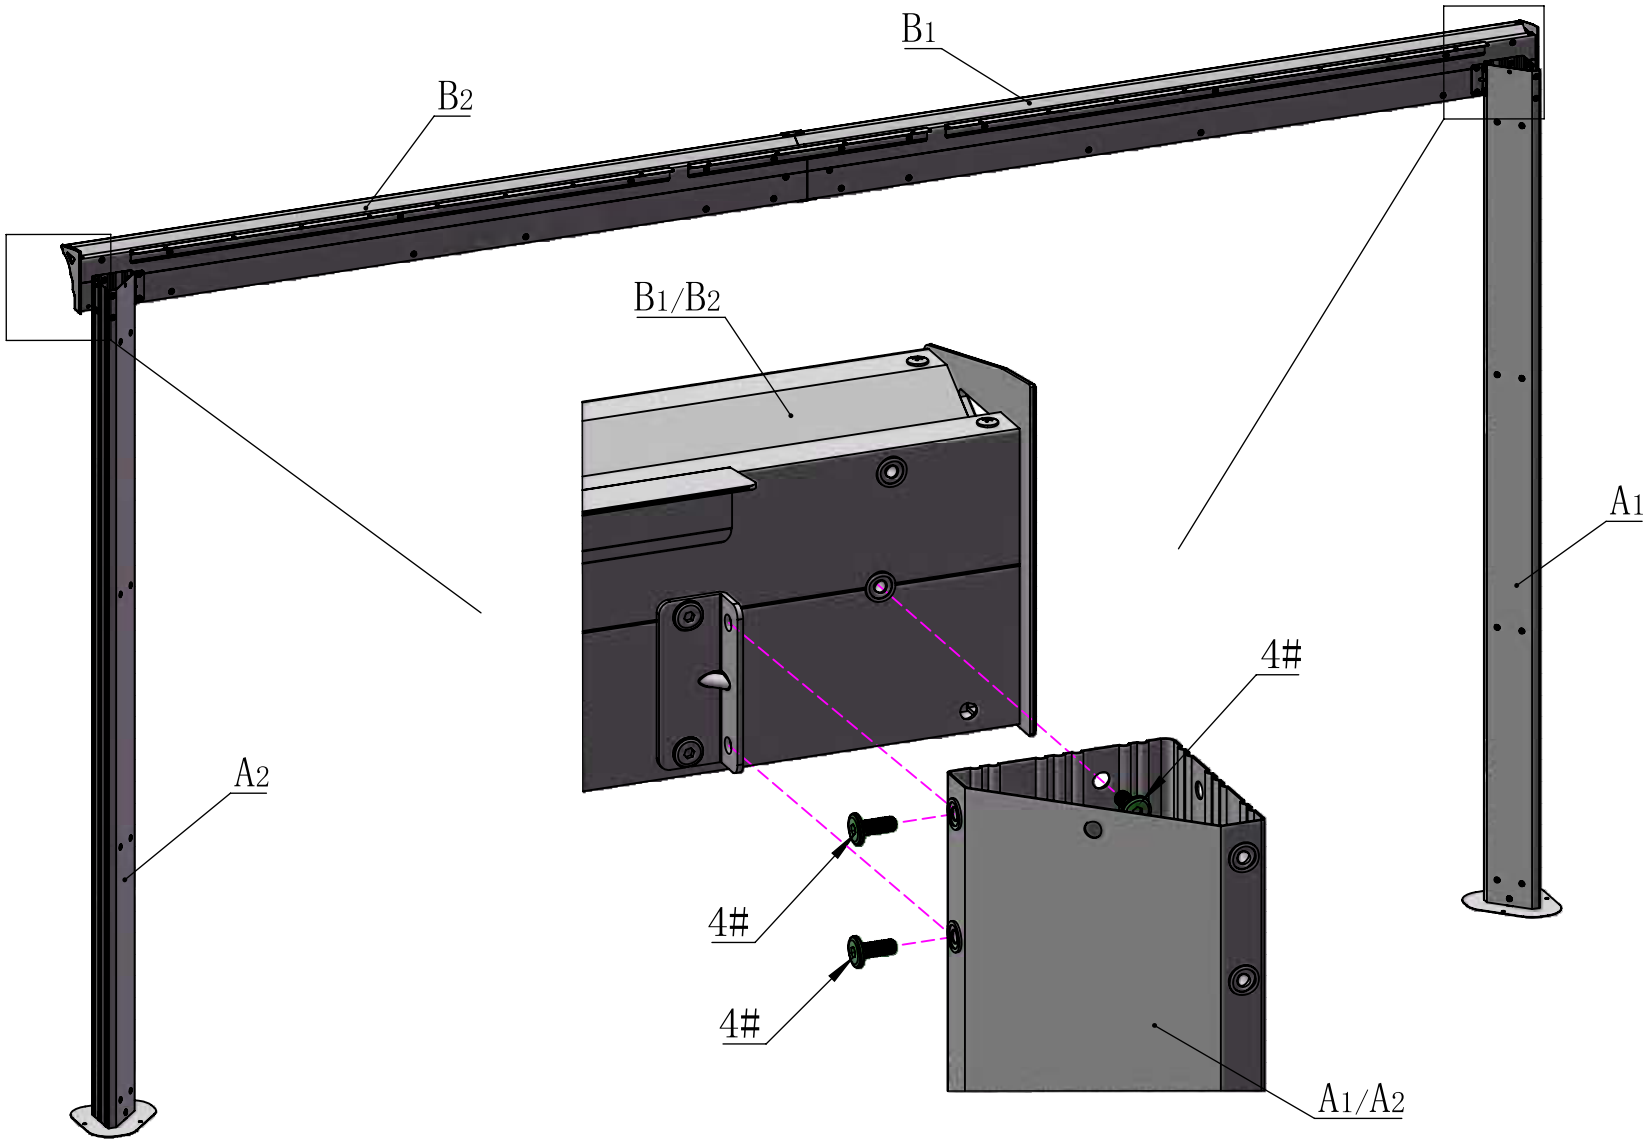

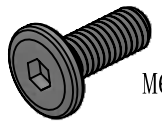


M6*16

4# 10X

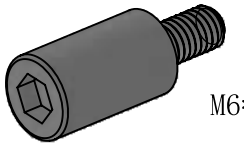


M6*12(L20)

7# 2X

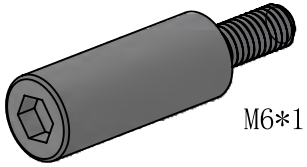


M6*15(L30)

8# 6X

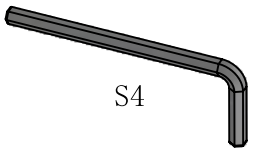


S4


24# 1X

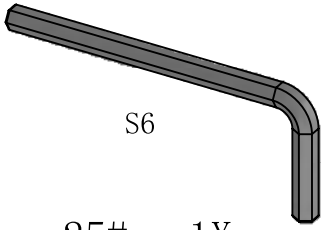

S6

25# 1X

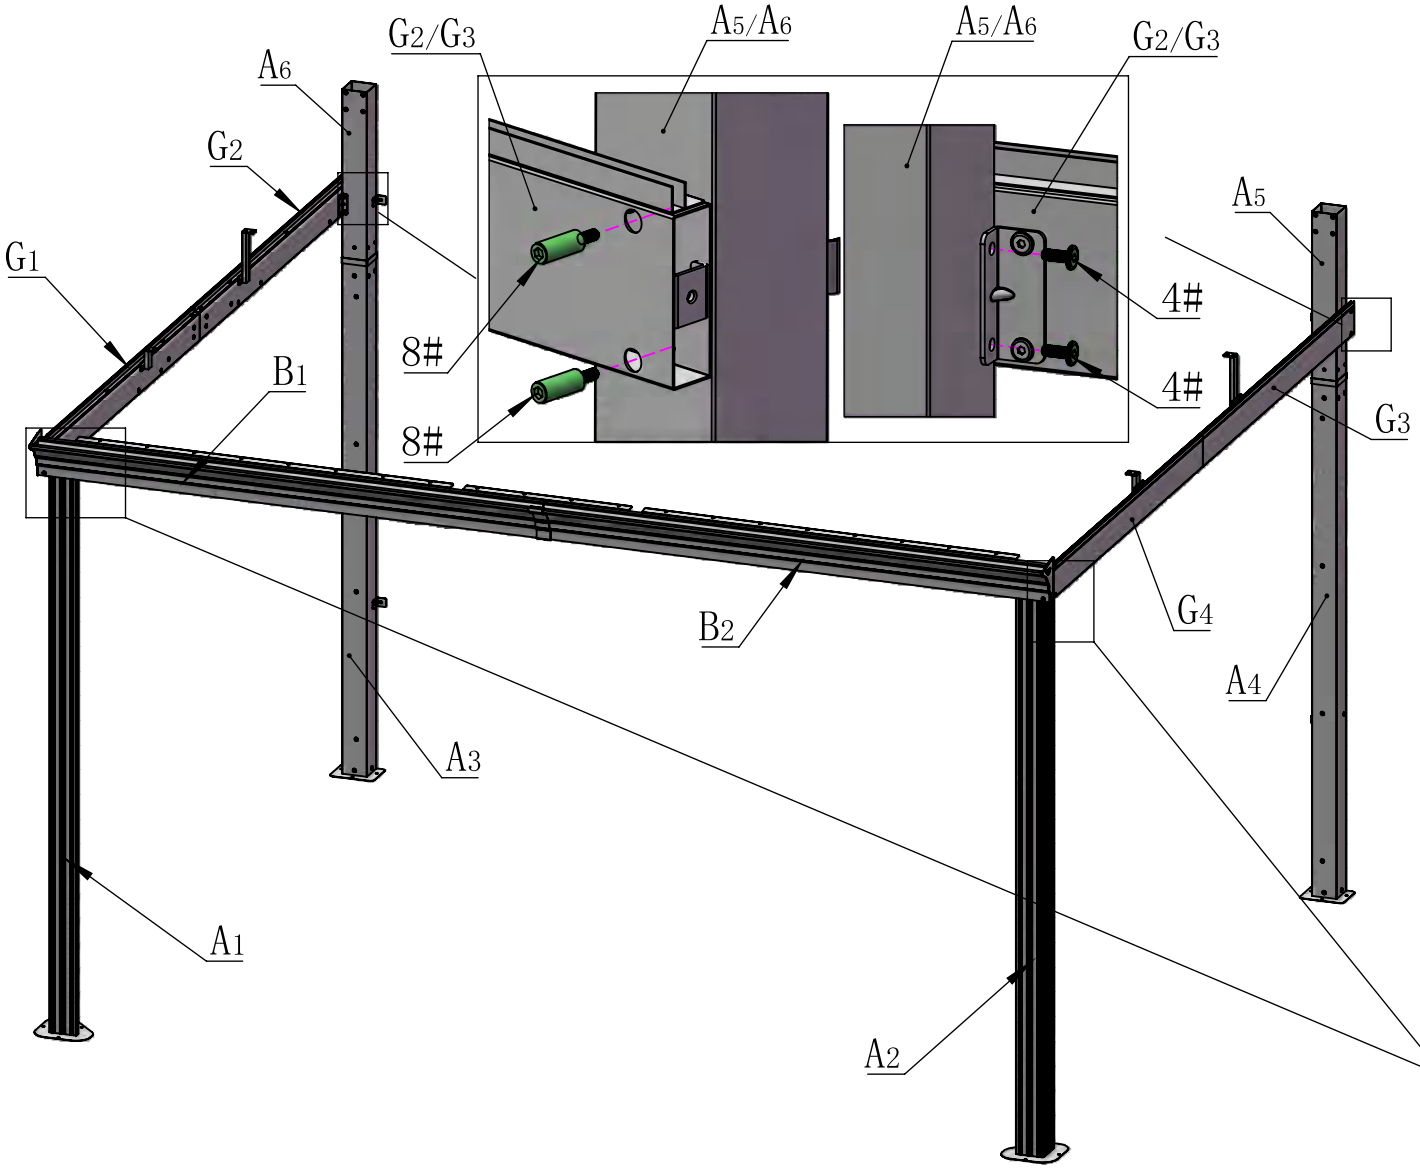

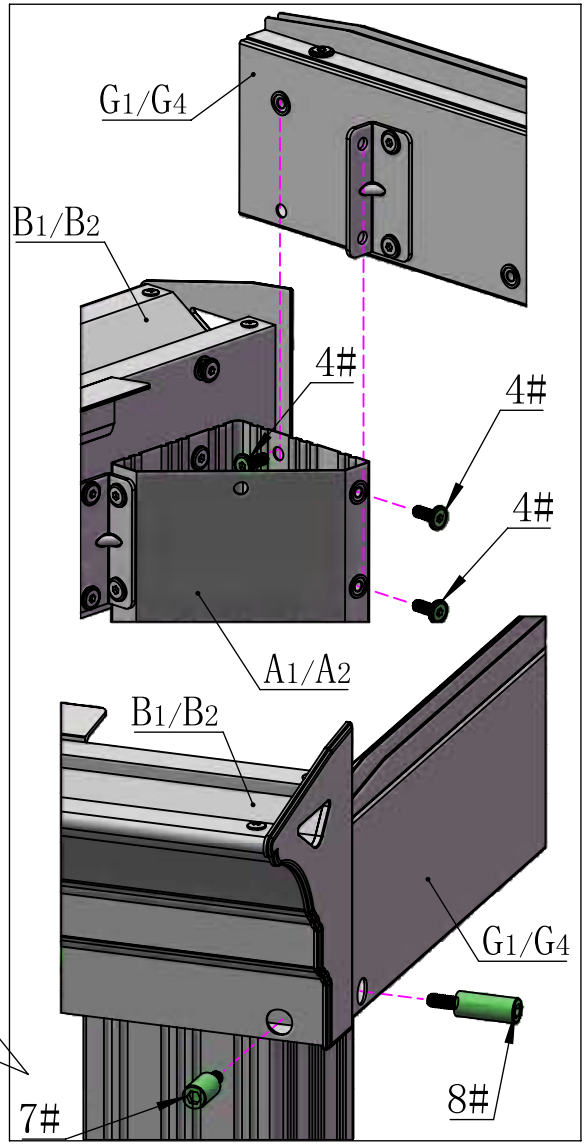





Q 2X




4# 2X

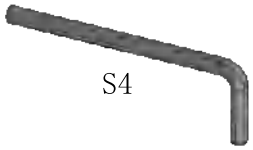


24# 1X

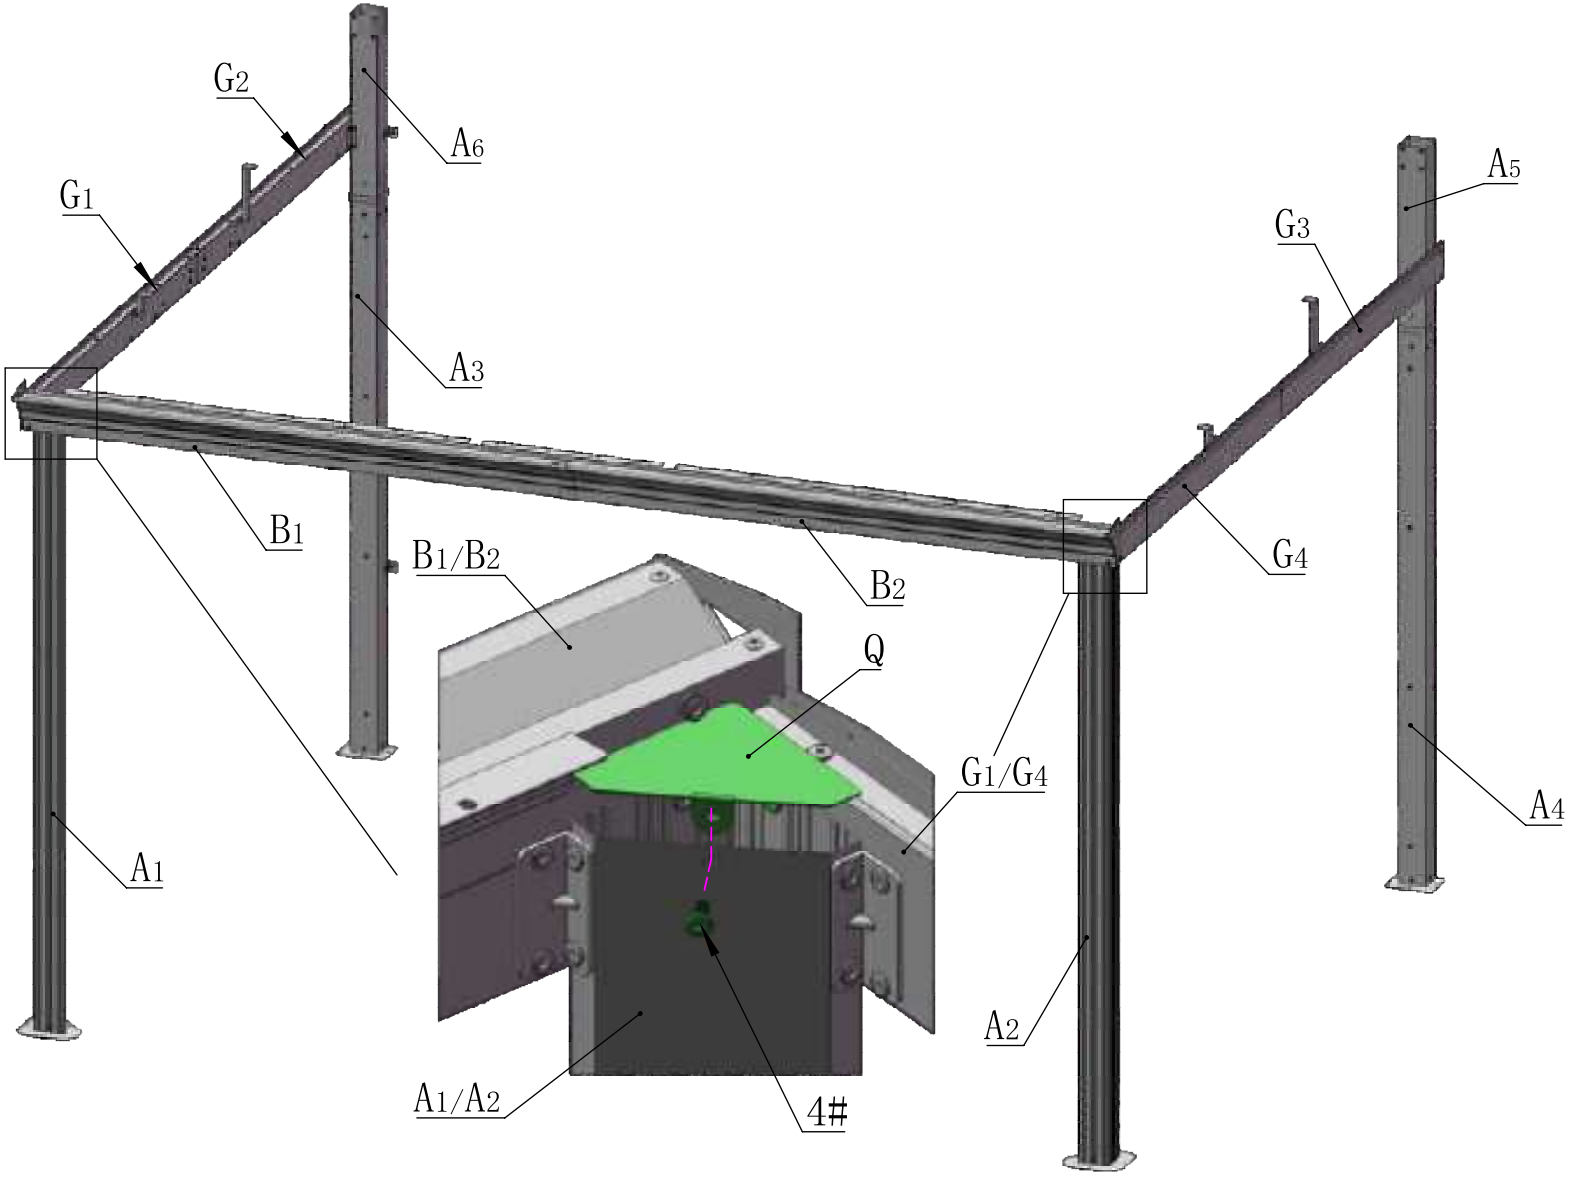


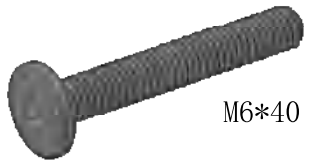
M6*40

6# 8X

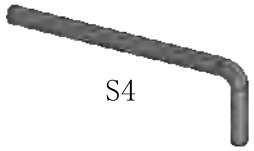

S4


24# 1X

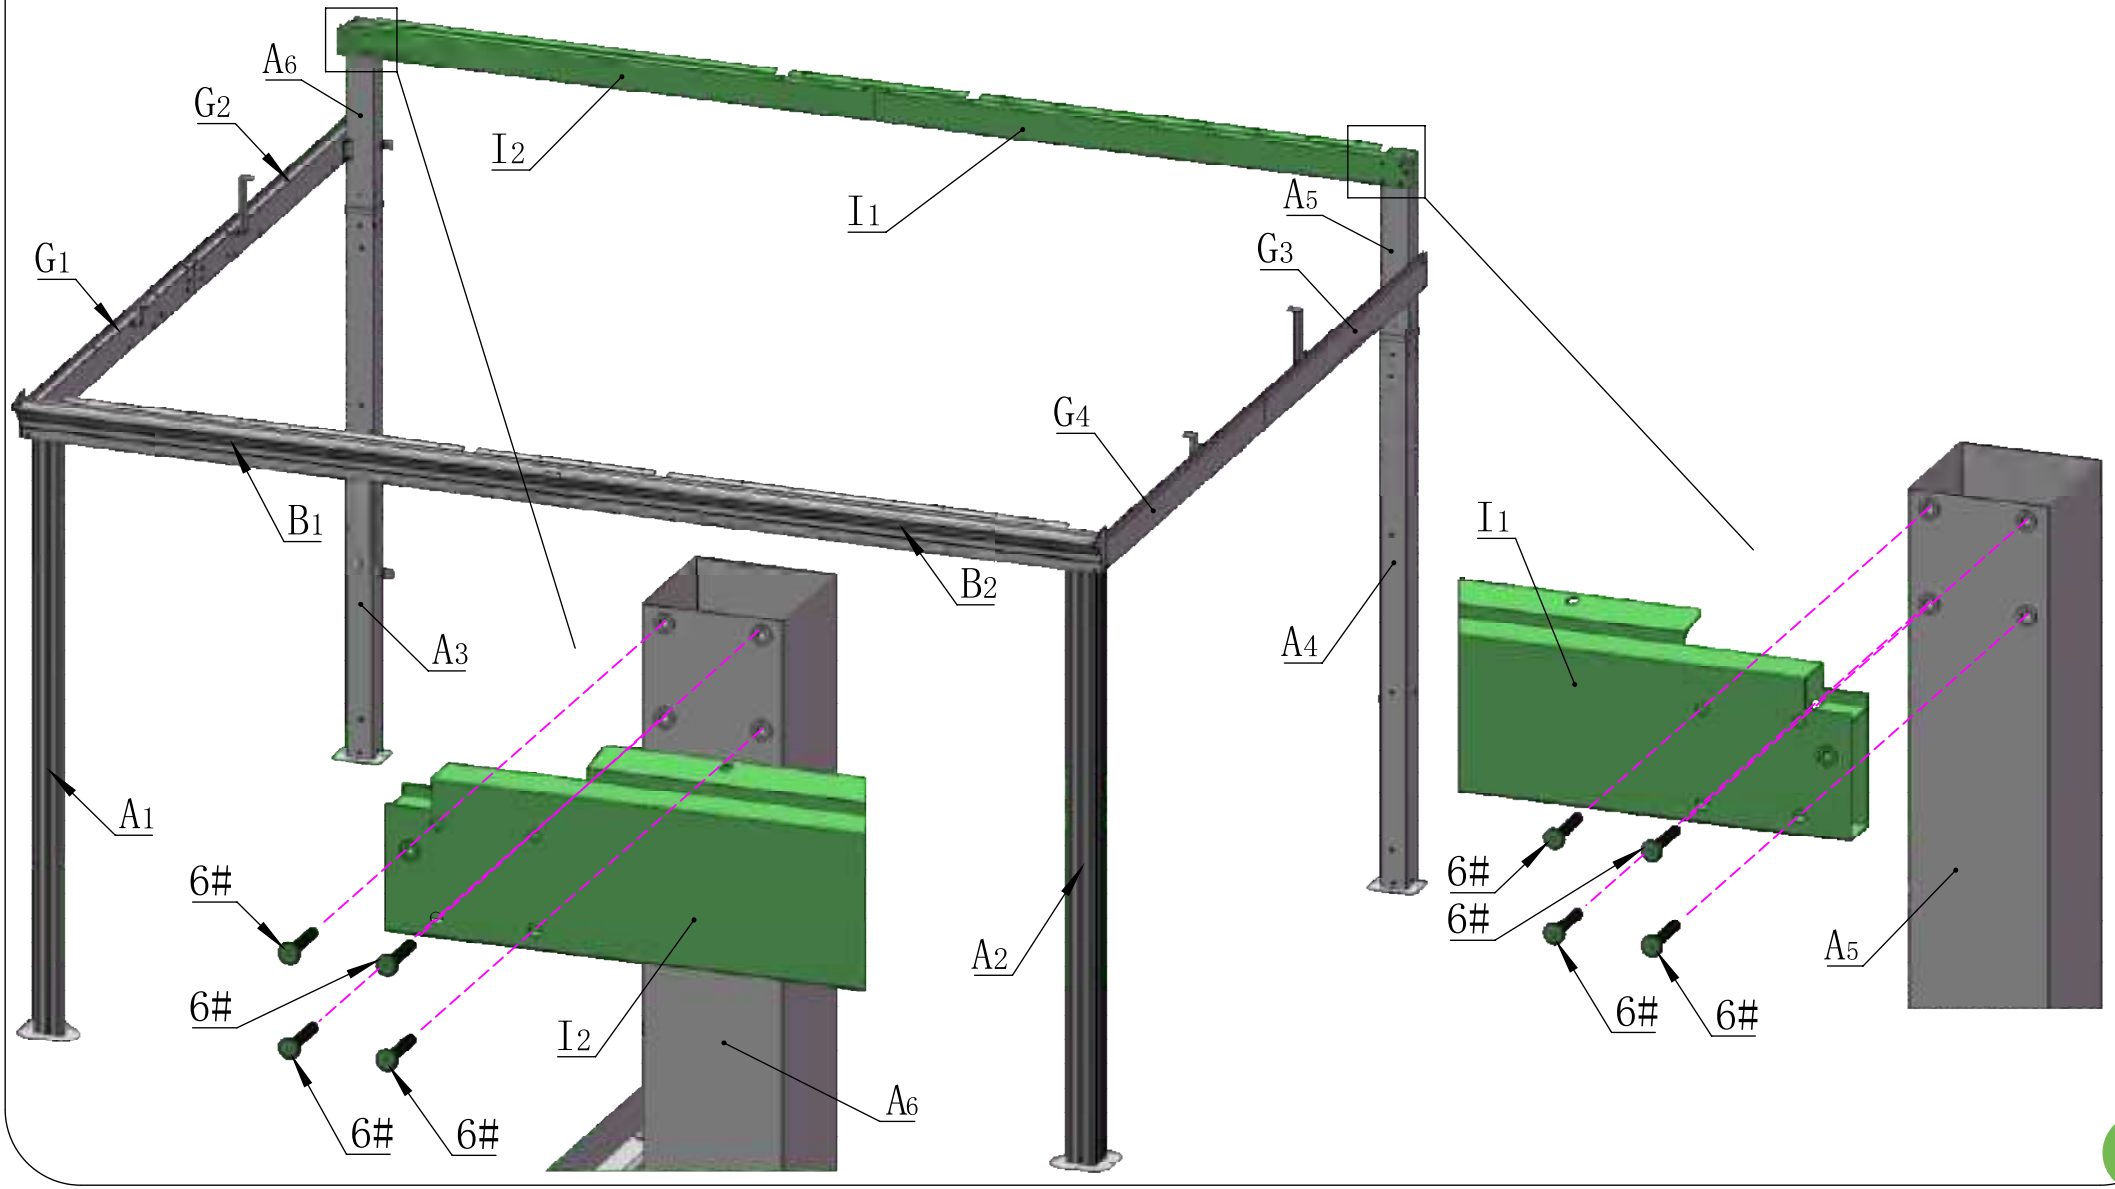
A6
G2
I2
I1
A5
G1
G3
G4
B1
B2
A3
A4
A1
A2
6#
6#
6#
6#
I2
A6
I1
6#
6#
6#
6#
A5


2X


Two Central Beam Assembly

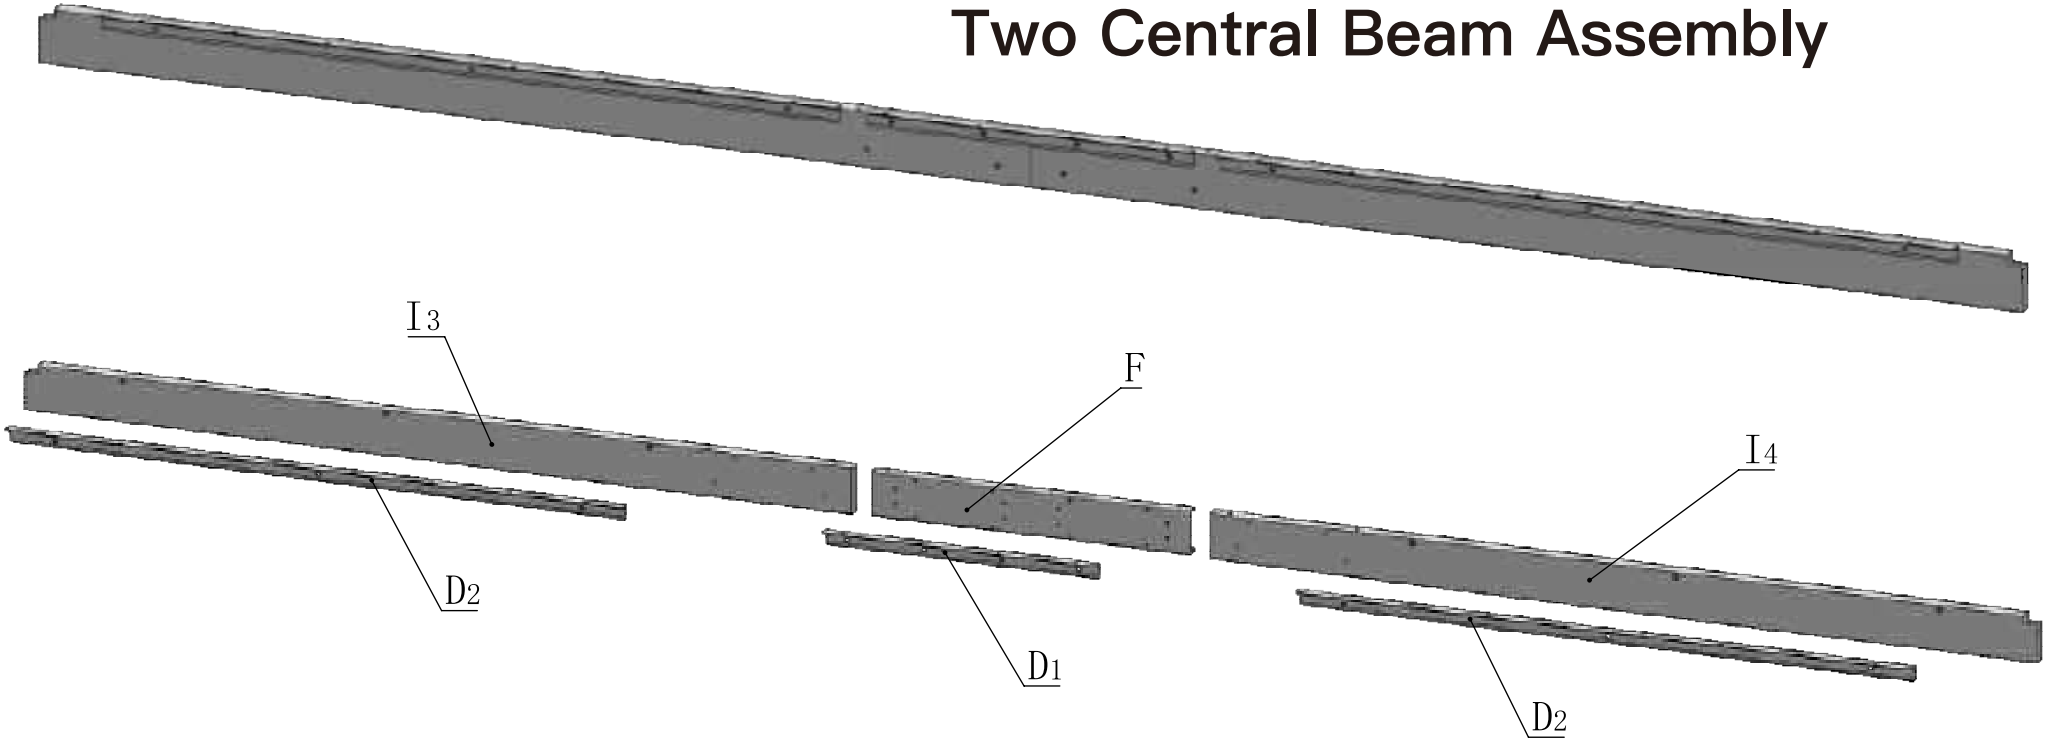

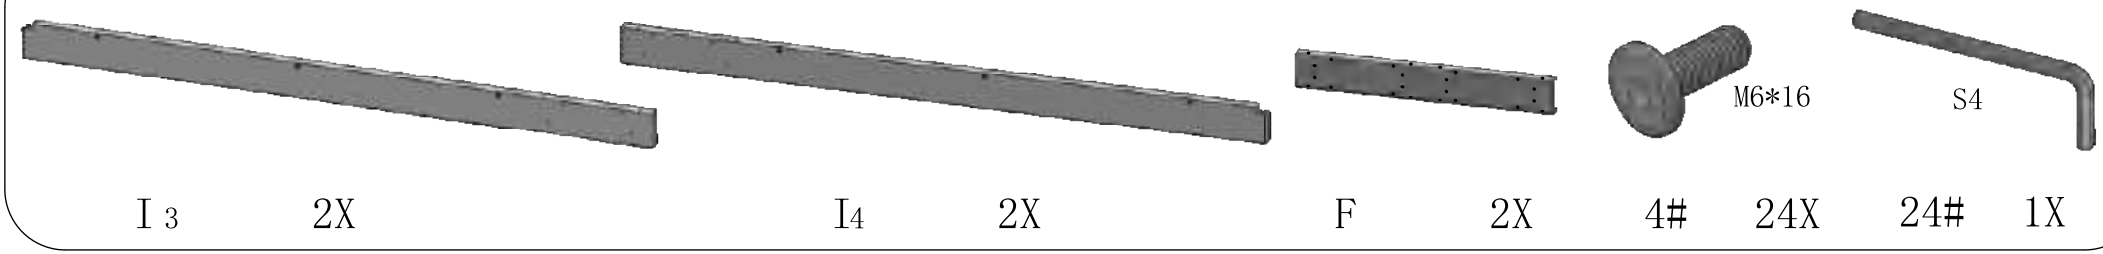

I 3 2X I4 2X F 2X 4# 24X 24# 1X

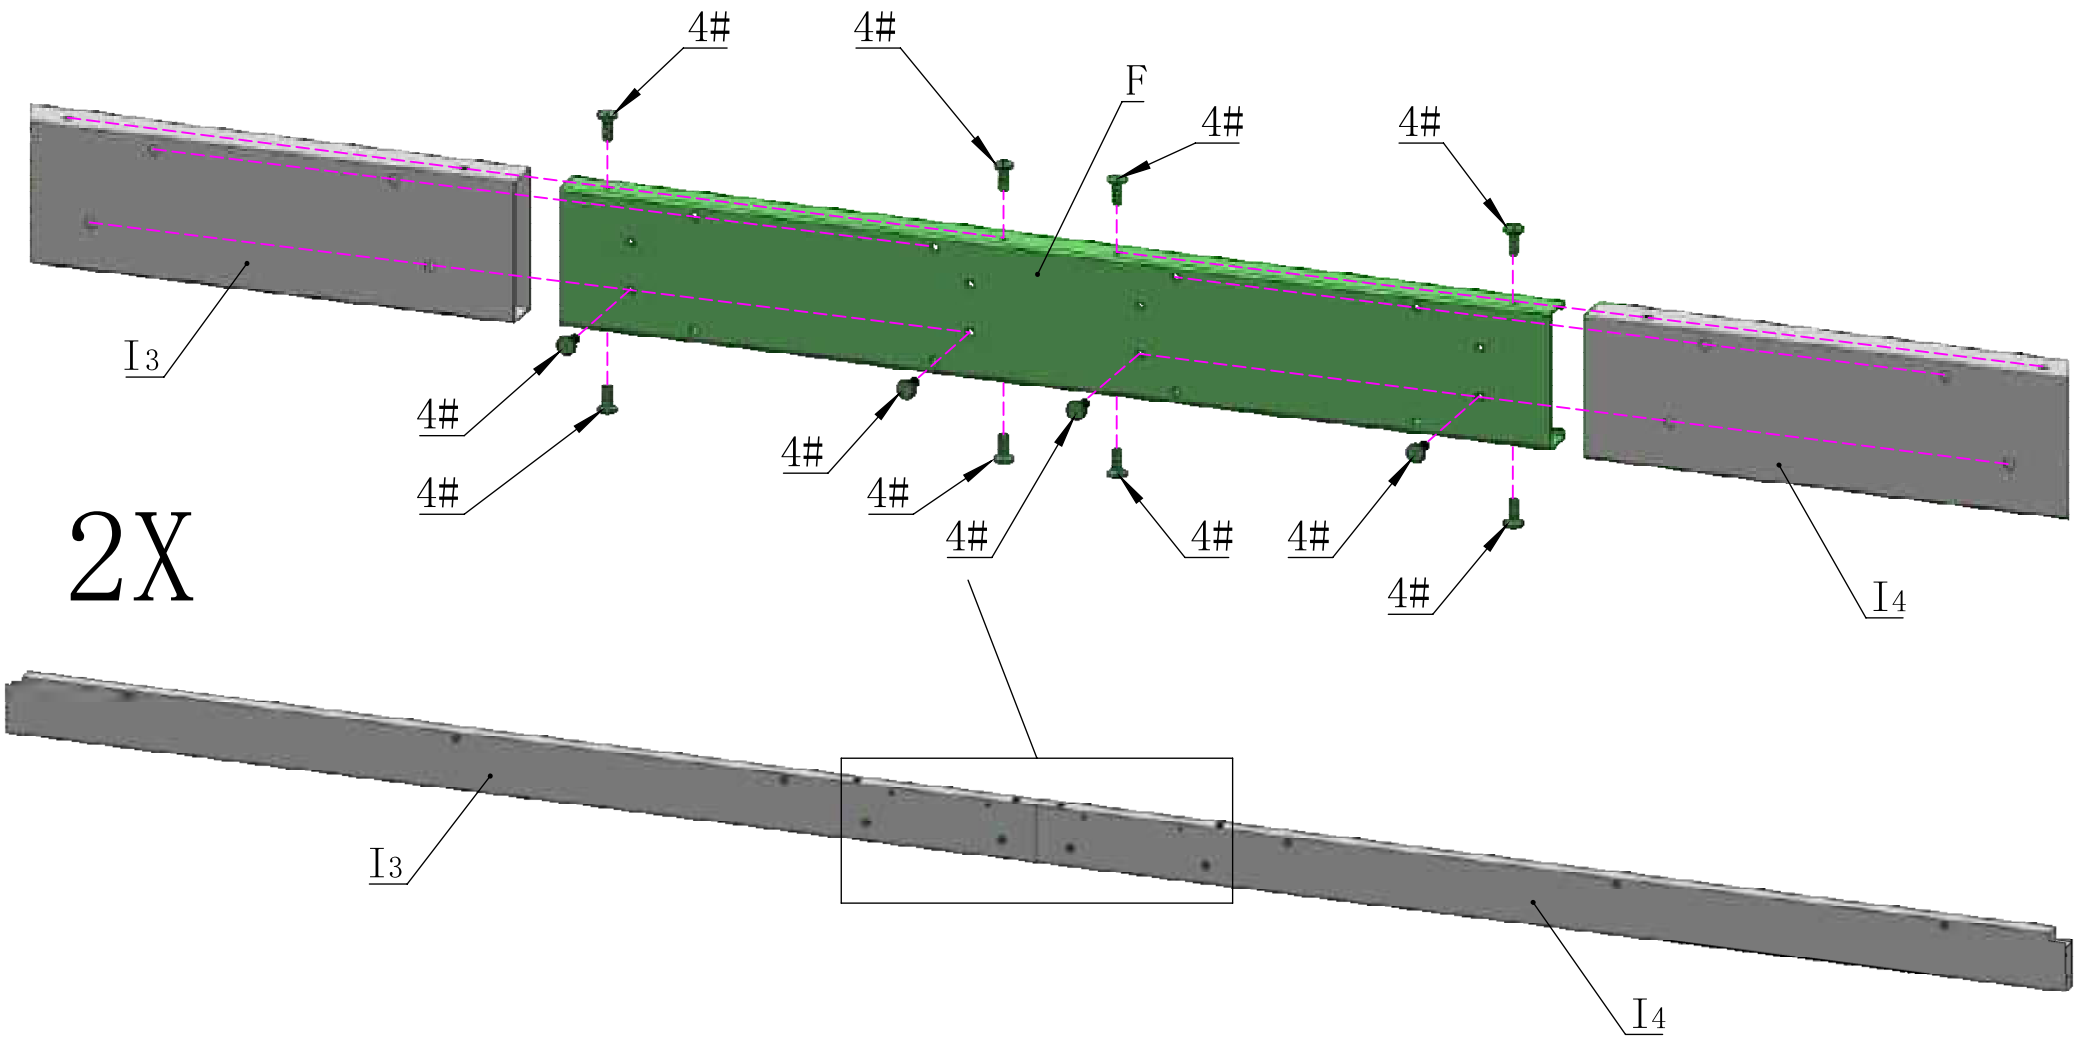


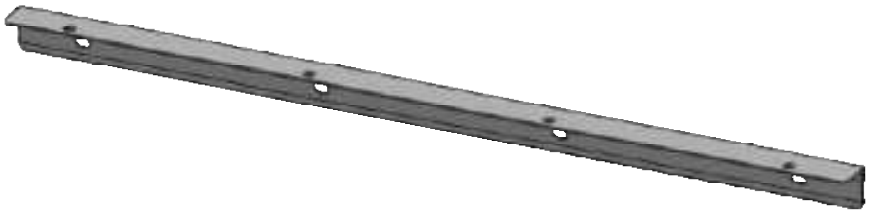

D1 2X





4# 8X

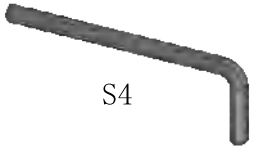

24# 1X

2X

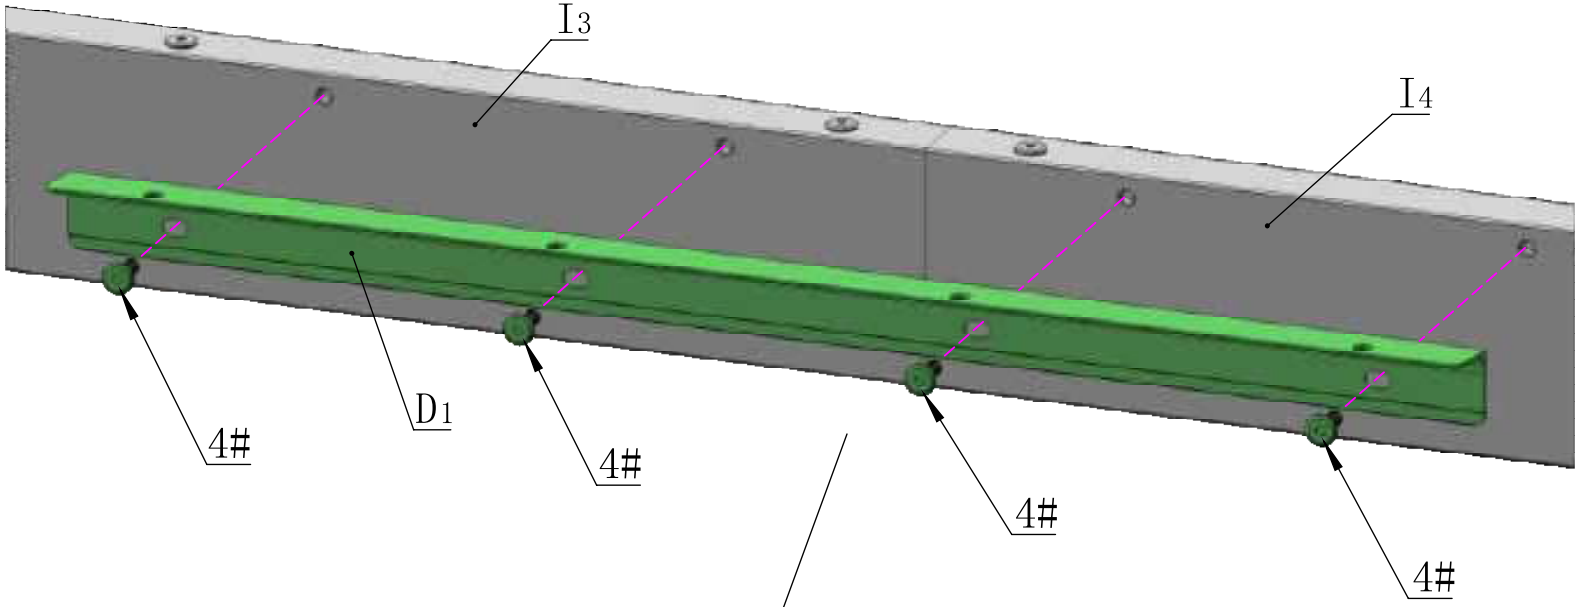

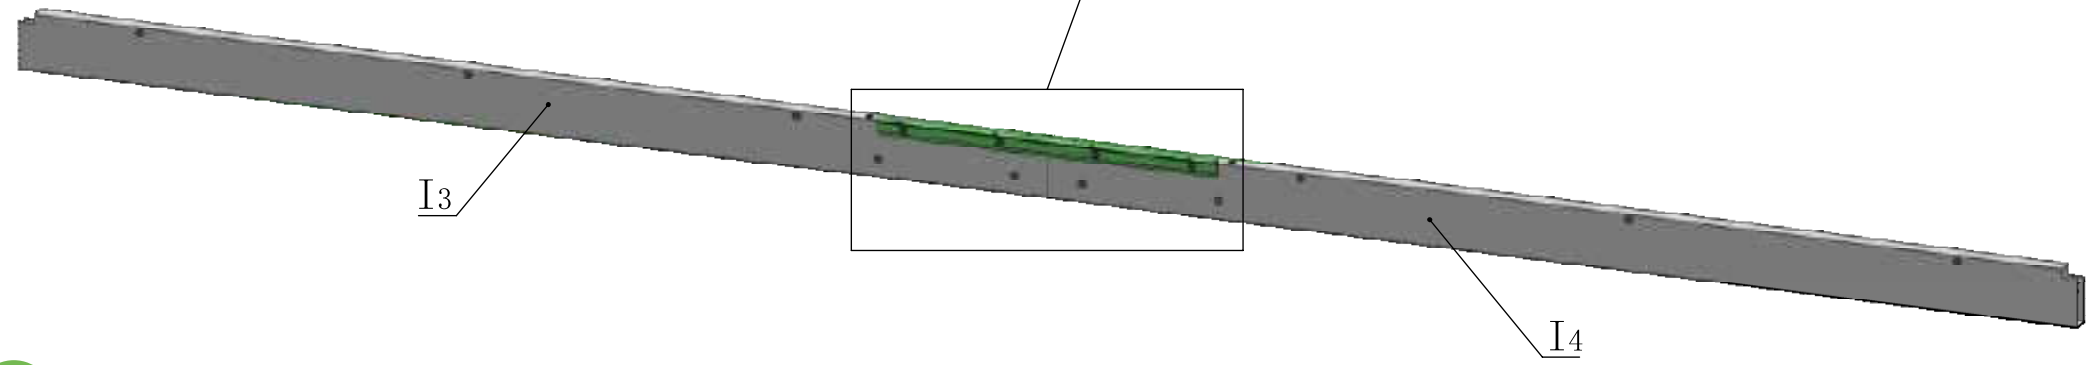





D 2　　4X



4#　　12X

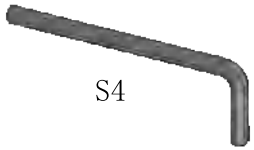

24#　　1X

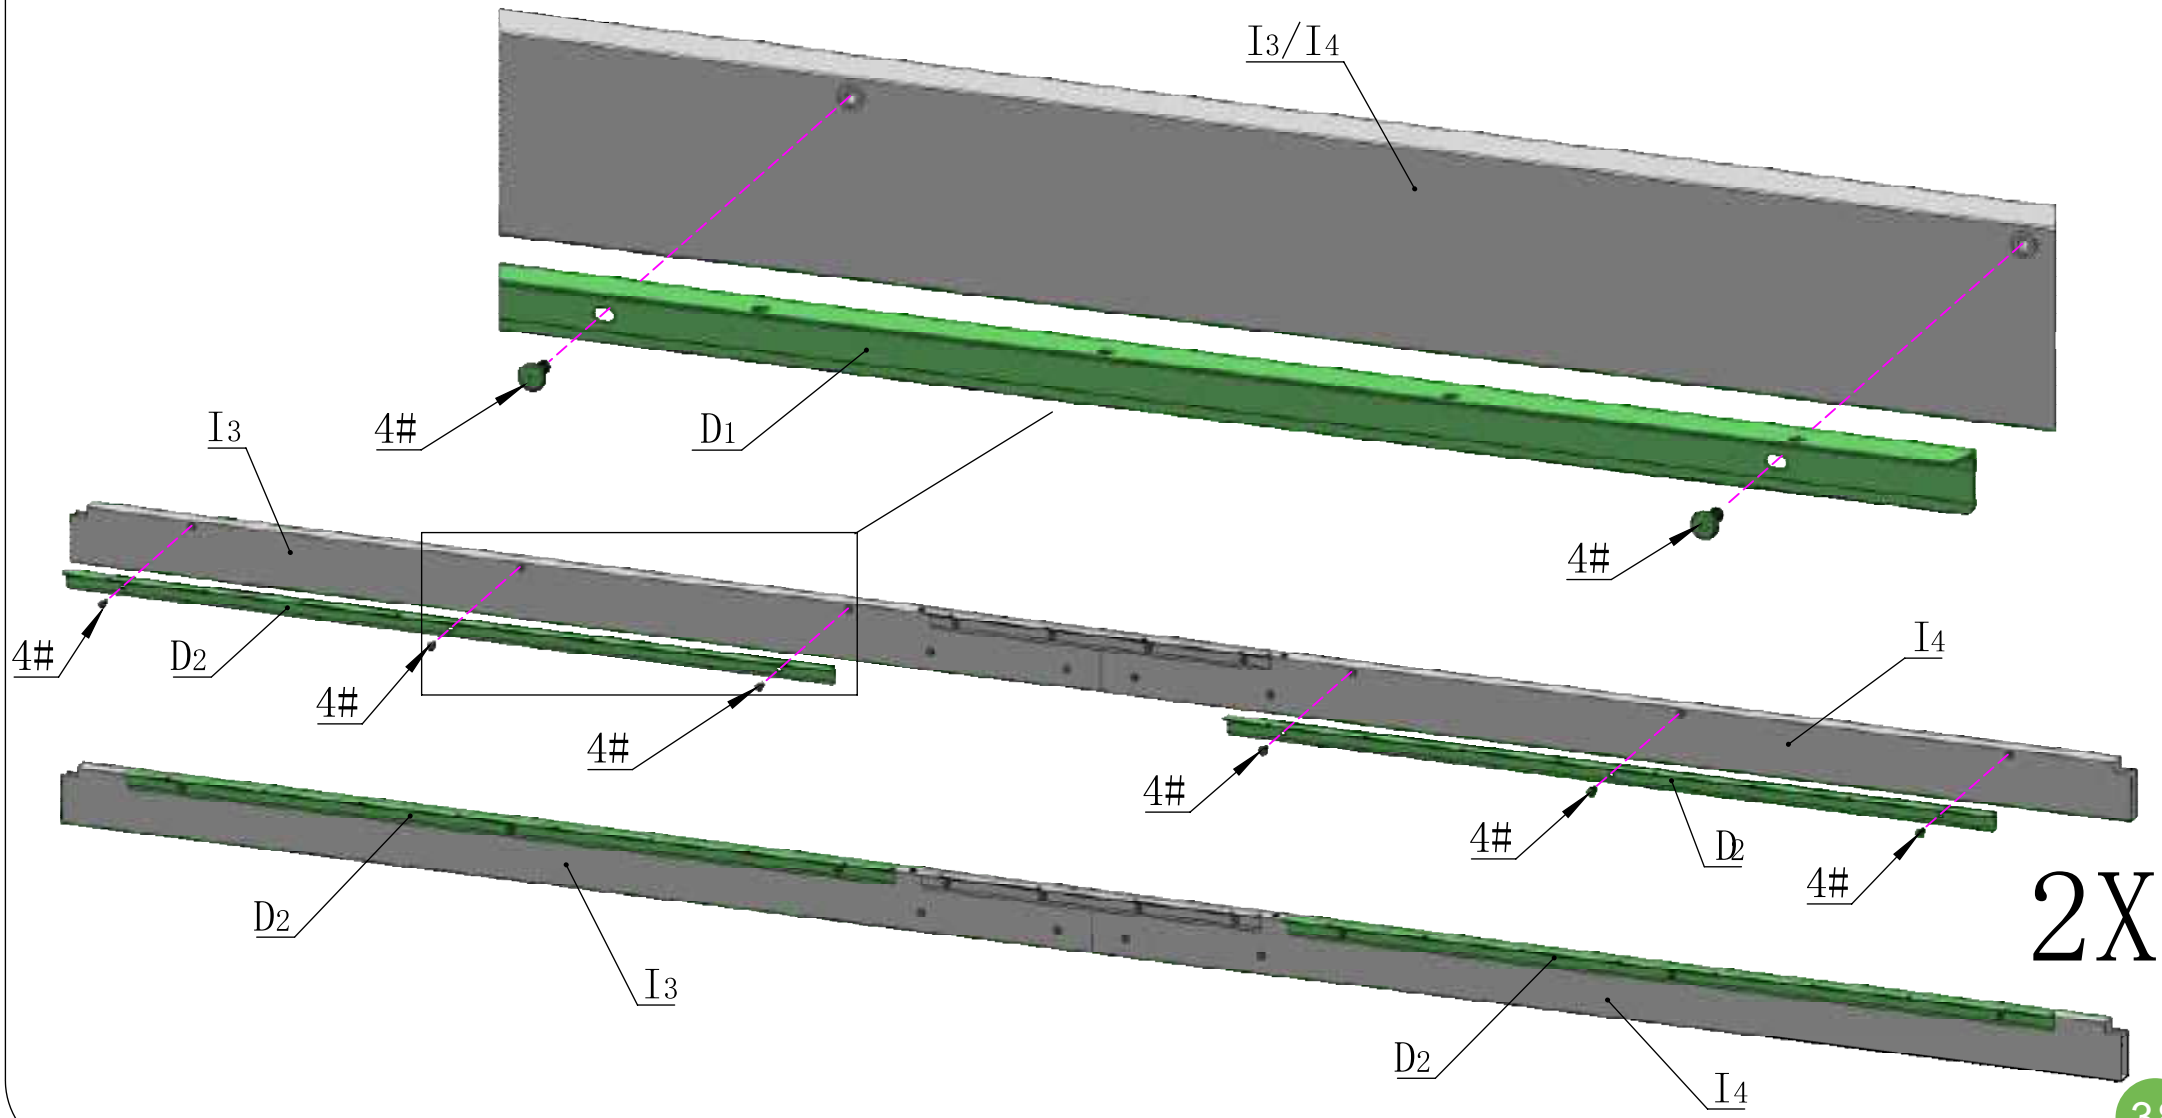




M6*16


4# 4X

S4


24# 1X

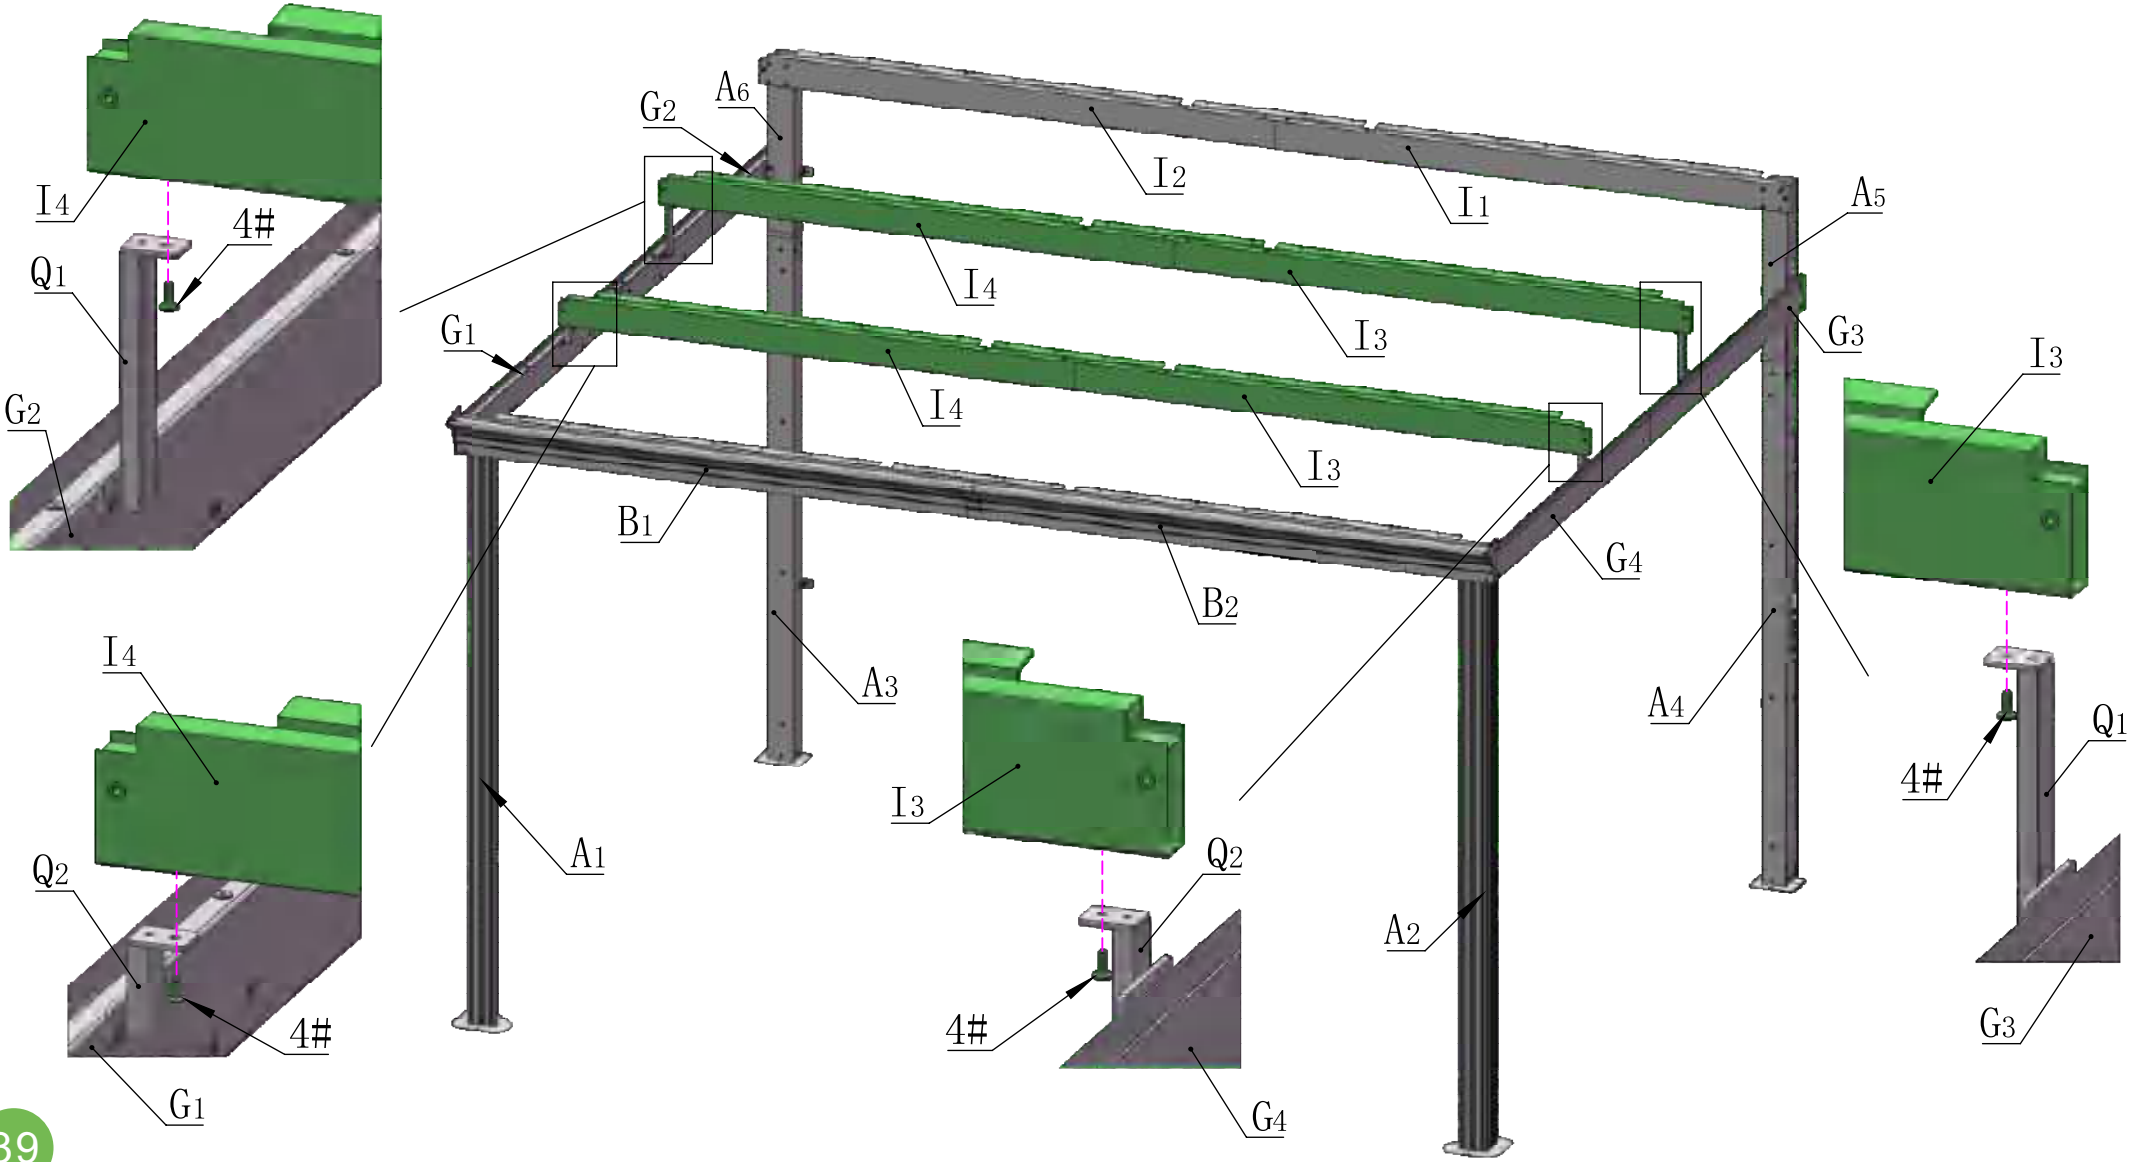

I4
4#
Q1
G2
I4
Q2
4#
G1
G2
A6
I2
I1
A5
I4
I3
G1
I4
I3
G3
I3
B1
B2
G4
A3
A4
I3
Q2
4#
G4
A2
Q1
4#
G3
A1

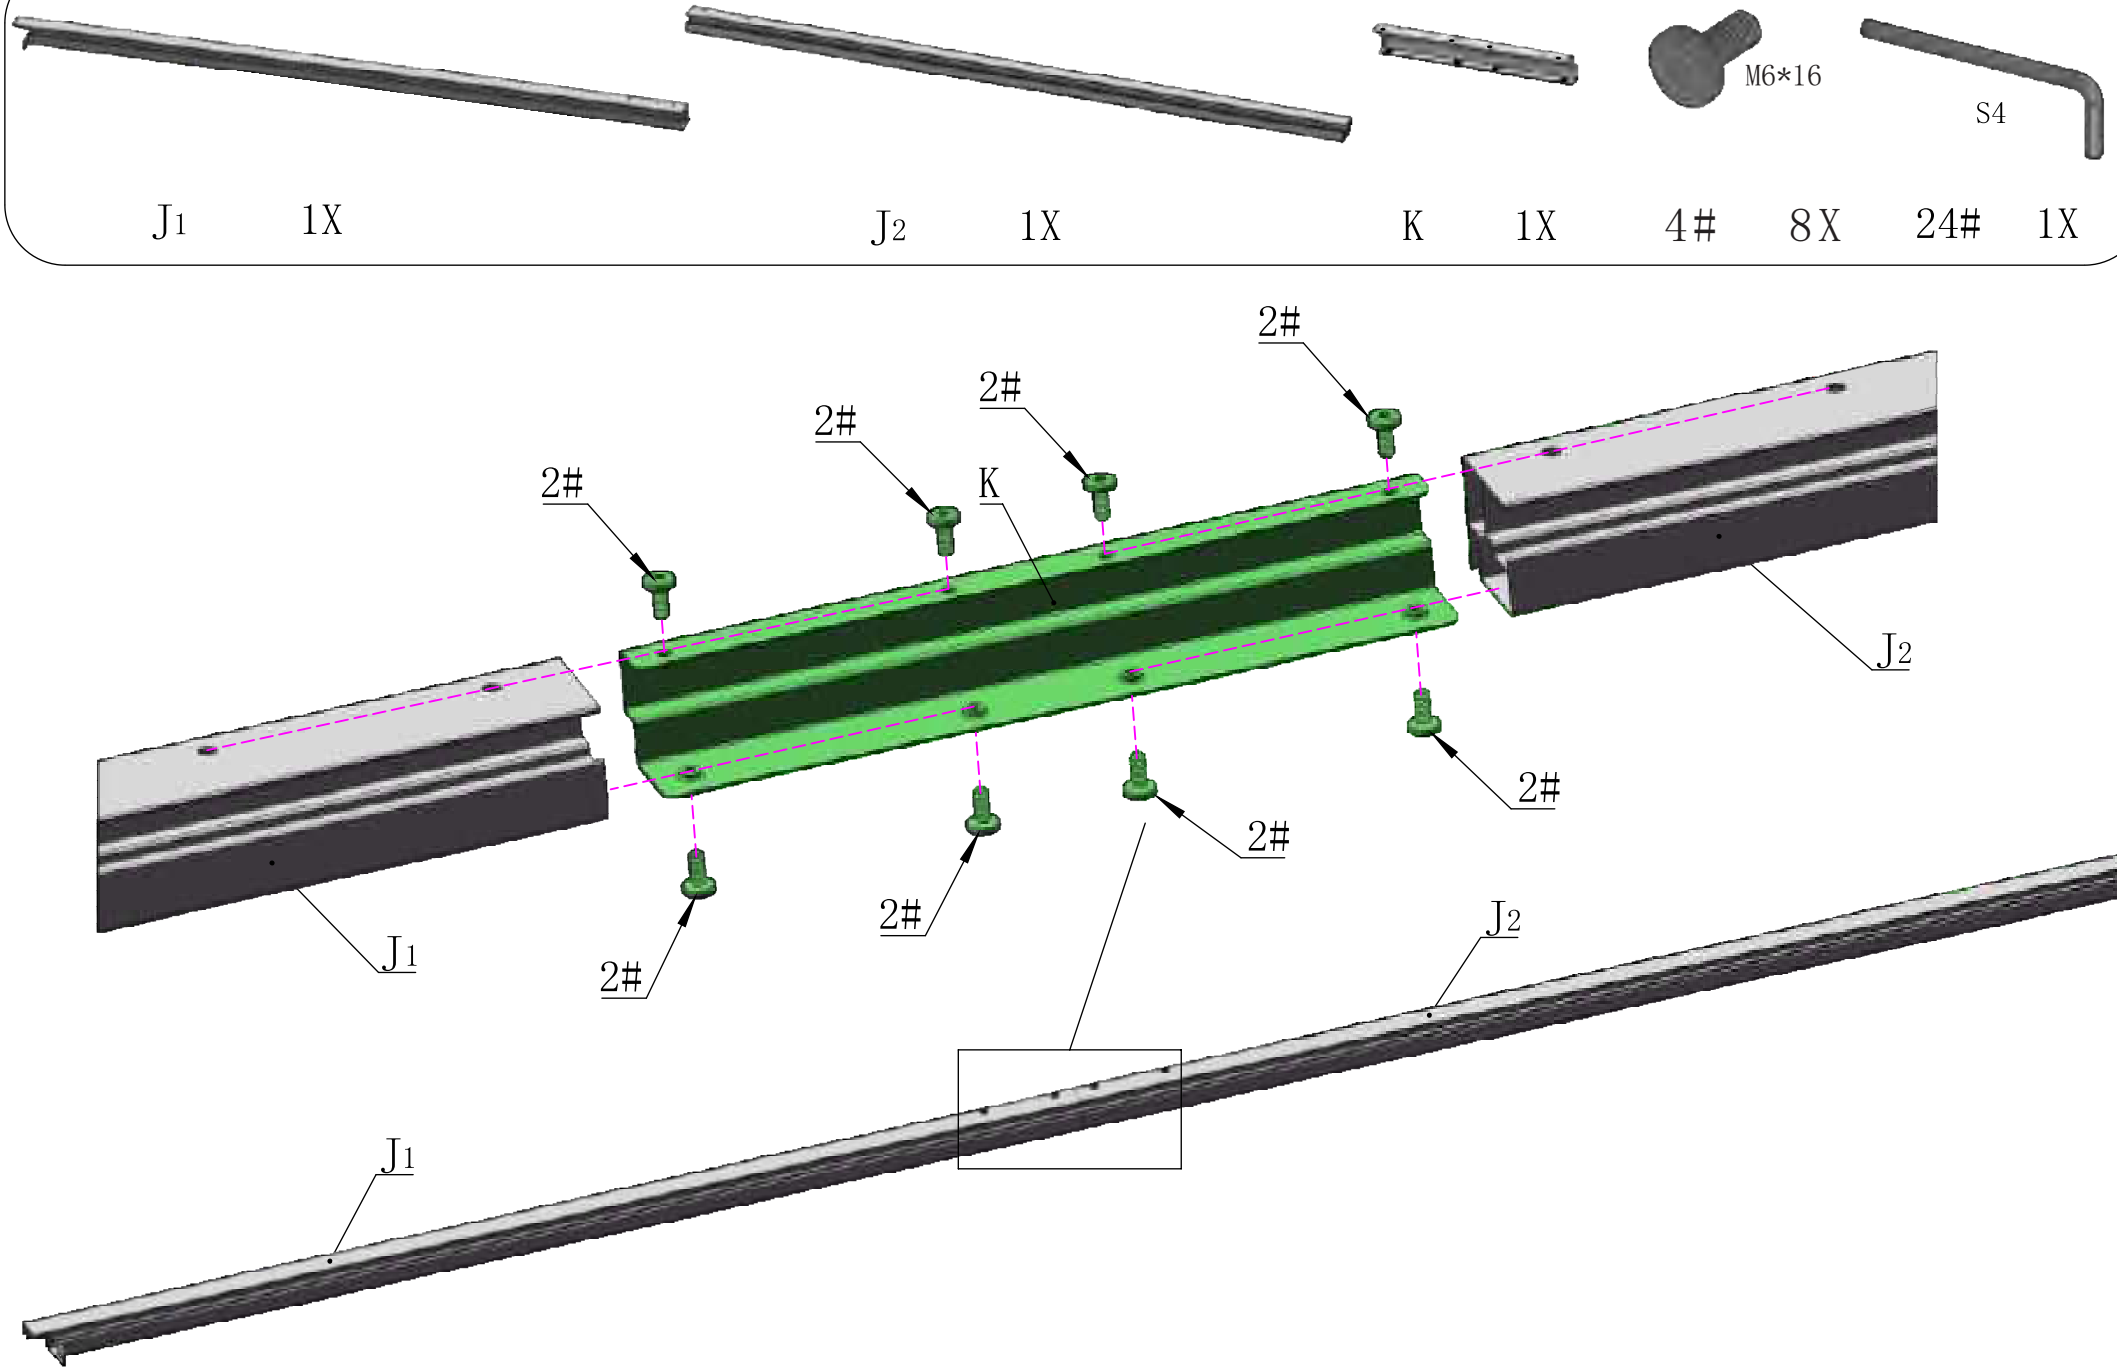

M6*16
S4
J1 1X
J2 1X
K 1X
4# 8X
24# 1X
2#
2#
2#
2#
K
2#
J2
2#
2#
2#
2#
J1
J2
J1

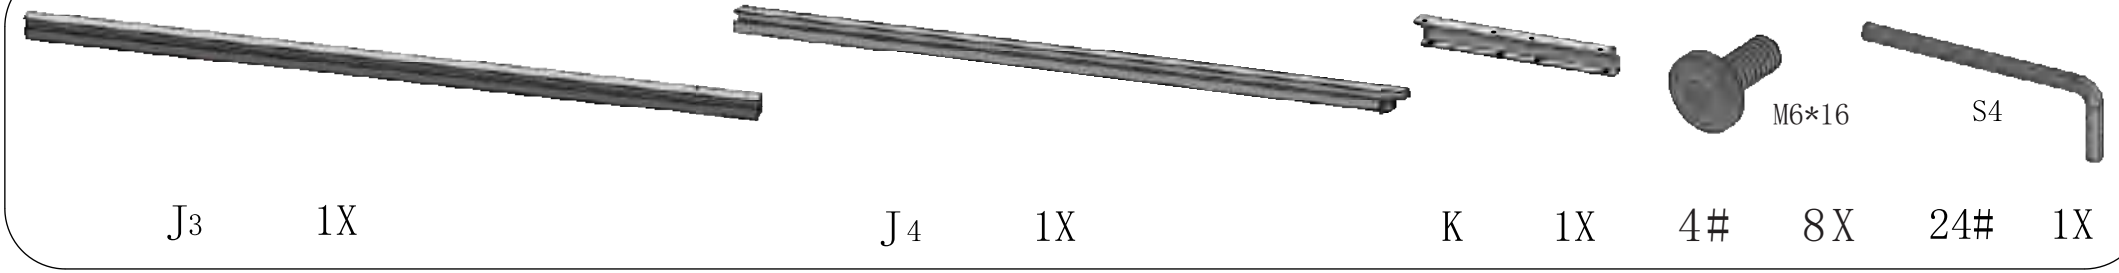


J3	1X	J4	1X	K	1X	4#	8X	24#	1X

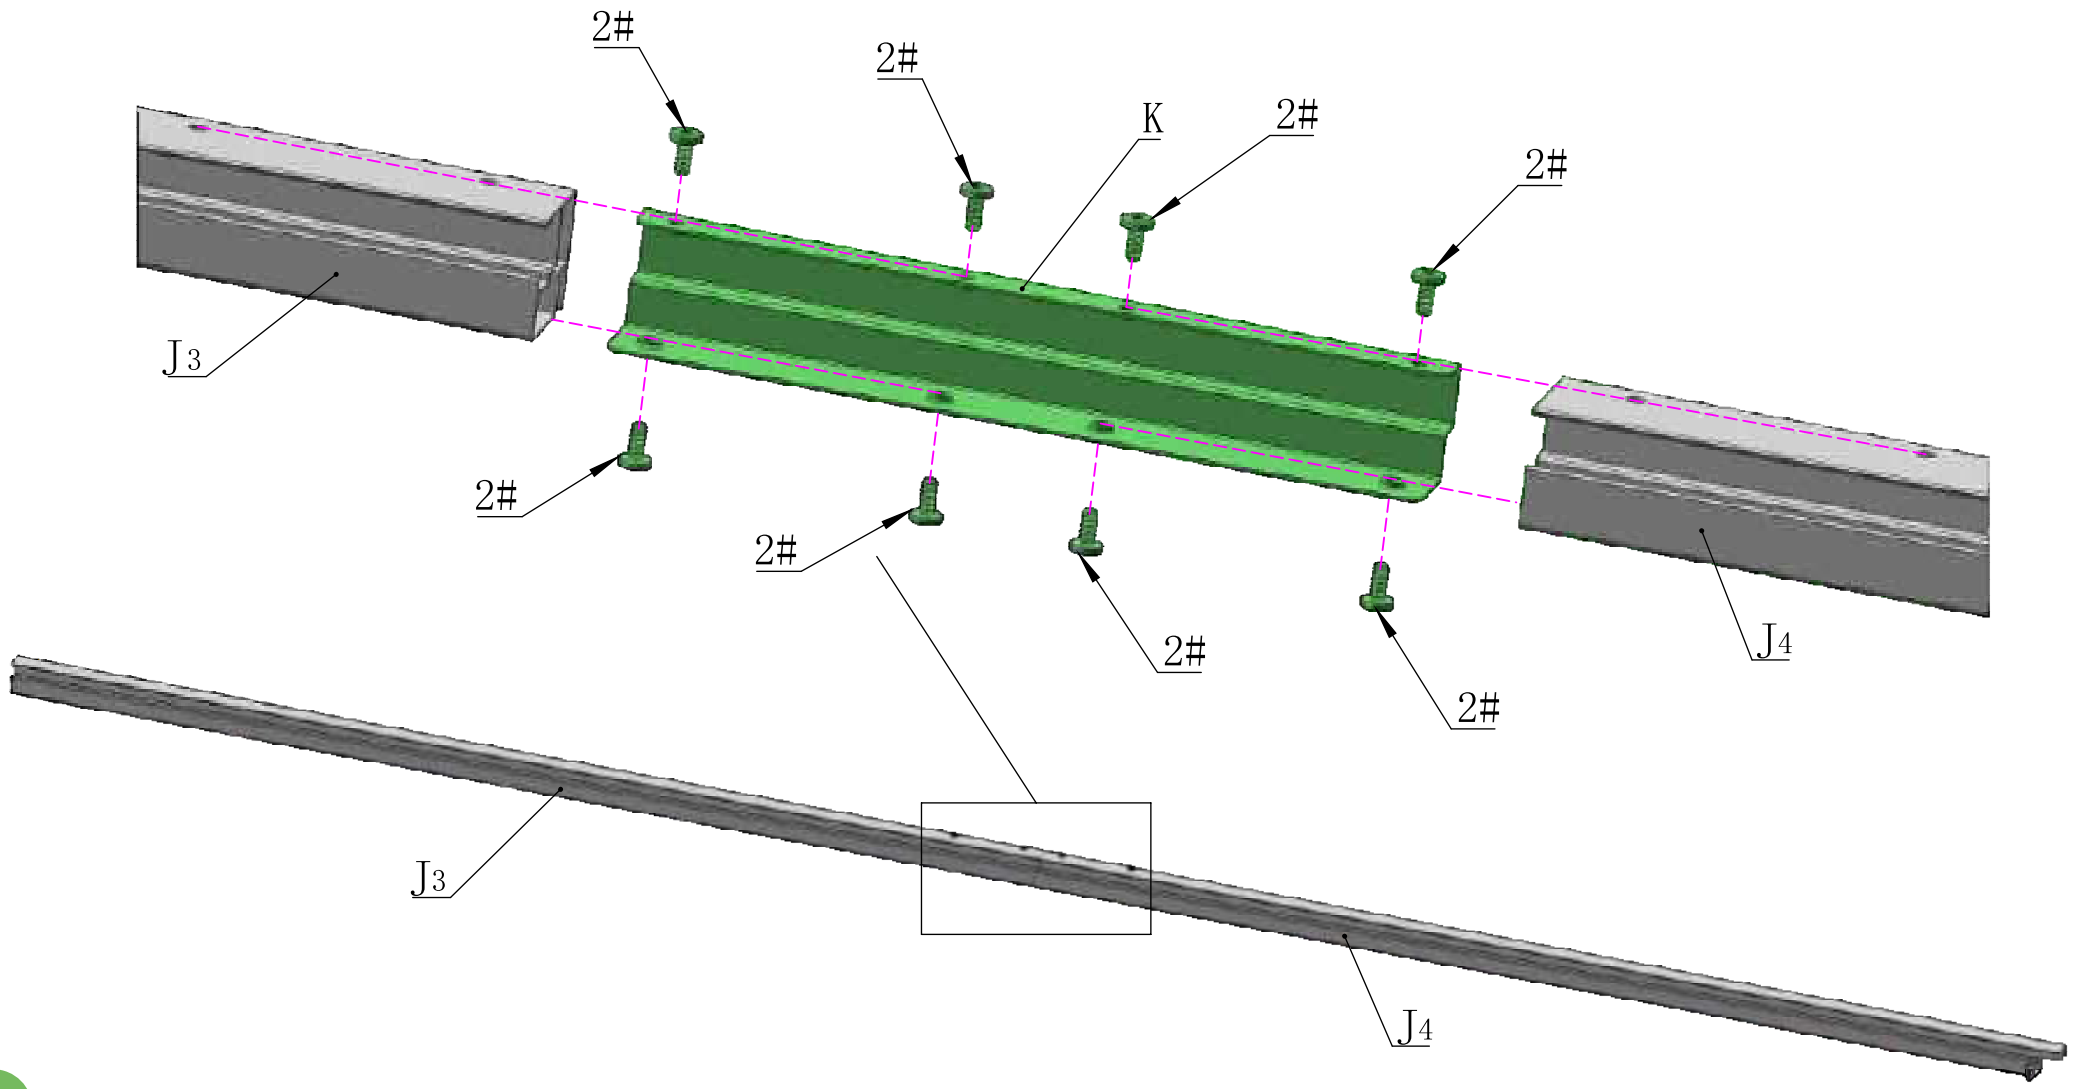

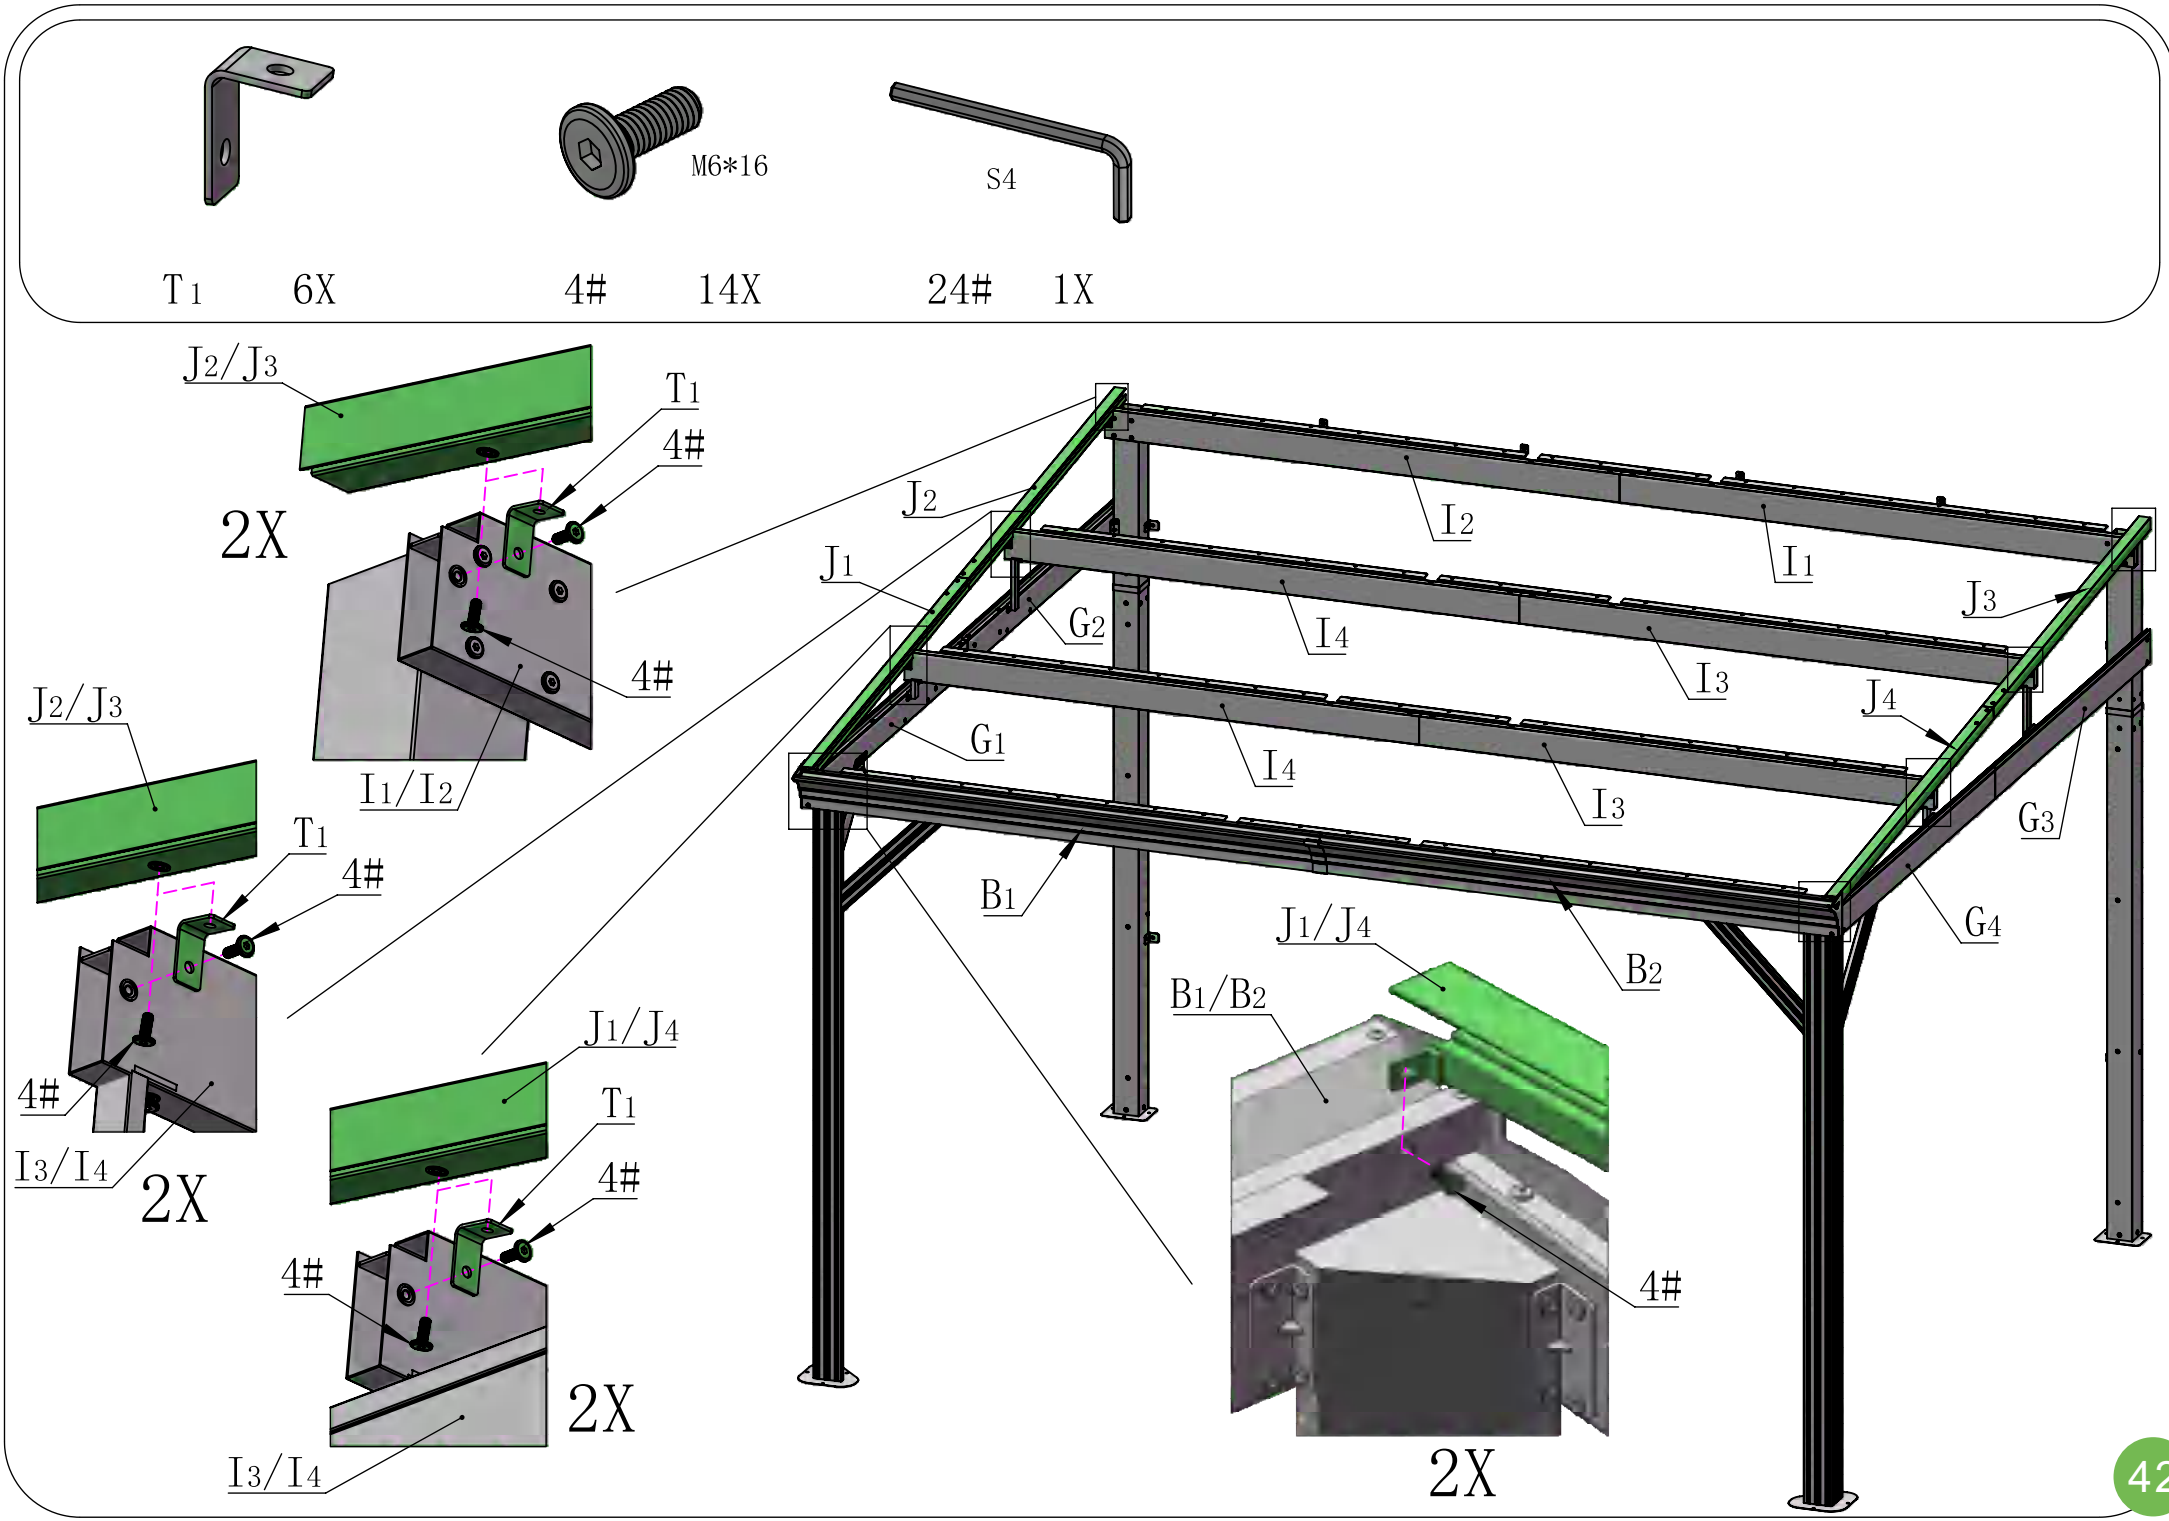

M6*16
S4
T1 6X
4# 14X
24# 1X
J2/J3
T1
4#
2X
4#
I1/I2
J2/J3
T1
4#
4#
I3/I4
2X
J1/J4
T1
4#
4#
2X
I3/I4
J2
J1
G2
G1
I2
I1
I4
I3
J3
J4
I4
I3
G3
G4
B1
B2
J1/J4
B1/B2
4#
2X

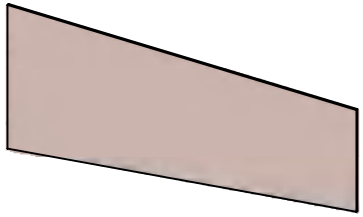

V1 1X

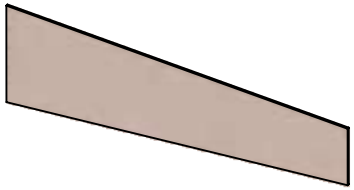

V3 1X

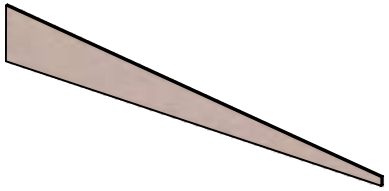


V5 1X




V7 1X




V9 1X

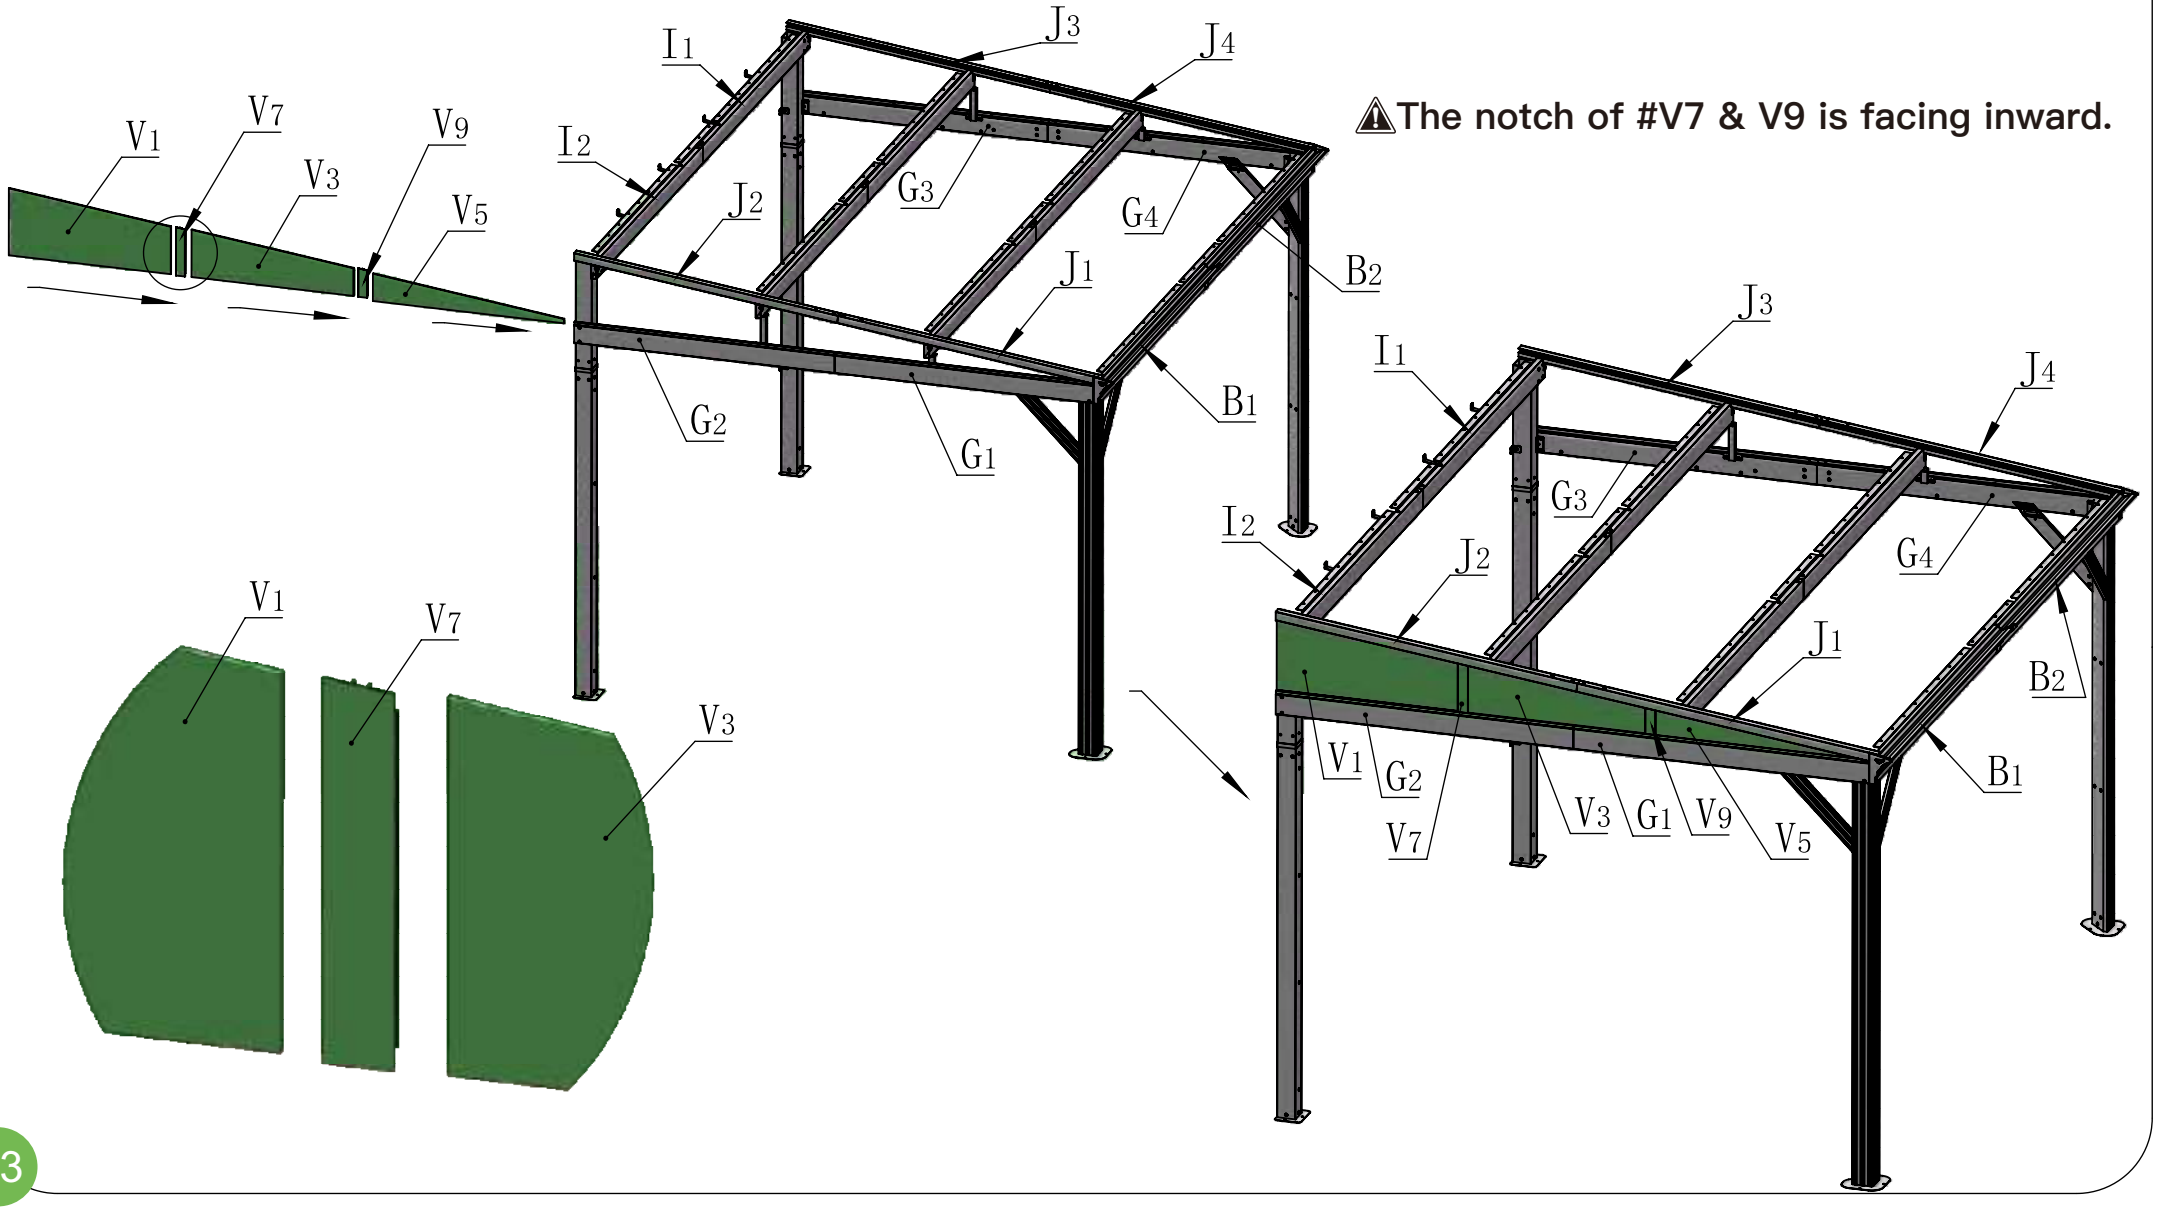


⚠The notch of #V7 & V9 is facing inward.

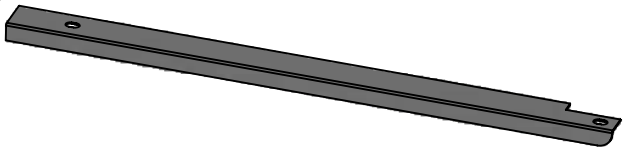


L1 1X

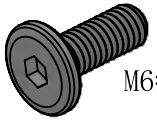



4# 2X

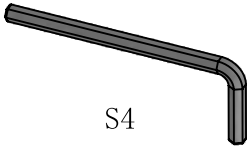


24# 1X

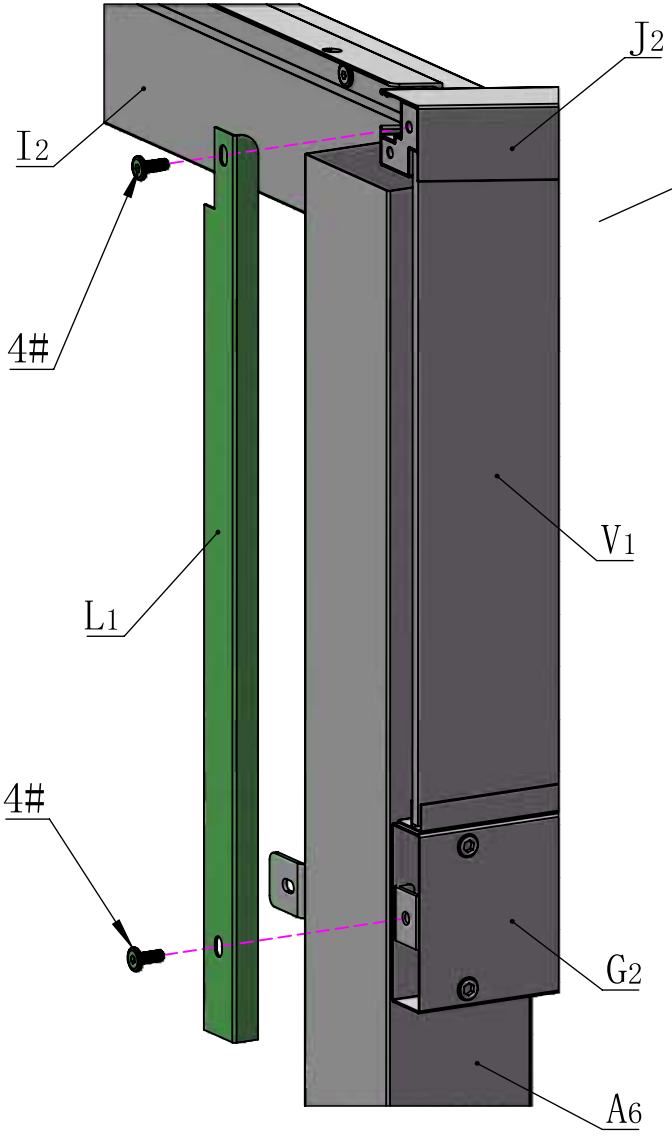

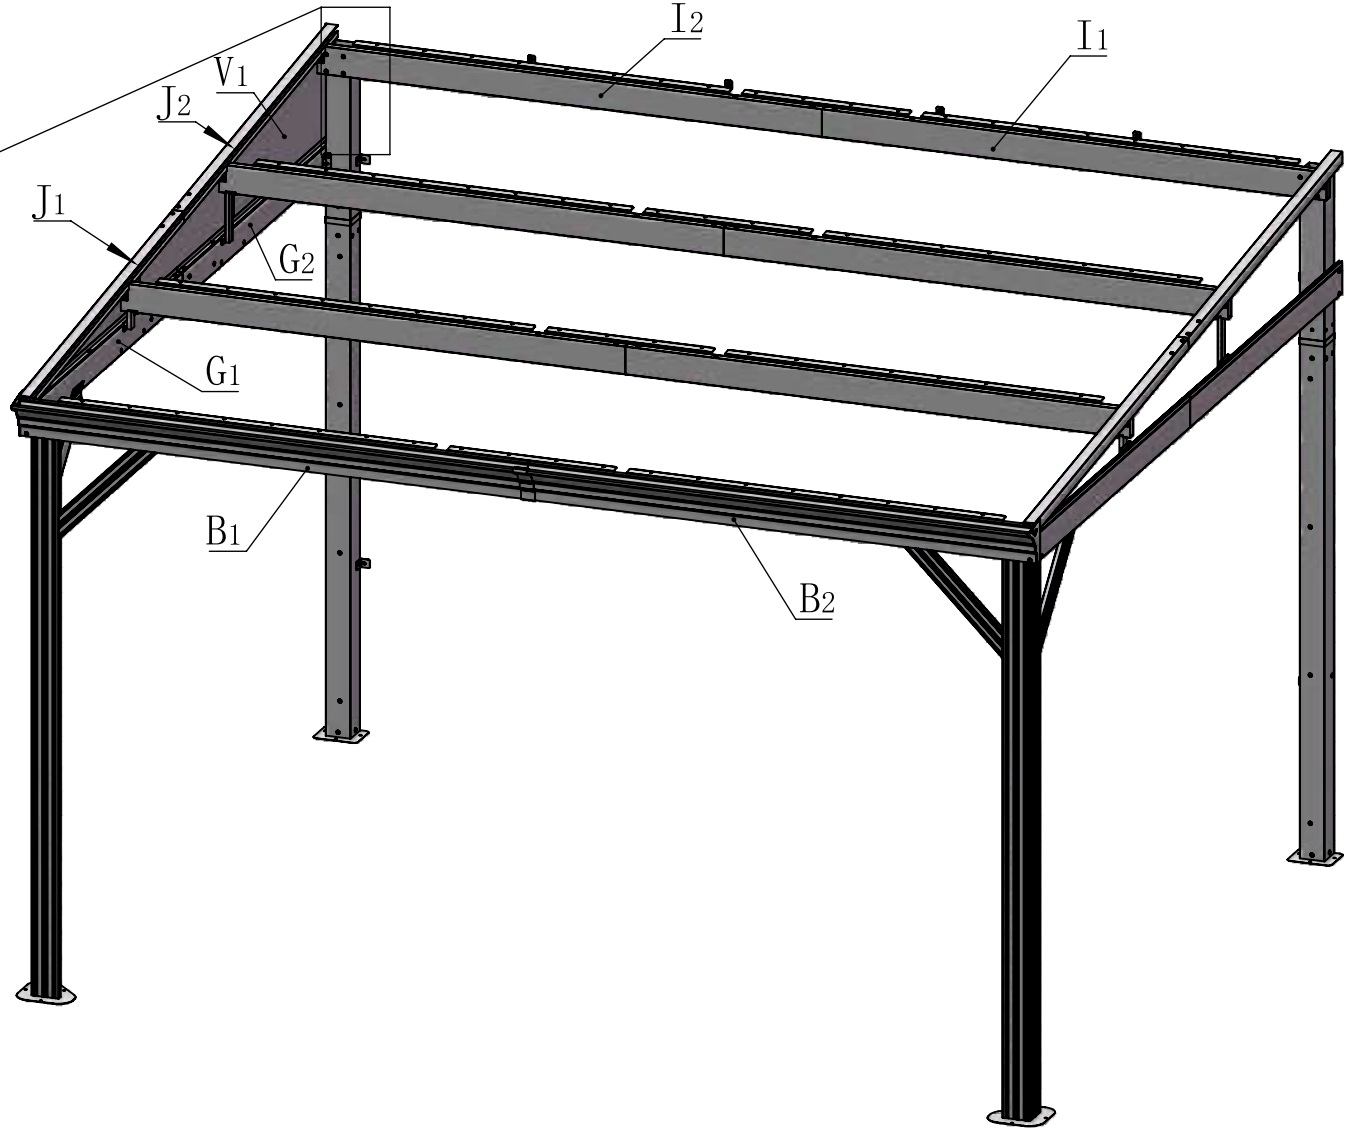


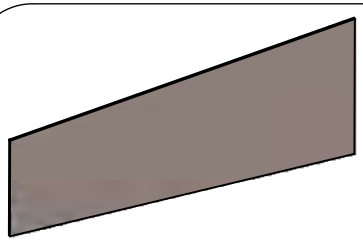

V2 1X

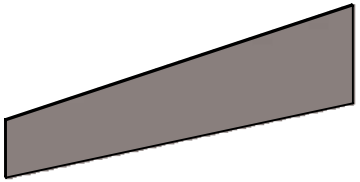

V4 1X

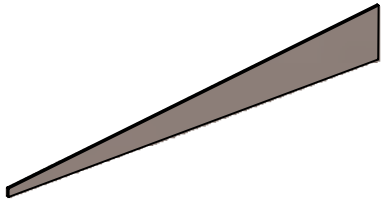


V6 1X




V8 1X




V10 1X

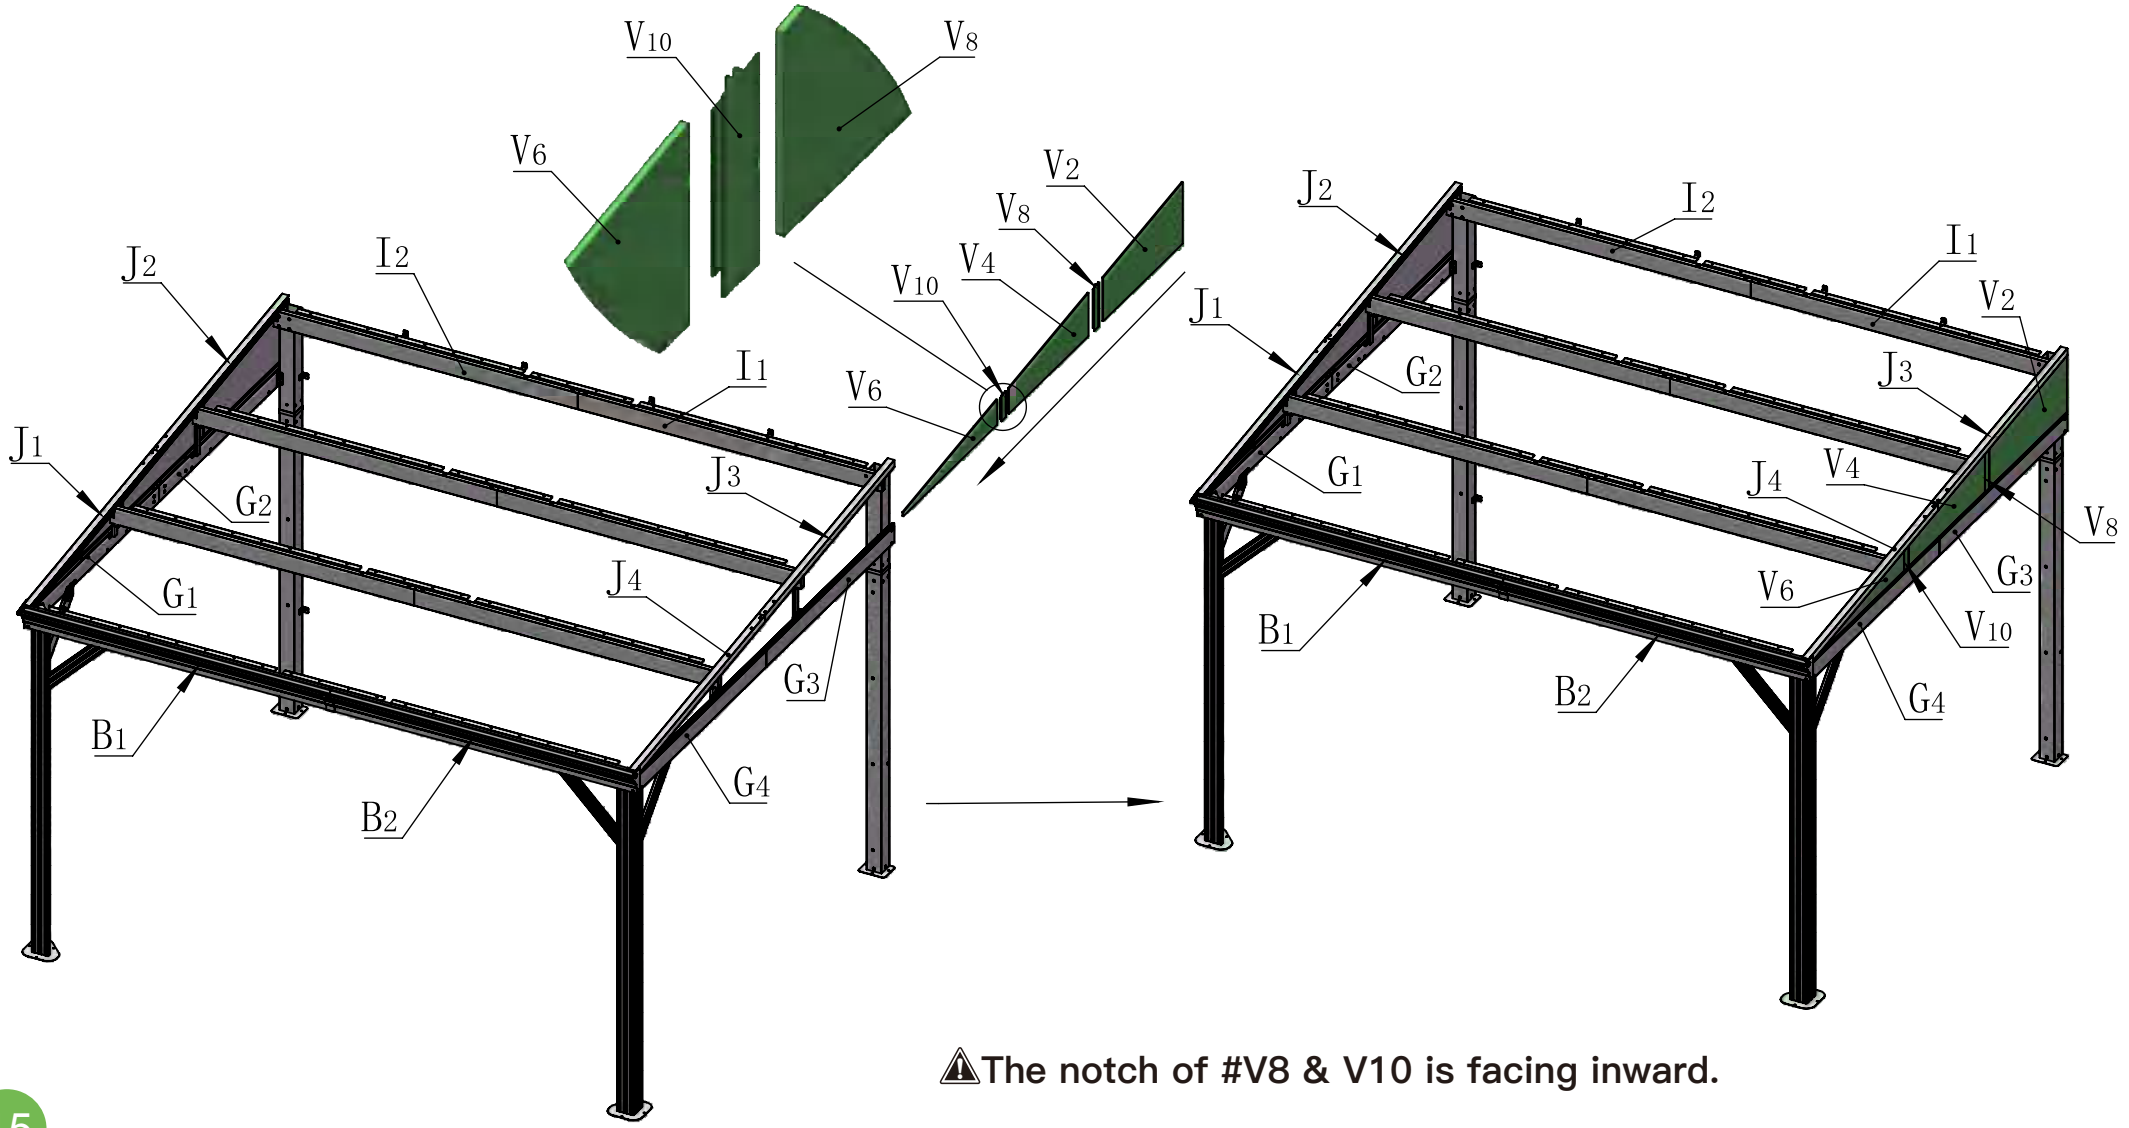


⚠The notch of #V8 & V10 is facing inward.

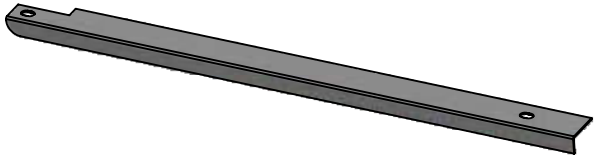

L2 1X

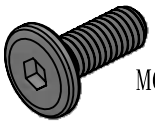



4# 2X

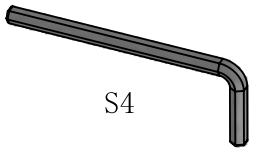


24# 1X



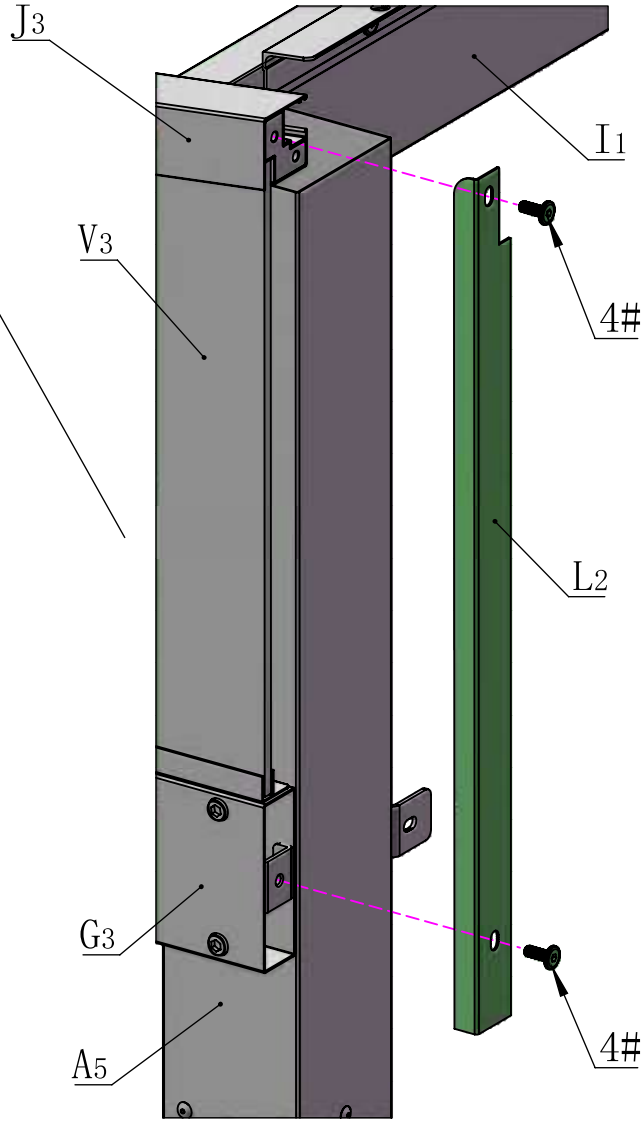


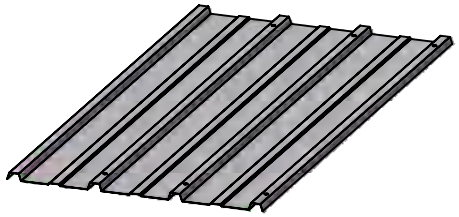

Y1 1X

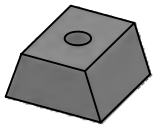


X 2X

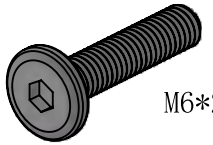


5# 2X




11# 2X

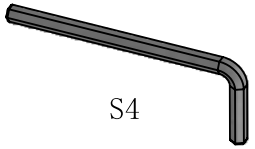



24# 1X




23# 1X

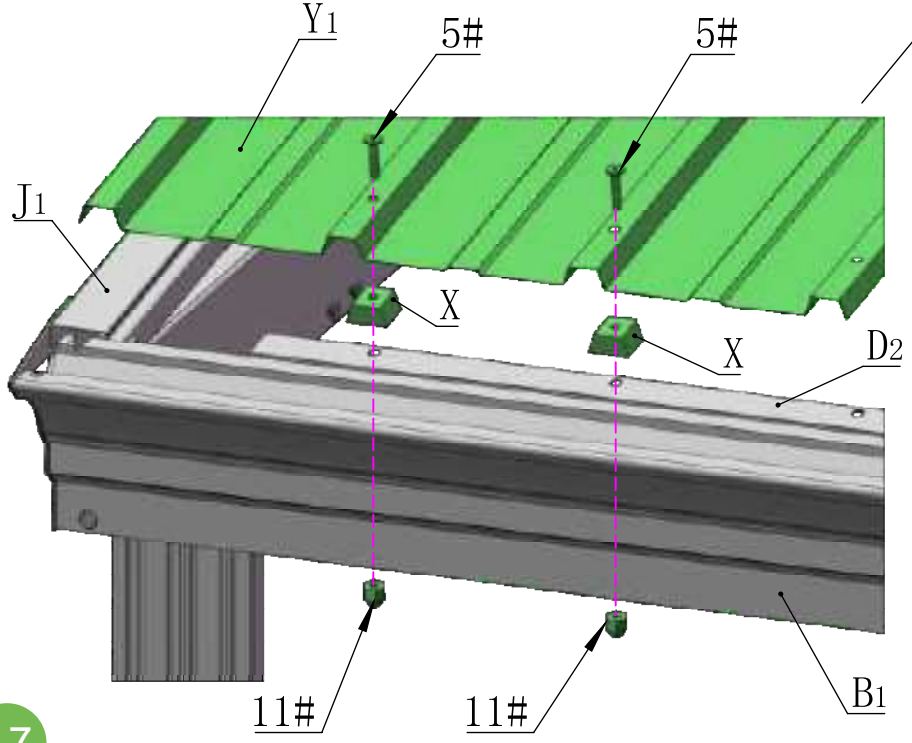

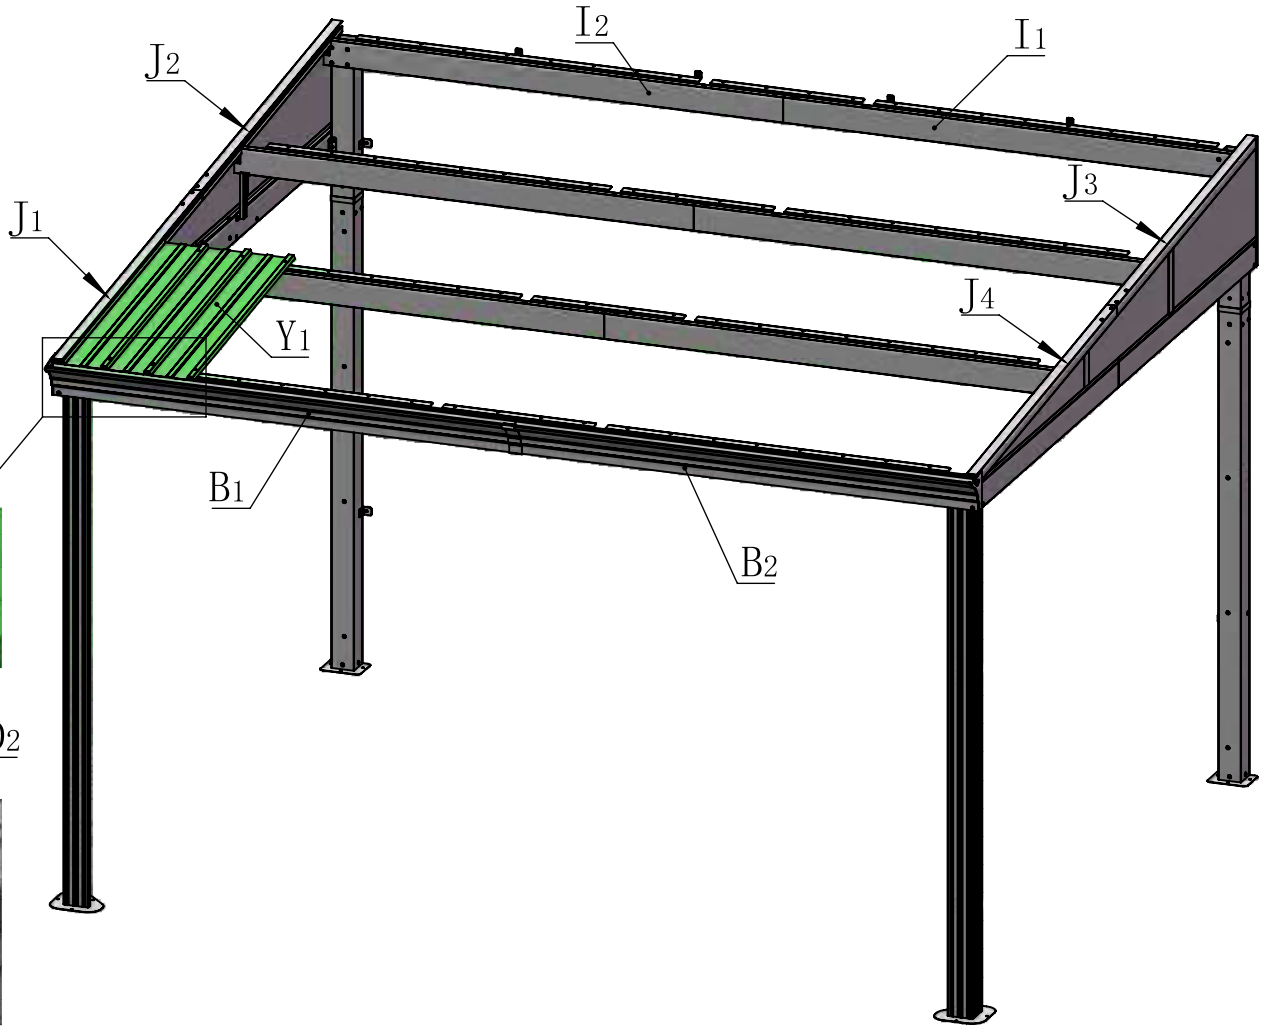


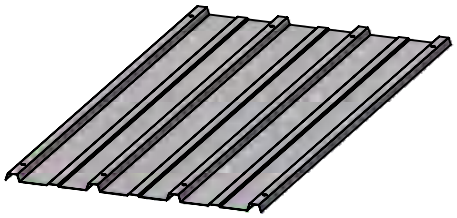

Y 2 5X

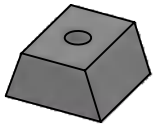


X 15X

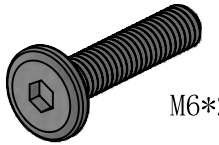


5# 15X




11# 15X

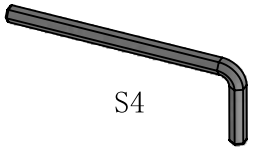


24# 1X




23# 1X

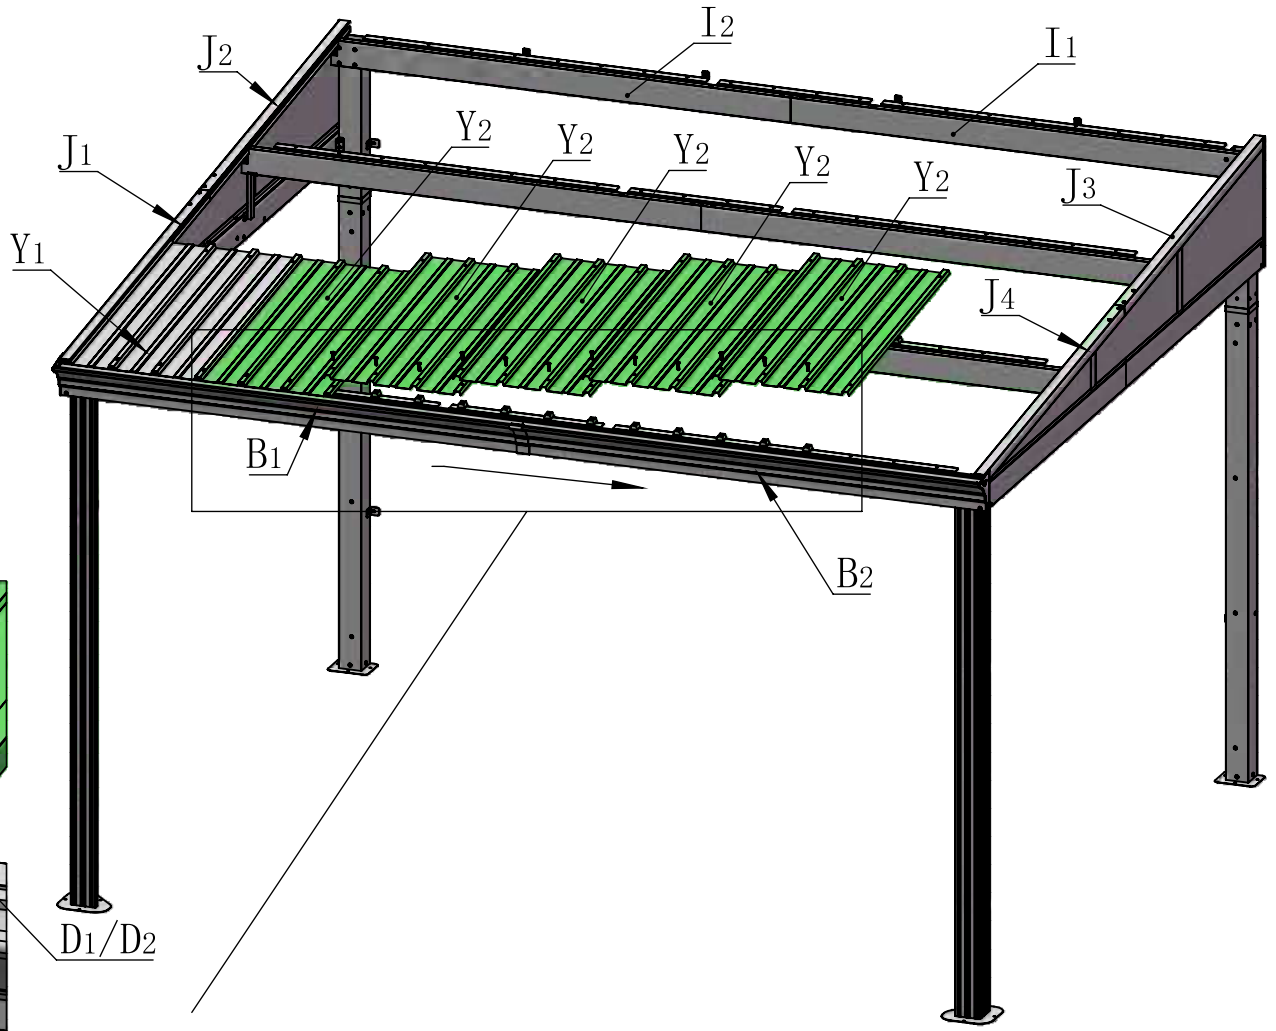


5X

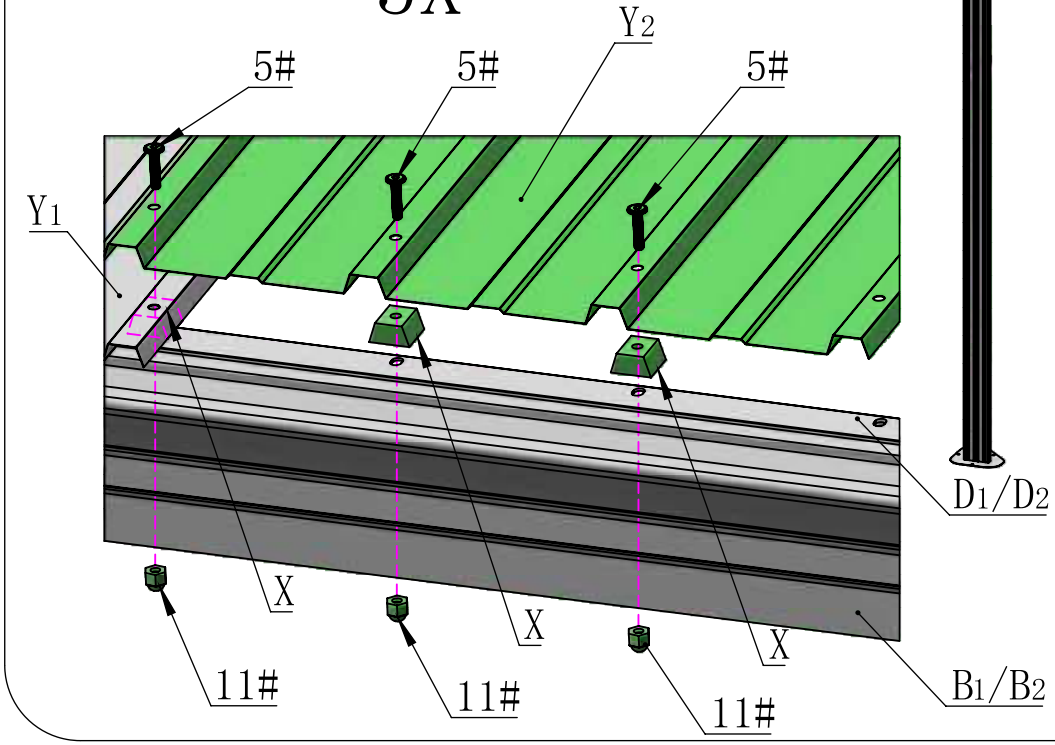


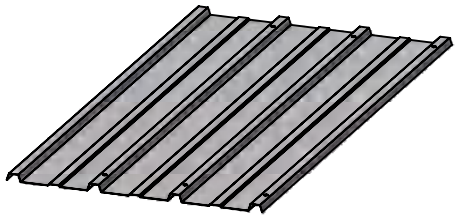

Y 1 1X

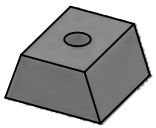


X 3X

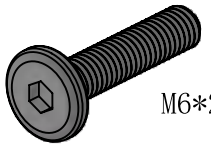


5# 3X




11# 3X

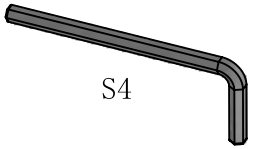



24# 1X




23# 1X

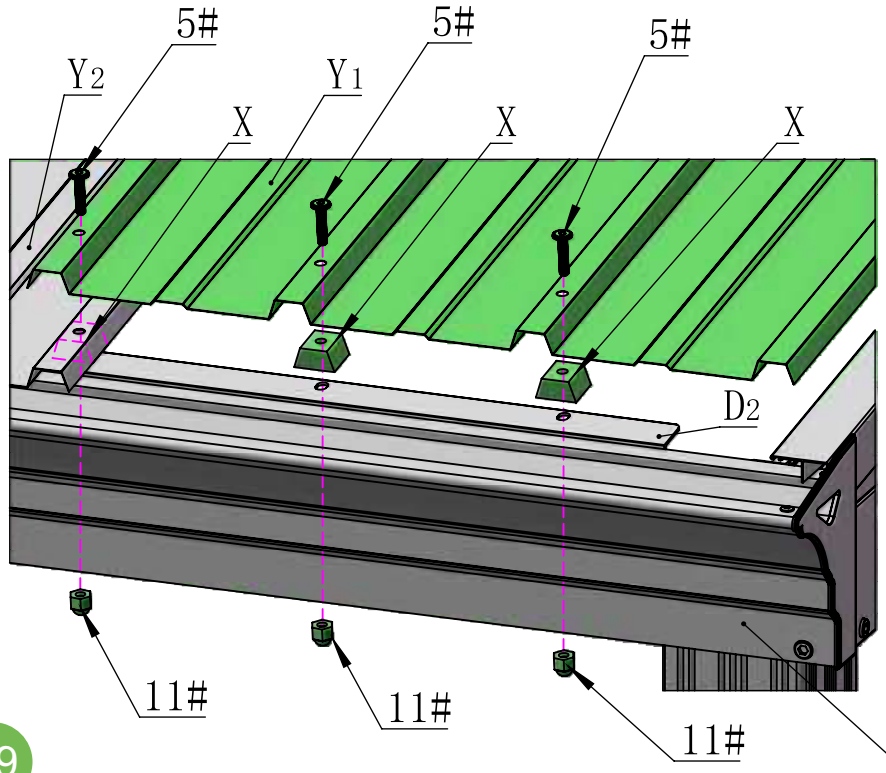


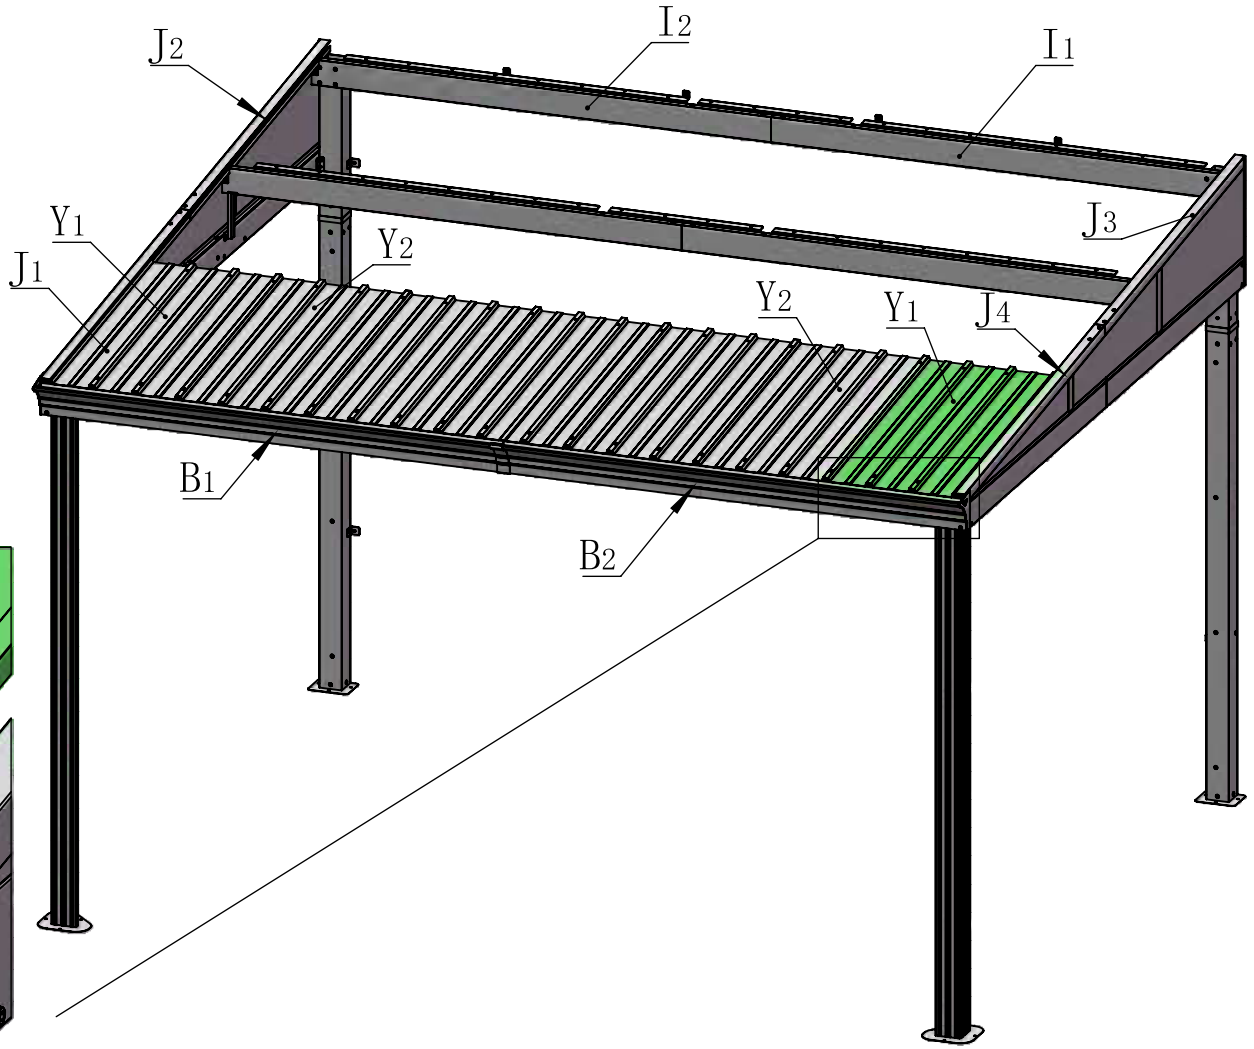

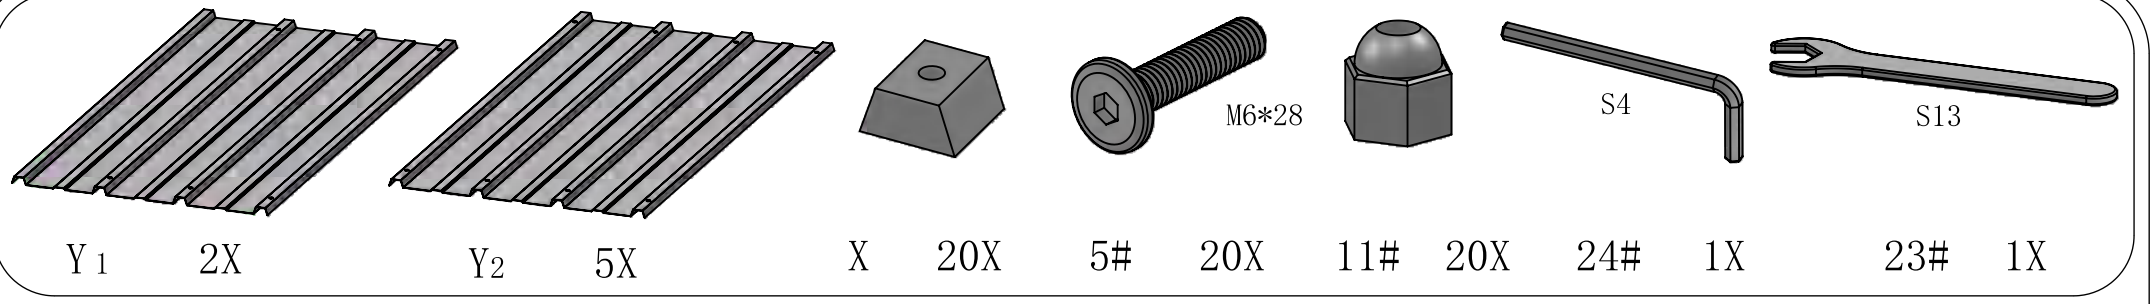


Y1 2X Y2 5X X 20X 5# 20X 11# 20X 24# 1X 23# 1X

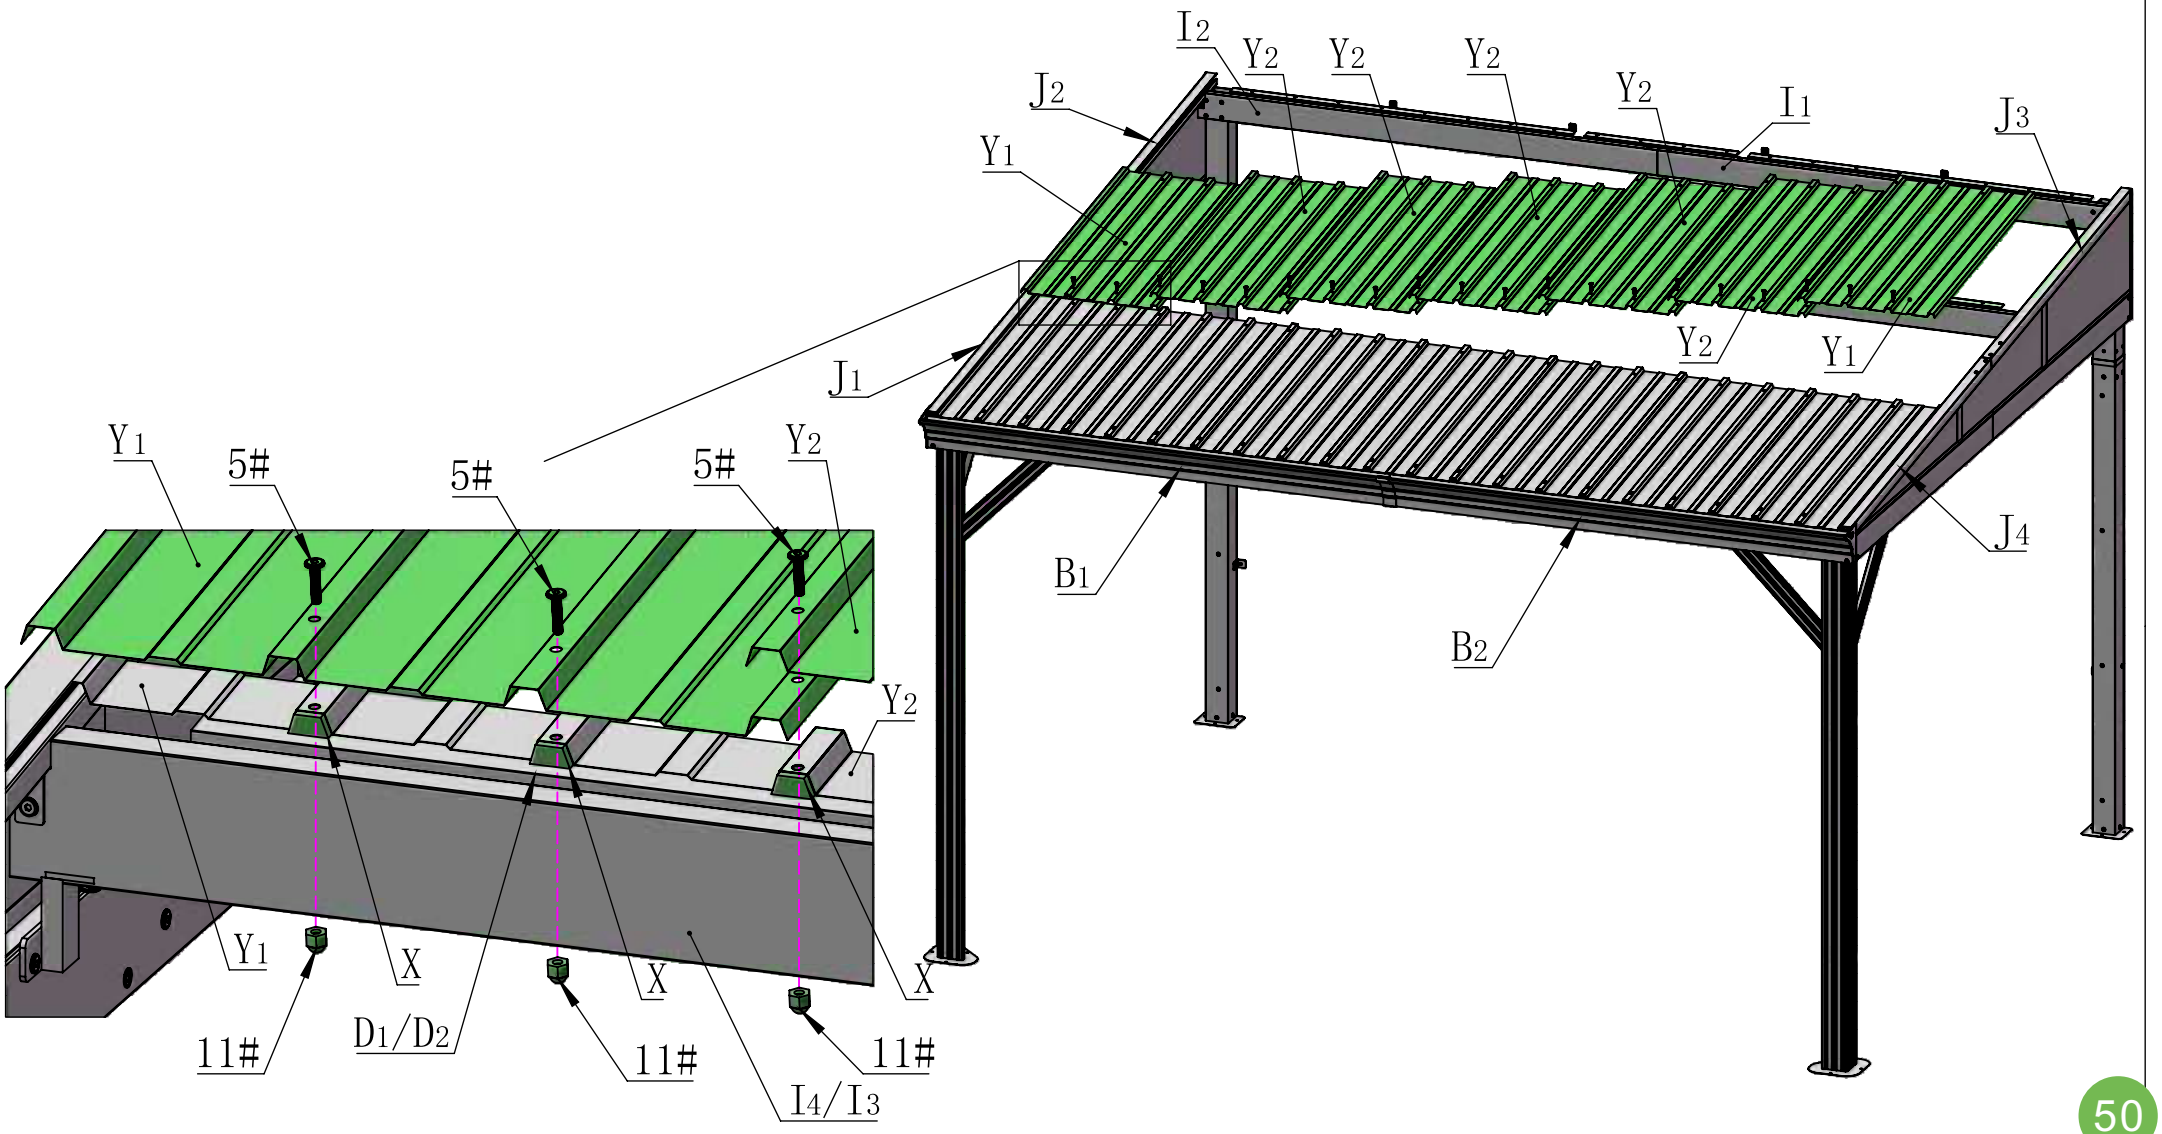


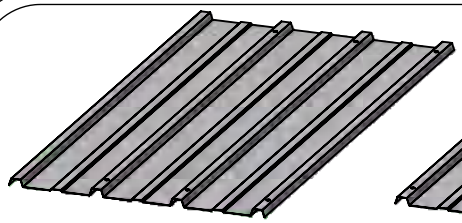


Y 1 2X

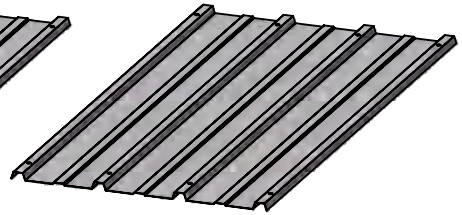

Y2 5X

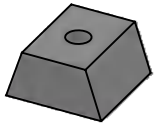


X 40X

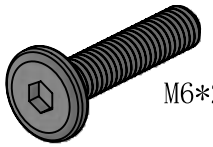


5# 40X




11# 40X

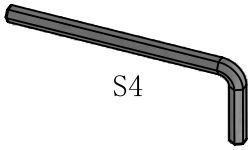



24# 1X




23# 1X

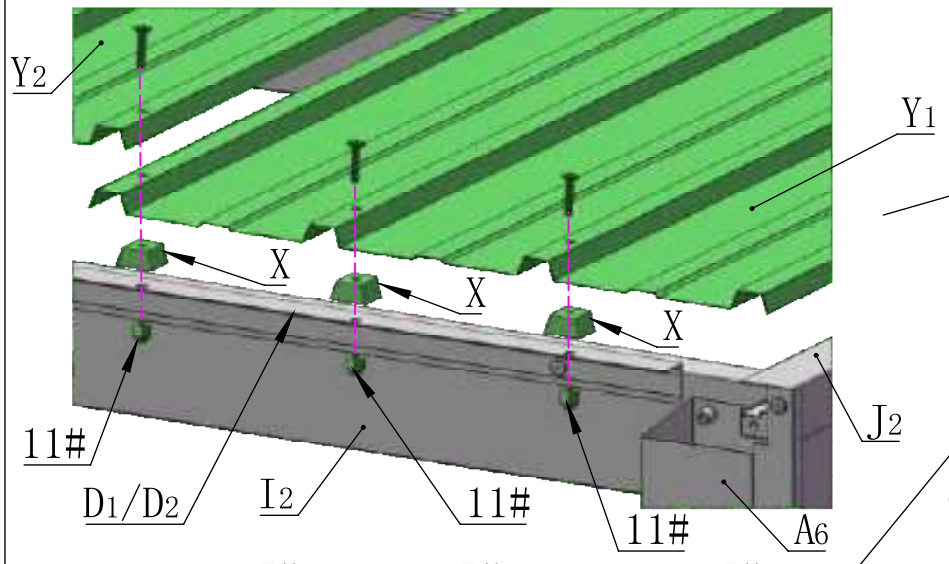


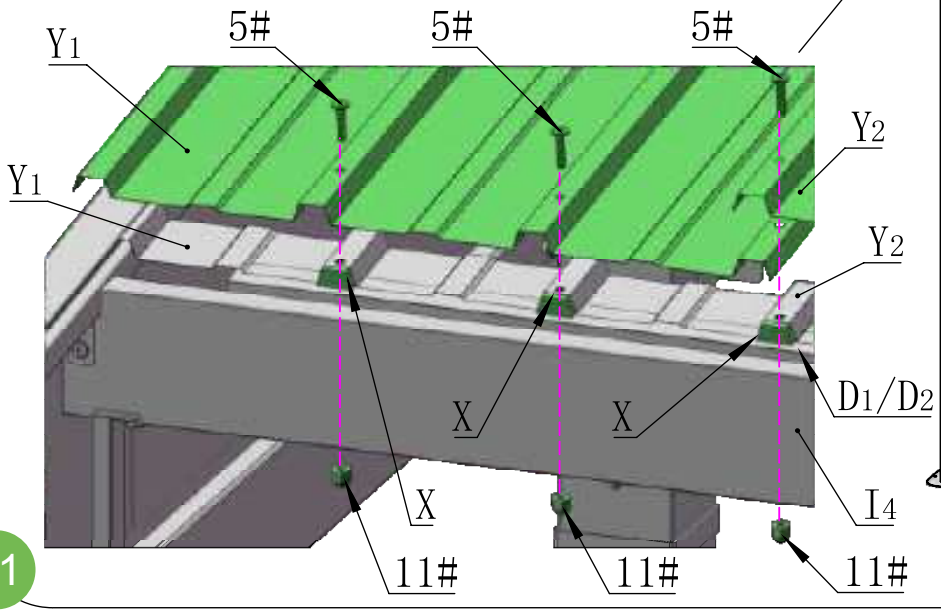

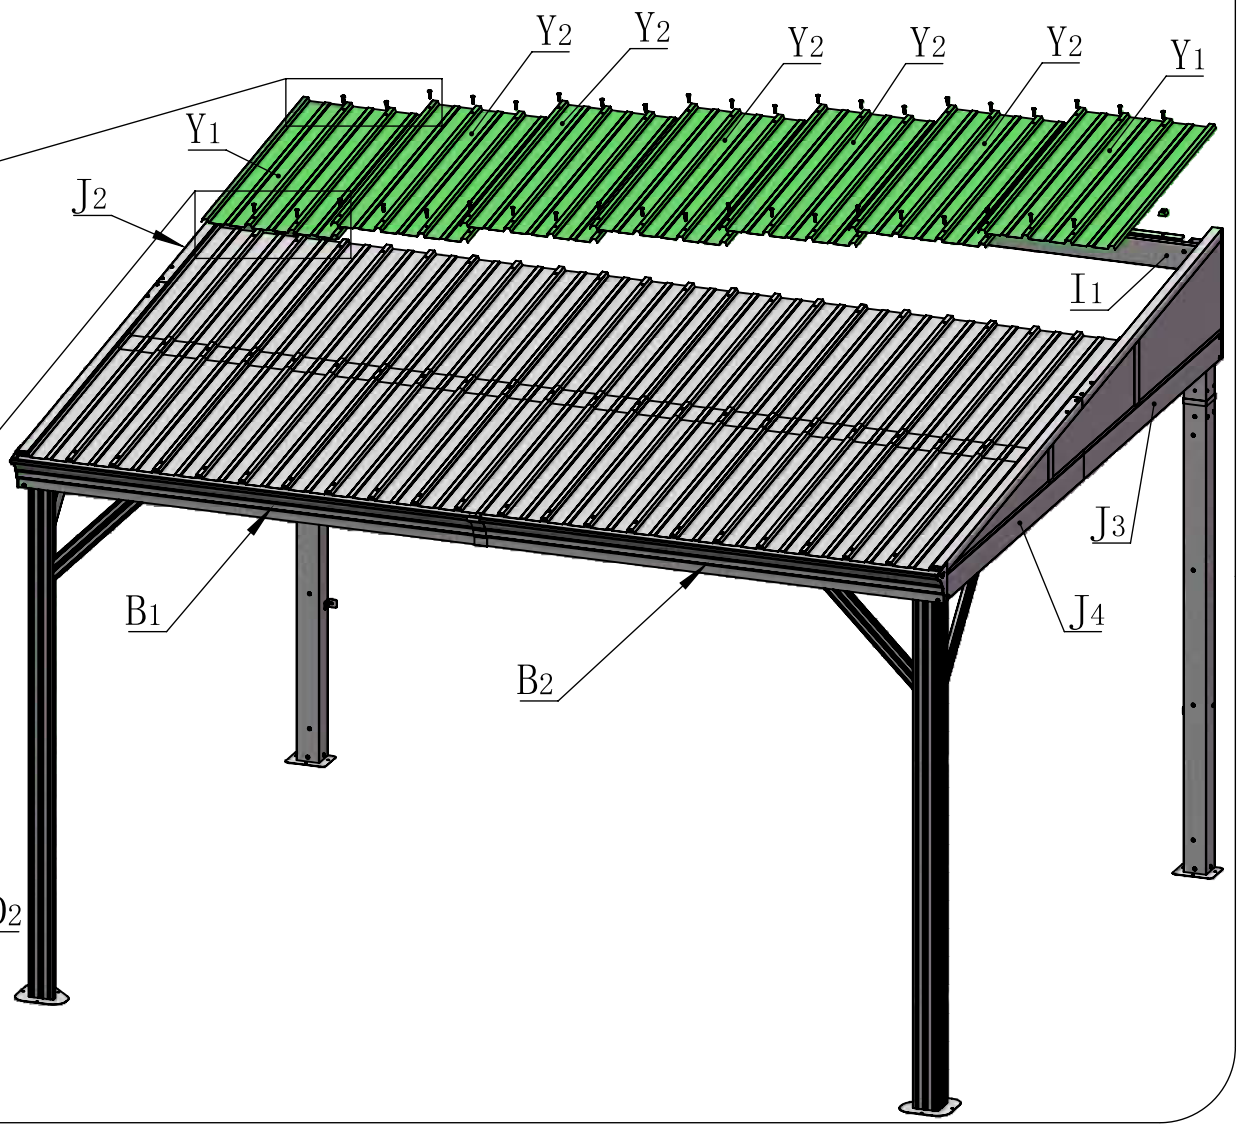


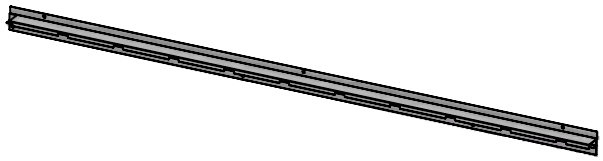


M1 1X

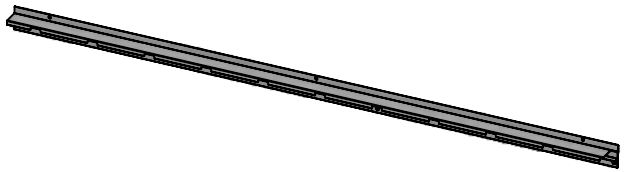


M2 1X

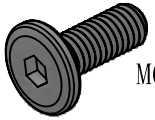



4# 6X

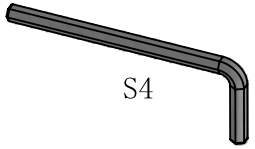



24# 1X

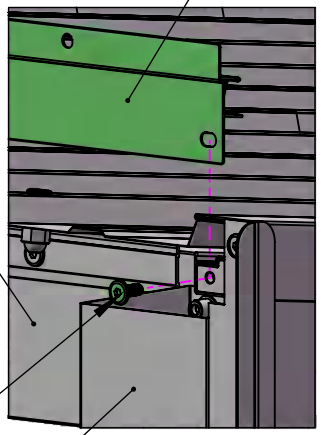

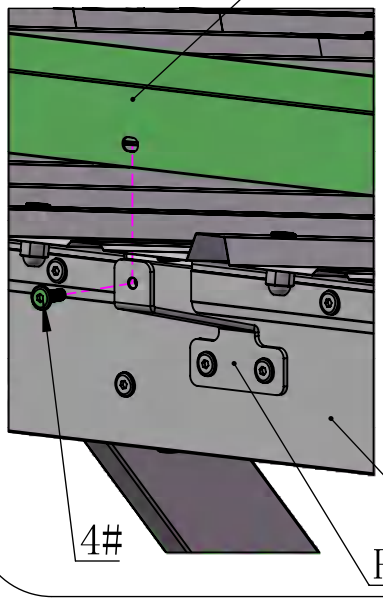


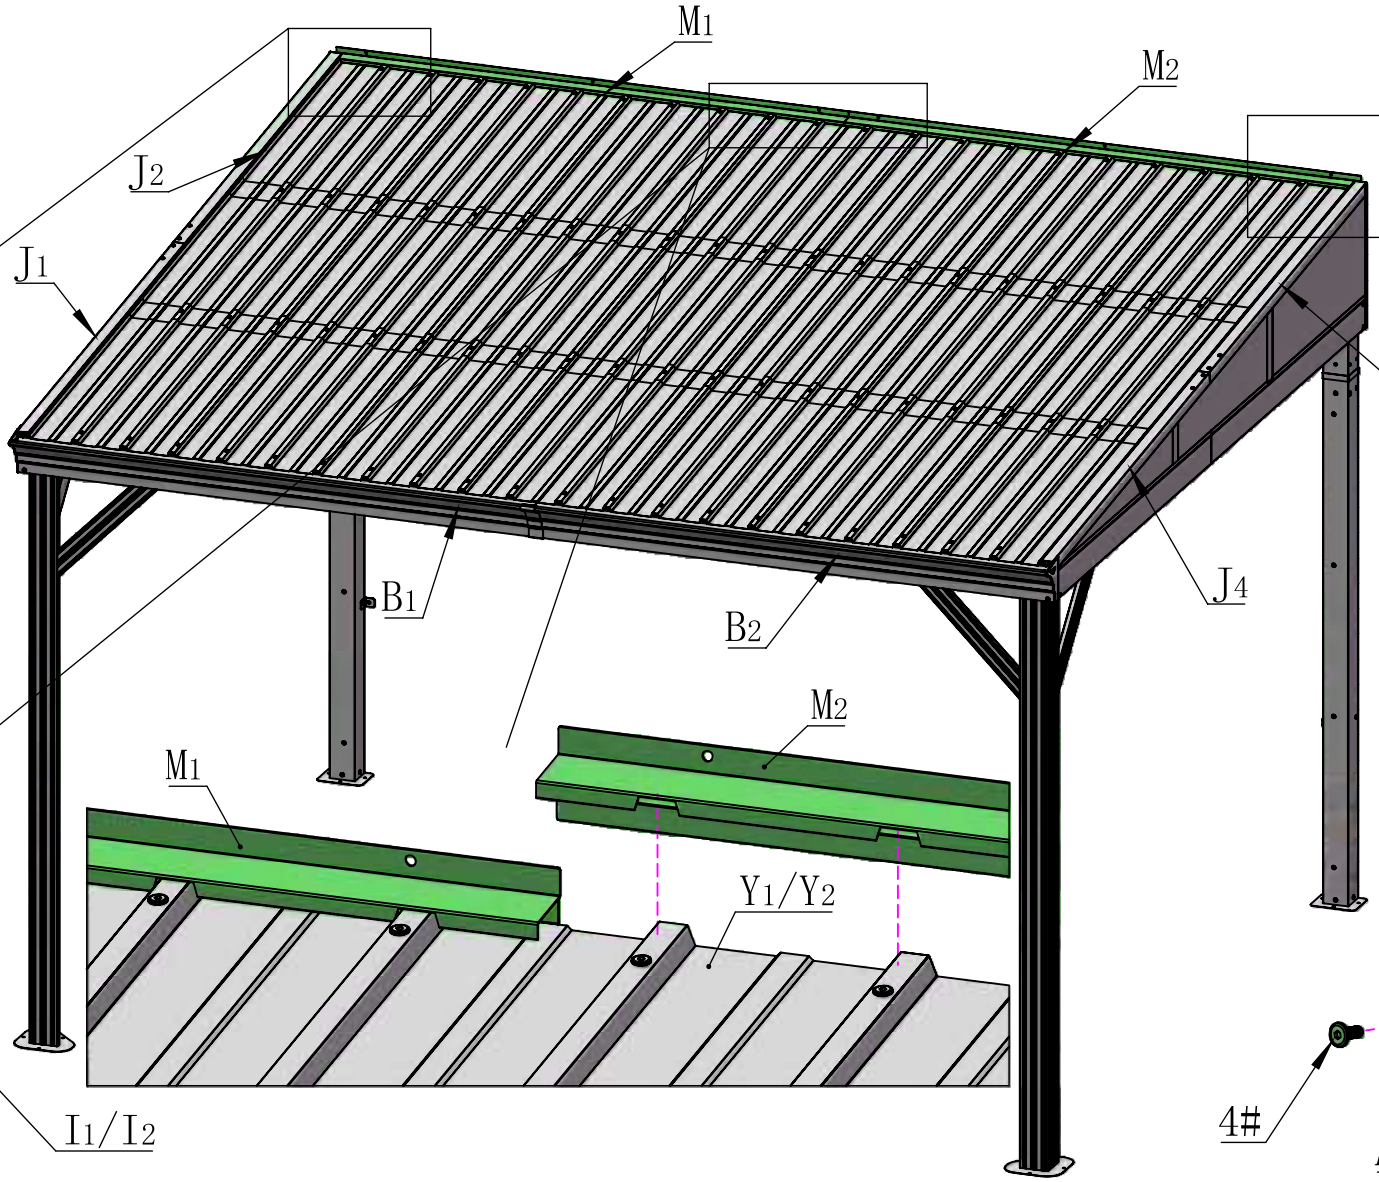

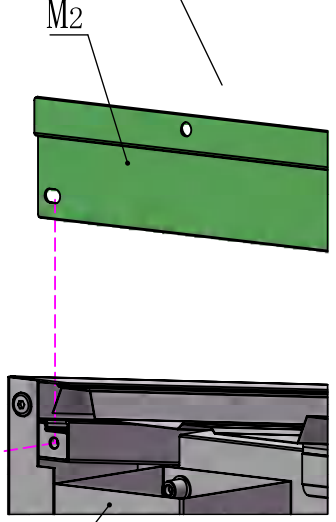


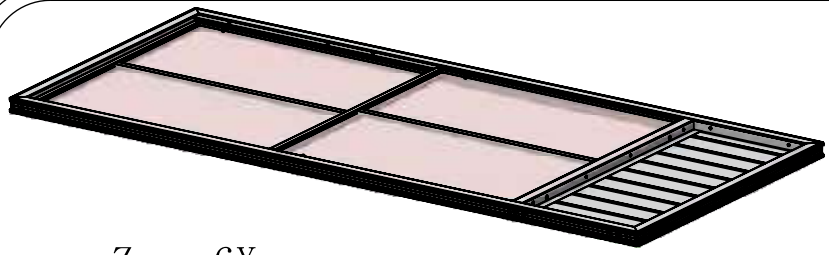


Z6 6X

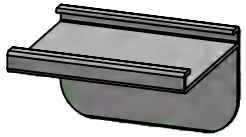


R1 12X

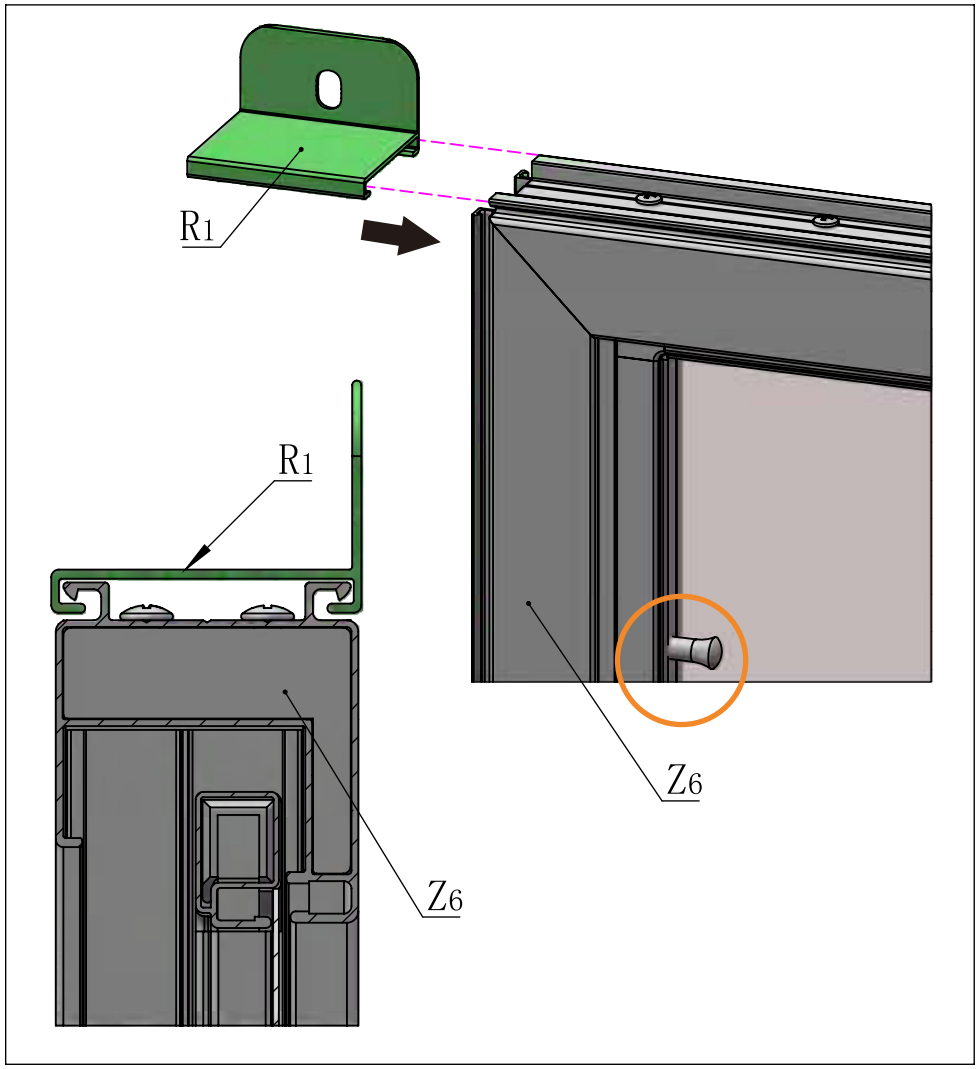

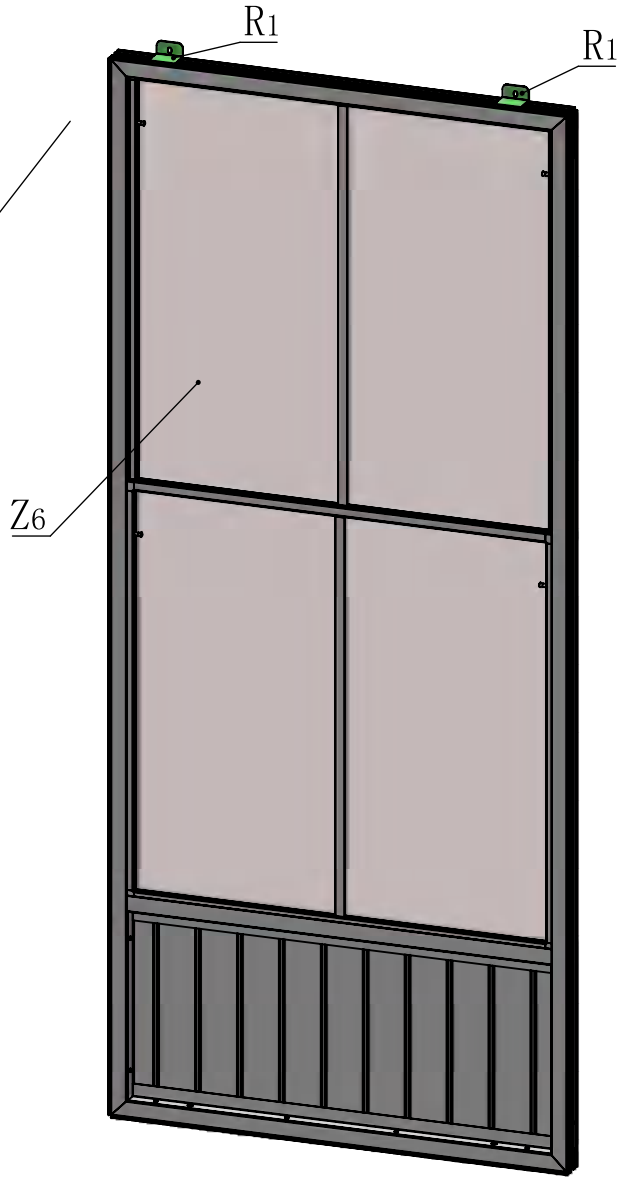


6X

⚠ATTENTION: The orientation of Screen Panel #Z6.

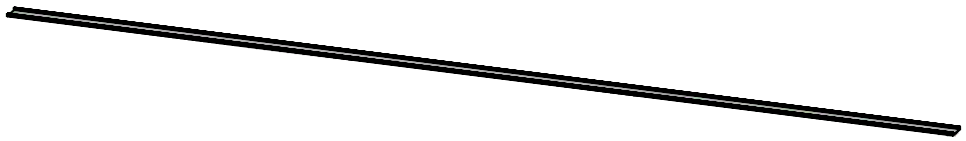

Z10 8X

2X

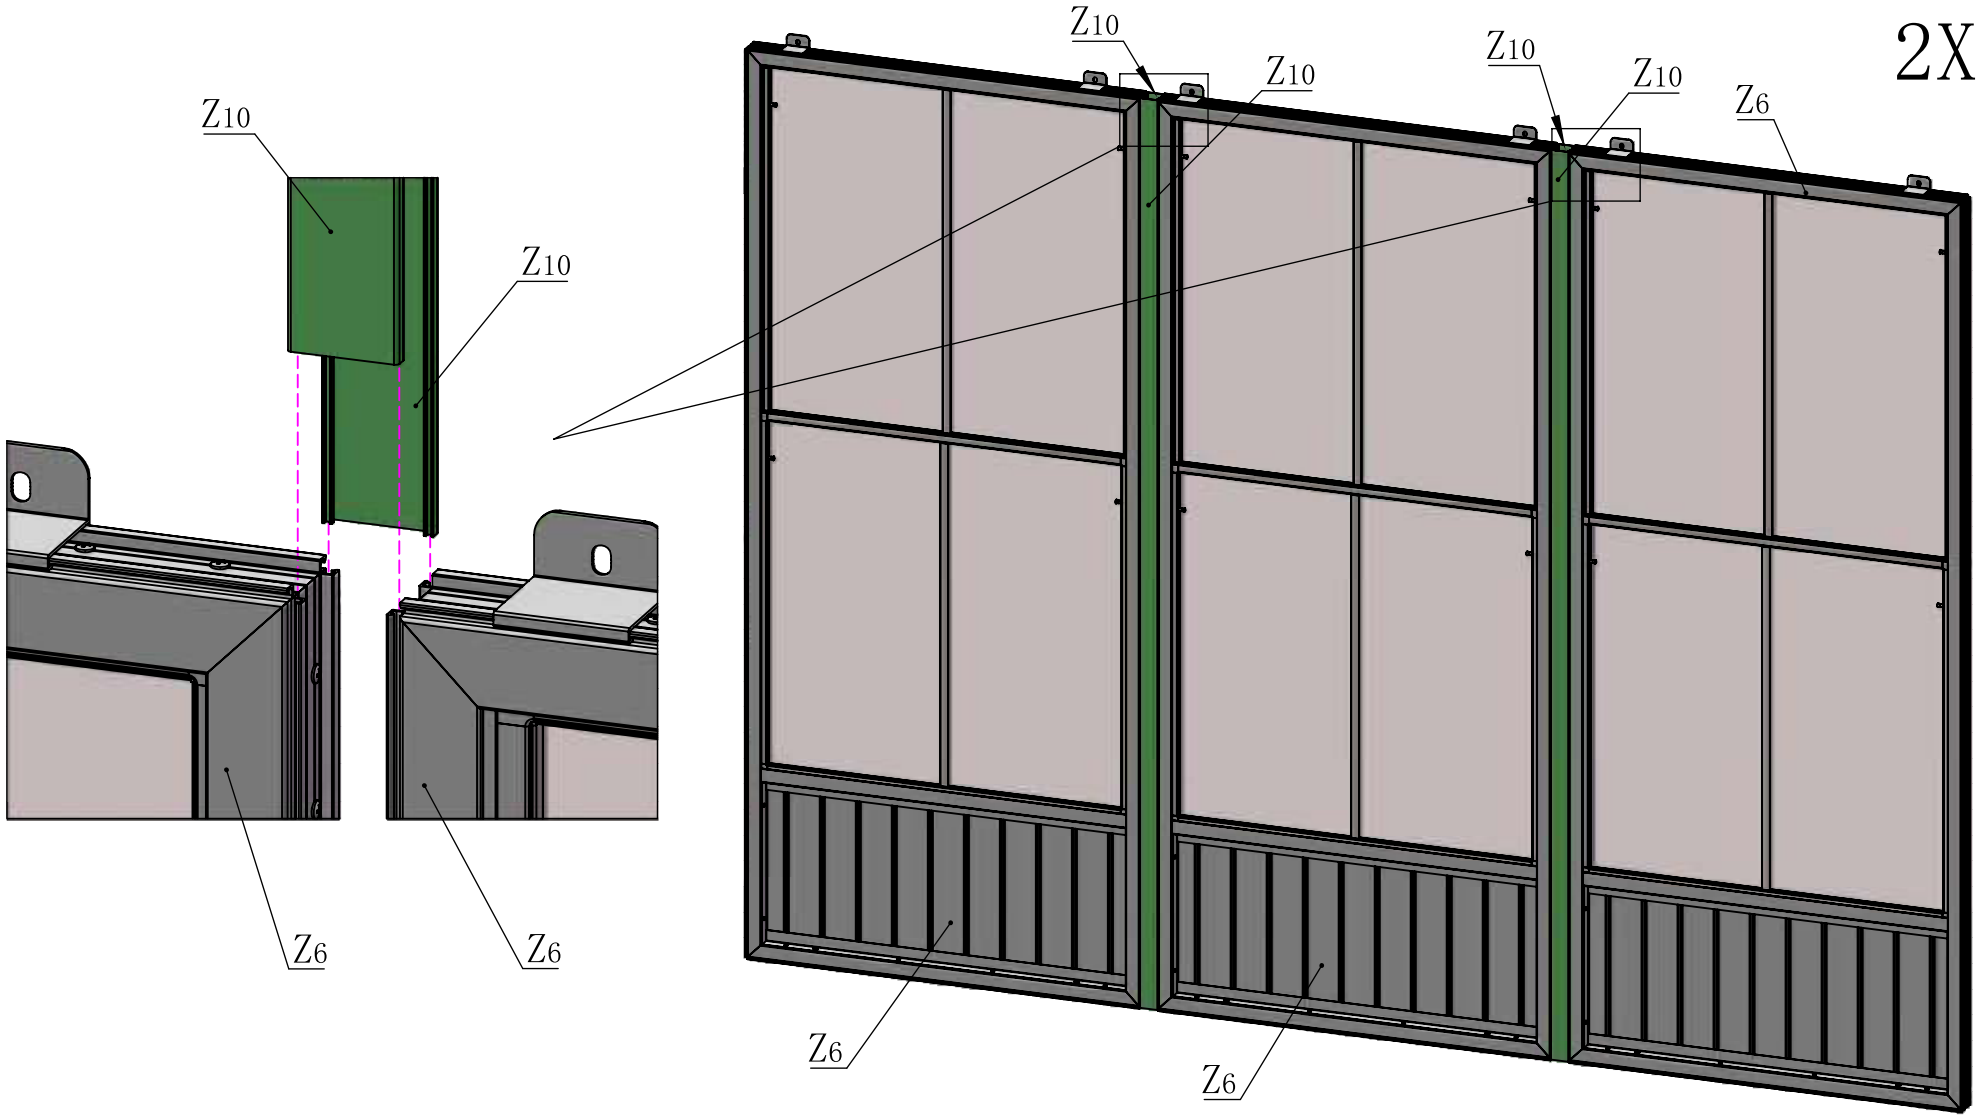




E1 1X




E2 1X

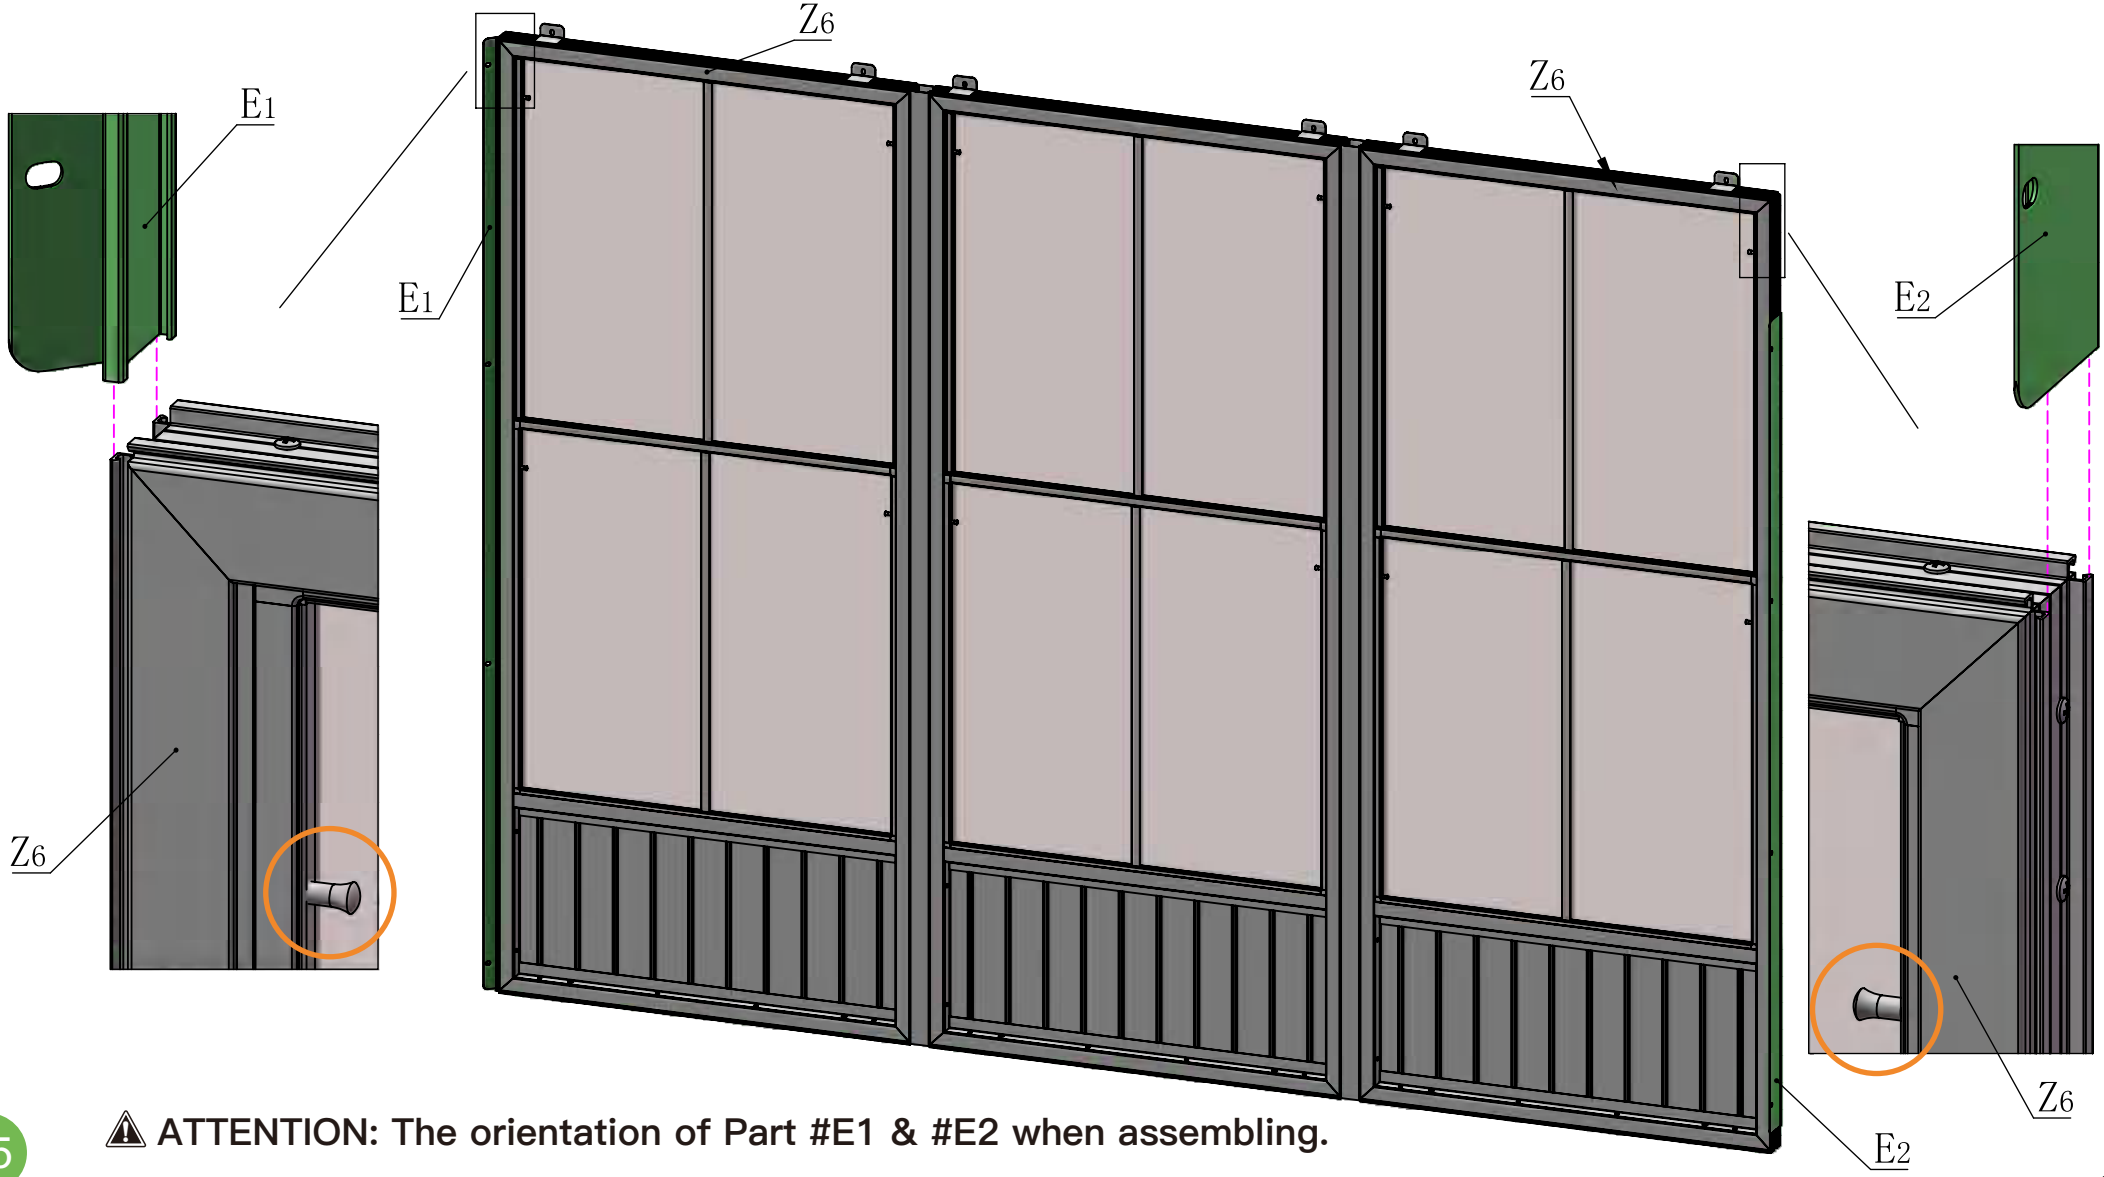


⚠ ATTENTION: The orientation of Part #E1 & #E2 when assembling.




E 1 1X

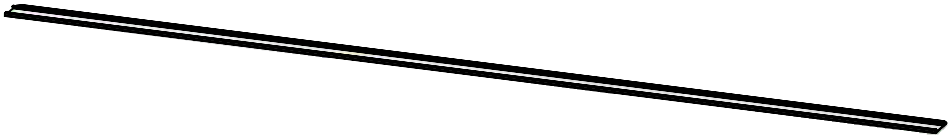

E2 1X

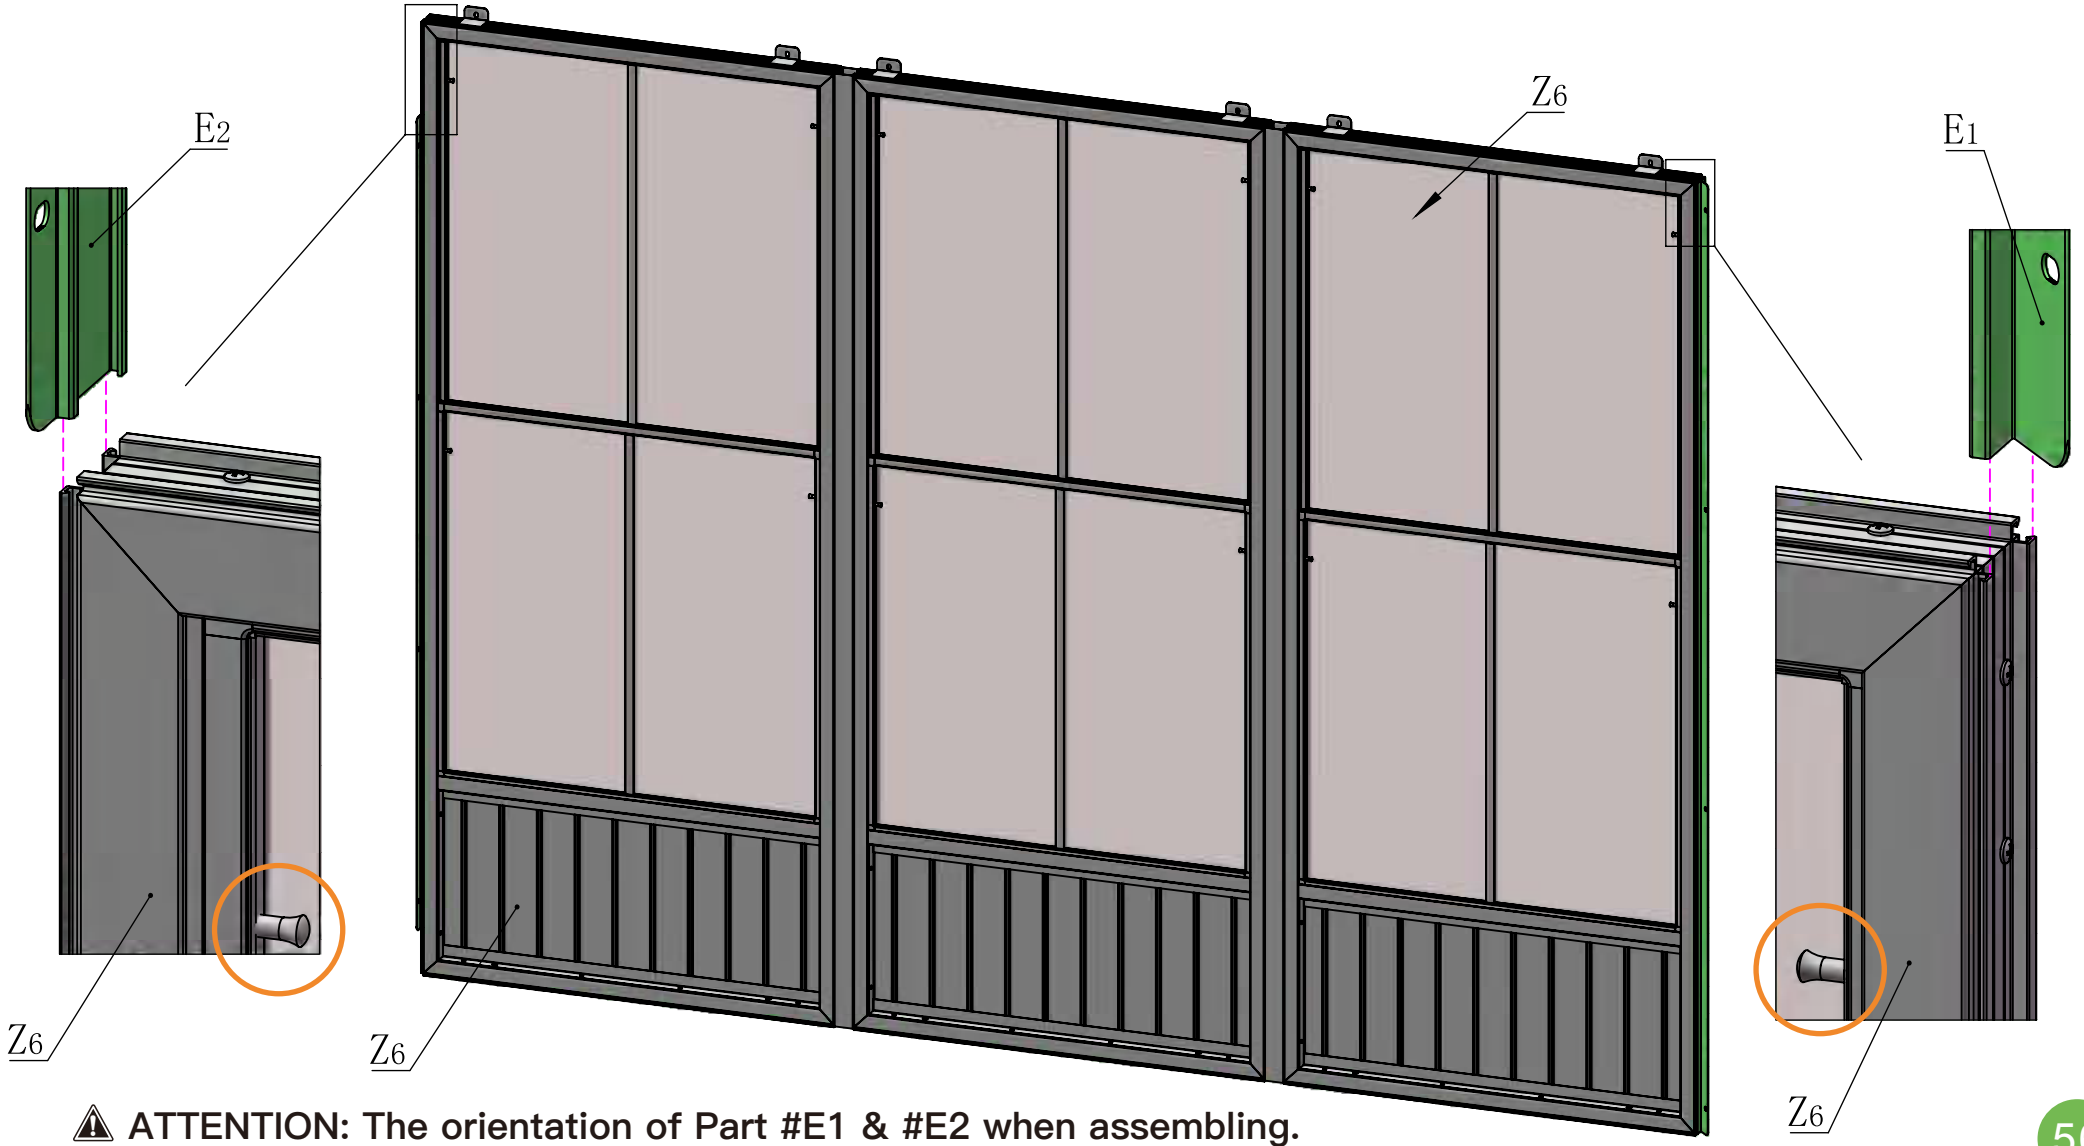


⚠ ATTENTION: The orientation of Part #E1 & #E2 when assembling.

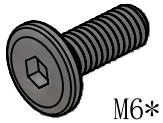


M6*16


4# 28X

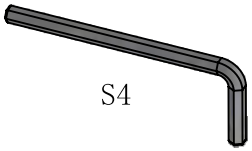



S4


24# 1X

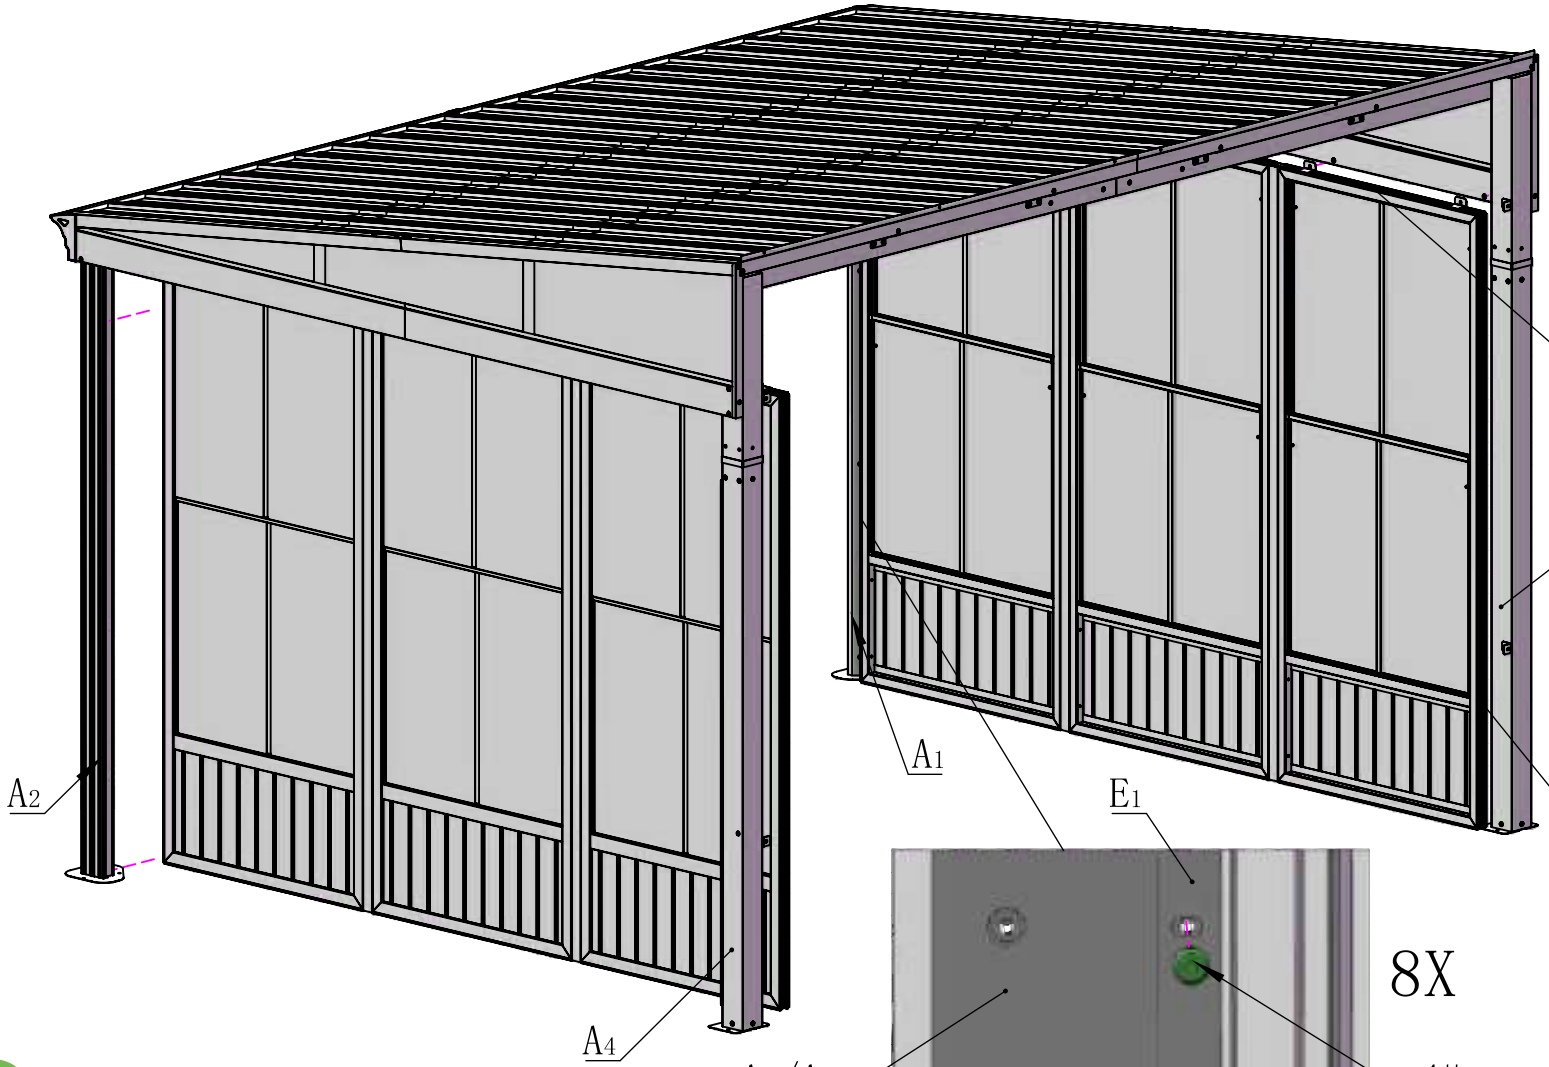


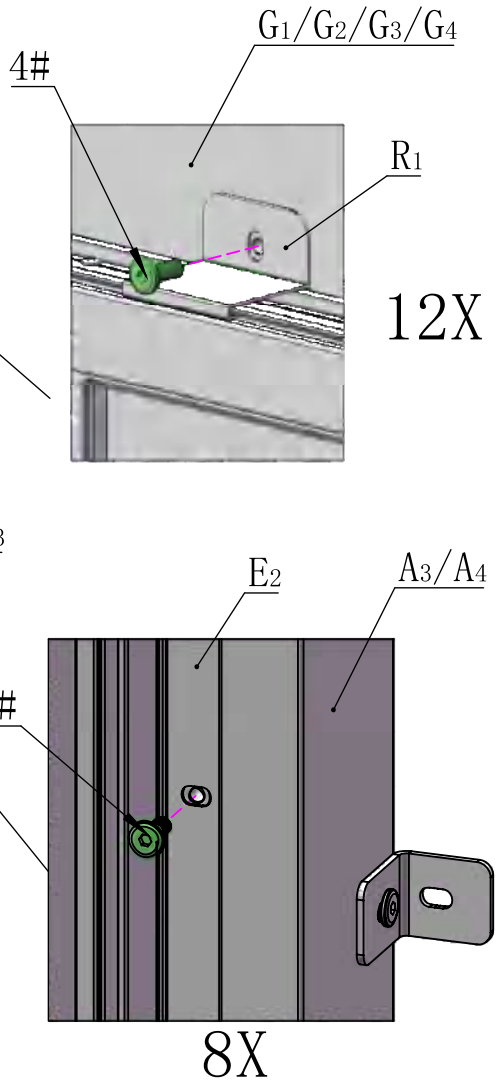

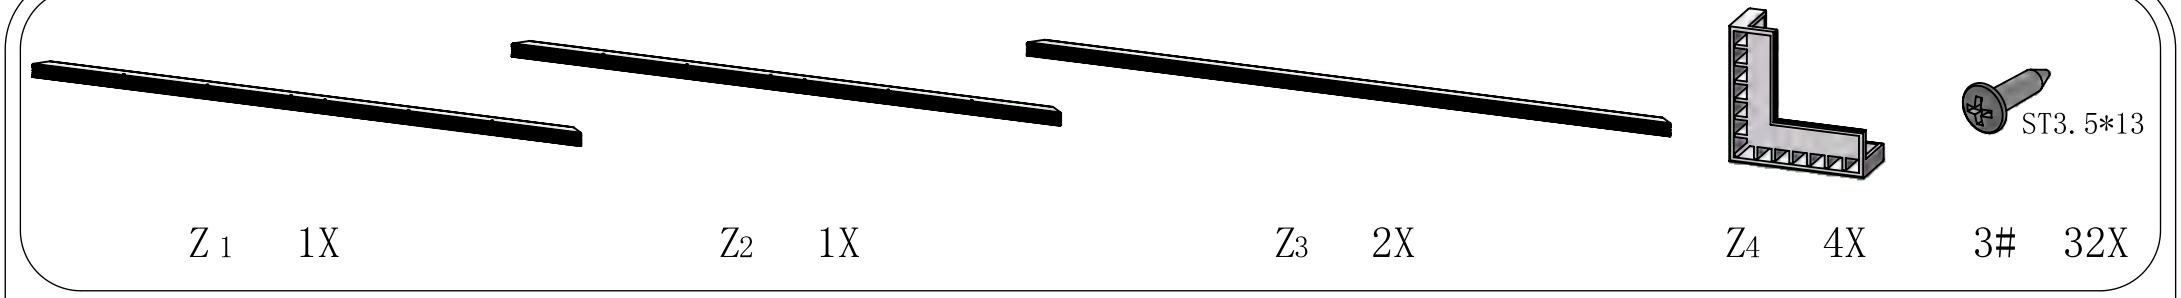

ST3.5*13
Z 1 1X
Z2 1X
Z3 2X
Z4 4X
3# 32X

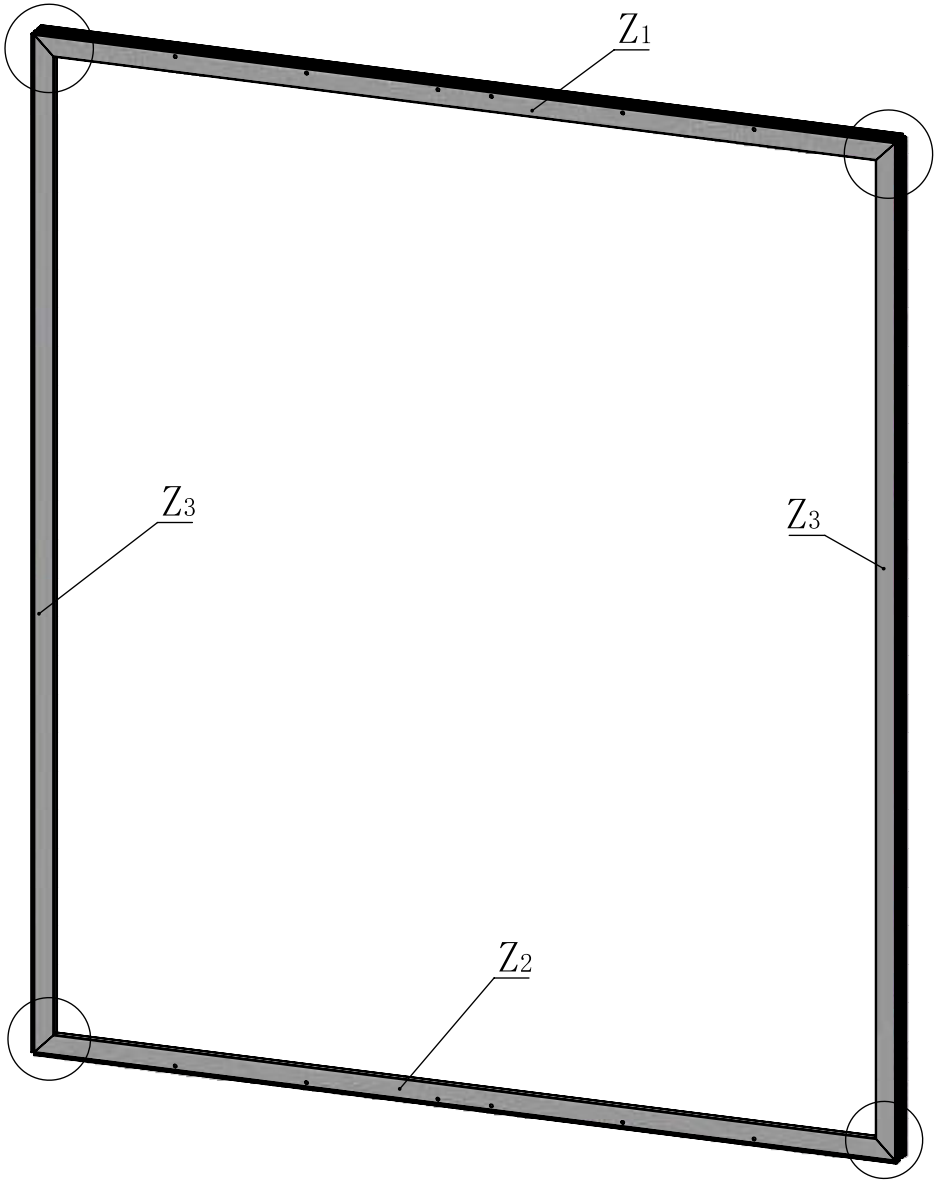

Z1
Z3
Z3
Z2

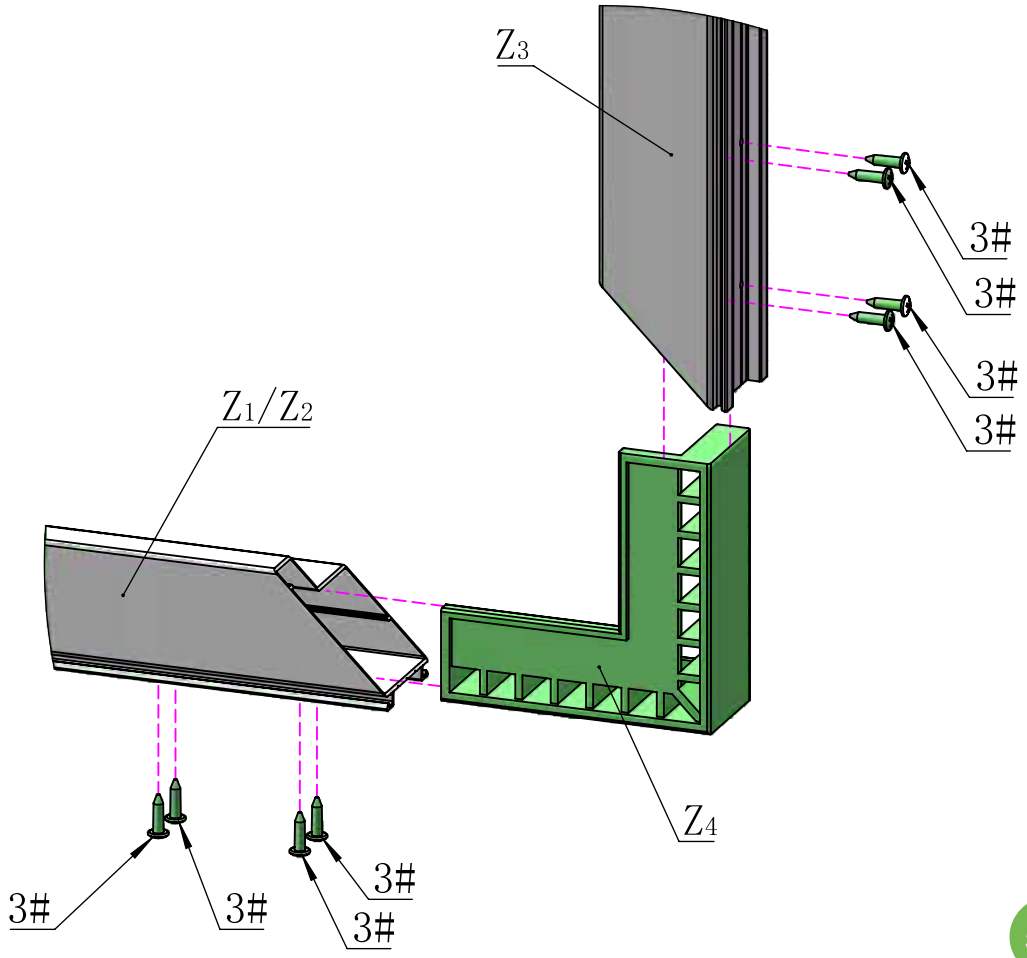

Z3
3#
3#
3#
3#
Z1/Z2
Z4
3#
3#
3#
3#

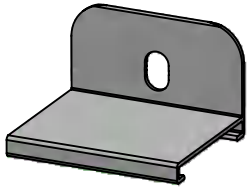


R1 4X

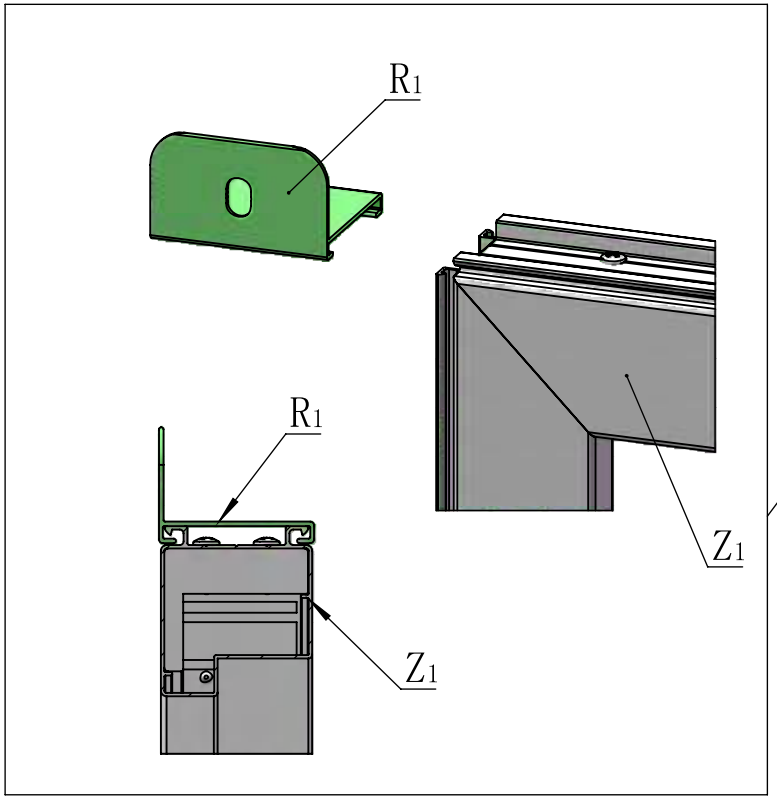

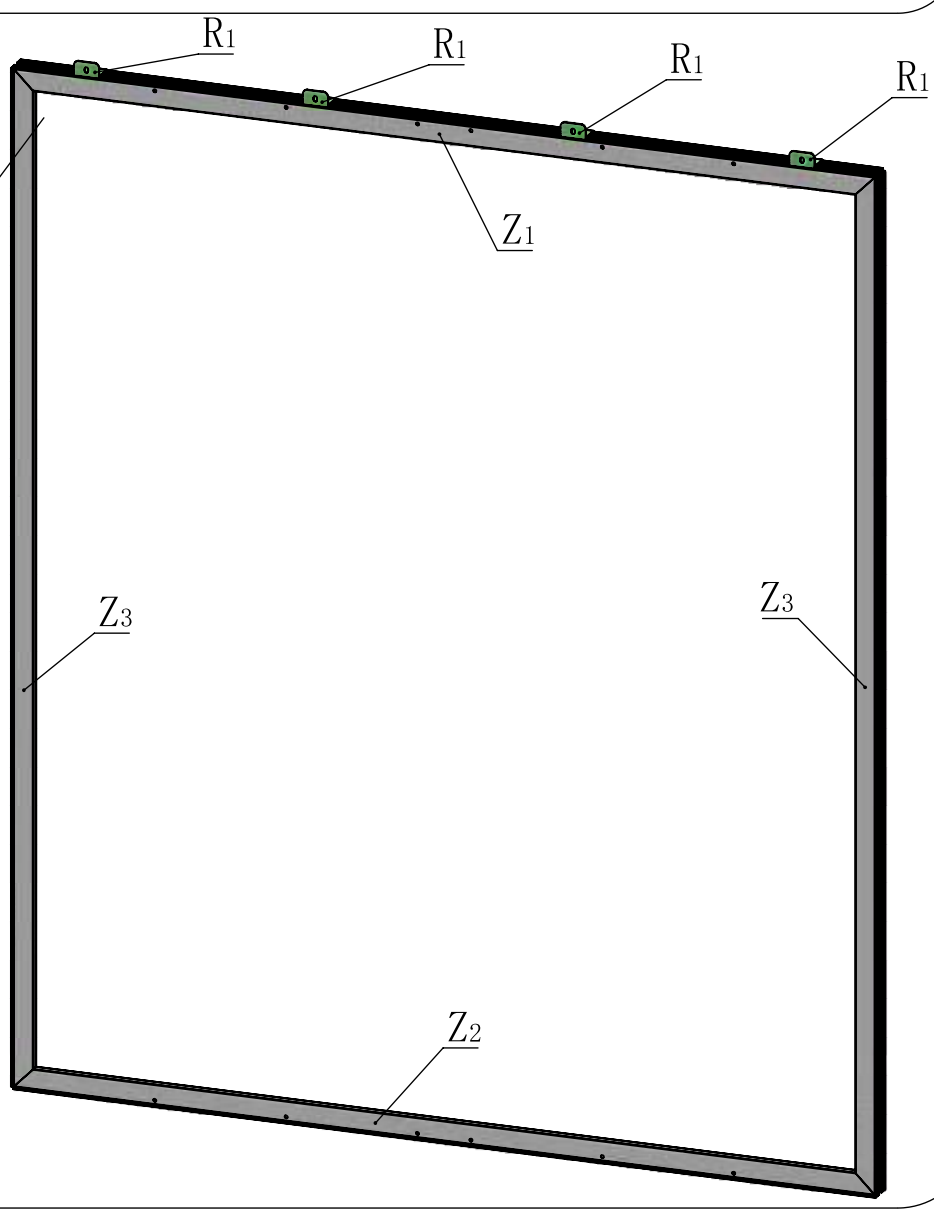


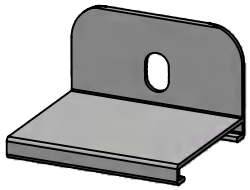


R1 4X

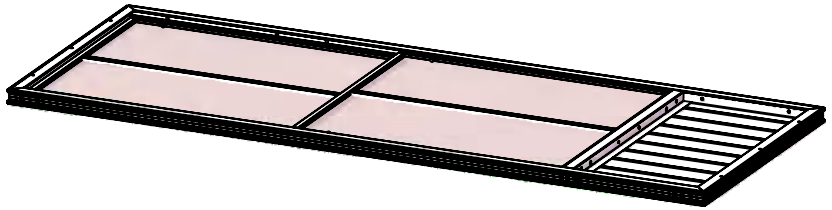

Z7 2X

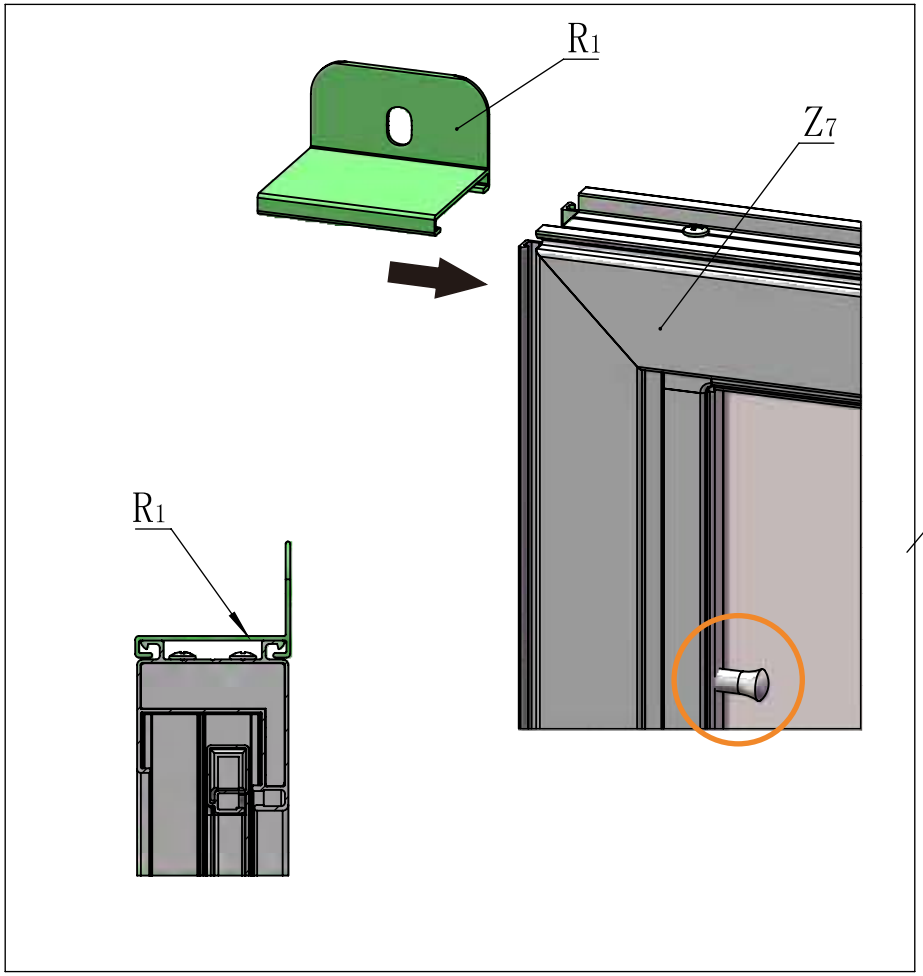


2X

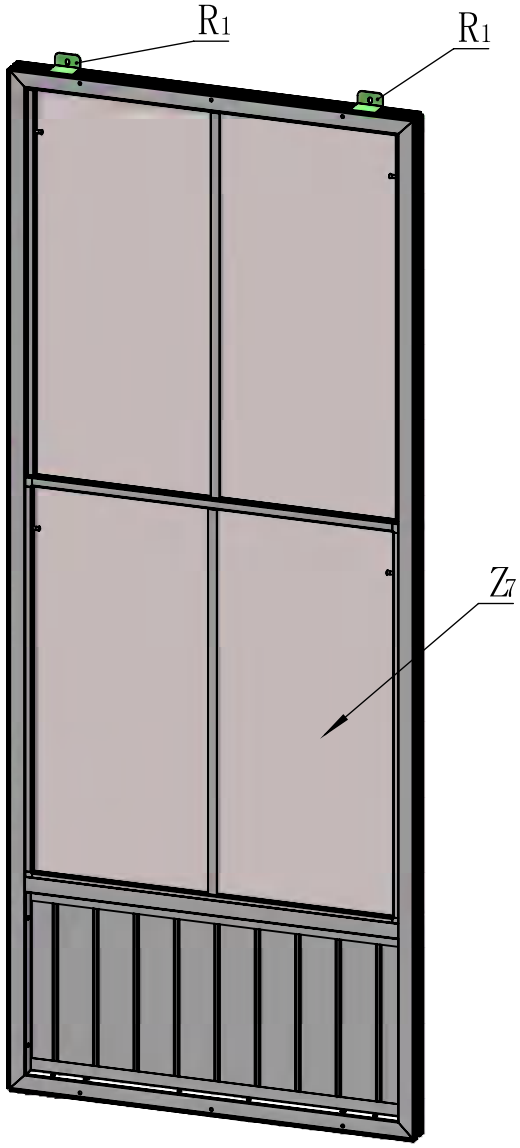

⚠ATTENTION: The orientation of Screen Panel #Z7.




Z10 4X

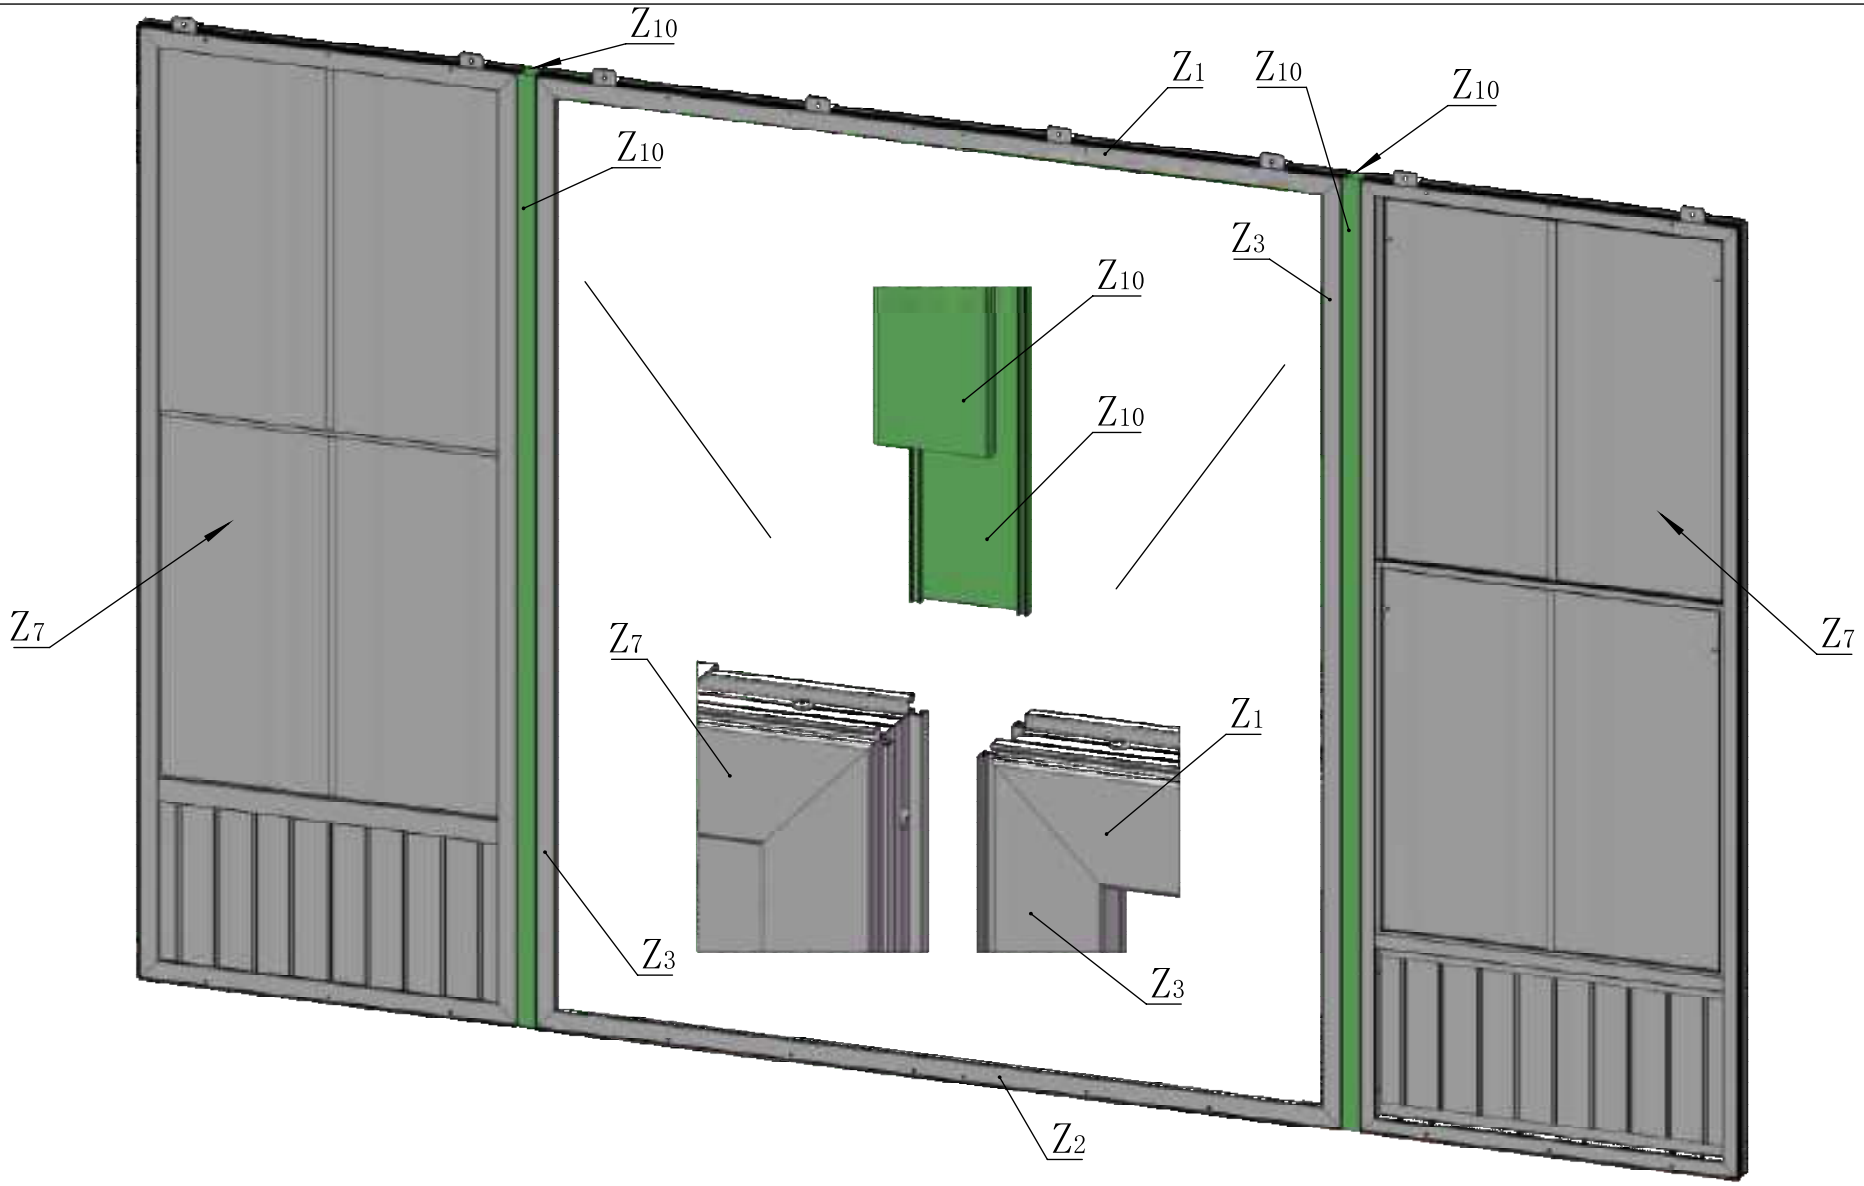



S1 4X

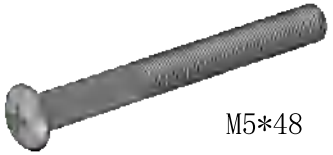

M5*48




M5



M5

17# 24X 18# 24X 19# 24X

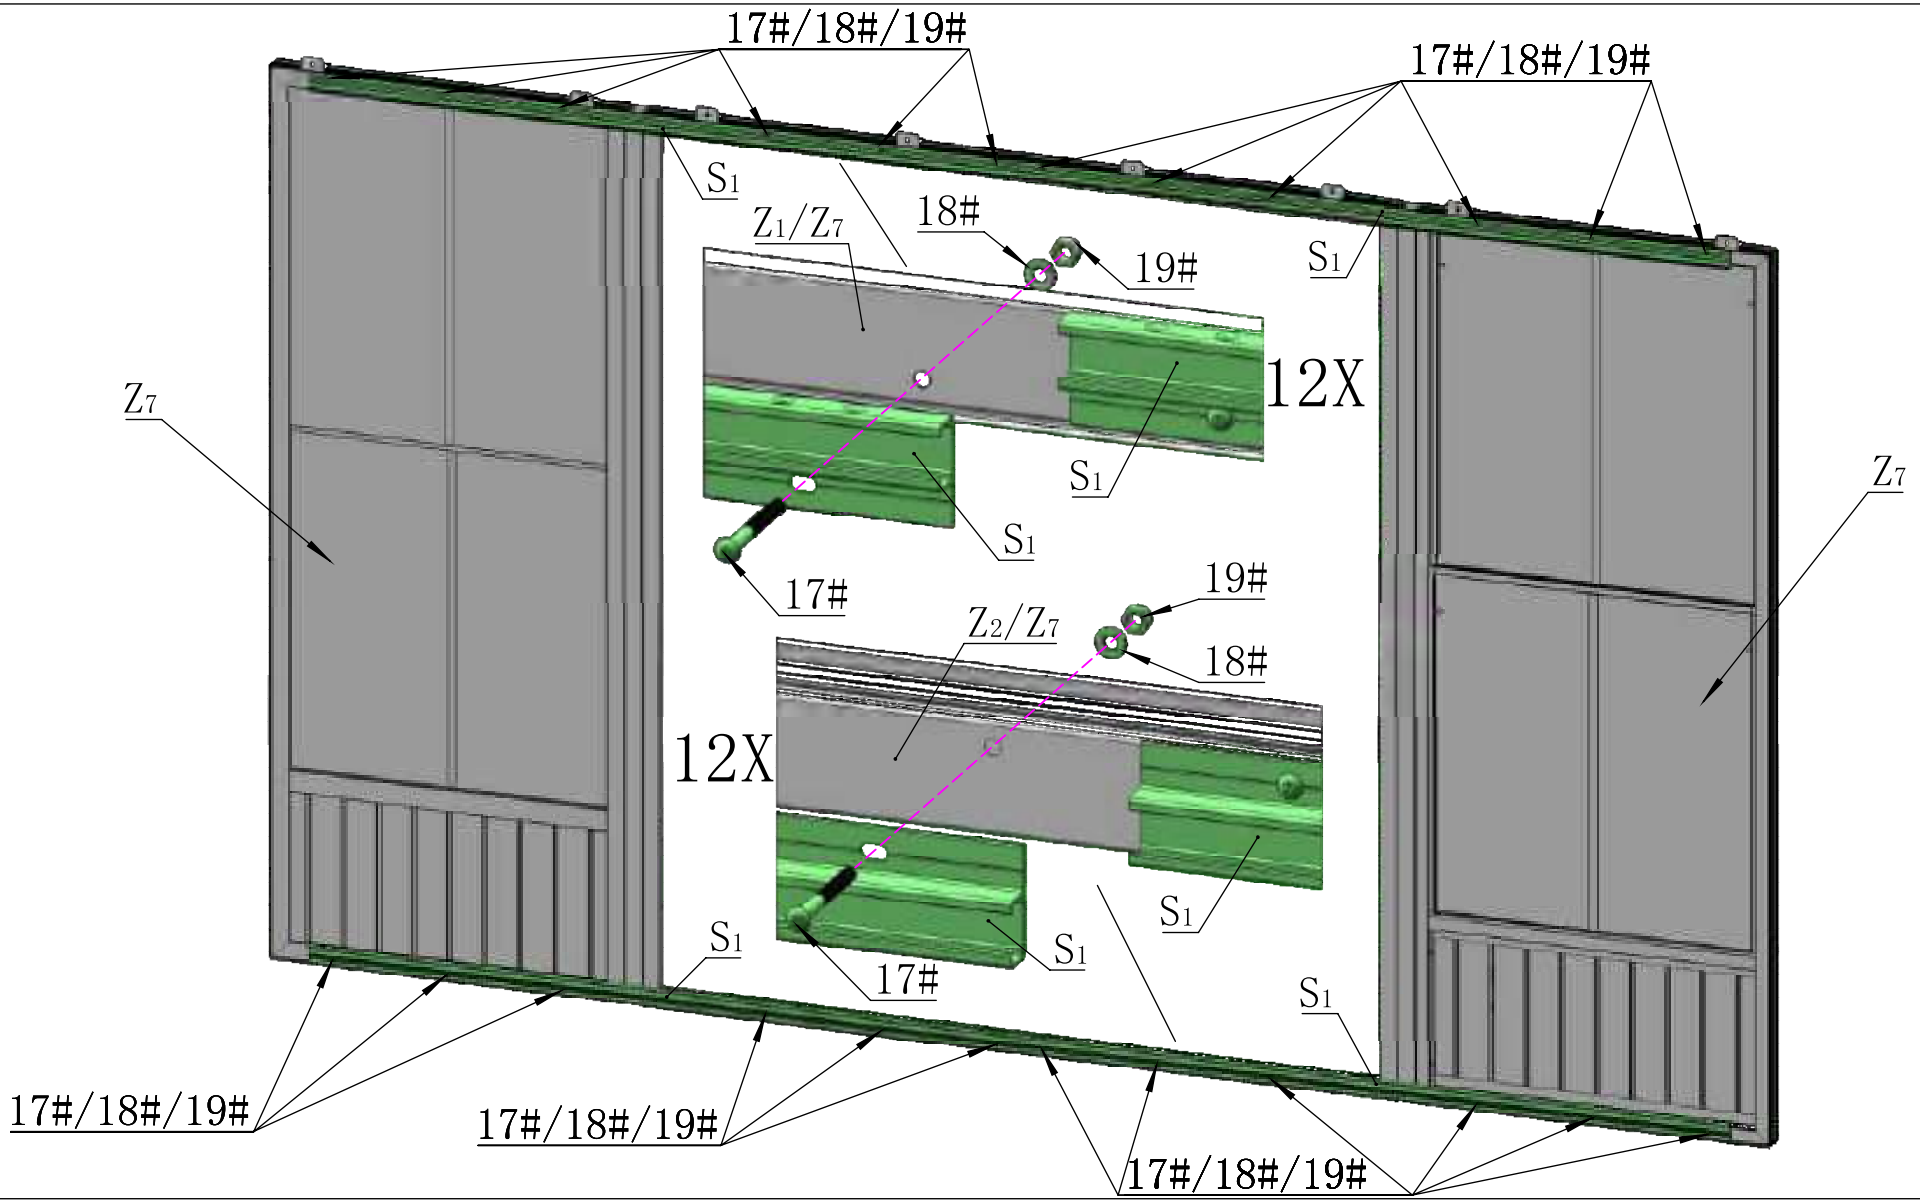





S2 4X




ST3.5*19

16# 8X

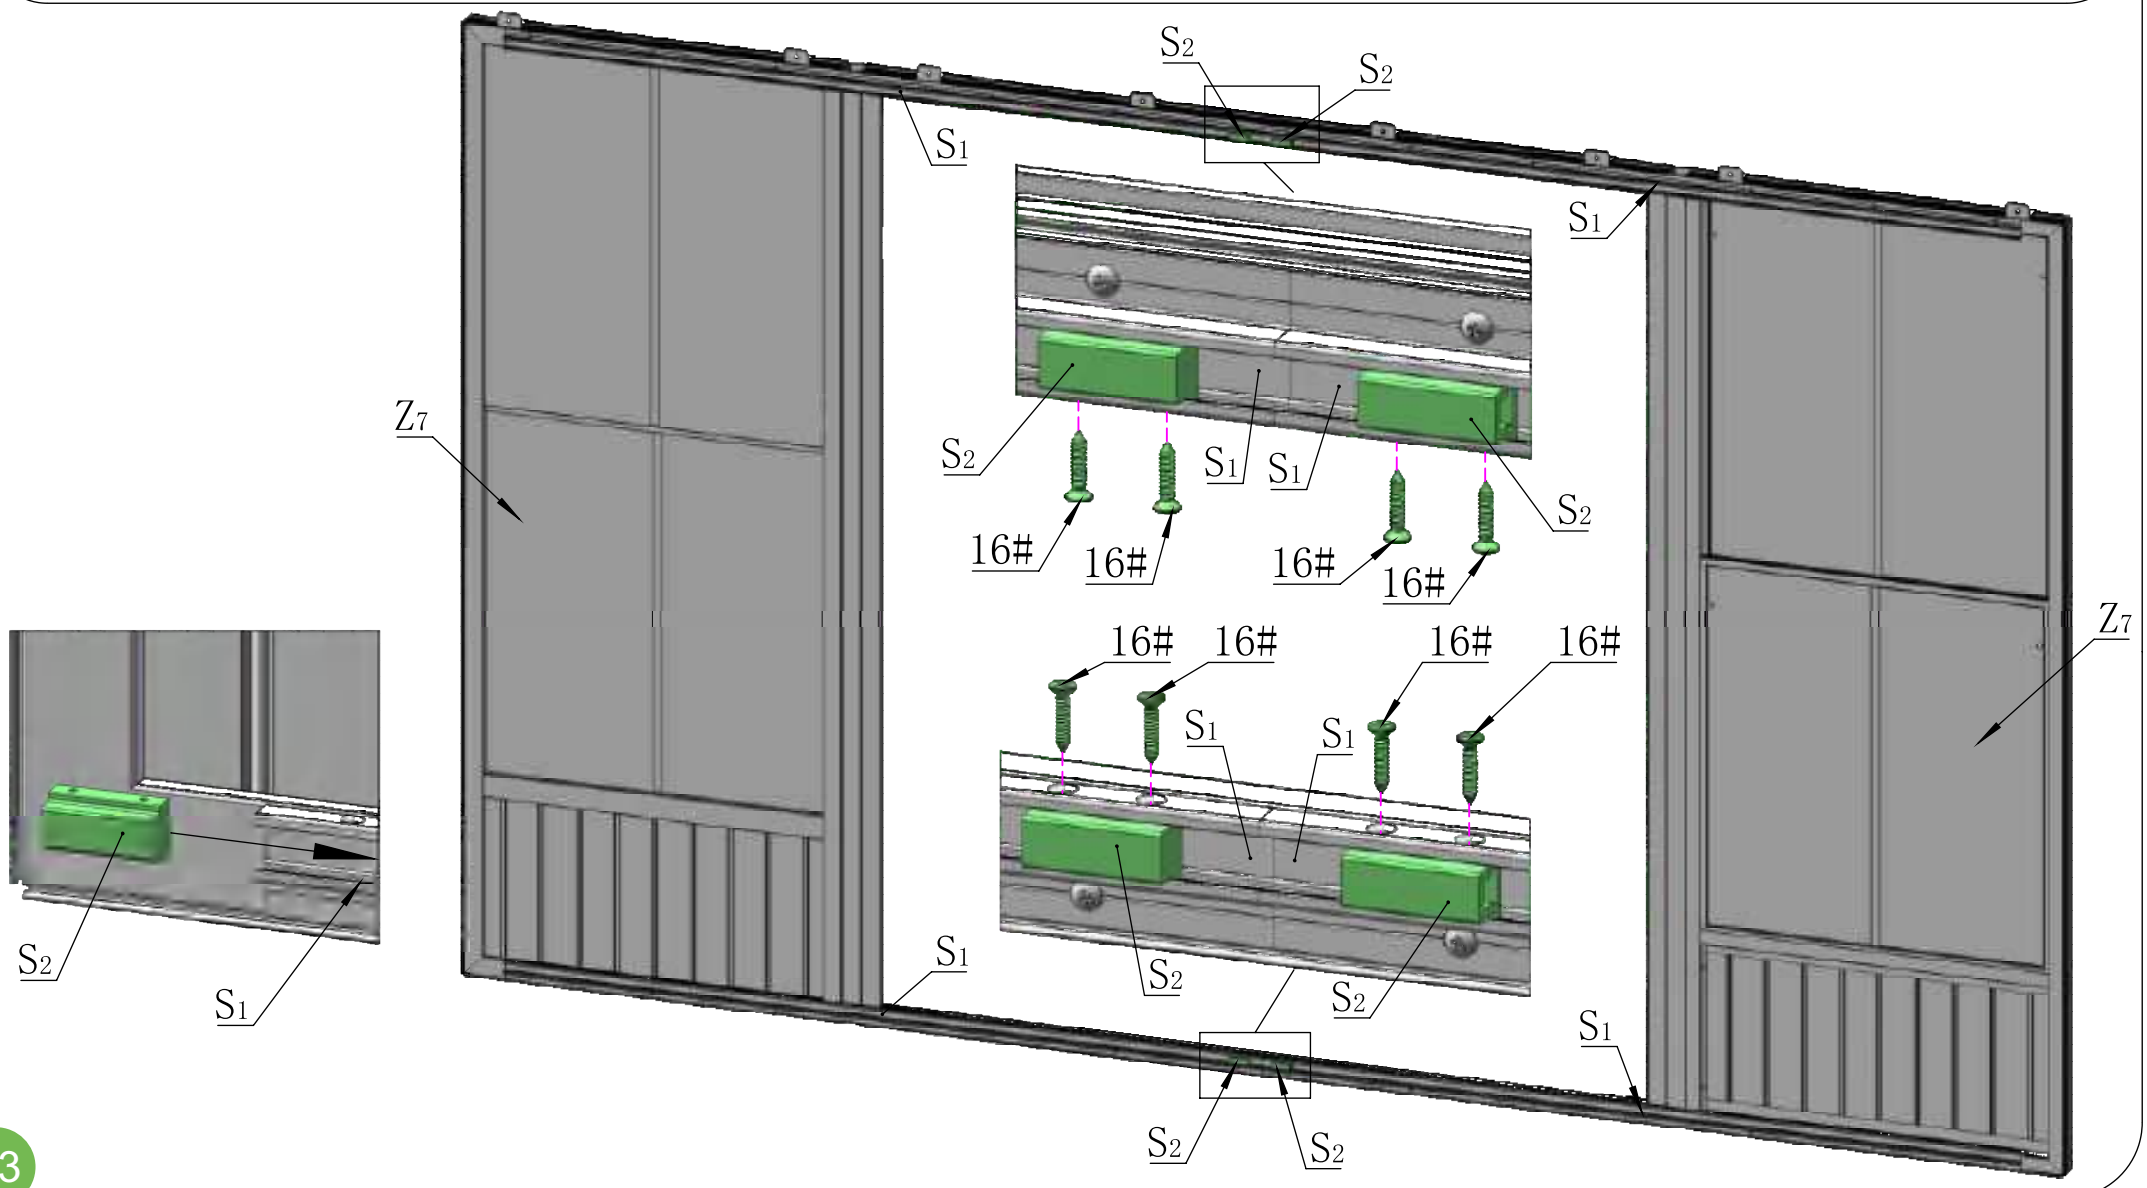


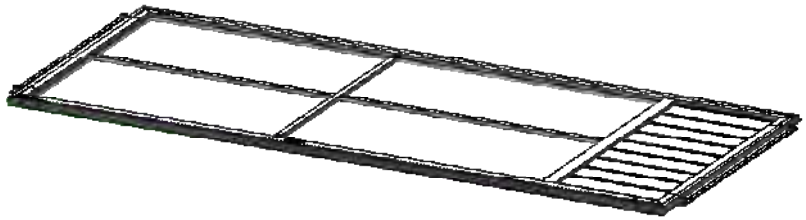

Z8 1X

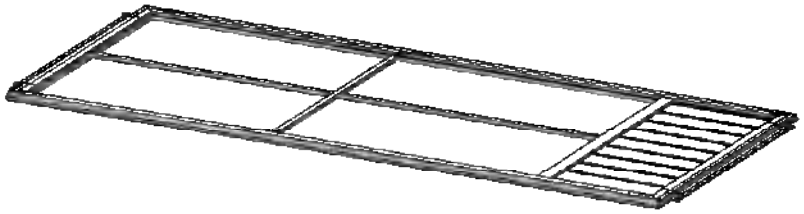

Z9 1X

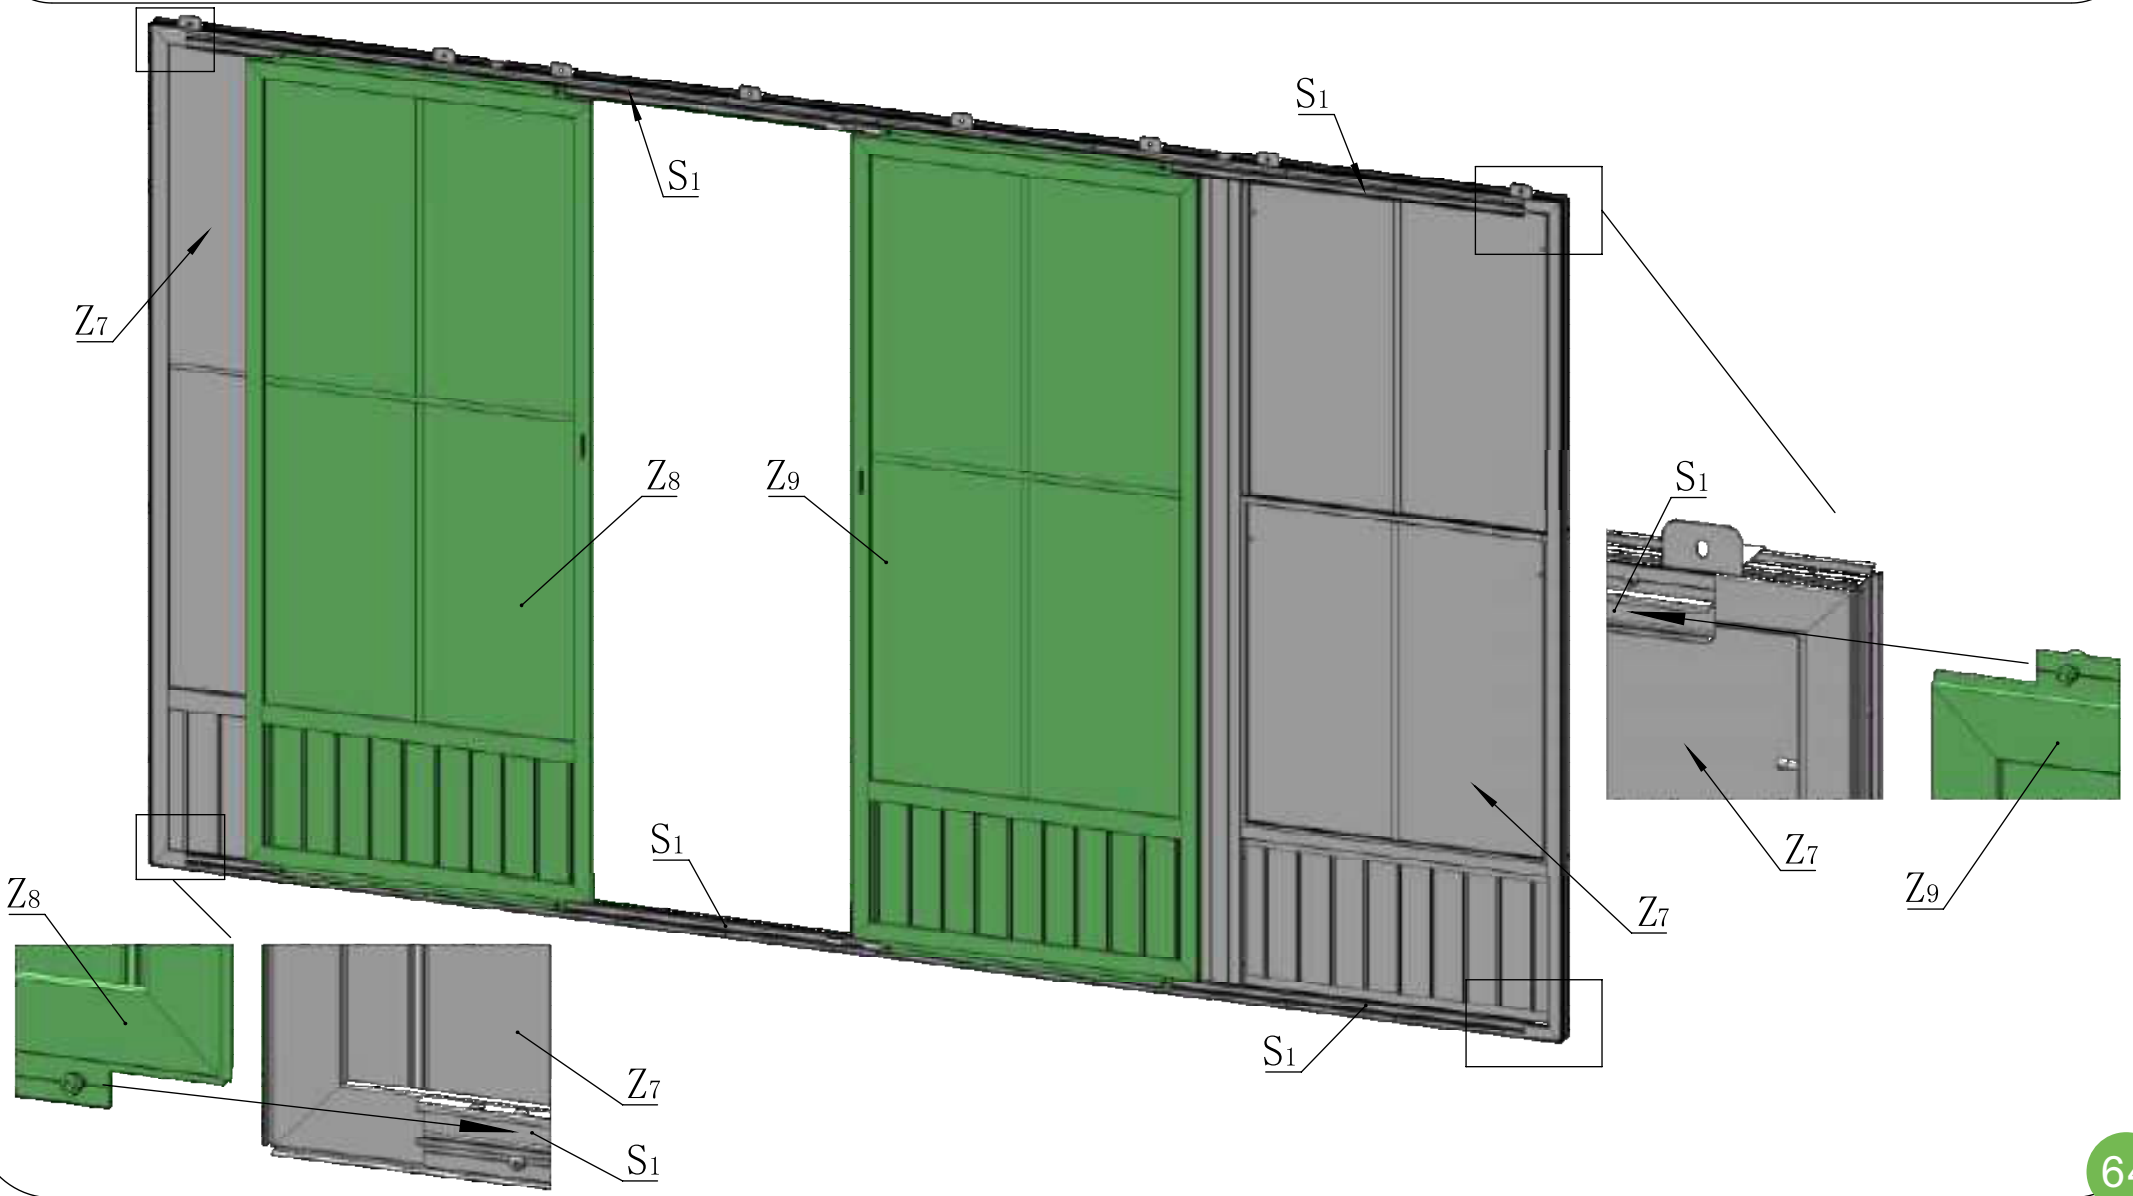




S2 4X




16# 8X

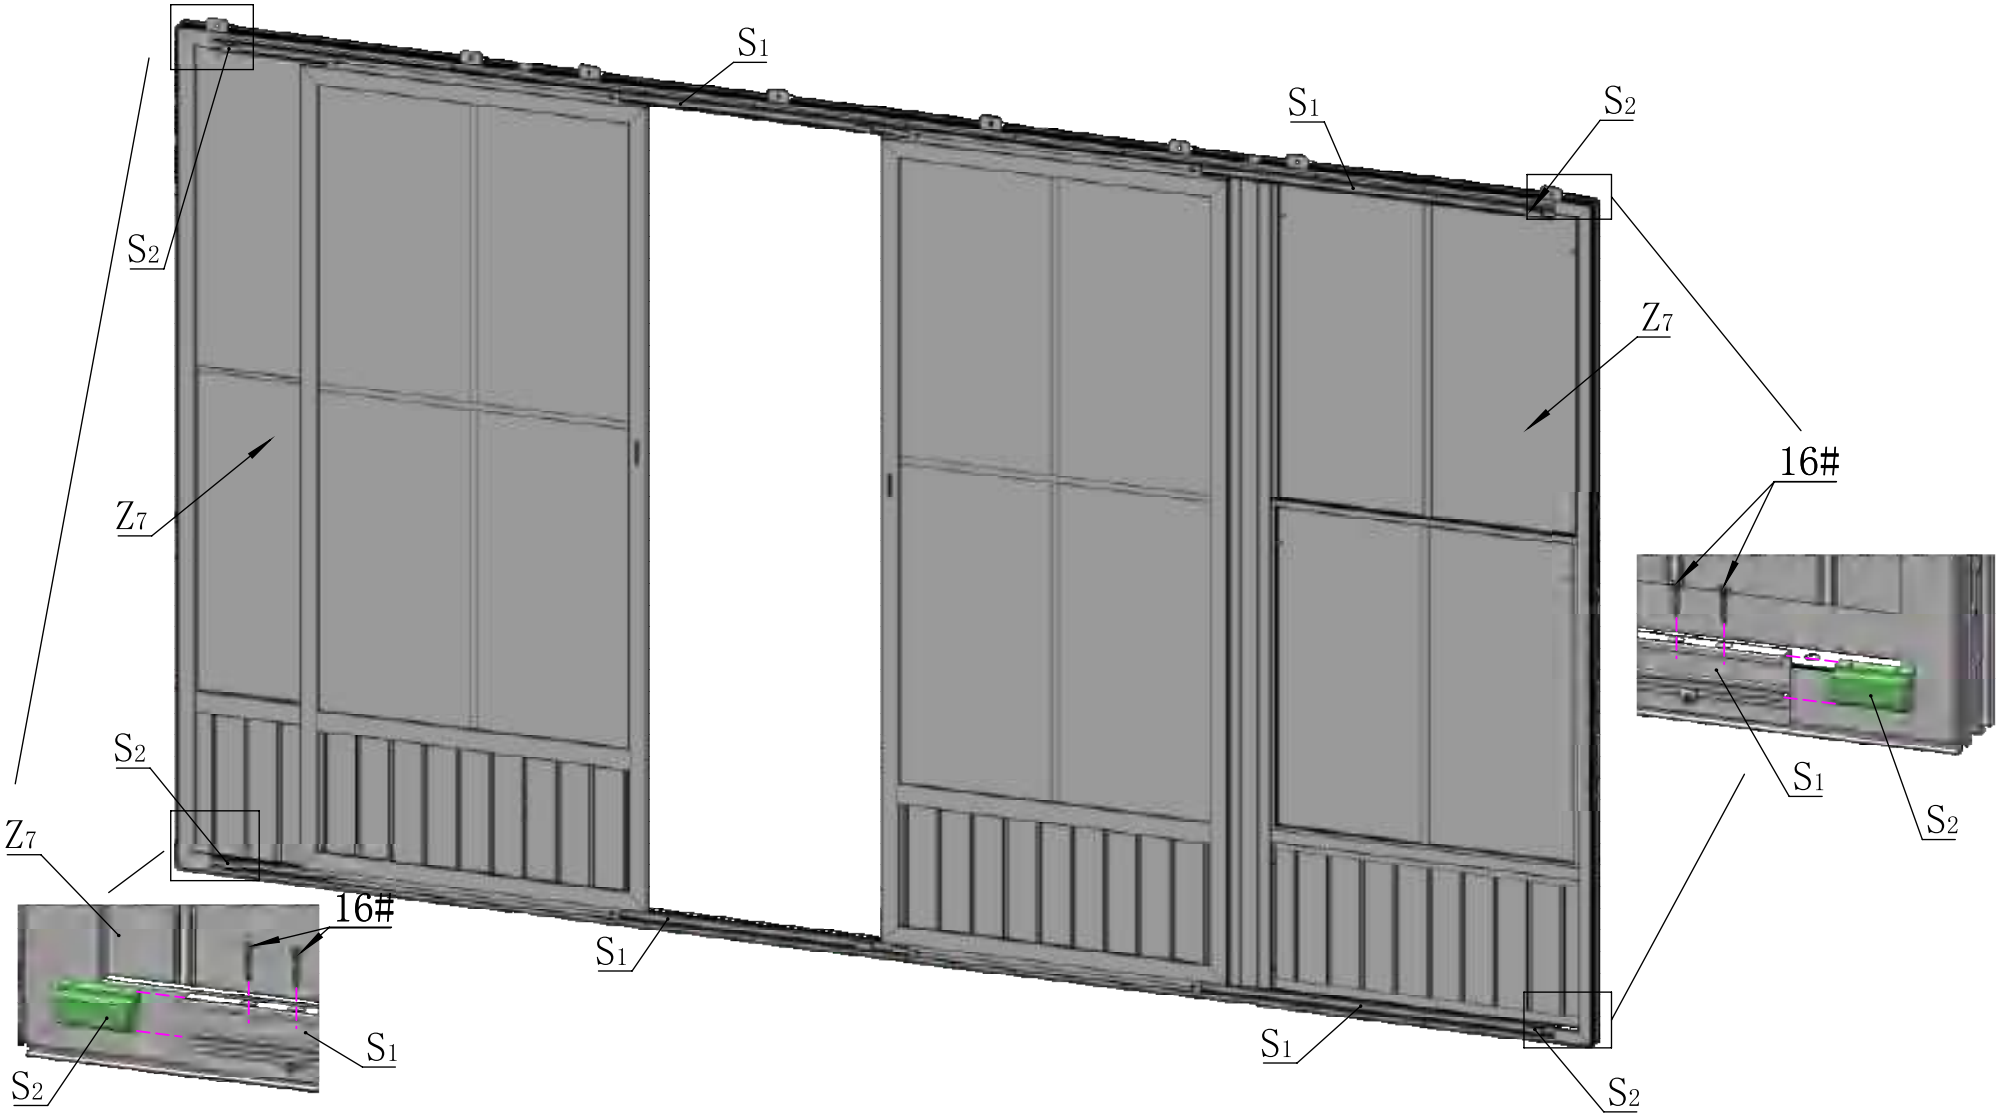




Z5 4X

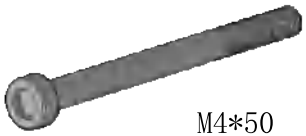


20# 4X




21# 4X




26# 1X



22# 1X

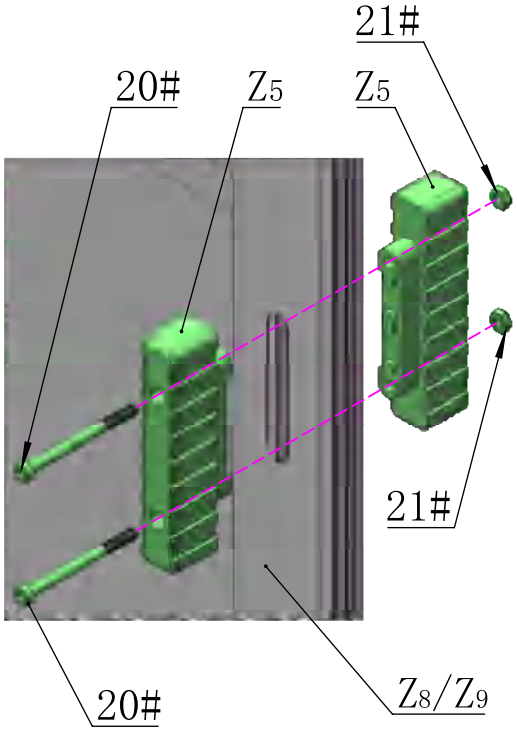

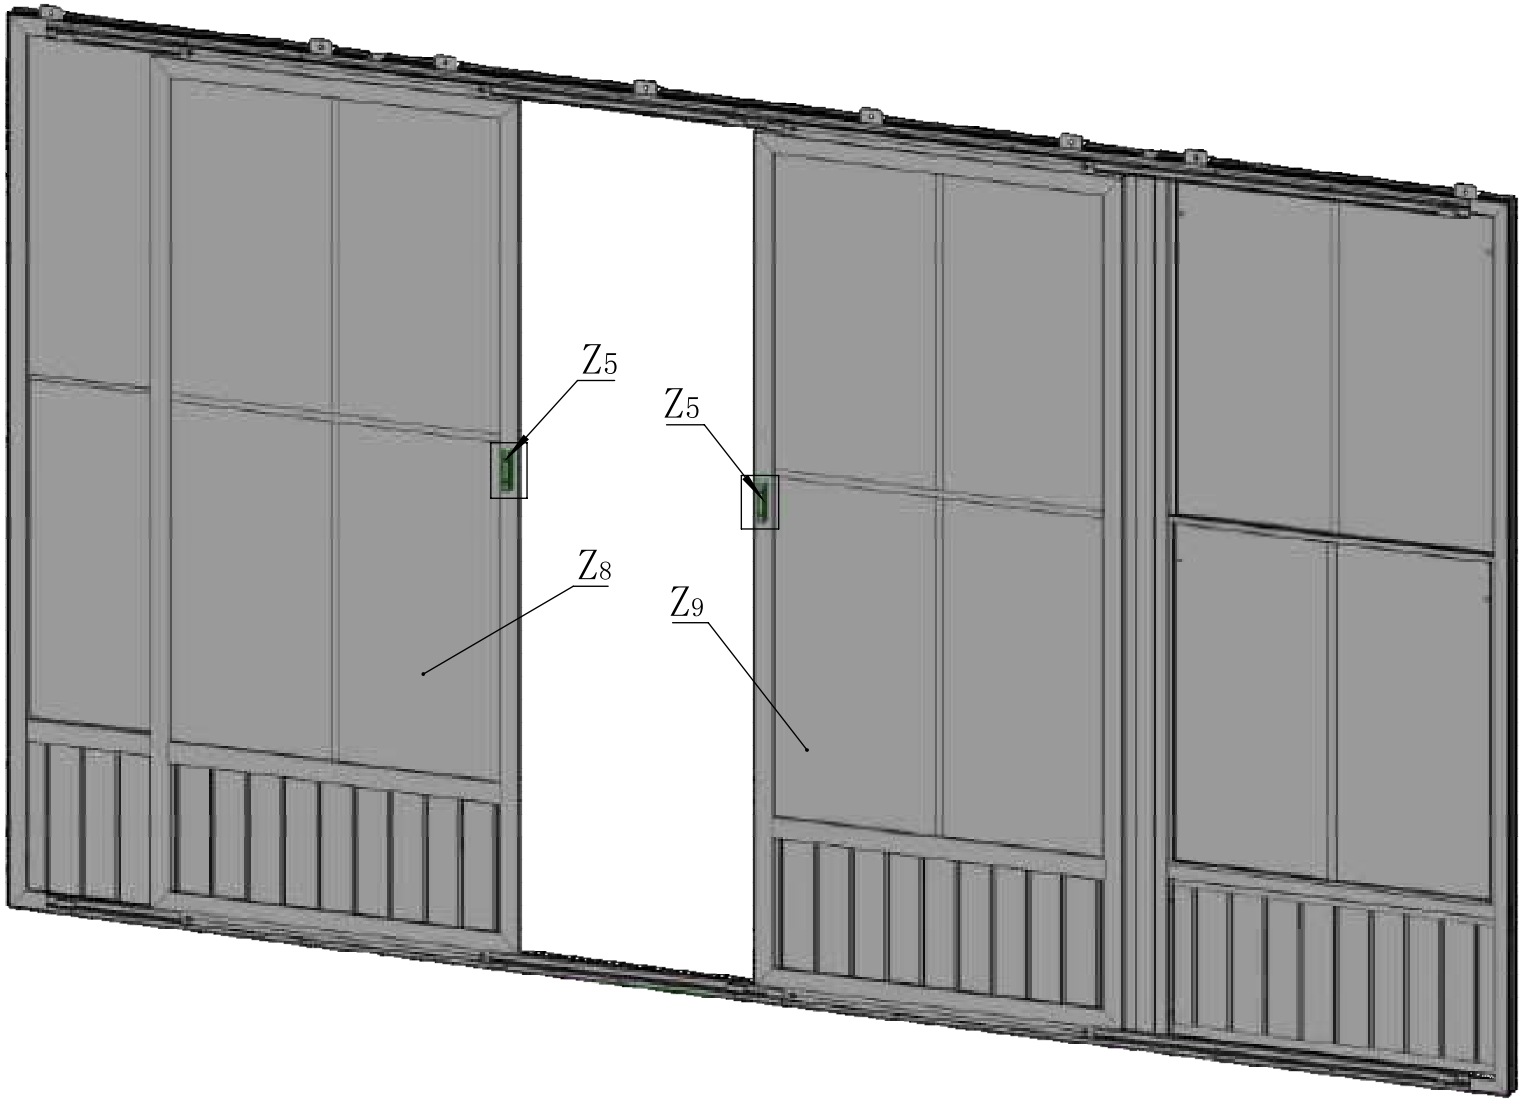



E1 2X





⚠ ATTENTION: The orientation of Screen Panel #Z7.




M6*16

4#　　16X

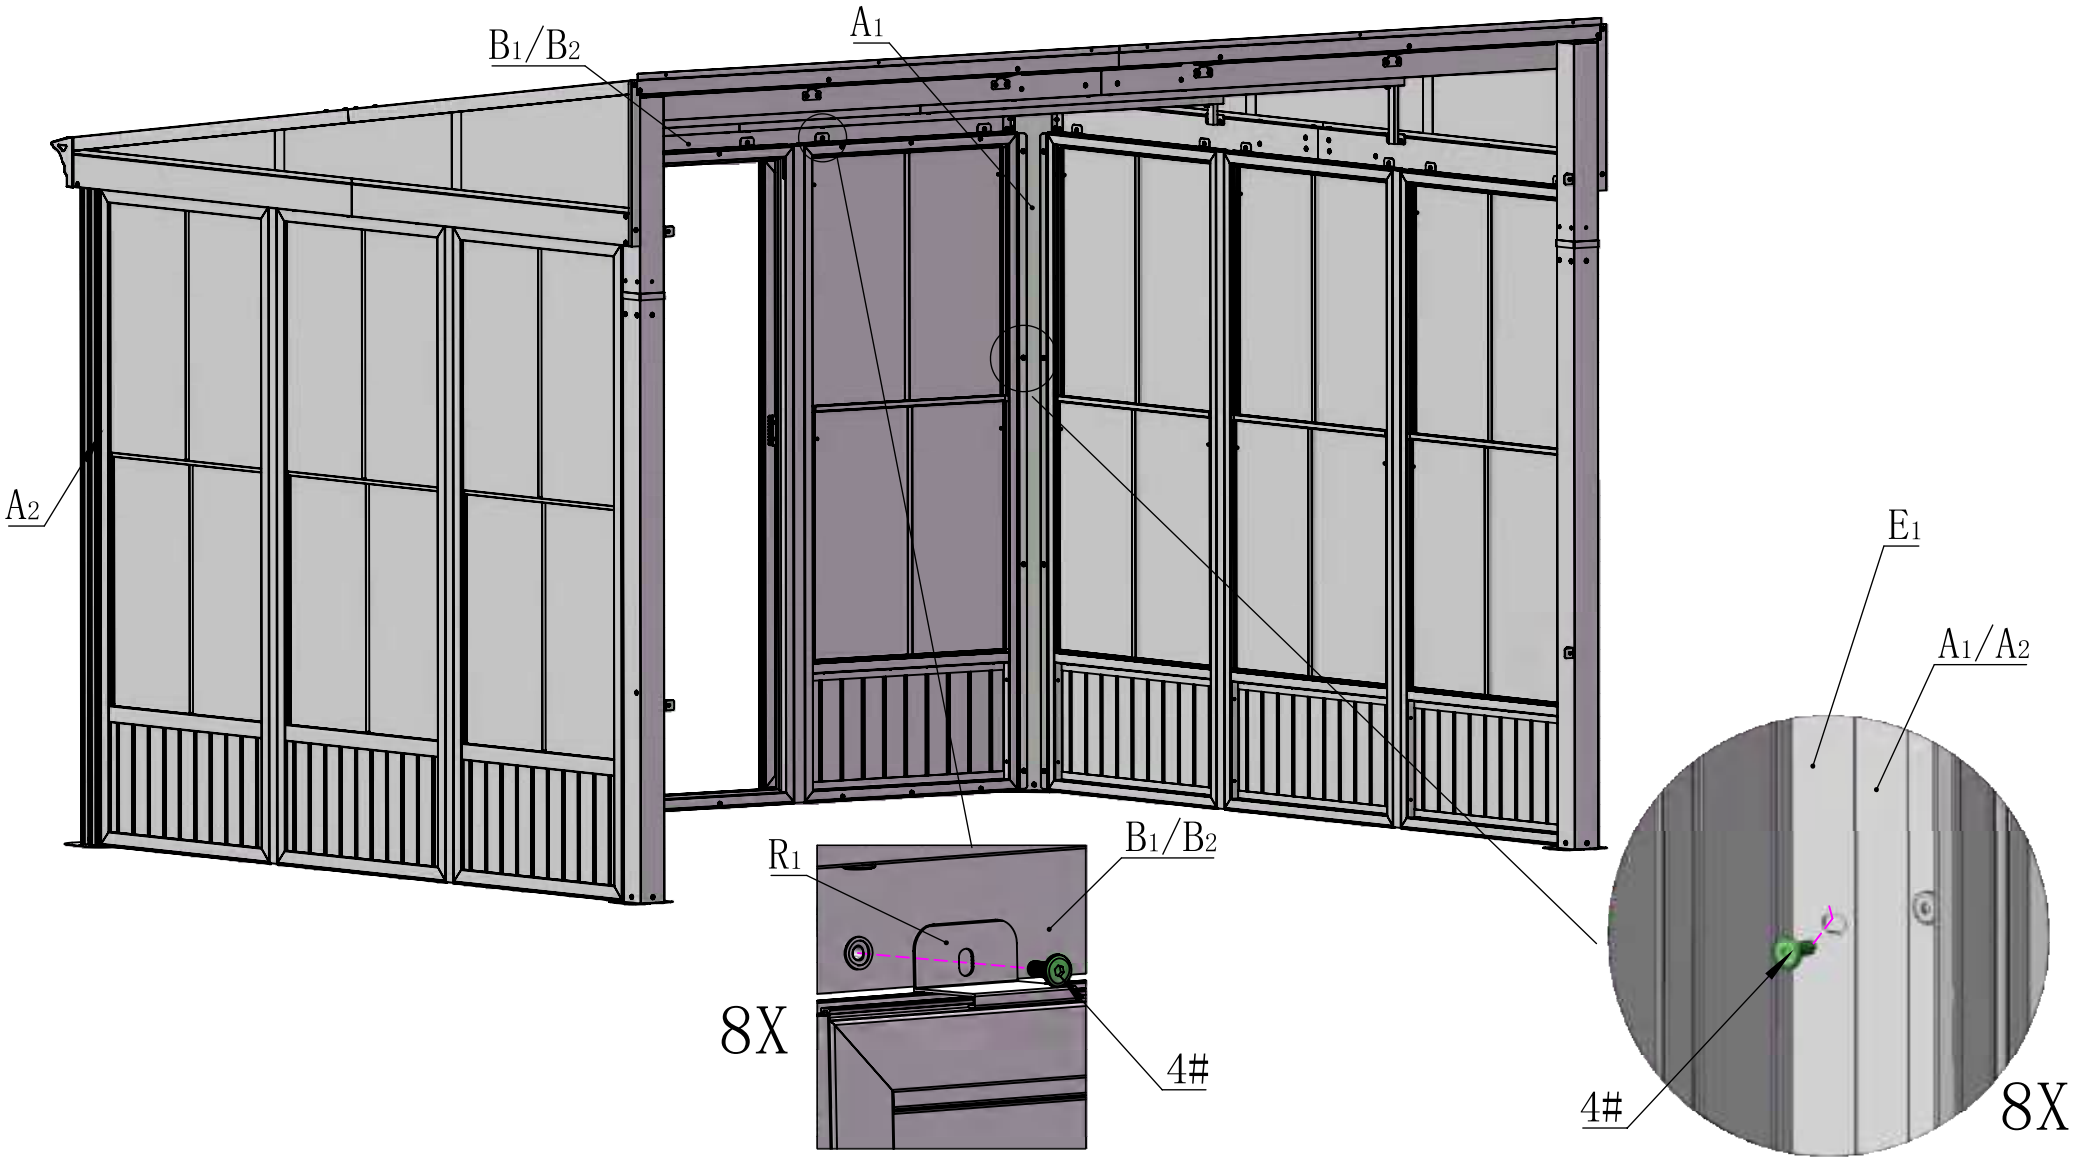


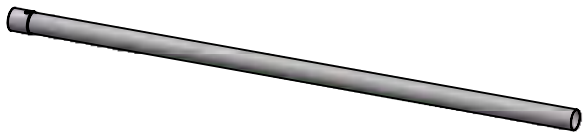


U1 2X

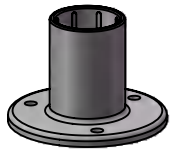


U3 2X

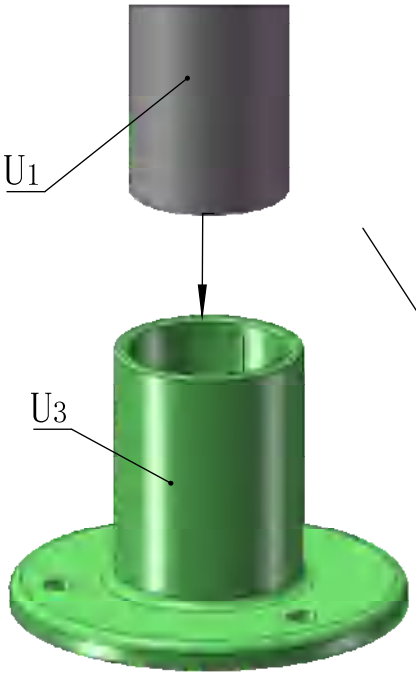


2X

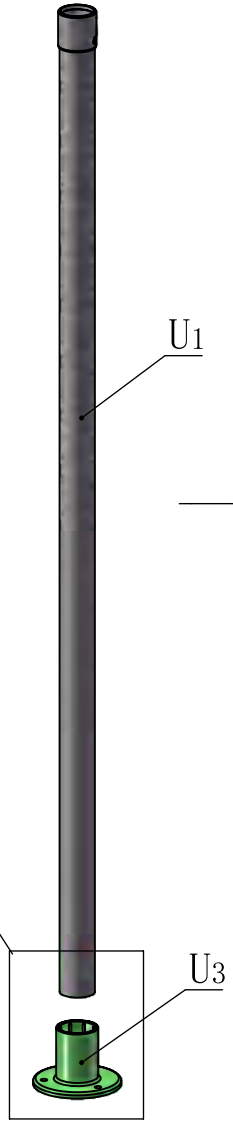

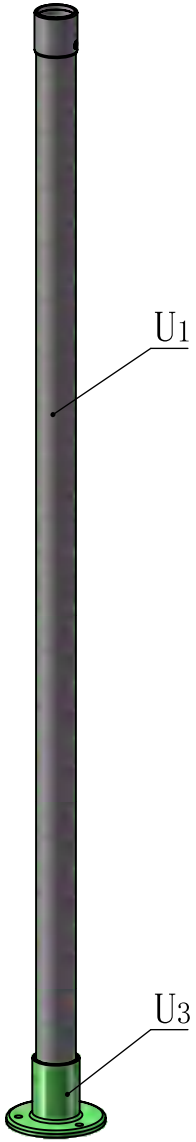



U2 2X

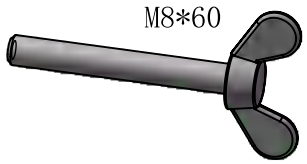

12# 2X





13# 2X




14# 2X


Rear Support Tube

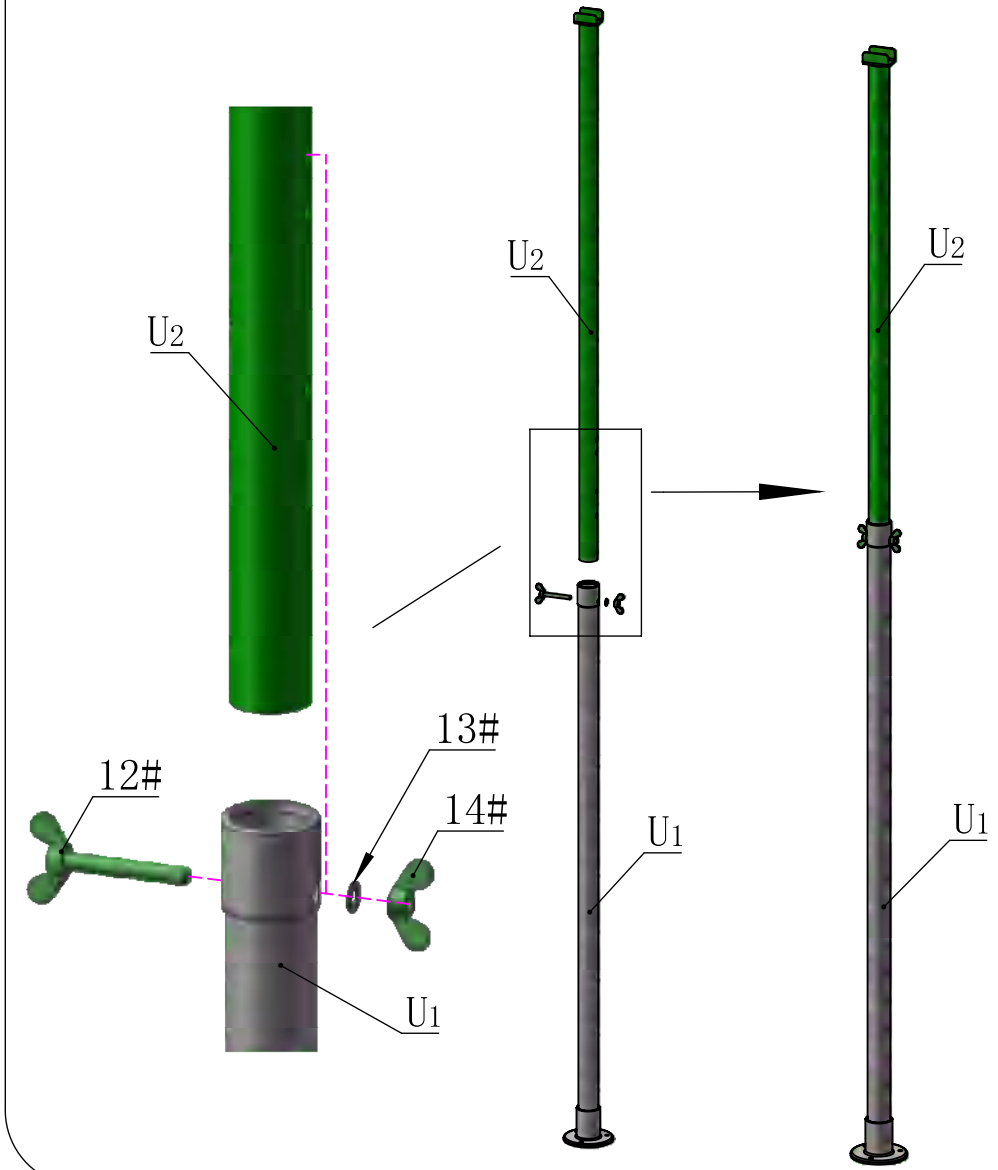

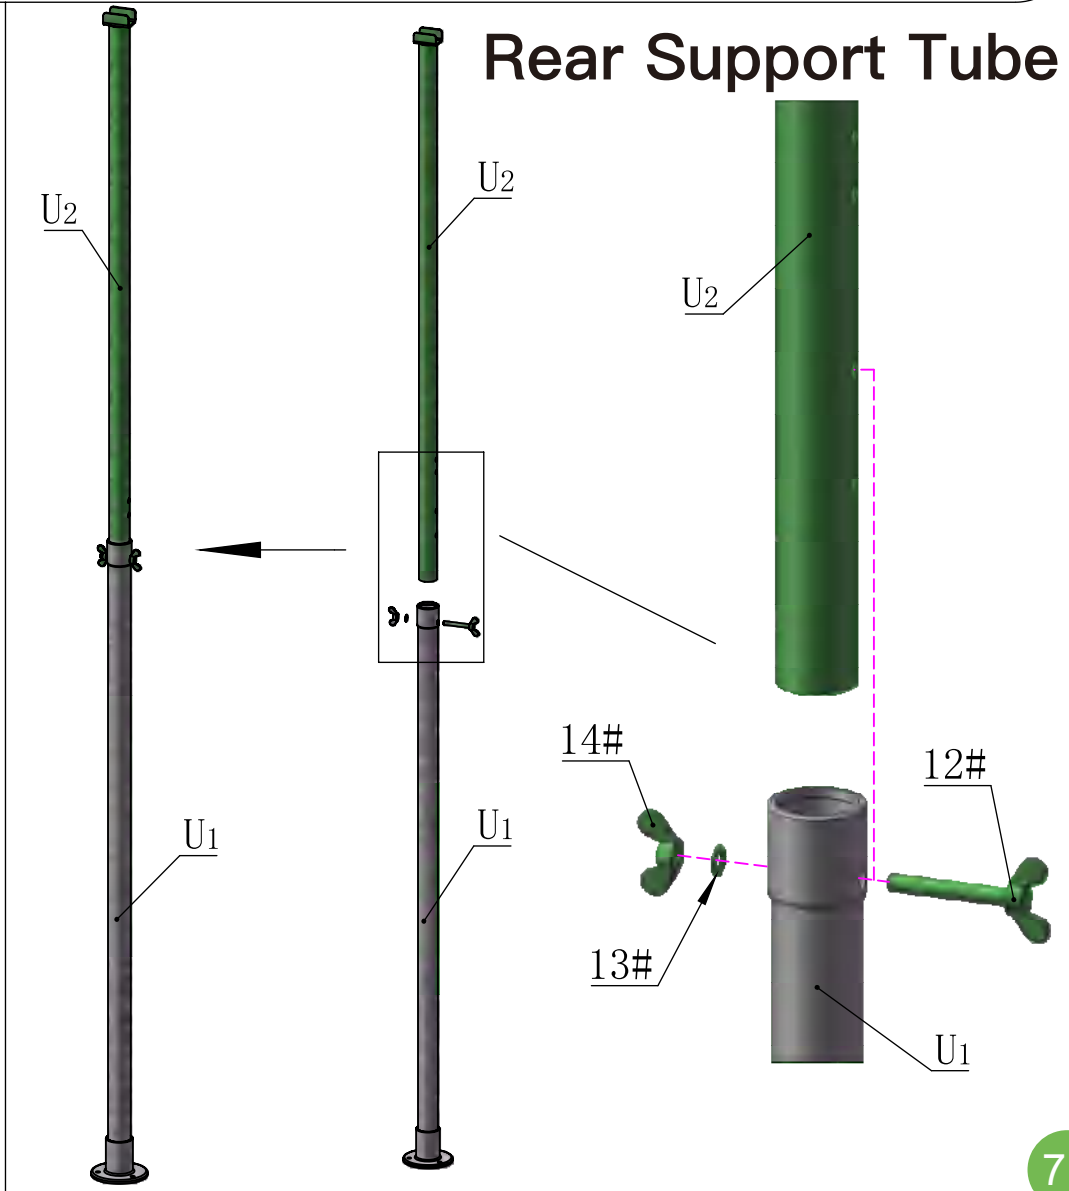


⚠ The two support tubes can strengthen the weight capacity of the metal roof.
In bad weather, especially snowstorm, they are essentially needed to prevent the roof from collapsing under heavy snow.
In daily life, you can put them away.

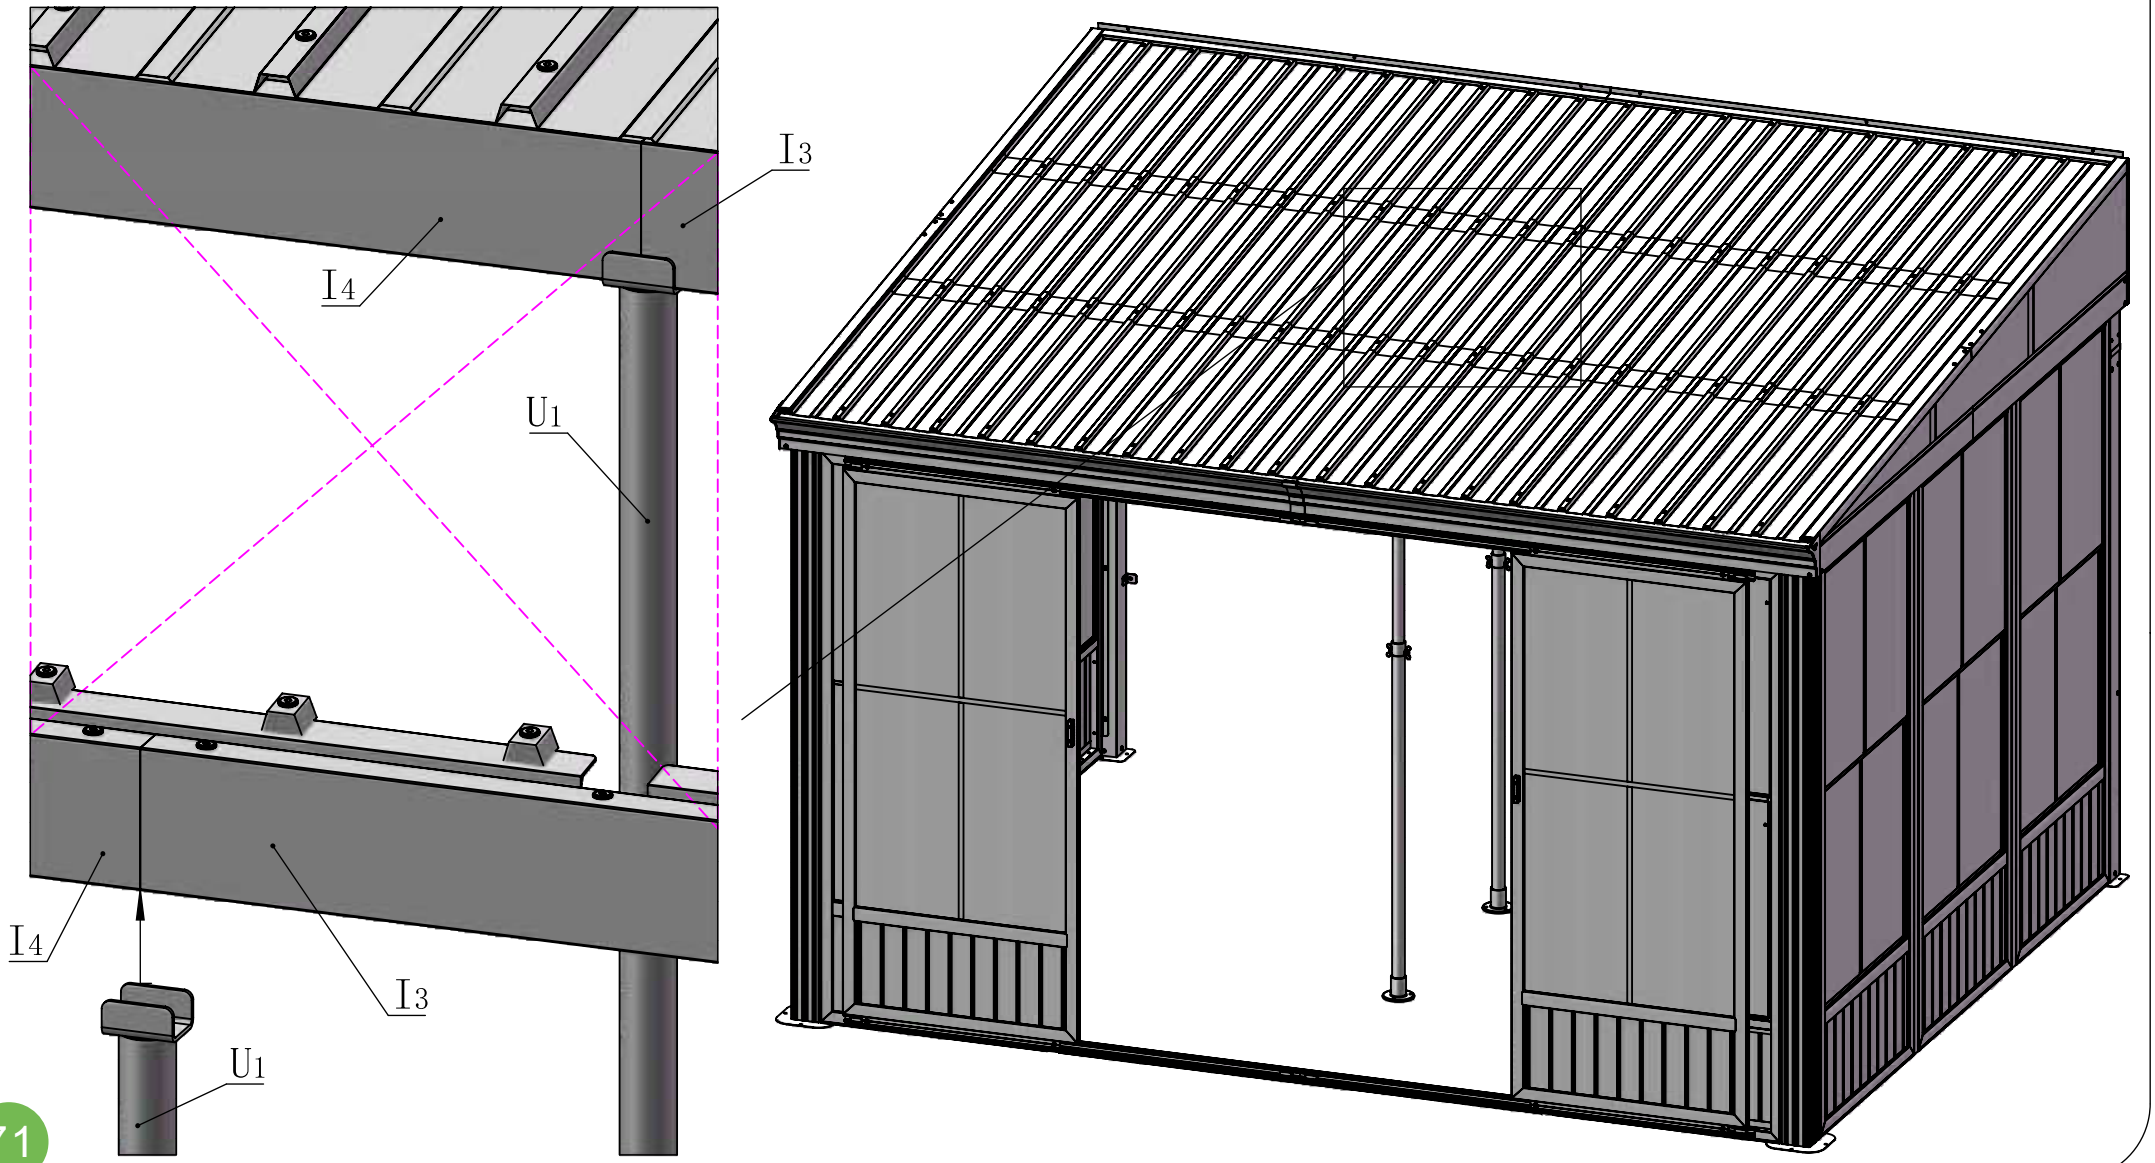

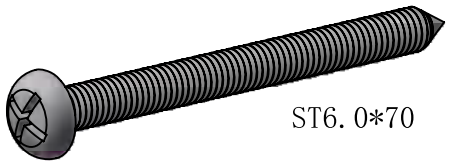



9# 10X

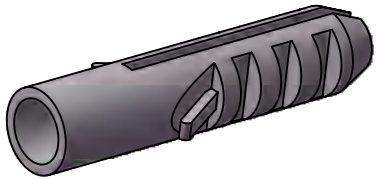


10# 10X

⚠ Install this step if you need fix the canopy to the wall (you need to drill holes into the wall).
Otherwise please skip this step.

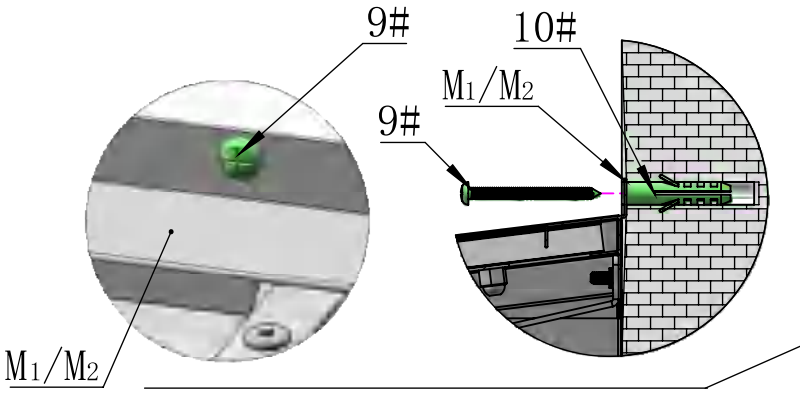

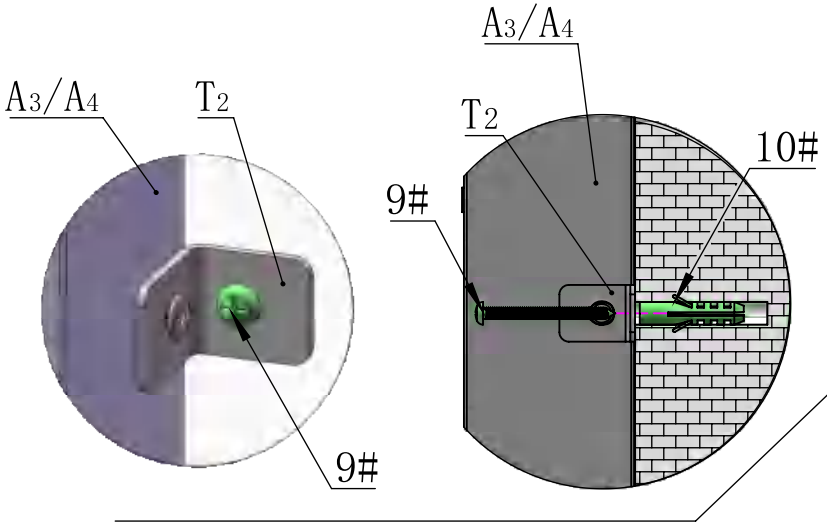

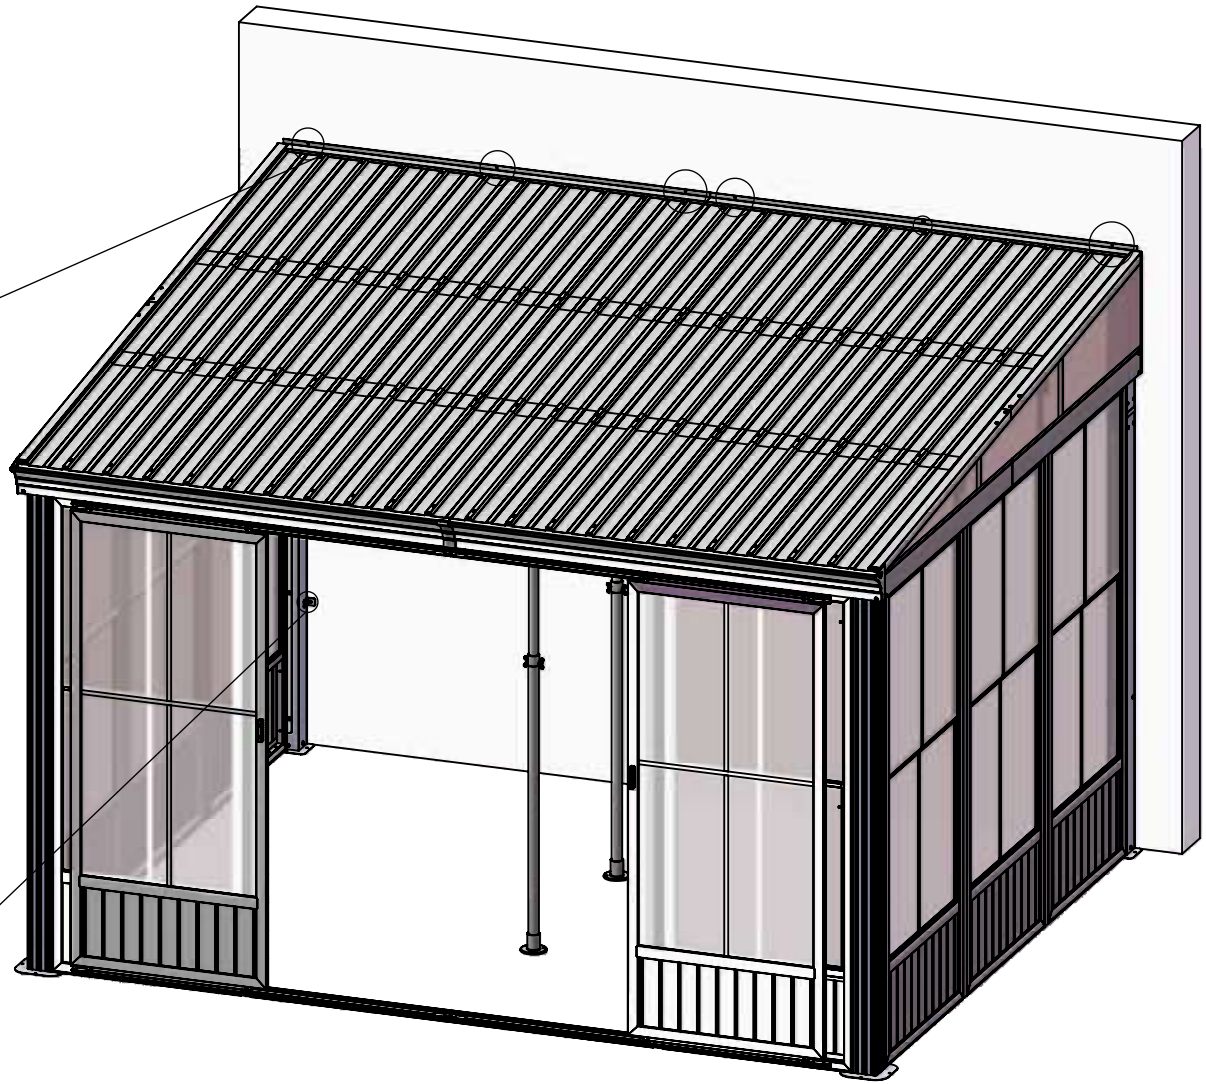

Care and Cleaning

Wash frame part with mild soap and water, rinse thoroughly.

Do not use bleach, or other solvents on the frame parts.

Please check periodically that the sunroom is anchored properly to the floor or ground to enjoy its safe usage.

Please check periodically that all screws are tight to maintain the solidity of the structure.

Please remove any snow accumulation at all times.

Warranty

Frames

Frames constructions are warranted to be free from defects in material and worksmanship for 1 year from item purchased. Damage to frame from negligence won't be covered by this warranty.

Bolts & nuts

Bolts and nuts are warranted to be free from defects in material and worksmanship for 1 year from item purchased. Damage from exposure to chemicals (including not only oils ,spills, fluids) won't be covered by this warranty.

Warranty Limitation

This warranty is for the original purchase order only. (Order number required). This warranty is non-transferable. Domi outdoor living is responsible for the free replacement part including shipping charges for the 1 year warranty.

Warranty Exclusion

This warranty does not cover products subject to negligence, abuse usage, inappropriate installation. Domi outdoor living reserves the right to explain warranty exclusions. When the replacement item is applied, the 1 year warranty automatically expires. Please feel free to contact us for applying warranty.

domi
outdoor living

RESORT COMFORT IN YONR
OWN BACKYARD

Support:

Email:service@domioutdoorliving.com

Please tell us your order ID when contact.

Attach photos of damaged part for instant reply.