


## Installation Guide

### Perforated Sump Basin ( 18 x 22 in. )

#### Model: SF20-DR



#### Package Contents

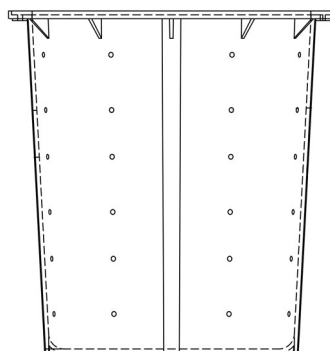

#### Tools Required



Safety Goggles



Tape Measure




Shovel

## Installation:

**Note:** The below serves only as a general installation guide. Please refer to your local state and/or local plumbing regulations for details pertaining to your systems design, installation and maintenance requirements.

1. Excavate hole large enough to accommodate basin, backfill material and inlet piping
2. Add 4 to 6 inches of clean backfill material or concrete to the bottom of the hole, making sure that it is level, compacted and smooth
3. Place the basin in the hole and make sure that it is level
4. Carefully backfill with naturally rounded gravel or stone (larger than 3/8 in. and smaller than 3/4 in. diameter) around the periphery of the basin
5. Connect all piping as required
6. Finish floor around the basin as required

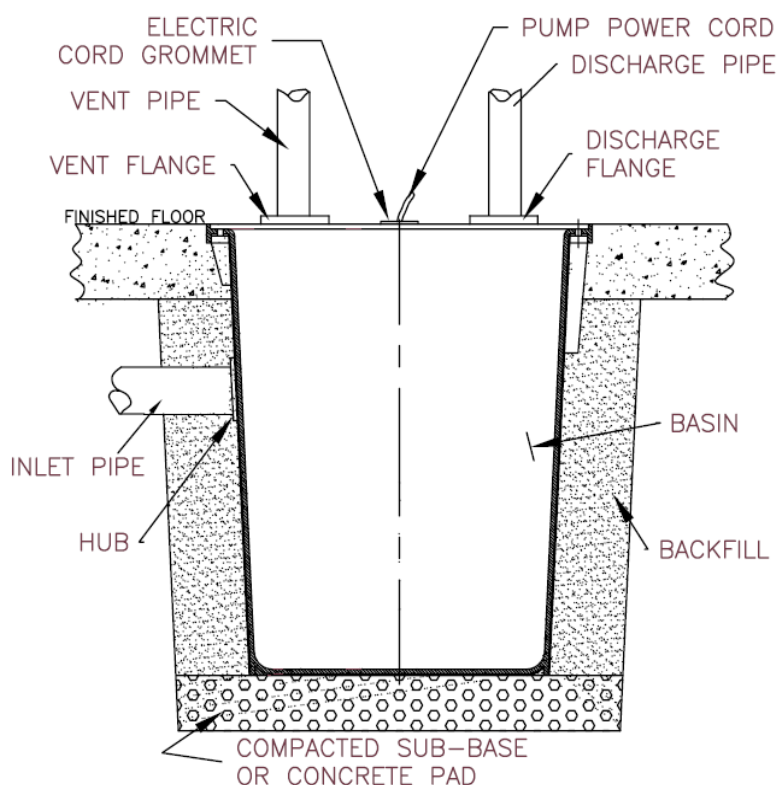

**Warranty:** For more information please visit our website: [www.jackelinc.com/warranty](http://www.jackelinc.com/warranty)