


## Recommended Placement Guide

### 1-1/2" Rebar Chair

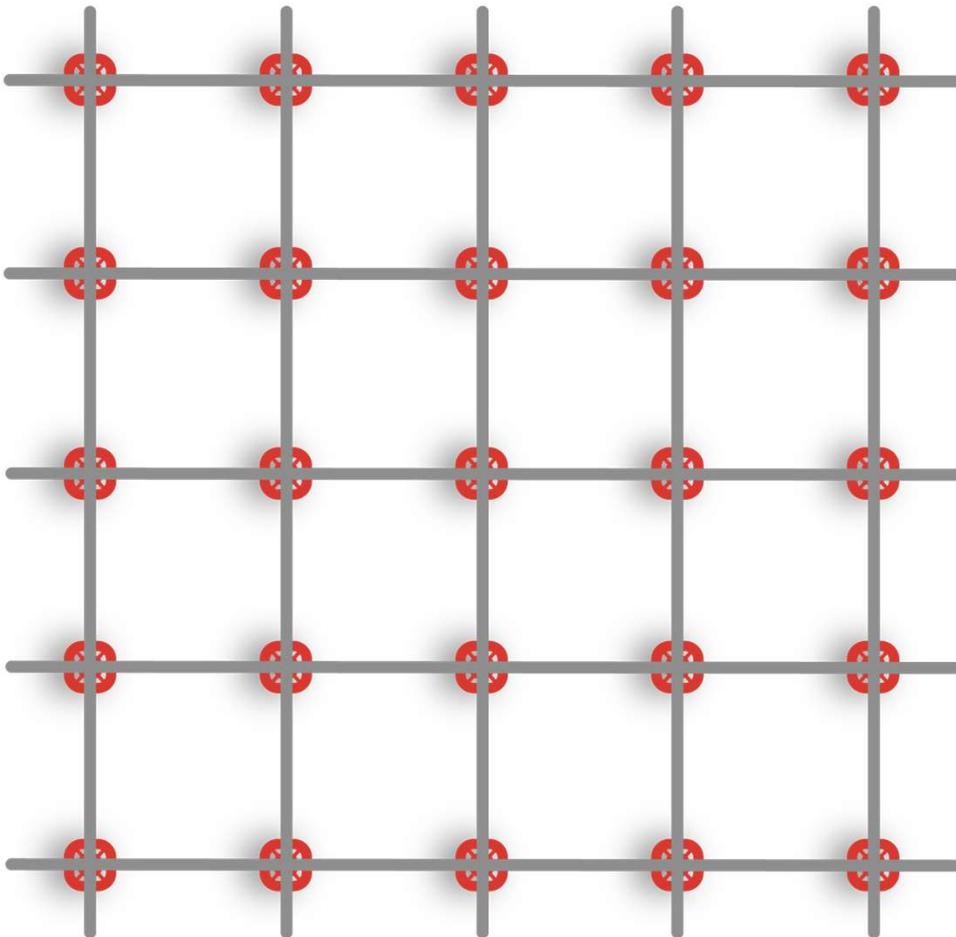

For our 1-1/2" rebar chair, we recommend placing a chair at every rebar crossing. Simply snap the bottom piece of reinforcement into the bottom clip, then snap the top piece of reinforcement into the top clip, and you are finished. No wire tying needed. Our rebar chair ensures the reinforcement stays in the right place before, during, and after the concrete pour.

